



## Configuring IS-IS

---

This chapter describes how to configure Integrated Intermediate System-to-Intermediate System (IS-IS) on the Cisco NX-OS device.

This chapter includes the following sections:

- [Information About IS-IS, page 16-1](#)
- [Licensing Requirements for IS-IS, page 16-7](#)
- [Guidelines and Limitations for IS-IS, page 16-7](#)
- [Default Settings, page 16-7](#)
- [Configuring IS-IS, page 16-7](#)
- [Verifying the IS-IS Configuration, page 16-32](#)
- [Monitoring IS-IS, page 16-33](#)
- [Configuration Examples for IS-IS, page 16-33](#)
- [Related Topics, page 16-34](#)
- [Additional References, page 16-34](#)

## Information About IS-IS

IS-IS is an Interior Gateway Protocol (IGP) based on Standardization (ISO)/International Engineering Consortium (IEC) 10589. Cisco Nexus 6000 Series switches supports Internet Protocol version 4 (IPv4) and Internet Protocol version 6 (IPv6). IS-IS is a dynamic link-state routing protocol that can detect changes in the network topology and calculate loop-free routes to other nodes in the network. Each router maintains a link-state database that describes the state of the network and sends packets on every configured link to discover neighbors. IS-IS floods the link-state information across the network to each neighbor. The router also sends advertisements and updates on the link-state database through all the existing neighbors.

This section includes the following topics:

- [IS-IS Overview, page 16-2](#)
- [IS-IS Authentication, page 16-3](#)
- [Mesh Groups, page 16-4](#)
- [Overload Bit, page 16-4](#)
- [Route Summarization, page 16-4](#)

- [Route Redistribution, page 16-5](#)
- [Administrative Distance, page 16-5](#)
- [Load Balancing, page 16-5](#)
- [High Availability and Graceful Restart, page 16-5](#)
- [Multiple IS-IS Instances, page 16-6](#)

## IS-IS Overview

IS-IS sends a [hello packet](#) out every configured interface to discover IS-IS neighbor routers. The hello packet contains information, such as the authentication, area, and supported protocols, which the receiving interface uses to determine compatibility with the originating interface. The hello packets are also padded to ensure that IS-IS establishes adjacencies only with interfaces that have matching maximum transmission unit (MTU) settings. Compatible interfaces form adjacencies, which update routing information in the link-state database through link-state update messages (LSPs). By default, the router sends a periodic LSP refresh every 10 minutes and the LSPs remain in the link-state database for 20 minutes (the LSP lifetime). If the router does not receive an LSP refresh before the end of the LSP lifetime, the router deletes the LSP from the database.

The LSP interval must be less than the LSP lifetime or the LSPs time out before they are refreshed.

IS-IS sends periodic hello packets to adjacent routers. If you configure transient mode for hello packets, these hello packets do not include the excess padding used before IS-IS establishes adjacencies. If the MTU value on adjacent routers changes, IS-IS can detect this change and send padded hello packets for a period of time. IS-IS uses this feature to detect mismatched MTU values on adjacent routers. For more information, see the [“Configuring the Transient Mode for Hello Padding” section on page 16-19](#).

## IS-IS Areas


You can design IS-IS networks as a single area that includes all routers in the network or as multiple areas that connect into a backbone or Level 2 area. Routers in a nonbackbone area are Level 1 routers that establish adjacencies within a local area (intra-area routing). Level 2 area routers establish adjacencies to other Level 2 routers and perform routing between Level 1 areas (inter-area routing). A router can have both Level 1 and Level 2 areas configured. These Level 1/Level 2 routers act as area border routers that route information from the local area to the Level 2 backbone area (see [Figure 16-1](#)).

Within a Level 1 area, routers know how to reach all other routers in that area. The Level 2 routers know how to reach other area border routers and other Level 2 routers. Level 1/Level 2 routers straddle the boundary between two areas, routing traffic to and from the Level 2 backbone area. Level1/Level2 routers use the attached (ATT) bit signal Level 1 routers to set a default route to this Level1/Level2 router to connect to the Level 2 area.

In some instances, such as when you have two or more Level1/Level 2 routers in an area, you may want to control which Level1/Level2 router that the Level 1 routers use as the default route to the Level 2 area. You can configure which Level1/Level2 router sets the attached bit. For more information, see the [“Verifying the IS-IS Configuration” section on page 16-32](#).

Each IS-IS instance in Cisco Nexus 6000 Series switches supports either a single Level 1 or Level 2 area, or one of each. By default, all IS-IS instances automatically support Level 1 and Level 2 routing.

Figure 16-1 IS-IS Network Divided into Areas

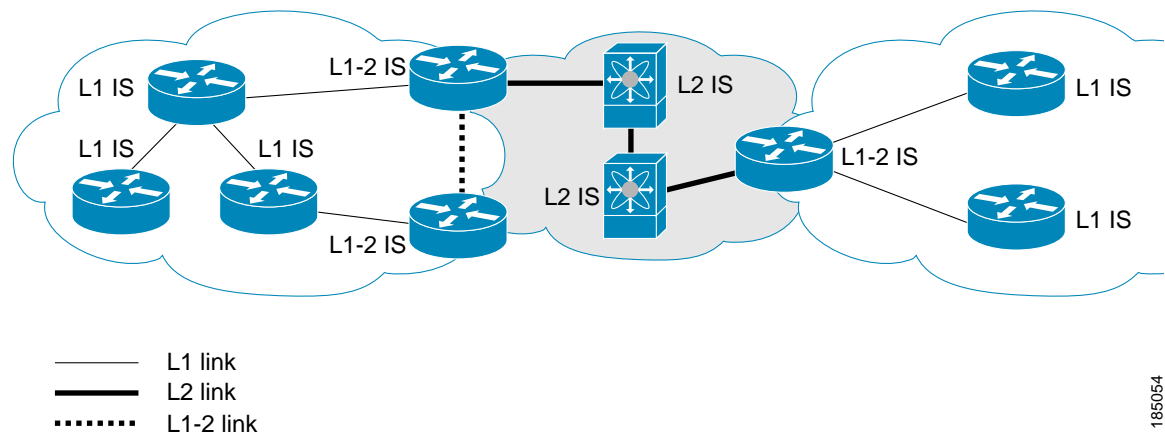

185054

An autonomous system boundary router (ASBR) advertises external destinations throughout the IS-IS autonomous system. External routes are the routes redistributed into IS-IS from any other protocol.

## NET and System ID

Each IS-IS instance has an associated network entity title (NET). The NET is comprised of the IS-IS system ID, which uniquely identifies this IS-IS instance in the area and the area ID. For example, if the NET is 47.0004.004d.0001.0001.0c11.1111.00, the system ID is 0000.0c11.1111.00 and the area ID is 47.0004.004d.0001.

## Designated Intermediate System

IS-IS uses a designated intermediate system (DIS) in broadcast networks to prevent each router from forming unnecessary links with every other router on the broadcast network. IS-IS routers send LSPs to the DIS, which manages all the link-state information for the broadcast network. You can configure the IS-IS priority that IS-IS uses to select the DIS in an area.



Note

No DIS is required on a point-to-point network.

## IS-IS Authentication

You can configure authentication to control adjacencies and the exchange of LSPs. Routers that want to become neighbors must exchange the same password for their configured level of authentication. IS-IS blocks a router that does not have the correct password. You can configure IS-IS authentication globally or for an individual interface for Level 1, Level 2, or both Level 1/Level 2 routing.

IS-IS supports the following authentication methods:

- Clear text—All packets exchanged carry a cleartext 128-bit password.
- MD5 digest—All packets exchanged carry a message digest that is based on a 128-bit key.

To provide protection against passive attacks, IS-IS never sends the MD5 secret key as cleartext through the network. In addition, IS-IS includes a sequence number in each packet to protect against replay attacks.

You can use also keychains for hello and LSP authentication. See the *Cisco Nexus 6000 Series NX-OS Security Configuration Guide, Release 7.x* for information on keychain management.

## Mesh Groups

A mesh group is a set of interfaces in which all routers reachable over the interfaces have at least one link to every other router. Many links can fail without isolating one or more routers from the network.

In normal flooding, an interface receives a new LSP and floods the LSP out over all other interfaces on the router. With mesh groups, when an interface that is part of a mesh group receives a new LSP, the interface does not flood the new LSP over the other interfaces that are part of that mesh group.



### Note

---

You may want to limit LSPs in certain mesh network topologies to improve network scalability. Limiting LSP floods might also reduce the reliability of the network (in case of failures). For this reason, we recommend that you use mesh groups only if specifically required, and then only after you make a careful network design.

---

You can also configure mesh groups in block mode for parallel links between routers. In this mode, all LSPs are blocked on that interface in a mesh group after the routers initially exchange their link-state information.

## Overload Bit

IS-IS uses the overload bit to tell other routers not to use the local router to forward traffic but to continue routing traffic destined for that local router.

You may want to use the overload bit in these situations:

- The router is in a critical condition.
- Graceful introduction and removal of the router to/from the network.
- Other (administrative or traffic engineering) reasons such as waiting for BGP convergence.

## Route Summarization

You can configure a summary aggregate address. Route summarization simplifies route tables by replacing a number of more-specific addresses with an address that represents all the specific addresses. For example, you can replace 10.1.1.0/24, 10.1.2.0/24, and 10.1.3.0/24 with one summary address, 10.1.0.0/16.

If more specific routes are in the routing table, IS-IS advertises the summary address with a metric equal to the minimum metric of the more specific routes.



### Note

---

Cisco Nexus 6000 Series switches does not support automatic route summarization.

---

## Route Redistribution

You can use IS-IS to redistribute static routes, routes learned by other IS-IS autonomous systems, or routes from other protocols. You must configure a route map with the redistribution to control which routes are passed into IS-IS. A route map allows you to filter routes based on attributes such as the destination, origination protocol, route type, route tag, and so on. For more information, see [Chapter 14, “Configuring Route Policy Manager.”](#)

Whenever you redistribute routes into an IS-IS routing domain, Cisco Nexus 6000 Series switches does not, by default, redistribute the default route into the IS-IS routing domain. You can generate a default route into IS-IS, which can be controlled by a route policy.

You also configure the default metric that is used for all imported routes into IS-IS.

## Administrative Distance

The administrative distance is a rating of the trustworthiness of a routing information source. A higher value indicates a lower trust rating. The administrative distance is used to discriminate between routes learned from more than one routing protocol. The route with the lowest administrative distance is installed in the IP routing table.

You can configure the administrative distance for internal and external routes based on various match criteria for a given prefix. Routing protocols such as IS-IS configure the prefix into the Routing Information Base (RIB), along with the next hops based on these metrics. If multiple paths are available for a prefix, the routing protocol chooses the best path based on the cost to reach the next hop and the administrative distance. You can specify that prefixes be considered based on specific routes. In prior releases, one administrative distance was sufficient for all internal routes.

## Load Balancing

You can use load balancing to allow a router to distribute traffic over all the router network ports that are the same distance from the destination address. Load balancing increases the utilization of network segments and increases the effective network bandwidth.

Cisco Nexus 6000 Series switches support the Equal Cost Multiple Paths (ECMP) feature with up to 32 equal-cost paths in the IS-IS route table and the unicast RIB. You can configure IS-IS to load balance traffic across some or all of those paths.

## High Availability and Graceful Restart

Cisco NX-OS provides a multilevel high-availability architecture. IS-IS supports stateful restart, which is also referred to as non-stop routing (NSR). If IS-IS experiences problems, it attempts to restart from its previous run-time state. The neighbors would not register any neighbor event in this case. If the first restart is not successful and another problem occurs, IS-IS attempts a graceful restart as per RFC 3847. A graceful restart, or non-stop forwarding (NSF), allows IS-IS to remain in the data forwarding path through a process restart. When the restarting IS-IS interface is operational again, it rediscovers its neighbors, establishes adjacency, and starts sending its updates again. At this point, the NSF helps recognize that the graceful restart has finished.

A stateful restart is used in the following scenarios:

- First recovery attempt after process experiences problems

- ISSU

A graceful restart is used in the following scenarios:

- Second recovery attempt after the process experiences problems within a 4-minute interval
- Manual restart of the process using the **restart isis** command



**Note**

---

Graceful restart is on by default, and we strongly recommended that it not be disabled.

---

## Multiple IS-IS Instances

Cisco Nexus 6000 Series switches supports multiple instances of the IS-IS protocol that run on the same node. You cannot configure multiple instances over the same interface. Every instance uses the same system router ID. For the number of supported IS-IS instances, see the *Verified Scalability for Cisco Nexus 6000 Series NX-OS Release 7.0(0)N1(1)*.

# Licensing Requirements for IS-IS

The following table shows the licensing requirements for this feature:

Product	License Requirement
Cisco NX-OS	IS-IS requires an Enterprise Services license. For a complete explanation of the Cisco NX-OS licensing scheme and how to obtain and apply licenses, see the <i>Cisco NX-OS Licensing Guide</i> .

## Guidelines and Limitations for IS-IS

IS-IS has the following configuration guidelines and limitations:

- Equal Cost Multiple Paths (ECMP) is supported with up to 32 equal-cost paths in the IS-IS route table and the Unicast RIB.

## Default Settings

[Table 16-1](#) lists the default settings for IS-IS parameters.

**Table 16-1** Default IS-IS Parameters

Parameters	Default
Administrative distance	115
Area level	Level-1-2
DIS priority	64
Graceful restart	Enabled
Hello multiplier	3
Hello padding	Enabled
Hello time	10 seconds
IS-IS feature	Disabled
LSP interval	33
LSP MTU	1492
Maximum LSP lifetime	1200 seconds
Maximum paths	4
Metric	40
Reference bandwidth	40 Gbps

## Configuring IS-IS

To configure IS-IS, follow these steps:

- Step 1 Create an IS-IS instance (see the [“Creating an IS-IS Instance”](#) section on page 16-9).

- Step 2** Add an interface to the IS-IS instance (see the “[Configuring IS-IS on an Interface](#)” section on [page 16-12](#)).
- Step 3** Configure optional features, such as authentication, mesh groups, and dynamic host exchange.

---

This section contains the following topics:

- [IS-IS Configuration Modes, page 16-8](#)
- [Creating an IS-IS Instance, page 16-9](#)
- [Restarting an IS-IS Instance, page 16-12](#)
- [Shutting Down IS-IS, page 16-12](#)
- [Configuring IS-IS on an Interface, page 16-12](#)
- [Shutting Down IS-IS on an Interface, page 16-14](#)
- [Configuring Default Passive Interfaces, page 16-14](#)
- [Configuring IS-IS Authentication in an Area, page 16-16](#)
- [Configuring IS-IS Authentication on an Interface, page 16-17](#)
- [Configuring a Mesh Group, page 16-18](#)
- [Configuring a Designated Intermediate System, page 16-18](#)
- [Configuring Dynamic Host Exchange, page 16-18](#)
- [Setting the Overload Bit, page 16-19](#)
- [Configuring the Attached Bit, page 16-19](#)
- [Configuring the Transient Mode for Hello Padding, page 16-19](#)
- [Configuring a Summary Address, page 16-20](#)
- [Configuring Redistribution, page 16-21](#)
- [Limiting the Number of Redistributed Routes, page 16-23](#)
- [Configuring the Administrative Distance of Routes, page 16-24](#)
- [Disabling Strict Adjacency Mode, page 16-25](#)
- [Configuring a Graceful Restart, page 16-26](#)
- [Configuring Virtualization, page 16-28](#)
- [Tuning IS-IS, page 16-30](#)



**Note**

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

---

## IS-IS Configuration Modes

The following sections show how to enter each of the configuration modes. From a mode, you can enter the ? command to display the commands available in that mode.

This section includes the following topics:

- [Router Configuration Mode, page 16-9](#)



- [Router Address Family Configuration Mode, page 16-9](#)

## Router Configuration Mode

This example shows how to enter router configuration mode:

```
switch#: configure terminal
switch(config)# router isis isp
switch(config-router)#
```

## Router Address Family Configuration Mode

This example shows how to enter router address family configuration mode:

```
switch(config)# router isis isp
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)#
```

## Creating an IS-IS Instance

You can create an IS-IS instance and configure the area level for that instance.

### SUMMARY STEPS

1. **configure terminal**
2. **router isis** *instance-tag*
3. **net** *network-entity-title*
4. (Optional) **is-type** {*level-1* | *level-2* | *level-1-2*}
5. (Optional) **show isis** [*vrf vrf-name*] **process**
6. (Optional) **copy running-config startup-config**

### DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# <b>configure terminal</b> switch(config)#	Enters global configuration mode.
Step 2	<b>router isis</b> <i>instance-tag</i>  <b>Example:</b> switch(config)# <b>router isis</b> Enterprise switch(config-router)#	Creates a new IS-IS instance with the configured <i>instance tag</i> .
Step 3	<b>net</b> <i>network-entity-title</i>  <b>Example:</b> switch(config-router)# <b>net</b> 47.0004.004d.0001.0001.0c11.1111.00	Configures the NET for this IS-IS instance.

	Command	Purpose
Step 4	<b>is-type</b> {level-1   level-2   level-1-2}  <b>Example:</b> switch(config-router)# is-type level-2	(Optional) Configures the area level for this IS-IS instance. The default is level-1-2.
Step 5	<b>show isis</b> [vrf vrf-name] <b>process</b>  <b>Example:</b> switch(config)# show isis process	(Optional) Displays a summary of IS-IS information for all IS-IS instances.
Step 6	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

To remove the IS-IS instance and the associated configuration, use the following command in configuration mode:

Command	Purpose
<b>no router isis</b> <i>instance-tag</i>  <b>Example:</b> switch(config)# no router isis Enterprise	Deletes the IS-IS instance and all associated configurations.

**Note**

You must also remove any IS-IS commands that are configured in interface mode to completely remove all configurations for the IS-IS instance.

You can configure the following optional parameters for IS-IS:

Command	Purpose
<b>distance</b> <i>value</i>  <b>Example:</b> switch(config-router)# distance 30	Sets the administrative distance for IS-IS. The range is from 1 to 255. The default is 115.
<b>log-adjacency-changes</b>  <b>Example:</b> switch(config-router)# log-adjacency-changes	Sends a system message whenever an IS-IS neighbor changes the state.
<b>lsp-mtu</b> <i>size</i>  <b>Example:</b> switch(config-router)# lsp-mtu 600	Sets the MTU for LSPs in this IS-IS instance. The range is from 128 to 4352 bytes. The default is 1492.
<b>maximum-paths</b> <i>number</i>  <b>Example:</b> switch(config-router)# maximum-paths 6	Configures the maximum number of equal-cost paths that IS-IS maintains in the route table. The range is from 1 to 32. The default is 4.
<b>reference-bandwidth</b> <i>bandwidth-value</i> { <b>Mbps</b>   <b>Gbps</b> }  <b>Example:</b> switch(config-router)# reference-bandwidth 100 Gbps	Sets the default reference bandwidth used for calculating the IS-IS cost metric. The range is from 1 to 4000 Gbps. The default is 40 Gbps.

The following example shows how to create an IS-IS instance in a level 2 area:

```
switch# configure terminal
switch(config)# router isis Enterprise
switch(config-router)# net 47.0004.004d.0001.0001.0c11.1111.00
switch(config-router)# is-type level 2
switch(config-router)# copy running-config startup-config
```

To clear neighbor statistics and remove adjacencies, use the following command in router configuration mode:

Command	Purpose
<b>clear isis</b> [ <i>instance-tag</i> ] <b>adjacency</b> [*   <i>system-id</i>   <i>interface</i> ]  <b>Example:</b> switch(config-if)# clear isis adjacency *	Clears neighbor statistics and removed adjacencies for this IS-IS instance.

## Restarting an IS-IS Instance

You can restart an IS-IS instance. This action clears all neighbors for the instance.

To restart an IS-IS instance and remove all associated neighbors, use the following command:

Command	Purpose
<pre>restart isis instance-tag</pre> <p><b>Example:</b> switch(config)# restart isis Enterprise</p>	Restarts the IS-IS instance and removes all neighbors.

## Shutting Down IS-IS

You can shut down the IS-IS instance. This action disables this IS-IS instance and retains the configuration.

To shut down the IS-IS instance, use the following command in router configuration mode:

Command	Purpose
<pre>shutdown</pre> <p><b>Example:</b> switch(config-router)# shutdown</p>	Disables the IS-IS instance.

## Configuring IS-IS on an Interface

You can add an interface to an IS-IS instance.

### SUMMARY STEPS

1. **configure terminal**
2. **interface** *interface-type slot/port*
3. (Optional) **medium** { **broadcast** | **p2p** }
4. { **ip** | **ipv6** } **router isis** *instance-tag*
5. (Optional) **show isis** [**vrf** *vrf-name*] [*instance-tag*] **interface** [*interface-type slot/port*]
6. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<b>interface</b> <i>interface-type slot/port</i>  <b>Example:</b> switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	<b>medium</b> { <b>broadcast</b>   <b>p2p</b> }  <b>Example:</b> switch(config-if)# medium p2p	(Optional) Configures the broadcast or point-to-point mode for the interface. IS-IS inherits this mode.
Step 4	{ <b>ip</b>   <b>ipv6</b> } <b>router isis</b> <i>instance-tag</i>  <b>Example:</b> switch(config-if)# ip router isis Enterprise	Associates this IPv4 or IPv6 interface with an IS-IS instance.
Step 5	<b>show isis</b> [ <i>vrf vrf-name</i> ] [ <i>instance-tag</i> ] <b>interface</b> [ <i>interface-type slot/port</i> ]  <b>Example:</b> switch(config)# show isis Enterprise ethernet 1/2	(Optional) Displays IS-IS information for an interface.
Step 6	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

You can configure the following optional parameters for IS-IS in interface mode:

Command	Purpose
<b>isis circuit-type</b> { <b>level-1</b>   <b>level-2</b>   <b>level-1-2</b> }  <b>Example:</b> switch(config-if)# isis circuit-type level-2	Sets the type of adjacency that this interface participates in. Use this command only for routers that participate in both Level 1 and Level 2 areas.
<b>isis metric</b> <i>value</i> { <b>level-1</b>   <b>level-2</b> }  <b>Example:</b> switch(config-if)# isis metric 30	Sets the IS-IS metric for this interface. The range is from 1 to 16777214. The default is 10.
<b>isis passive</b> { <b>level-1</b>   <b>level-2</b>   <b>level-1-2</b> }  <b>Example:</b> switch(config-if)# isis passive level-2	Prevents the interface from forming adjacencies but still advertises the prefix associated with the interface.

This example shows how to add Ethernet 1/2 interface to an IS-IS instance:

```
switch# configure terminal
switch(config)# interface ethernet 1/2
switch(config-if)# ip router isis Enterprise
switch(config-if)# copy running-config startup-config
```

## Shutting Down IS-IS on an Interface

You can gracefully shut down IS-IS on an interface. This action removes all adjacencies and stops IS-IS traffic on this interface but preserves the IS-IS configuration.

To disable IS-IS on an interface, use the following command in interface configuration mode:

Command	Purpose
switch(config-if)# <b>isis shutdown</b>	Disables IS-IS on this interface. The IS-IS interface configuration remains.
<b>Example:</b> switch(config-router)# <b>isis shutdown</b>	

## Configuring Default Passive Interfaces

You can configure all IS-IS interfaces as passive by default and then activate only those interfaces where adjacencies are desired.

### SUMMARY STEPS

1. **configure terminal**
2. **router isis** *instance-tag*
3. **passive-interface default** {level-1 | level-1-2 | level-2}
4. **exit**
5. **interface** *type slot/port*
6. **isis passive-interface** {level-1 | level-1-2 | level-2}
7. (Optional) **no isis passive-interface** {level-1 | level-1-2 | level-2}
8. **default isis passive-interface** [level-1 | level-1-2 | level-2]
9. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<b>router isis instance-tag</b>  <b>Example:</b> switch(config)# router isis 1 switch(config-router)#	Creates a new IS-IS instance and enters router configuration mode.
Step 3	<b>passive-interface default {level-1   level-1-2   level-2}</b>  <b>Example:</b> switch(config-router)# passive-interface default level-1	Removes the <b>passive-interface</b> commands on the interface (if any) and returns the interface to the default configuration.
Step 4	<b>exit</b>  <b>Example:</b> switch(config-router)# exit switch(config)#	Exits router configuration mode.
Step 5	<b>interface type slot/port</b>  <b>Example:</b> switch(config)# interface GigabitEthernet 0/0/0/ switch(config-if)#	Enters interface configuration mode.
Step 6	<b>isis passive-interface {level-1   level-1-2   level-2}</b>  <b>Example:</b> switch(config-if)# isis passive-interface level-1	Blocks the sending of routing updates on an IS-IS interface.
Step 7	<b>no isis passive-interface {level-1   level-1-2   level-2}</b>  <b>Example:</b> switch(config-if)# no isis passive-interface level-1	(Optional) Reenables the sending of routing updates on an IS-IS interface and activates only those interfaces that need adjacencies.
Step 8	<b>default isis passive-interface [level-1   level-1-2   level-2]</b>  <b>Example:</b> switch(config-if)# default isis passive-interface level-1	Allows all IS-IS interfaces to be set as passive by default.
Step 9	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

## Configuring IS-IS Authentication in an Area

You can configure IS-IS to authenticate LSPs in an area.

### SUMMARY STEPS

1. **configure terminal**
2. **router isis *instance-tag***
3. **authentication-type {cleartext | md5} {level-1 | level-2}**
4. **authentication key-chain *key* {level-1 | level-2}**
5. (Optional) **authentication-check {level-1 | level-2}**
6. (Optional) **copy running-config startup-config**

### DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<b>router isis <i>instance-tag</i></b>  <b>Example:</b> switch(config)# router isis Enterprise switch(config-router)#	Creates a new IS-IS instance with the configured <i>instance tag</i> .
Step 3	<b>authentication-type {cleartext   md5} {level-1   level-2}</b>  <b>Example:</b> switch(config-router)# authentication-type cleartext level-2	Sets the authentication method used for a Level 1 or Level 2 area as cleartext or as an MD5 authentication digest.
Step 4	<b>authentication key-chain <i>key</i> {level-1   level-2}</b>  <b>Example:</b> switch(config-router)# authentication key-chain ISISKey level-2	Configures the authentication key used for an IS-IS area-level authentication.
Step 5	<b>authentication-check {level-1   level-2}</b>  <b>Example:</b> switch(config-router)# authentication-check level-2	(Optional) Enables checking the authentication parameters in a received packet.
Step 6	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.



This example shows how to configure cleartext authentication on an IS-IS instance:

```
switch# configure terminal
switch(config)# router isis Enterprise
switch(config-router)# authentication-type cleartext level-2
switch(config-router)# authentication key-chain ISISKey level-2
switch(config-router)# copy running-config startup-config
```

## Configuring IS-IS Authentication on an Interface

You can configure IS-IS to authenticate Hello packets on an interface.

### SUMMARY STEPS

1. **configure terminal**
2. **interface** *interface-type slot/port*
3. **isis authentication-type** {cleartext | md5} {level-1 | level-2}
4. **isis authentication key-chain** *key* {level-1 | level-2}
5. (Optional) **isis authentication-check** {level-1 | level-2}
6. (Optional) **copy running-config startup-config**

### DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<b>interface</b> <i>interface-type slot/port</i>  <b>Example:</b> switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	<b>isis authentication-type</b> {cleartext   md5} {level-1   level-2}  <b>Example:</b> switch(config-if)# isis authentication-type cleartext level-2	Sets the authentication type for IS-IS on this interface as cleartext or as an MD5 authentication digest.
Step 4	<b>isis authentication key-chain</b> <i>key</i> {level-1   level-2}  <b>Example:</b> switch(config-if)# isis authentication-key ISISKey level-2	Configures the authentication key used for IS-IS on this interface.
Step 5	<b>isis authentication-check</b> {level-1   level-2}  <b>Example:</b> switch(config-if)# isis authentication-check	(Optional) Enables checking the authentication parameters in a received packet.

	Command	Purpose
Step 6	<pre>copy running-config startup-config</pre> <p><b>Example:</b>  <pre>switch(config-if)# copy running-config startup-config</pre></p>	(Optional) Saves this configuration change.

This example shows how to configure cleartext authentication on an IS-IS instance:

```
switch# configure terminal
switch(config)# interface ethernet 1/2
switch(config-if)# isis authentication-type cleartext level-2
switch(config-if)# isis authentication key-chain ISISKey
switch(config-if)# copy running-config startup-config
```

## Configuring a Mesh Group

You can add an interface to a mesh group to limit the amount of LSP flooding for interfaces in that mesh group. You can optionally block all LSP flooding on an interface in a mesh group.

To add an interface to a mesh group, use the following command in interface configuration mode:

Command	Purpose
<pre>isis mesh-group {blocked   mesh-id}</pre> <p><b>Example:</b>  <pre>switch(config-if)# isis mesh-group 1</pre></p>	Adds this interface to a mesh group. The range is from 1 to 4294967295.

## Configuring a Designated Intermediate System

You can configure a router to become the designated intermediate system (DIS) for a multiaccess network by setting the interface priority.

To configure the DIS, use the following command in interface configuration mode:

Command	Purpose
<pre>isis priority number {level-1   level-2}</pre> <p><b>Example:</b>  <pre>switch(config-if)# isis priority 100 level-1</pre></p>	Sets the priority for DIS selection. The range is from 0 to 127. The default is 64.

## Configuring Dynamic Host Exchange

You can configure IS-IS to map between the system ID and the hostname for a router using dynamic host exchange.

To configure dynamic host exchange, use the following command in router configuration mode:

Command	Purpose
<b>hostname dynamic</b>  <b>Example:</b> switch(config-router)# hostname dynamic	Enables dynamic host exchange.

## Setting the Overload Bit

You can configure the router to signal other routers not to use this router as an intermediate hop in their shortest path first (SPF) calculations. You can optionally configure the overload bit temporarily on startup, until BGP converges.

In addition to setting the overload bit, you might also want to suppress certain types of IP prefix advertisements from LSPs for Level 1 or Level 2 traffic.

To set the overload bit, use the following command in router configuration mode:

Command	Purpose
<b>set-overload-bit</b> { <b>always</b>   <b>on-startup</b> { <i>seconds</i>   <b>wait-for bgp as-number</b> }} [ <b>suppress</b> [ <i>interlevel</i>   <i>external</i> ]]  <b>Example:</b> switch(config-router)# set-overload-bit on-startup 30	Sets the overload bit for IS-IS. The <i>seconds</i> range is from 5 to 86400.

## Configuring the Attached Bit

You can configure the attached bit to control which Level 1/Level 2 router that the Level 1 routers use as the default route to the Level 2 area. If you disable setting the attached bit, the Level 1 routers do not use this Level 1/Level 2 router to reach the Level 2 area.

To configure the attached bit for a Level 1/Level 2 router, use the following command in router configuration mode:

Command	Purpose
[no] <b>attached-bit</b> <b>Example:</b> switch(config-router)# no attached-bit	Configures the Level 1/Level 2 router to set the attached bit. This feature is enabled by default.

## Configuring the Transient Mode for Hello Padding

You can configure the transient mode for hello padding to pad hello packets when IS-IS establishes adjacency and remove that padding after IS-IS establishes adjacency.

To configure the mode for hello padding, use the following command in router configuration mode:

Command	Purpose
<pre>[no] isis hello-padding</pre> <p><b>Example:</b> switch(config-if)# no isis hello-padding</p>	Pads the hello packet to the full MTU. The default is enabled. Use the <b>no</b> form of this command to configure the transient mode of hello padding.

## Configuring a Summary Address

You can create aggregate addresses that are represented in the routing table by a summary address. One summary address can include multiple groups of addresses for a given level. Cisco Nexus 6000 Series switches advertises the smallest metric of all the more-specific routes.

### SUMMARY STEPS

1. **configure terminal**
2. **router isis** *instance-tag*
3. **address-family** {**ipv4** | **ipv6**} **unicast**
4. **summary-address** *ip-prefix/mask-len* {**level-1** / **level-2** / **level-1-2**}
5. (Optional) **show isis** [**vrf vrf-name**] {**ip** | **ipv6**} **summary-address** *ip-prefix* [**longer-prefixes**]
6. (Optional) **copy running-config startup-config**

### DETAILED STEPS

	Command	Purpose
Step 1	<pre>configure terminal</pre> <p><b>Example:</b> switch# configure terminal switch(config)#</p>	Enters global configuration mode.
Step 2	<pre>router isis instance-tag</pre> <p><b>Example:</b> switch(config)# router isis Enterprise switch(config-router)#</p>	Creates a new IS-IS instance with the configured <i>instance tag</i> .
Step 3	<pre>address-family {ipv4   ipv6} unicast</pre> <p><b>Example:</b> switch(config-router)# address-family ipv4 unicast switch(config-router-af)#</p>	Enters address family configuration mode.
Step 4	<pre>summary-address ip-prefix/mask-len {level-1   level-2   level-1-2}</pre> <p><b>Example:</b> switch(config-router-af)# summary-address 192.0.2.0/24 level-2</p>	Configures a summary address for an IS-IS area for IPv4 or IPv6 addresses.

	Command	Purpose
Step 5	<pre>show isis [vrf vrf-name] {ip   ipv6} summary-address ip-prefix [longer-prefixes]</pre> <p><b>Example:</b> switch(config-if)# show isis ip summary-address</p>	(Optional) Displays IS-IS IPv4 or IPv6 summary address information.
Step 6	<pre>copy running-config startup-config</pre> <p><b>Example:</b> switch(config--if)# copy running-config startup-config</p>	(Optional) Saves this configuration change.

This example shows how to configure an IPv4 unicast summary address for IS-IS:

```
switch# configure terminal
switch(config)# router isis Enterprise
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# summary-address 192.0.2.0/24 level-2
switch(config-router-af)# copy running-config startup-config
```

## Configuring Redistribution

You can configure IS-IS to accept routing information from another routing protocol and redistribute that information through the IS-IS network. You can optionally assign a default route for redistributed routes.

### SUMMARY STEPS

1. **configure terminal**
2. **router isis** *instance-tag*
3. **address-family** {ipv4 | ipv6} **unicast**
4. **redistribute** {bgp *as* | direct | {eigrp | isis | ospf | ospfv3 | rip} *instance-tag* | static} **route-map** *map-name*
5. (Optional) **default-information originate** [always] [route-map *map-name*]
6. (Optional) **distribute** {level-1 | level-2} **into** {level-1 | level-2} {route-map *route-map* | all}
7. (Optional) **show isis** [vrf *vrf-name*] {ip | ipv6} **route** *ip-prefix* [detail | longer-prefixes [summary | detail]]
8. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<b>router isis instance-tag</b>  <b>Example:</b> switch(config)# router isis Enterprise switch(config-router)#	Creates a new IS-IS instance with the configured <i>instance tag</i> .
Step 3	<b>address-family {ipv4   ipv6} unicast</b>  <b>Example:</b> switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Enters address family configuration mode.
Step 4	<b>redistribute {bgp as   {eigrp   isis   ospf   ospfv3   rip} instance-tag   static   direct} route-map map-name</b>  <b>Example:</b> switch(config-router-af)# redistribute eigrp 201 route-map ISISmap	Redistributes routes from other protocols into IS-IS. See the “ <a href="#">Configuring Route Maps</a> ” section on <a href="#">page 14-13</a> for more information about route maps.
Step 5	<b>default-information originate [always] [route-map map-name]</b>  <b>Example:</b> switch(config-router-af)# default-information originate always	(Optional) Generates a default route into IS-IS.
Step 6	<b>distribute {level-1   level-2} into {level-1   level-2} {route-map route-map   all}</b>  <b>Example:</b> switch(config-router-af)# distribute level-1 into level-2 all	(Optional) Redistributes routes from one IS-IS level to the other IS-IS level.
Step 7	<b>show isis [vrf vrf-name] {ip   ipv6} route ip-prefix [detail   longer-prefixes [summary   detail]]</b>  <b>Example:</b> switch(config-router-af)# show isis ip route	(Optional) Shows the IS-IS routes.
Step 8	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config-router-af)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to redistribute EIGRP into IS-IS:

```
switch# configure terminal
switch(config)# router isis Enterprise
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# redistribute eigrp 201 route-map ISISmap
switch(config-router-af)# copy running-config startup-config
```

## Limiting the Number of Redistributed Routes

Route redistribution can add many routes to the IS-IS route table. You can configure a maximum limit to the number of routes accepted from external protocols. IS-IS provides the following options to configure redistributed route limits:

- **Fixed limit**—Logs a message when IS-IS reaches the configured maximum. IS-IS does not accept any more redistributed routes. You can optionally configure a threshold percentage of the maximum where IS-IS logs a warning when that threshold is passed.
- **Warning only**—Logs a warning only when IS-IS reaches the maximum. IS-IS continues to accept redistributed routes.
- **Withdraw**—Starts the timeout period when IS-IS reaches the maximum. After the timeout period, IS-IS requests all redistributed routes if the current number of redistributed routes is less than the maximum limit. If the current number of redistributed routes is at the maximum limit, IS-IS withdraws all redistributed routes. You must clear this condition before IS-IS accepts more redistributed routes. You can optionally configure the timeout period.

### SUMMARY STEPS

1. **configure terminal**
2. **router isis** *instance-tag*
3. **redistribute** {*bgp id* | *direct* | *eigrp id* | *isis id* | *ospf id* | *rip id* | *static*} **route-map** *map-name*
4. **redistribute maximum-prefix** *max* [*threshold*] [**warning-only** | **withdraw** [*num-retries* *timeout*]]
5. (Optional) **show running-config isis**
6. (Optional) **copy running-config startup-config**

### DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<b>router isis</b> <i>instance-tag</i>  <b>Example:</b> switch(config)# router isis Enterprise switch(config-router)#	Creates a new IS-IS instance with the configured instance tag.

	Command	Purpose
Step 3	<pre>redistribute {bgp id   direct   eigrp id   isis id   ospf id   rip id   static} route-map map-name</pre> <p><b>Example:</b> switch(config-router)# redistribute bgp route-map FilterExternalBGP</p>	Redistributes the selected protocol into IS-IS through the configured route map.
Step 4	<pre>redistribute maximum-prefix max [threshold] [warning-only   withdraw [num-retries timeout]]</pre> <p><b>Example:</b> switch(config-router)# redistribute maximum-prefix 1000 75 warning-only</p>	<p>Specifies a maximum number of prefixes that IS-IS distributes. The range is from 0 to 65536. You can optionally specify the following:</p> <ul style="list-style-type: none"> <li>• <i>threshold</i>—Percent of maximum prefixes that triggers a warning message.</li> <li>• <b>warning-only</b>—Logs an warning message when the maximum number of prefixes is exceeded.</li> <li>• <b>withdraw</b>—Withdraws all redistributed routes. You can optionally try to retrieve the redistributed routes. The <i>num-retries</i> range is from 1 to 12. The <i>timeout</i> is 60 to 600 seconds. The default is 300 seconds. Use the <b>clear isis redistribution</b> command if all routes are withdrawn.</li> </ul>
Step 5	<pre>show running-config isis</pre> <p><b>Example:</b> switch(config-router)# show running-config isis</p>	(Optional) Displays the IS-IS configuration.
Step 6	<pre>copy running-config startup-config</pre> <p><b>Example:</b> switch(config-router)# copy running-config startup-config</p>	(Optional) Saves this configuration change.

This example shows how to limit the number of redistributed routes into IS-IS:

```
switch# configure terminal
switch(config)# router eigrp isis Enterprise
switch(config-router)# redistribute bgp route-map FilterExternalBGP
switch(config-router)# redistribute maximum-prefix 1000 75
```

## Configuring the Administrative Distance of Routes

You can set the administrative distance of routes added by IS-IS into the RIB.

### SUMMARY STEPS

1. **configure terminal**
2. **router isis** *instance-tag*
3. **table-map** *route-map-name* [**filter**]
4. (Optional) **copy running-config startup-config**



## DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<b>router isis instance-tag</b>  <b>Example:</b> switch(config)# router isis group1 switch(config-router)#	Creates a new IS-IS instance and enters router configuration mode.
Step 3	<b>table-map route-map-name [filter]</b>  <b>Example:</b> switch(config-router)# table-map route-map1 filter	Configures a table map with route map information. You can enter up to 63 alphanumeric characters for the map name.  The <b>filter</b> keyword filters routes rejected by the route map and does not download them to the RIB.
Step 4	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

## Disabling Strict Adjacency Mode

When both IPv4 and IPv6 address families are enabled, strict adjacency mode is enabled by default. In this mode, the device does not form an adjacency with any router that does not have both address families enabled. You can disable strict adjacency mode using the **no adjacency-check** command.

## SUMMARY STEPS

1. **configure terminal**
2. **router isis instance-tag**
3. **address-family ipv4 unicast**
4. **no adjacency-check**
5. **exit**
6. **address-family ipv6 unicast**
7. **no adjacency-check**
8. (Optional) **show running-config isis**
9. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<b>router isis instance-tag</b>  <b>Example:</b> switch(config)# router isis Enterprise switch(config-router)#	Creates a new IS-IS instance with the configured instance tag.
Step 3	<b>address-family ipv4 unicast</b>  <b>Example:</b> switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Enters address family configuration mode.
Step 4	<b>no adjacency-check</b>  <b>Example:</b> switch(config-router-af)# no adjacency-check	Disables strict adjacency mode for the IPv4 address family.
Step 5	<b>exit</b>  <b>Example:</b> switch(config-router-af)# exit switch(config-router)#	Exits address family configuration mode.
Step 6	<b>address-family ipv6 unicast</b>  <b>Example:</b> switch(config-router)# address-family ipv6 unicast switch(config-router-af)#	Enters address family configuration mode.
Step 7	<b>no adjacency-check</b>  <b>Example:</b> switch(config-router-af)# no adjacency-check	Disables strict adjacency mode for the IPv6 address family.
Step 8	<b>show running-config isis</b>  <b>Example:</b> switch(config-router-af)# show running-config isis	(Optional) Displays the IS-IS configuration.
Step 9	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config-router-af)# copy running-config startup-config	(Optional) Saves this configuration change.

## Configuring a Graceful Restart

You can configure a graceful restart for IS-IS.

## BEFORE YOU BEGIN

Create the VRFs.

## SUMMARY STEPS

1. **configure terminal**
2. **router isis *instance-tag***
3. **graceful-restart**
4. **graceful-restart t3 manual *time***
5. (Optional) **show running-config isis**
6. (Optional) **copy running-config startup-config**

## DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<b>router isis <i>instance-tag</i></b>  <b>Example:</b> switch(config)# router isis Enterprise switch(config-router)#	Creates a new IS-IS process with the configured name.
Step 3	<b>graceful-restart</b>  <b>Example:</b> switch(config-router)# graceful-restart	Enables a graceful restart and the graceful restart helper functionality. Enabled by default.
Step 4	<b>graceful-restart t3 manual <i>time</i></b>  <b>Example:</b> switch(config-router)# graceful-restart t3 manual 300	Configures the graceful restart T3 timer. The range is from 30 to 65535 seconds. The default is 60.
Step 5	<b>show running-config isis</b>  <b>Example:</b> switch(config-router)# show running-config isis	(Optional) Displays the IS-IS configuration.
Step 6	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to enable a graceful restart:

```
switch# configure terminal
switch(config)# router isis Enterprise
switch(config-router)# graceful-restart
switch(config-router)# copy running-config startup-config
```

## Configuring Virtualization

You assign an IS-IS interface to a VRF.

You must configure a NET for the configured VRF.



### Note

Configure all other parameters for an interface after you configure the VRF for an interface. Configuring a VRF for an interface deletes all the configuration for that interface.

### SUMMARY STEPS

1. **configure terminal**
2. **vrf context** *vrf\_name*
3. **exit**
4. **router isis** *instance-tag*
5. (Optional) **vrf** *vrf\_name*
6. **net** *network-entity-title*
7. **exit**
8. **interface** *type slot/port*
9. **vrf member** *vrf-name*
10. **{ip | ipv6} address** *ip-prefix/length*
11. **{ip | ipv6} router isis** *instance-tag*
12. (Optional) **show isis** [**vrf** *vrf-name*] [*instance-tag*] **interface** [*interface-type slot/port*]
13. (Optional) **copy running-config startup-config**

### DETAILED STEPS

	Command	Purpose
Step 1	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<b>vrf context</b> <i>vrf-name</i>  <b>Example:</b> switch(config)# vrf context RemoteOfficeVRF switch(config-vrf)#	Creates a new VRF and enters VRF configuration mode.
Step 3	<b>exit</b>  <b>Example:</b> switch(config-vrf)# exit switch(config)#	Exits VRF configuration mode.

	Command	Purpose
Step 4	<b>router isis</b> <i>instance-tag</i>  <b>Example:</b> switch(config)# router isis Enterprise switch(config-router)#	Creates a new IS-IS instance with the configured instance tag.
Step 5	<b>vrf</b> <i>vrf-name</i>  <b>Example:</b> switch(config-router)# vrf RemoteOfficeVRF switch(config-router-vrf)#	(Optional) Enters VRF configuration mode.
Step 6	<b>net</b> <i>network-entity-title</i>  <b>Example:</b> switch(config-router-vrf)# net 47.0004.004d.0001.0001.0c11.1111.00	Configures the NET for this IS-IS instance.
Step 7	<b>exit</b>  <b>Example:</b> switch(config-router-vrf)# exit switch(config-router)#	Exits router VRF configuration mode.
Step 8	<b>interface ethernet</b> <i>slot/port</i>  <b>Example:</b> switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 9	<b>vrf member</b> <i>vrf-name</i>  <b>Example:</b> switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF.
Step 10	{ <b>ip</b>   <b>ipv6</b> } <b>address</b> <i>ip-prefix/length</i>  <b>Example:</b> switch(config-if)# ip address 192.0.2.1/16	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.
Step 11	{ <b>ip</b>   <b>ipv6</b> } <b>router isis</b> <i>instance-tag</i>  <b>Example:</b> switch(config-if)# ip router isis Enterprise	Associates this IPv4 or IPv6 interface with an IS-IS instance.
Step 12	<b>show isis</b> [ <b>vrf</b> <i>vrf-name</i> ] [ <i>instance-tag</i> ] <b>interface</b> [ <i>interface-type slot/port</i> ]  <b>Example:</b> switch(config-if)# show isis Enterprise ethernet 1/2	(Optional) Displays IS-IS information for an interface in a VRF.
Step 13	<b>copy running-config startup-config</b>  <b>Example:</b> switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to create a VRF and add an interface to the VRF:

```
switch# configure terminal
switch(config)# vrf context NewVRF
switch(config-vrf)# exit
switch(config)# router isis Enterprise
switch(config-router)# vrf NewVRF
switch(config-router-vrf)# net 47.0004.004d.0001.0001.0c11.1111.00
switch(config-router-vrf)# interface ethernet 1/2
switch(config-if)# vrf member NewVRF
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# ip router isis Enterprise
switch(config-if)# copy running-config startup-config
```

## Tuning IS-IS

You can tune IS-IS to match your network requirements.

You can use the following optional commands in router configuration mode to tune IS-IS:

Command	Purpose
<p><b>lsp-gen-interval</b> [level-1   level-2]  <i>lsp-max-wait</i> [<i>lsp-initial-wait</i>  <i>lsp-second-wait</i>]</p> <p><b>Example:</b>  switch(config-router)# lsp-gen-interval  level-1 500 500 500</p>	<p>Configures the IS-IS throttle for LSP generation. The optional parameters are as follows:</p> <ul style="list-style-type: none"> <li>• <i>lsp-max-wait</i>—The maximum wait between the trigger and LSP generation. The range is from 500 to 65535 milliseconds.</li> <li>• <i>lsp-initial-wait</i>—The initial wait between the trigger and LSP generation. The range is from 50 to 65535 milliseconds.</li> <li>• <i>lsp-second-wait</i>—The second wait used for LSP throttle during backoff. The range is from 50 to 65535 milliseconds.</li> </ul>
<p><b>max-lsp-lifetime</b> <i>lifetime</i></p> <p><b>Example:</b>  switch(config-router)# max-lsp-lifetime  500</p>	<p>Sets the maximum LSP lifetime in seconds. The range is from 1 to 65535. The default is 1200.</p>
<p><b>metric-style transition</b></p> <p><b>Example:</b>  switch(config-router)# metric-style  transition</p>	<p>Enables IS-IS to generate and accept both narrow metric-style Type Length Value (TLV) objects and wide metric-style TLV objects. The default is disabled.</p>

Command	Purpose
<pre>spf-interval [level-1   level-2] spf-max-wait [spf-initial-wait spf-second-wait]</pre> <p><b>Example:</b> switch(config-router)# spf-interval level-2 500 500 500</p>	<p>Configures the interval between LSA arrivals. The optional parameters are as follows:</p> <ul style="list-style-type: none"> <li>• <code>lsp-max-wait</code>—The maximum wait between the trigger and SPF computation. The range is from 500 to 65535 milliseconds.</li> <li>• <code>lsp-initial-wait</code>—The initial wait between the trigger and SPF computation. The range is from 50 to 65535 milliseconds.</li> <li>• <code>lsp-second-wait</code>—The second wait used for SPF computation during backoff. The range is from 50 to 65535 milliseconds.</li> </ul>

You can use the following optional command in router address configuration mode:

Command	Purpose
<pre>adjacency-check</pre> <p><b>Example:</b> switch(config-router-af)# adjacency-check</p>	<p>Performs an adjacency check to verify that an IS-IS instance forms an adjacency only with a remote IS-IS entity that supports the same address family. This command is enabled by default.</p>

You can use the following optional commands in interface configuration mode to tune IS-IS:

Command	Purpose
<pre>isis csnp-interval seconds [level-1   level-2]</pre> <p><b>Example:</b> switch(config-if)# isis csnp-interval 20</p>	<p>Sets the complete sequence number PDU (CSNP) interval in seconds for IS-IS. The range is from 1 to 65535. The default is 10.</p>
<pre>isis hello-interval seconds [level-1   level-2]</pre> <p><b>Example:</b> switch(config-if)# isis hello-interval 20</p>	<p>Sets the hello interval in seconds for IS-IS. The range is from 1 to 65535. The default is 10.</p>
<pre>isis hello-multiplier num [level-1   level-2]</pre> <p><b>Example:</b> switch(config-if)# isis hello-multiplier 20</p>	<p>Specifies the number of IS-IS hello packets that a neighbor must miss before the router tears down an adjacency. The range is from 3 to 1000. The default is 3.</p>
<pre>isis lsp-interval milliseconds</pre> <p><b>Example:</b> switch(config-if)# isis lsp-interval 20</p>	<p>Sets the interval in milliseconds between LSPs sent on this interface during flooding. The range is from 10 to 65535. The default is 33.</p>

## Verifying the IS-IS Configuration

To display the IS-IS configuration, perform one of the following tasks:

Command	Purpose
<b>show isis</b> [ <i>instance-tag</i> ] <b>adjacency</b> [ <i>interface</i> ] [ <b>detail</b>   <b>summary</b> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS adjacencies. Use the <b>clear isis adjacency</b> command to clear these statistics.
<b>show isis</b> [ <i>instance-tag</i> ] <b>database</b> [ <b>level-1</b>   <b>level-2</b> ] [ <b>detail</b>   <b>summary</b> ] [ <i>LSP ID</i> ] [{ <b>ip</b>   <b>ipv6</b> } <b>prefix</b> <i>ip-prefix</i> ]   [ <b>router-id</b> <i>router-id</i> ]   [ <b>adjacency</b> <i>node-id</i> ]   [ <b>zero-sequence</b> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS LSP database.
<b>show isis</b> [ <i>instance-tag</i> ] <b>hostname</b> [ <b>vrf</b> <i>vrf-name</i> ]	Displays the dynamic host exchange information.
<b>show isis</b> [ <i>instance-tag</i> ] <b>interface</b> [ <b>brief</b>   <i>interface</i> ] [ <b>level-1</b>   <b>level-2</b> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS interface information.
<b>show isis</b> [ <i>instance-tag</i> ] <b>mesh-group</b> [ <i>mesh-id</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the mesh group information.
<b>show isis</b> [ <i>instance-tag</i> ] <b>protocol</b> [ <b>vrf</b> <i>vrf-name</i> ]	Displays information about the IS-IS protocol.
<b>show isis</b> [ <i>instance-tag</i> ] { <b>ip</b>   <b>ipv6</b> } <b>redistribute route</b> [ <i>ip-address</i> / <b>summary</b> ] [[ <i>ip-prefix</i> ] [ <b>longer-prefixes</b> [ <b>summary</b> ]]] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS route redistribution information.
<b>show isis</b> [ <i>instance-tag</i> ] { <b>ip</b>   <b>ipv6</b> } <b>route</b> [ <i>ip-address</i> / <b>summary</b> ] [ <i>ip-prefix</i> ] [ <b>longer-prefixes</b> [ <b>summary</b> ]] [ <b>detail</b> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS route table.
<b>show isis</b> [ <i>instance-tag</i> ] <b>rrm</b> [ <i>interface</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS interface retransmission information.
<b>show isis</b> [ <i>instance-tag</i> ] <b>srm</b> [ <i>interface</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS interface flooding information.
<b>show isis</b> [ <i>instance-tag</i> ] <b>ssn</b> [ <i>interface</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS interface PSNP information.
<b>show isis</b> [ <i>instance-tag</i> ] { <b>ip</b>   <b>ipv6</b> } <b>summary-address</b> [ <i>ip-address</i> ]   [ <i>ip-prefix</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS summary address information.
<b>show running-configuration isis</b>	Displays the current running IS-IS configuration.
<b>show tech-support isis</b> [ <b>detail</b> ]	Displays the technical support details for IS-IS.

For detailed information about the fields in the output from these commands, see the *Cisco Nexus 6000 Series NX-OS Unicast Routing Command Reference, Release 7.x*.



## Monitoring IS-IS

To display IS-IS statistics, use the following commands:

Command	Purpose
<b>show isis</b> [ <i>instance-tag</i> ] <b>adjacency</b> [ <i>interface</i> ] [ <b>system-ID</b> ] [ <b>detail</b> ] [ <b>summary</b> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS adjacency statistics.
<b>show isis</b> [ <i>instance-tag</i> ] <b>database</b> [ <b>level-1</b>   <b>level-2</b> ] [ <b>detail</b>   <b>summary</b> ] [ <i>lsip</i> ] {{ <b>adjacency</b> <i>id</i> { <b>ip</b>   <b>ipv6</b> } <b>prefix</b> <i>prefix</i> } [ <b>router-id</b> <i>id</i> ] [ <b>zero-sequence</b> ]} [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS database statistics.
<b>show isis</b> [ <i>instance-tag</i> ] <b>statistics</b> [ <i>interface</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS interface statistics.
<b>show isis</b> { <b>ip</b>   <b>ipv6</b> } <b>route-map statistics redistribute</b> { <b>bgp</b> <i>id</i>   <b>eigrp</b> <i>id</i>   <b>isis</b> <i>id</i>   <b>ospf</b> <i>id</i>   <b>rip</b> <i>id</i>   <b>static</b> } [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS redistribution statistics.
<b>show isis route-map statistics distribute</b> { <b>level-1</b>   <b>level-2</b> } <b>into</b> { <b>level-1</b>   <b>level-2</b> } [ <b>vrf</b> <i>vrf-name</i> ]	Displays IS-IS distribution statistics for routes distributed between levels.
<b>show isis</b> [ <i>instance-tag</i> ] <b>spf-log</b> [ <b>detail</b> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS SPF calculation statistics.
<b>show isis</b> [ <i>instance-tag</i> ] <b>traffic</b> [ <i>interface</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Displays the IS-IS traffic statistics.

To clear IS-IS configuration statistics, perform one of the following tasks:

Command	Purpose
<b>clear isis</b> [ <i>instance-tag</i> ] <b>adjacency</b> [*   [ <i>interface</i> ]] [ <b>system-id</b> <i>id</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Clears the IS-IS adjacency statistics.
<b>clear isis</b> { <b>ip</b>   <b>ipv6</b> } <b>route-map statistics redistribute</b> { <b>bgp</b> <i>id</i>   <b>direct</b>   <b>eigrp</b> <i>id</i>   <b>isis</b> <i>id</i>   <b>ospf</b> <i>id</i>   <b>rip</b> <i>id</i>   <b>static</b> } [ <b>vrf</b> <i>vrf-name</i> ]	Clears the IS-IS redistribution statistics.
<b>clear isis route-map statistics distribute</b> { <b>level-1</b>   <b>level-2</b> } <b>into</b> { <b>level-1</b>   <b>level-2</b> } [ <b>vrf</b> <i>vrf-name</i> ]	Clears IS-IS distribution statistics for routes distributed between levels.
<b>clear isis</b> [ <i>instance-tag</i> ] <b>statistics</b> [*   <i>interface</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Clears the IS-IS interface statistics.
<b>clear isis</b> [ <i>instance-tag</i> ] <b>traffic</b> [*   <i>interface</i> ] [ <b>vrf</b> <i>vrf-name</i> ]	Clears the IS-IS traffic statistics.

## Configuration Examples for IS-IS

This example shows how to configure IS-IS:

```
router isis Enterprise
```

```

is-type level-1
net 49.0001.0000.0000.0003.00
graceful-restart
address-family ipv4 unicast
  default-information originate

interface ethernet 2/1
ip address 192.0.2.1/24
isis circuit-type level-1
ip router isis Enterprise

```

## Related Topics

See the [Chapter 14, “Configuring Route Policy Manager,”](#) for more information on route maps.

## Additional References

For additional information related to implementing IS-IS, see the following sections:

- [Related Documents, page 16-34](#)
- [Standards, page 16-34](#)

## Related Documents

Related Topic	Document Title
IS-IS CLI commands	<i>Cisco Nexus 6000 Series NX-OS Unicast Routing Command Reference, Release 7.x</i>

## Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—