



A Commands

- [allocate fcoe-vlan-range, on page 2](#)
- [allocate shared interface ethernet, on page 3](#)

allocate fcoe-vlan-range

To allocate Fibre Channel over Ethernet (FCoE) VLANs to a virtual device context (VDC), use the **allocate fcoe-vlan-range** command. To remove the shared FCoE VLAN configuration for the VDC, use the **no** form of this command.

allocate fcoe-vlan-range *vlan-range* **from** *vdc* *vdc-name...* [*,vdc* *vdc-name*]
noallocate fcoe-vlan-range *vlan-range* **from** *vdc* *vdc-name...* [*,vdc* *vdc-name*]

| Syntax Description | Parameter | Description |
|--------------------|-------------------|--|
| | vlan-range | FCoE VLAN range. The range is from 1 to 3967. |
| | from | Specifies which VDCs are going to share ports with the FCoE VDC. |
| | vdc | (Optional) Specifies the VDC. |
| | vdc-name | VDC name. |

Command Default None

Command Modes VDC configuration mode

| Command History | Release | Modification |
|-----------------|---------|--|
| | 5.2(1) | This command was introduced on the Cisco Nexus 7000 Series Switches. |

Usage Guidelines Before allocating fcoe-vlan-range one has to create a storage vdc first.
 This command does not require a license.



Note Before allocating fcoe-vlan-range one has to create a storage vdc first.

Examples

This example shows how to allocate FCoE VLANs to a VDC:

```
switch# configure terminal
switch(config)# vdc 2
switch(config-vdc)# allocate fcoe-vlan-range 100-200 from vdc switch
switch(config-vdc)#
```

This example shows how to remove the shared FCoE VLAN configuration for a VDC:

```
switch(config-vdc)# no allocate fcoe-vlan-range 100-200 from vdc switch
```

| Related Commands | Command | Description |
|------------------|---------------------------------|--|
| | allocate interface | Allocates interfaces to a VDC for sharing ports. |
| | show vdc fcoe-vlan-range | Displays the FCoE VLAN range on the VDC. |

allocate shared interface ethernet

To allocate interfaces to a virtual device context (VDC) for sharing ports, use the **allocate shared interface ethernet** command. To disallow the VDC to share interfaces, use the **no** form of this command.

allocate shared interface ethernet *slot/chassis number*
noallocate shared interface ethernet *slot/chassis number*

Syntax Description

| | |
|---------------------------|---|
| <i>slot/chassisnumber</i> | Slot or chassis number. The range is from 1 to 253. |
|---------------------------|---|

Command Default

None

Command Modes

VDC configuration mode

Command History

| Release | Modification |
|---------|--|
| 5.2(1) | This command was introduced on the Cisco Nexus 7000 Series Switches. |

Usage Guidelines

This command does not require a license.

Examples

This example shows how to allocate interfaces to a VDC for sharing ports:

```
switch# configure terminal
switch(config)# vdc 2
switch(config-vdc)# allocate shared interface ethernet 7/5
switch(config-vdc)#
```

This example shows how to disallow a VDC to share interfaces:

```
switch(config-vdc)# no allocate shared interface ethernet 7/5
switch(config-vdc)#
```

Related Commands

| Command | Description |
|-----------------------------------|--|
| allocate fcoe-vlan-range | Allocates FCoE VLANs to a VDC. |
| show vdc shared membership | Displays the shared interfaces on a VDC. |

