



---

## A

aaa accounting dot1x command [2-1](#)  
aaa authentication dot1x command [2-3](#)  
AAA methods [2-3](#)  
abort command [2-683](#)  
access control entries  
    See ACEs  
access control lists  
    See ACLs  
access groups  
    IP [2-122](#)  
    MAC, displaying [2-457](#)  
access list, IPv6 [2-180](#)  
access map configuration mode [2-232](#)  
access mode [2-626](#)  
access ports [2-626](#)  
ACEs [2-79](#), [2-300](#)  
ACLs  
    deny [2-77](#)  
    displaying [2-345](#)  
    for non-IP protocols [2-212](#)  
    IP [2-122](#)  
    matching [2-232](#)  
    on Layer 2 interfaces [2-122](#)  
    permit [2-298](#)  
action command [2-5](#)  
address aliasing [2-281](#)  
aggregate-port learner [2-286](#)  
allowed VLANs [2-646](#)  
apply command [2-683](#)  
archive download-sw command [2-7](#)  
archive tar command [2-10](#)

archive upload-sw command [2-13](#)  
arp access-list command [2-15](#)  
audience [xix](#)  
authentication failed VLAN  
    See dot1x auth-fail vlan  
auth-fail max-attempts  
    See dot1x auth-fail max-attempts  
auth-fail vlan  
    See dot1x auth-fail vlan  
authorization state of controlled port [2-99](#)  
autonegotiation of duplex mode [2-107](#)  
auto qos voip command [2-17](#)

---

## B

BackboneFast, for STP [2-561](#)  
backup interfaces  
    configuring [2-622](#)  
    displaying [2-401](#)  
boot (boot loader) command [A-2](#)  
boot bootlpr command [2-22](#)  
boot config-file command [2-23](#)  
boot enable-break command [2-24](#)  
boot helper command [2-25](#)  
boot helper-config file command [2-26](#)  
booting  
    Cisco IOS image [2-29](#)  
    displaying environment variables [2-354](#)  
    interrupting [2-24](#)  
    manually [2-27](#)

## boot loader

accessing [A-1](#)

## booting

Cisco IOS image [A-2](#)helper image [2-25](#)

## directories

creating [A-15](#)displaying a list of [A-7](#)removing [A-19](#)

## displaying

available commands [A-12](#)memory heap utilization [A-14](#)version [A-26](#)

## environment variables

described [A-20](#)displaying settings [A-20](#)location of [A-21](#)setting [A-20](#)unsetting [A-24](#)

## files

copying [A-5](#)deleting [A-6](#)displaying a list of [A-7](#)displaying the contents of [A-4, A-16, A-23](#)renaming [A-17](#)

## file system

formatting [A-10](#)initializing flash [A-9](#)running a consistency check [A-11](#)loading helper images [A-13](#)prompt [A-1](#)resetting the system [A-18](#)boot manual command [2-27](#)boot private-config-file command [2-28](#)boot system command [2-29](#)BPDU filtering, for spanning tree [2-562, 2-597](#)BPDU guard, for spanning tree [2-564, 2-597](#)broadcast storm control [2-615](#)**C**

## candidate switches

See clusters

cat (boot loader) command [A-4](#)caution, description **xx**CDP, enabling protocol tunneling for [2-199](#)channel-group command [2-30](#)channel-protocol command [2-33](#)

## Cisco Network Assistant

See Network Assistant **xx**

## Cisco SoftPhone

auto-QoS configuration [2-17](#)trusting packets sent from [2-272](#)class command [2-34](#)class-map command [2-36](#)

## class maps

creating [2-36](#)defining the match criteria [2-234](#)displaying [2-359](#)

## class of service

See CoS

clear ip arp inspection log command [2-38](#)clear ip arp inspection statistics command [2-39](#)clear ipc command [2-41](#)clear ip dhcp snooping database command [2-40](#)clear l2protocol-tunnel counters command [2-42](#)clear lacp command [2-43](#)clear mac address-table command [2-44, 2-46](#)clear pagp command [2-47](#)clear port-security command [2-48](#)clear spanning-tree counters command [2-50](#)clear spanning-tree detected-protocols command [2-51](#)clear vmps statistics command [2-52](#)clear vtp counters command [2-53](#)cluster commander-address command [2-54](#)cluster discovery hop-count command [2-56](#)cluster enable command [2-57](#)cluster holdtime command [2-59](#)

- cluster member command [2-60](#)
- cluster outside-interface command [2-62](#)
- cluster requirements [xxi](#)
- cluster run command [2-63](#)
- clusters
  - adding candidates [2-60](#)
  - binding to HSRP group [2-64](#)
  - building manually [2-60](#)
  - communicating with
    - devices outside the cluster [2-62](#)
    - members by using Telnet [2-323](#)
  - debug messages, display [B-5](#)
  - displaying
    - candidate switches [2-362](#)
    - debug messages [B-5](#)
    - member switches [2-364](#)
    - status [2-360](#)
  - hop-count limit for extended discovery [2-56](#)
  - HSRP standby groups [2-64](#)
  - redundancy [2-64](#)
  - SNMP trap [2-551](#)
- cluster standby-group command [2-64](#)
- cluster timer command [2-66](#)
- command modes defined [1-1](#)
- commands changed in Cisco IOS Release 12.2(20)SE [1-6](#)
- command switch
  - See clusters
- configuration, initial
  - See getting started guide and hardware installation guide
- configuration files
  - password recovery disable considerations [A-1](#)
  - specifying the name [2-23, 2-28](#)
- configuring multiple interfaces [2-118](#)
- config-vlan mode
  - commands [2-669](#)
  - description [1-4](#)
  - entering [2-668](#)
  - summary [1-2](#)

- conventions
  - command [xx](#)
  - for examples [xx](#)
  - publication [xx](#)
  - text [xx](#)
- copy (boot loader) command [A-5](#)
- CoS
  - assigning default value to incoming packets [2-242](#)
  - assigning to Layer 2 protocol packets [2-202](#)
  - overriding the incoming value [2-242](#)
- CoS-to-DSCP map [2-246](#)
- CPU ASIC statistics, displaying [2-366](#)
- crashinfo files [2-113](#)

---

## D

- debug auto qos command [B-2](#)
- debug backup command [B-4](#)
- debug cluster command [B-5](#)
- debug dot1x command [B-7](#)
- debug dtp command [B-9](#)
- debug etherchannel command [B-10](#)
- debug ilpower command [B-12](#)
- debug interface command [B-15](#)
- debug ip dhcp snooping command [B-13](#)
- debug ip igmp filter command [B-17](#)
- debug ip igmp max-groups command [B-18](#)
- debug ip igmp snooping command [B-19](#)
- debug ip verify source packet command [B-14](#)
- debug lacp command [B-20](#)
- debug mac-notification command [B-21](#)
- debug matm command [B-22](#)
- debug matm move update command [B-23](#)
- debug monitor command [B-24](#)
- debug mvrdbg command [B-26](#)
- debug nvram command [B-27](#)
- debug pagp command [B-28](#)
- debug platform acl command [B-29](#)
- debug platform backup interface command [B-30](#)

- debug platform configuration command [B-38](#)
- debug platform cpu-queues command [B-31](#)
- debug platform device-manager command [B-33](#)
- debug platform dot1x command [B-34](#)
- debug platform etherchannel command [B-35](#)
- debug platform fallback-bridging command [B-36](#)
- debug platform forw-tcam command [B-37](#)
- debug platform ip arp inspection command [B-40](#)
- debug platform ip dhcp command [B-41](#)
- debug platform ip igmp snooping command [B-42](#)
- debug platform ip multicast command [B-44](#)
- debug platform ip unicast command [B-46](#)
- debug platform led command [B-48](#)
- debug platform matm command [B-49](#)
- debug platform messaging application command [B-51](#)
- debug platform phy command [B-52](#)
- debug platform pm command [B-54](#)
- debug platform port-asic command [B-56](#)
- debug platform port-security command [B-57](#)
- debug platform qos-acl-tcam command [B-58](#)
- debug platform remote-commands command [B-59](#)
- debug platform resource-manager command [B-60](#)
- debug platform snmp command [B-61](#)
- debug platform span command [B-62](#)
- debug platform supervisor-asic command [B-63](#)
- debug platform sw-bridge command [B-64](#)
- debug platform team command [B-65](#)
- debug platform udld command [B-68](#)
- debug platform vlan command [B-69](#)
- debug pm command [B-70](#)
- debug port-security command [B-72](#)
- debug qos-manager command [B-73](#)
- debug spanning-tree backbonefast command [B-76](#)
- debug spanning-tree bpdu command [B-77](#)
- debug spanning-tree bpdu-opt command [B-78](#)
- debug spanning-tree command [B-74](#)
- debug spanning-tree mstp command [B-79](#)
- debug spanning-tree switch command [B-81](#)
- debug spanning-tree uplinkfast command [B-83](#)
- debug sw-vlan command [B-84](#)
- debug sw-vlan ifs command [B-86](#)
- debug sw-vlan notification command [B-88](#)
- debug sw-vlan vtp command [B-90](#)
- debug udld command [B-92](#)
- debug vqpc command [B-94](#)
- define interface-range command [2-67](#)
- delete (boot loader) command [A-6](#)
- delete command [2-69](#)
- deny (ARP access-list configuration) command [2-70](#)
- deny (IPv6) command [2-72](#)
- deny command [2-77](#)
- detect mechanism, causes [2-108](#)
- device manager requirements [xx](#)
- DHCP snooping
  - accepting untrusted packets from edge switch [2-147](#)
  - enabling
    - on a VLAN [2-153](#)
    - option 82 [2-145, 2-147](#)
    - trust on an interface [2-151](#)
  - error recovery timer [2-110](#)
  - rate limiting [2-149](#)
- DHCP snooping binding database
  - binding file, configuring [2-143](#)
  - bindings
    - adding [2-141](#)
    - deleting [2-141](#)
    - displaying [2-418](#)
  - clearing database agent statistics [2-40](#)
  - database agent, configuring [2-143](#)
  - displaying
    - binding entries [2-418](#)
    - database agent status [2-420](#)
    - renewing [2-327](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-69](#)
- documentation, related [xx](#)
- document conventions [xx](#)
- domain name, VTP [2-694, 2-698](#)

- dot1x auth-fail max-attempts [2-82](#)
  - dot1x auth-fail vlan [2-84](#)
  - dot1x command [2-80](#)
  - dot1x control-direction command [2-86](#)
  - dot1x critical command [2-88](#)
  - dot1x default command [2-90](#)
  - dot1x guest-vlan command [2-91](#)
  - dot1x host-mode command [2-93](#)
  - dot1x initialize command [2-95](#)
  - dot1x max-req command [2-96, 2-97](#)
  - dot1x multiple-hosts command [2-98](#)
  - dot1x port-control command [2-99](#)
  - dot1x re-authenticate command [2-101](#)
  - dot1x re-authentication command [2-102](#)
  - dot1x reauthentication command [2-103](#)
  - dot1x timeout command [2-104](#)
  - dropping packets, with ACL matches [2-5](#)
  - drop threshold, Layer 2 protocol tunneling [2-199](#)
  - DSCP-to-CoS map [2-246](#)
  - DSCP-to-DSCP-mutation map [2-246](#)
  - DTP [2-627](#)
  - DTP flap
    - error detection for [2-108](#)
    - error recovery timer [2-110](#)
  - DTP negotiation [2-631](#)
  - dual IPv4 and IPv6 templates [2-292](#)
  - duplex command [2-106](#)
  - dynamic-access ports
    - configuring [2-620](#)
    - restrictions [2-621](#)
  - dynamic ARP inspection
    - ARP ACLs
      - apply to a VLAN [2-127](#)
      - define [2-15](#)
      - deny packets [2-70](#)
      - display [2-349](#)
      - permit packets [2-290](#)
    - dynamic ARP inspection (continued)
      - clear
        - log buffer [2-38](#)
        - statistics [2-39](#)
      - display
        - ARP ACLs [2-349](#)
        - configuration and operating state [2-414](#)
        - log buffer [2-414](#)
        - statistics [2-414](#)
        - trust state and rate limit [2-414](#)
      - enable per VLAN [2-137](#)
      - error detection for [2-108](#)
      - error recovery timer [2-110](#)
      - log buffer
        - clear [2-38](#)
        - configure [2-131](#)
        - display [2-414](#)
      - rate-limit incoming ARP packets [2-129](#)
      - statistics
        - clear [2-39](#)
        - display [2-414](#)
      - trusted interface state [2-133](#)
      - type of packet logged [2-138](#)
      - validation checks [2-135](#)
  - dynamic auto VLAN membership mode [2-626](#)
  - dynamic desirable VLAN membership mode [2-626](#)
  - Dynamic Host Configuration Protocol (DHCP)
    - See DHCP snooping
  - Dynamic Trunking Protocol
    - See DTP
- 
- ## E
- EAP-request/identity frame
    - maximum number to send [2-97](#)
    - response time before retransmitting [2-104](#)
  - encapsulation methods [2-646](#)
  - environment variables, displaying [2-354](#)
  - errdisable detect cause command [2-108](#)

- errdisable recovery command [2-110](#)
  - error conditions, displaying [2-392](#)
  - error disable detection [2-108](#)
  - error-disabled interfaces, displaying [2-401](#)
  - EtherChannel
    - assigning Ethernet interface to channel group [2-30](#)
    - creating port-channel logical interface [2-116](#)
    - debug EtherChannel/PAGP, display [B-10](#)
    - debug platform-specific events, display [B-35](#)
    - displaying [2-396](#)
    - enabling Layer 2 protocol tunneling for
      - LACP [2-200](#)
      - PAGP [2-200](#)
      - UDLD [2-200](#)
    - interface information, displaying [2-401](#)
  - LACP
    - clearing channel-group information [2-43](#)
    - debug messages, display [B-20](#)
    - displaying [2-453](#)
    - modes [2-30](#)
    - port priority for hot-standby ports [2-203](#)
    - restricting a protocol [2-33](#)
    - system priority [2-205](#)
  - load-distribution methods [2-308](#)
  - PAGP
    - aggregate-port learner [2-286](#)
    - clearing channel-group information [2-47](#)
    - debug messages, display [B-28](#)
    - displaying [2-502](#)
    - error detection for [2-108](#)
    - error recovery timer [2-110](#)
    - learn method [2-286](#)
    - modes [2-30](#)
    - physical-port learner [2-286](#)
    - priority of interface for transmitted traffic [2-288](#)
  - Ethernet controller, internal register display [2-368](#)
  - Ethernet statistics, collecting [2-329](#)
  - examples, conventions for [xx](#)
  - exception crashinfo command [2-113](#)
  - exit command [2-683](#)
  - extended discovery of candidate switches [2-56](#)
  - extended-range VLANs
    - and allowed VLAN list [2-646](#)
    - and pruning-eligible list [2-646](#)
    - configuring [2-668](#)
  - extended system ID for STP [2-570](#)
- 
- F**
- fan information, displaying [2-388](#)
  - file name, VTP [2-694](#)
  - files, deleting [2-69](#)
  - flash\_init (boot loader) command [A-9](#)
  - Flex Links
    - configuring [2-622](#)
    - displaying [2-401](#)
  - flowcontrol command [2-114](#)
  - format (boot loader) command [A-10](#)
  - forwarding packets, with ACL matches [2-5](#)
  - forwarding results, display [C-6](#)
  - frame forwarding information, displaying [C-6](#)
  - front-end controller
    - counter and status information [C-8](#)
  - fsck (boot loader) command [A-11](#)
- 
- G**
- global configuration mode [1-2, 1-3](#)
- 
- H**
- hardware ACL statistics [2-345](#)
  - help (boot loader) command [A-12](#)
  - hierarchical policy maps [2-306](#)
  - hop-count limit for clusters [2-56](#)
  - host connection, port configuration [2-625](#)
  - host ports, private VLANs [2-629](#)

## Hot Standby Router Protocol

See HSRP

## HSRP

binding HSRP group to cluster [2-64](#)

standby group [2-64](#)

IEEE 802.1Q trunk ports and native VLANs [2-685](#)

## IEEE 802.1Q tunnel ports

configuring [2-626](#)

displaying [2-381](#)

limitations [2-627](#)

## IEEE 802.1x

and switchport modes [2-627](#)

violation error recovery [2-110](#)

See also port-based authentication

## IEEE 802.1X Port Based Authentication

enabling guest VLAN supplicant [2-83](#)

## IGMP filters

applying [2-154](#)

debug messages, display [B-17](#)

IGMP groups, setting maximum [2-155](#)IGMP maximum groups, debugging [B-18](#)

## IGMP profiles

creating [2-157](#)

displaying [2-422](#)

## IGMP snooping

adding ports as a static member of a group [2-173](#)

displaying [2-423, 2-428, 2-430](#)

enabling [2-159](#)

enabling the configurable-leave timer [2-161](#)

enabling the Immediate-Leave feature [2-170](#)

flooding query count [2-167](#)

interface topology change notification behavior [2-169](#)

multicast table [1-6, 2-426](#)

querier [2-163](#)

query solicitation [2-167](#)

## IGMP snooping (continued)

report suppression [2-165](#)

switch topology change notification behavior [2-167](#)

## images

See software images

Immediate-Leave feature, MVR [2-283](#)

## Immediate-Leave processing

IPv6 [2-195](#)

immediate-leave processing [2-170](#)

## initial configuration

See getting started guide and hardware installation guide

interface configuration mode [1-2, 1-4](#)interface port-channel command [2-116](#)interface range command [2-118](#)interface-range macros [2-67](#)

## interfaces

assigning Ethernet interface to channel group [2-30](#)

configuring [2-106](#)

configuring multiple [2-118](#)

creating port-channel logical [2-116](#)

debug messages, display [B-15](#)

disabling [2-549](#)

displaying the MAC address table [2-469](#)

restarting [2-549](#)

interface speed, configuring [2-607](#)interface vlan command [2-120](#)internal registers, displaying [2-368, 2-377](#)

## Internet Group Management Protocol

See IGMP

## invalid GBIC

error detection for [2-108](#)

error recovery timer [2-110](#)

ip access-group command [2-122](#)ip address command [2-125](#)IP addresses, setting [2-125](#)IP address matching [2-232](#)ip arp inspection filter vlan command [2-127](#)ip arp inspection limit command [2-129](#)ip arp inspection log-buffer command [2-131](#)

ip arp inspection trust command [2-133](#)  
 ip arp inspection validate command [2-135](#)  
 ip arp inspection vlan command [2-137](#)  
 ip arp inspection vlan logging command [2-138](#)  
 IP DHCP snooping  
     See DHCP snooping  
 ip dhcp snooping binding command [2-141](#)  
 ip dhcp snooping command [2-140](#)  
 ip dhcp snooping database command [2-143](#)  
 ip dhcp snooping information option allow-untrusted  
     command [2-147](#)  
 ip dhcp snooping information option command [2-145](#)  
 ip dhcp snooping limit rate command [2-149](#)  
 ip dhcp snooping trust command [2-151](#)  
 ip dhcp snooping verify command [2-152](#)  
 ip dhcp snooping vlan command [2-153](#)  
 ip igmp filter command [2-154](#)  
 ip igmp max-groups command [2-155](#)  
 ip igmp profile command [2-157](#)  
 ip igmp snooping command [2-159](#)  
 ip igmp snooping last-member-query-interval  
     command [2-161](#)  
 ip igmp snooping querier command [2-163](#)  
 ip igmp snooping report-suppression command [2-165](#)  
 ip igmp snooping tcn command [2-167](#)  
 ip igmp snooping tcn flood command [2-169](#)  
 ip igmp snooping vlan immediate-leave command [2-170](#)  
 ip igmp snooping vlan mrouter command [2-171](#)  
 ip igmp snooping vlan static command [2-173](#)  
 IP multicast addresses [2-280](#)  
 IP phones  
     auto-QoS configuration [2-17](#)  
     trusting packets sent from [2-272](#)  
 IP-precedence-to-DSCP map [2-246](#)  
 ip source binding command [2-175](#)

IP source guard  
     disabling [2-179](#)  
     displaying  
         binding entries [2-432](#)  
         configuration [2-434](#)  
         dynamic binding entries only [2-418](#)  
     enabling [2-179](#)  
     static IP source bindings [2-175](#)  
 ip ssh command [2-177](#)  
 IPv6 access list  
     deny conditions [2-72](#)  
 ipv6 access-list command [2-180](#)  
 ipv6 mld snooping command [2-183](#)  
 ipv6 mld snooping last-listener-query count  
     command [2-185](#)  
 ipv6 mld snooping last-listener-query-interval  
     command [2-187](#)  
 ipv6 mld snooping listener-message-suppression  
     command [2-189](#)  
 ipv6 mld snooping robustness-variable command [2-191](#)  
 ipv6 mld snooping tcn command [2-193](#)  
 ipv6 mld snooping vlan command [2-195](#)  
 IPv6 SDM template [2-330](#)  
 ipv6 traffic-filter command [2-197](#)  
 ip verify source command [2-179](#)

---

## J

jumbo frames  
     See MTU

---

## L

l2protocol-tunnel command [2-199](#)  
 l2protocol-tunnel cos command [2-202](#)  
 LACP  
     See EtherChannel  
 lacp port-priority command [2-203](#)  
 lacp system-priority command [2-205](#)



Layer 2 mode, enabling [2-618](#)  
 Layer 2 protocol ports, displaying [2-450](#)  
 Layer 2 protocol-tunnel  
     error detection for [2-108](#)  
     error recovery timer [2-110](#)  
 Layer 2 protocol tunnel counters [2-42](#)  
 Layer 2 protocol tunneling error recovery [2-200](#)  
 Layer 2 traceroute  
     IP addresses [2-659](#)  
     MAC addresses [2-656](#)  
 Layer 3 mode, enabling [2-618](#)  
 line configuration mode [1-2, 1-5](#)  
 Link Aggregation Control Protocol  
     See EtherChannel  
 link flap  
     error detection for [2-108](#)  
     error recovery timer [2-110](#)  
 load\_helper (boot loader) command [A-13](#)  
 load-distribution methods for EtherChannel [2-308](#)  
 logging event power-inline-status command [2-207](#)  
 logging file command [2-208](#)  
 logical interface [2-116](#)  
 loopback error  
     detection for [2-108](#)  
     recovery timer [2-110](#)  
 loop guard, for spanning tree [2-572, 2-576](#)

---

## M

mac access-group command [2-210](#)  
 MAC access-groups, displaying [2-457](#)  
 MAC access list configuration mode [2-212](#)  
 mac access-list extended command [2-212](#)  
 MAC access lists [2-77](#)  
 MAC addresses  
     displaying  
         aging time [2-463](#)  
         all [2-461](#)  
         dynamic [2-467](#)  
         MAC address-table move updates [2-471](#)  
         notification settings [2-473](#)  
         number of addresses in a VLAN [2-465](#)  
         per interface [2-469](#)  
         per VLAN [2-477](#)  
         static [2-475](#)  
         static and dynamic entries [2-459](#)  
     dynamic  
         aging time [2-214](#)  
         deleting [2-44](#)  
         displaying [2-467](#)  
     enabling MAC address notification [2-217](#)  
     enabling MAC address-table move update [2-215](#)  
     matching [2-232](#)  
     static  
         adding and removing [2-219](#)  
         displaying [2-475](#)  
         dropping on an interface [2-220](#)  
     tables [2-461](#)  
 MAC address notification, debugging [B-21](#)  
 mac address-table aging-time [2-210, 2-232](#)  
 mac address-table aging-time command [2-214](#)  
 mac address-table move update command [2-215](#)  
 mac address-table notification command [2-217](#)  
 mac address-table static command [2-219](#)  
 mac address-table static drop command [2-220](#)  
 macro apply command [2-222](#)  
 macro description command [2-225](#)  
 macro global command [2-226](#)  
 macro global description command [2-229](#)  
 macro name command [2-230](#)

## macros

- adding a description [2-225](#)
- adding a global description [2-229](#)
- applying [2-226](#)
- creating [2-230](#)
- displaying [2-504](#)
- interface range [2-67, 2-118](#)
- specifying parameter values [2-226](#)
- tracing [2-226](#)

## manual

- audience [xix](#)
- purpose of [xix](#)

## maps

## QoS

- defining [2-246](#)
- displaying [2-487](#)

## VLAN

- creating [2-680](#)
- defining [2-232](#)
- displaying [2-539](#)

match (access-map configuration) command [2-232](#)

match (class-map configuration) command [2-234](#)

## maximum transmission unit

See MTU

mdix auto command [2-236](#)

## MDL snooping

- displaying [2-444](#)

## member switches

See clusters

memory (boot loader) command [A-14](#)

mkdir (boot loader) command [A-15](#)

## MLD snooping

- configuring [2-189, 2-191](#)
- configuring queries [2-185, 2-187](#)
- configuring topology change notification [2-193](#)
- displaying [2-442, 2-446, 2-448](#)
- enabling [2-183](#)

## MLD snooping on a VLAN

- enabling [2-195](#)

mls qos aggregate-policer command [2-240](#)

mls qos command [2-238](#)

mls qos cos command [2-242](#)

mls qos dscp-mutation command [2-244](#)

mls qos map command [2-246](#)

mls qos queue-set output buffers command [2-250](#)

mls qos queue-set output threshold command [2-252](#)

mls qos rewrite ip dscp command [2-254](#)

mls qos srr-queue input bandwidth command [2-256](#)

mls qos srr-queue input buffers command [2-258](#)

mls qos-srr-queue input cos-map command [2-260](#)

mls qos srr-queue input dscp-map command [2-262](#)

mls qos srr-queue input priority-queue command [2-264](#)

mls qos srr-queue input threshold command [2-266](#)

mls qos-srr-queue output cos-map command [2-268](#)

mls qos srr-queue output dscp-map command [2-270](#)

mls qos trust command [2-272](#)

mls qos vlan-based command [2-274](#)

mode, MVR [2-280](#)

Mode button, and password recovery [2-333](#)

modes, commands [1-1](#)

monitor session command [2-275](#)

more (boot loader) command [A-16](#)

## MSTP

displaying [2-520, 2-521](#)

interoperability [2-51](#)

link type [2-574](#)

## MST region

aborting changes [2-580](#)

applying changes [2-580](#)

configuration name [2-580](#)

configuration revision number [2-580](#)

current or pending display [2-580](#)

displaying [2-520, 2-521](#)

MST configuration mode [2-580](#)

VLANs-to-instance mapping [2-580](#)

path cost [2-582](#)

protocol mode [2-578](#)

restart protocol migration process [2-51](#)

## MST (continued)P

## root port

- loop guard [2-572](#)
- preventing from becoming designated [2-572](#)
- restricting which can be root [2-572](#)
- root guard [2-572](#)

## root switch

- affects of extended system ID [2-570](#)
- hello-time [2-585, 2-593](#)
- interval between BPDU messages [2-586](#)
- interval between hello BPDU messages [2-585, 2-593](#)
- max-age [2-586](#)
- maximum hop count before discarding BPDU [2-587](#)
- port priority for selection of [2-589](#)
- primary or secondary [2-593](#)
- switch priority [2-592](#)

## state changes

- blocking to forwarding state [2-599](#)
- enabling BPDU filtering [2-562, 2-597](#)
- enabling BPDU guard [2-564, 2-597](#)
- enabling Port Fast [2-597, 2-599](#)
- forward-delay time [2-584](#)
- length of listening and learning states [2-584](#)
- rapid transition to forwarding [2-574](#)
- shutting down Port Fast-enabled ports [2-597](#)

state information display [2-519](#)

## MTU

- configuring size [2-653](#)
- displaying global setting [2-528](#)

## Multicast Listener Discovery

See MLD

multicast group address, MVR [2-283](#)multicast groups, MVR [2-281](#)

## Multicast Listener Discovery

See MLD

multicast router learning method [2-171](#)

## multicast router ports

IPv6 [2-195](#)multicast router ports, configuring [2-171](#)multicast storm control [2-615](#)multicast VLAN, MVR [2-280](#)

## multicast VLAN registration

See MVR

multiple hosts on authorized port [2-93](#)

## Multiple Spanning Tree Protocol

See MSTP

## MVR

and address aliasing [2-281](#)configuring [2-280](#)configuring interfaces [2-283](#)debug messages, display [B-26](#)displaying [2-496](#)displaying interface information [2-498](#)members, displaying [2-500](#)mvr (global configuration) command [2-280](#)mvr (interface configuration) command [2-283](#)mvr vlan group command [2-284](#)

---

**N**native VLANs [2-646](#)native VLAN tagging [2-685](#)Network Assistant requirements [xx](#)

## nonegotiate

DTP messaging [2-631](#)nonegotiate, speed [2-607](#)

## non-IP protocols

denying [2-77](#)forwarding [2-298](#)non-IP traffic access lists [2-212](#)

## non-IP traffic forwarding

denying [2-77](#)permitting [2-298](#)normal-range VLANs [2-668, 2-674](#)note, description [xx](#)no vlan command [2-668, 2-678](#)

**P**

## PAGP

See EtherChannel

pagp learn-method command [2-286](#)

pagp port-priority command [2-288](#)

password, VTP [2-694, 2-698](#)

password-recovery mechanism, enabling and disabling [2-333](#)

permit (ARP access-list configuration) command [2-290](#)

permit (IPv6) command [2-292](#)

permit (MAC access-list configuration) command [2-298](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-286](#)

PID, displaying [2-413](#)

PIM-DVMRP, as multicast router learning method [2-171](#)

## PoE

configuring the power budget [2-313](#)

configuring the power management mode [2-310](#)

displaying controller register values [2-375](#)

displaying power management information [2-512](#)

logging of status [2-207](#)

police aggregate command [2-303](#)

police command [2-301](#)

policed-DSCP map [2-246](#)

policy-map command [2-305](#)

## policy maps

applying to an interface [2-335, 2-340](#)

creating [2-305](#)

displaying [2-507](#)

hierarchical [2-306](#)

## policers

displaying [2-480](#)

for a single class [2-301](#)

for multiple classes [2-240, 2-303](#)

policed-DSCP map [2-246](#)

## policy maps (continued)

## traffic classification

defining the class [2-34](#)

defining trust states [2-661](#)

setting DSCP or IP precedence values [2-338](#)

## Port Aggregation Protocol

See EtherChannel

## port-based authentication

AAA method list [2-3](#)

debug messages, display [B-7](#)

enabling IEEE 802.1x

globally [2-80](#)

per interface [2-99](#)

guest VLAN [2-91](#)

host modes [2-93](#)

IEEE 802.1x AAA accounting methods [2-1](#)

initialize an interface [2-95](#)

manual control of authorization state [2-99](#)

multiple hosts on authorized port [2-93](#)

## periodic re-authentication

enabling [2-103](#)

time between attempts [2-104](#)

quiet period between failed authentication exchanges [2-104](#)

re-authenticating IEEE 802.1x-enabled ports [2-101](#)

resetting configurable IEEE 802.1x parameters [2-90](#)

switch-to-authentication server retransmission time [2-104](#)

switch-to-client frame-retransmission number [2-96 to 2-97](#)

switch-to-client retransmission time [2-104](#)

port-channel load-balance command [2-308](#)

Port Fast, for spanning tree [2-599](#)

port ranges, defining [2-67](#)

ports, debugging [B-70](#)

ports, protected [2-644](#)

port security

- aging [2-638](#)
- debug messages, display [B-72](#)
- enabling [2-633](#)
- violation error recovery [2-110](#)

port trust states for QoS [2-272](#)

port types, MVR [2-283](#)

power information, displaying [2-388](#)

power inline command [2-310](#)

power inline consumption command [2-313](#)

Power over Ethernet

- See PoE

priority-queue command [2-315](#)

private-vlan command [2-317](#)

private-vlan mapping command [2-320](#)

private VLANs

- association [2-642](#)
- configuring [2-317](#)
- configuring ports [2-629](#)
- displaying [2-534](#)
- host ports [2-629](#)
- mapping
  - configuring [2-642](#)
  - displaying [2-401](#)
- promiscuous ports [2-629](#)

privileged EXEC mode [1-2, 1-3](#)

product identification information, displaying [2-413](#)

promiscuous ports, private VLANs [2-629](#)

protected ports, displaying [2-407](#)

pruning

- VLANs [2-646](#)
- VTP
  - displaying interface information [2-401](#)
  - enabling [2-694, 2-698](#)

pruning-eligible VLAN list [2-648](#)

PVST+

- See STP

## Q

### QoS

auto-QoS

- configuring [2-17](#)
- debug messages, display [1-6, B-2](#)
- displaying [2-350](#)

class maps

- creating [2-36](#)
- defining the match criteria [2-234](#)
- displaying [2-359](#)

defining the CoS value for an incoming packet [2-242](#)

displaying configuration information [2-350, 2-479](#)

DSCP transparency [2-254](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-244](#)
- defining DSCP-to-DSCP-mutation map [2-246](#)

egress queues

- allocating buffers [2-250](#)
- defining the CoS output queue threshold map [2-268](#)
- defining the DSCP output queue threshold map [2-270](#)
- displaying buffer allocations [2-483](#)
- displaying CoS output queue threshold map [2-487](#)
- displaying DSCP output queue threshold map [2-487](#)
- displaying queueing strategy [2-483](#)
- displaying queue-set settings [2-490](#)
- enabling bandwidth shaping and scheduling [2-611](#)
- enabling bandwidth sharing and scheduling [2-613](#)
- limiting the maximum output on a port [2-609](#)
- mapping a port to a queue-set [2-322](#)
- mapping CoS values to a queue and threshold [2-268](#)
- mapping DSCP values to a queue and threshold [2-270](#)
- setting maximum and reserved memory allocations [2-252](#)
- setting WTD thresholds [2-252](#)

enabling [2-238](#)

## QoS (continued)

## ingress queues

- allocating buffers [2-258](#)
- assigning SRR scheduling weights [2-256](#)
- defining the CoS input queue threshold map [2-260](#)
- defining the DSCP input queue threshold map [2-262](#)
- displaying buffer allocations [2-483](#)
- displaying CoS input queue threshold map [2-487](#)
- displaying DSCP input queue threshold map [2-487](#)
- displaying queueing strategy [2-483](#)
- displaying settings for [2-481](#)
- enabling the priority queue [2-264](#)
- mapping CoS values to a queue and threshold [2-260](#)
- mapping DSCP values to a queue and threshold [2-262](#)
- setting WTD thresholds [2-266](#)

## maps

- defining [2-246](#), [2-260](#), [2-262](#), [2-268](#), [2-270](#)
- displaying [2-487](#)

## policy maps

- applying an aggregate policer [2-303](#)
- applying to an interface [2-335](#), [2-340](#)
- creating [2-305](#)
- defining policers [2-240](#), [2-301](#)
- displaying policers [2-480](#)
- displaying policy maps [2-507](#)
- hierarchical [2-306](#)
- policed-DSCP map [2-246](#)
- setting DSCP or IP precedence values [2-338](#)
- traffic classifications [2-34](#)
- trust states [2-661](#)

port trust states [2-272](#)queues, enabling the expedite [2-315](#)

## statistics

- in-profile and out-of-profile packets [2-483](#)
- packets enqueued or dropped [2-483](#)
- sent and received CoS values [2-483](#)
- sent and received DSCP values [2-483](#)

trusted boundary for IP phones [2-272](#)VLAN-based [2-274](#)

## quality of service

See QoS

querytime, MVR [2-280](#)queue-set command [2-322](#)

---

**R**

## rapid per-VLAN spanning-tree plus

See STP

## rapid PVST+

See STP

rcommand command [2-323](#)re-authenticating IEEE 802.1x-enabled ports [2-101](#)

## re-authentication

periodic [2-103](#)time between attempts [2-104](#)receiver ports, MVR [2-283](#)receiving flow-control packets [2-114](#)

## recovery mechanism

causes [2-110](#)display [2-356](#), [2-390](#), [2-394](#)timer interval [2-111](#)redundancy for cluster switches [2-64](#)remote-span command [2-325](#)

## Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-17](#)renew ip dhcp snooping database command [2-327](#)

## requirements

cluster [xxi](#)device manager [xx](#)Network Assistant [xx](#)reset (boot loader) command [A-18](#)reset command [2-683](#)resource templates, displaying [2-514](#)

## restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)rmon collection stats command [2-329](#)

root guard, for spanning tree [2-572](#)

routed ports

IP addresses on [2-126](#)

number supported [2-126](#)

RSPAN

configuring [2-275](#)

displaying [2-493](#)

filter RSPAN traffic [2-275](#)

remote-span command [2-325](#)

sessions

add interfaces to [2-275](#)

displaying [2-493](#)

start new [2-275](#)

## S

sdm prefer command [2-330](#)

SDM templates

allowed resources [2-331](#)

displaying [2-514](#)

dual IPv4 and IPv6 [2-330](#)

secure ports, limitations [2-635](#)

sending flow-control packets [2-114](#)

service password-recovery command [2-333](#)

service-policy command [2-335](#)

set (boot loader) command [A-20](#)

set command [2-338](#)

setup command [2-340](#)

setup express command [2-343](#)

show access-lists command [2-345](#)

show archive status command [2-348](#)

show arp access-list command [2-349](#)

show auto qos command [2-350](#)

show boot command [2-354](#)

show cable-diagnostics tdr command [2-356](#)

show changes command [2-683](#)

show class-map command [2-359](#)

show cluster candidates command [2-362](#)

show cluster command [2-360](#)

show cluster members command [2-364](#)

show controllers cpu-interface command [2-366](#)

show controllers ethernet-controller command [2-368](#)

show controllers power inline command [2-375](#)

show controllers tcam command [2-377](#)

show controller utilization command [2-379](#)

show current command [2-683](#)

show dot1q-tunnel command [2-381](#)

show dot1x command [2-382](#)

show dtp [2-386](#)

show env command [2-388](#)

show errdisable detect command [2-390](#)

show errdisable flap-values command [2-392](#)

show errdisable recovery command [2-394](#)

show etherchannel command [2-396](#)

show flowcontrol command [2-399](#)

show interfaces command [2-401](#)

show interfaces counters command [2-411](#)

show inventory command [2-413](#)

show ip arp inspection command [2-414](#)

show ipc command [2-436](#)

show ip dhcp snooping binding command [2-418](#)

show ip dhcp snooping command [2-417](#)

show ip dhcp snooping database command [2-420](#)

show ip igmp profile command [2-422](#)

show ip igmp snooping address command [2-444](#)

show ip igmp snooping command [2-423, 2-442](#)

show ip igmp snooping groups command [2-426](#)

show ip igmp snooping mrouter command [2-428, 2-446](#)

show ip igmp snooping querier command [2-430, 2-448](#)

show ip source binding command [2-432](#)

show ipv6 access-list command [2-440](#)

show ip verify source command [2-434](#)

show l2protocol-tunnel command [2-450](#)

show lacp command [2-453](#)

show mac access-group command [2-457](#)

show mac address-table address command [2-461](#)

show mac address-table aging time command [2-463](#)

show mac address-table command [2-459](#)

- show mac address-table count command [2-465](#)
- show mac address-table dynamic command [2-467](#)
- show mac address-table interface command [2-469](#)
- show mac address-table move update command [2-471](#)
- show mac address-table notification command [2-46, 2-473, B-23](#)
- show mac address-table static command [2-475](#)
- show mac address-table vlan command [2-477](#)
- show mls qos aggregate-policer command [2-480](#)
- show mls qos command [2-479](#)
- show mls qos input-queue command [2-481](#)
- show mls qos interface command [2-483](#)
- show mls qos maps command [2-487](#)
- show mls qos queue-set command [2-490](#)
- show mls qos vlan command [2-492](#)
- show monitor command [2-493](#)
- show mvr command [2-496](#)
- show mvr interface command [2-498](#)
- show mvr members command [2-500](#)
- show pagp command [2-502](#)
- show parser macro command [2-504](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform frontend-controller command [C-8](#)
- show platform igmp snooping command [C-9](#)
- show platform ip multicast command [C-11](#)
- show platform ip unicast command [C-12](#)
- show platform ipv6 unicast command [C-16](#)
- show platform layer4op command [C-18](#)
- show platform mac-address-table command [C-19](#)
- show platform messaging command [C-20](#)
- show platform monitor command [C-21](#)
- show platform mvr table command [C-22](#)
- show platform pm command [C-23](#)
- show platform port-asic command [C-24](#)
- show platform port-security command [C-29](#)
- show platform qos command [C-30](#)
- show platform resource-manager command [C-31](#)
- show platform snmp counters command [C-33](#)
- show platform spanning-tree command [C-34](#)
- show platform stp-instance command [C-35](#)
- show platform team command [C-36](#)
- show platform vlan command [C-39](#)
- show policy-map command [2-507](#)
- show port security command [2-509](#)
- show power inline command [2-512](#)
- show proposed command [2-683](#)
- show sdm prefer command [2-514](#)
- show setup express command [2-518](#)
- show spanning-tree command [2-519](#)
- show storm-control command [2-526](#)
- show system mtu command [2-528](#)
- show trust command [2-661](#)
- show udd command [2-529](#)
- show version command [2-532](#)
- show vlan access-map command [2-539](#)
- show vlan command [2-534](#)
- show vlan command, fields [2-536](#)
- show vlan filter command [2-540](#)
- show vmps command [2-541](#)
- show vtp command [2-544](#)
- shutdown command [2-549](#)
- shutdown threshold, Layer 2 protocol tunneling [2-199](#)
- shutdown vlan command [2-550](#)
- Smartports macros
  - See macros
  - SNMP host, specifying [2-555](#)
  - SNMP informs, enabling the sending of [2-551](#)
  - snmp-server enable traps command [2-551](#)
  - snmp-server host command [2-555](#)
  - snmp trap mac-notification command [2-559](#)
  - SNMP traps
    - enabling MAC address notification trap [2-559](#)
    - enabling the MAC address notification feature [2-217](#)
    - enabling the sending of [2-551](#)



- SoftPhone
  - See Cisco SoftPhone
- software images
  - deleting [2-69](#)
  - downloading [2-7](#)
  - upgrading [2-7](#)
  - uploading [2-13](#)
- software version, displaying [2-532](#)
- source ports, MVR [2-283](#)
- SPAN
  - configuring [2-275](#)
  - debug messages, display [B-24](#)
  - displaying [2-493](#)
  - filter SPAN traffic [2-275](#)
  - sessions
    - add interfaces to [2-275](#)
    - displaying [2-493](#)
    - start new [2-275](#)
- spanning [2-601](#)
- spanning-tree backbonefast command [2-561](#)
- spanning-tree bpdudfilter command [2-562](#)
- spanning-tree bpduguard command [2-564](#)
- spanning-tree cost command [2-566](#)
- spanning-tree etherchannel command [2-568](#)
- spanning-tree extend system-id command [2-570](#)
- spanning-tree guard command [2-572](#)
- spanning-tree link-type command [2-574](#)
- spanning-tree loopguard default command [2-576](#)
- spanning-tree mode command [2-578](#)
- spanning-tree mst configuration command [2-580](#)
- spanning-tree mst cost command [2-582](#)
- spanning-tree mst forward-time command [2-584](#)
- spanning-tree mst hello-time command [2-585](#)
- spanning-tree mst max-age command [2-586](#)
- spanning-tree mst max-hops command [2-587](#)
- spanning-tree mst port-priority command [2-589](#)
- spanning-tree mst pre-standard command [2-591](#)
- spanning-tree mst priority command [2-592](#)
- spanning-tree mst root command [2-593](#)
- spanning-tree portfast (global configuration)
  - command [2-597](#)
- spanning-tree portfast (interface configuration)
  - command [2-599](#)
- spanning-tree port-priority command [2-595](#)
- Spanning Tree Protocol
  - See STP
- spanning-tree transmit hold-count command [2-601](#)
- spanning-tree uplinkfast command [2-602](#)
- spanning-tree vlan command [2-604](#)
- speed command [2-607](#)
- srr-queue bandwidth limit command [2-609](#)
- srr-queue bandwidth shape command [2-611](#)
- srr-queue bandwidth share command [2-613](#)
- SSH, configuring version [2-177](#)
- static-access ports, configuring [2-620](#)
- statistics, Ethernet group [2-329](#)
- sticky learning, enabling [2-633](#)
- storm-control command [2-615](#)
- STP
  - BackboneFast [2-561](#)
  - counters, clearing [2-50](#)
  - debug messages, display
    - BackboneFast events [B-76](#)
    - MSTP [B-79](#)
    - optimized BPDUs handling [B-78](#)
    - spanning-tree activity [B-74](#)
    - switch shim [B-81](#)
    - transmitted and received BPDUs [B-77](#)
    - UplinkFast [B-83](#)
  - detection of indirect link failures [2-561](#)
  - enabling protocol tunneling for [2-199](#)
  - EtherChannel misconfiguration [2-568](#)
  - extended system ID [2-570](#)
  - path cost [2-566](#)
  - protocol modes [2-578](#)

## STP (continued)

- root port
  - accelerating choice of new [2-602](#)
  - loop guard [2-572](#)
  - preventing from becoming designated [2-572](#)
  - restricting which can be root [2-572](#)
  - root guard [2-572](#)
  - UplinkFast [2-602](#)
- root switch
  - affects of extended system ID [2-570, 2-605](#)
  - hello-time [2-604](#)
  - interval between BPDU messages [2-604](#)
  - interval between hello BPDU messages [2-604](#)
  - max-age [2-604](#)
  - port priority for selection of [2-595](#)
  - primary or secondary [2-604](#)
  - switch priority [2-604](#)
- state changes
  - blocking to forwarding state [2-599](#)
  - enabling BPDU filtering [2-562, 2-597](#)
  - enabling BPDU guard [2-564, 2-597](#)
  - enabling Port Fast [2-597, 2-599](#)
  - enabling timer to recover from error state [2-110](#)
  - forward-delay time [2-604](#)
  - length of listening and learning states [2-604](#)
  - shutting down Port Fast-enabled ports [2-597](#)
- state information display [2-519](#)
- VLAN options [2-592, 2-604](#)
- SVIs, creating [2-120](#)
- Switched Port Analyzer
  - See SPAN
- switching characteristics
  - modifying [2-618](#)
  - returning to interfaces [2-618](#)
- switchport access command [2-620](#)
- switchport backup interface command [2-622](#)
- switchport block command [2-624](#)
- switchport command [2-618](#)
- switchport host command [2-625](#)

- switchport mode command [2-626](#)
- switchport mode private-vlan command [2-629](#)
- switchport nonegotiate command [2-631](#)
- switchport port-security aging command [2-638](#)
- switchport port-security command [2-633](#)
- switchport priority extend command [2-640](#)
- switchport private-vlan command [2-642](#)
- switchport protected command [2-644](#)
- switchports, displaying [2-401](#)
- switchport trunk command [2-646](#)
- switchport voice vlan command [2-649](#)
- system env temperature threshold yellow command [2-651](#)
- system message logging [2-207](#)
- system message logging, save message to flash [2-208](#)
- system mtu command [2-653](#)
- system resource templates [2-330](#)

---

**T**

- tar files, creating, listing, and extracting [2-10](#)
- TDR, running [2-655](#)
- Telnet, using to communicate to cluster switches [2-323](#)
- temperature information, displaying [2-388](#)
- templates, system resources [2-330](#)
- test cable-diagnostics tdr command [2-655](#)
- traceroute mac command [2-656](#)
- traceroute mac ip command [2-659](#)
- trunking, VLAN mode [2-626](#)
- trunk mode [2-626](#)
- trunk ports [2-626](#)
- trunks, to non-DTP device [2-627](#)
- trusted boundary for QoS [2-272](#)
- trusted port states for QoS [2-272](#)
- tunnel ports, Layer 2 protocol, displaying [2-450](#)
- type (boot loader) command [A-23](#)

---

**U**

## UDLD

- aggressive mode [2-663, 2-665](#)
  - debug messages, display [B-92](#)
  - enable globally [2-663](#)
  - enable per interface [2-665](#)
  - error recovery timer [2-110](#)
  - message timer [2-663](#)
  - normal mode [2-663, 2-665](#)
  - reset a shutdown interface [2-667](#)
  - status [2-529](#)
- udd command [2-663](#)
- udd port command [2-665](#)
- udd reset command [2-667](#)
- unicast storm control [2-615](#)
- UniDirectional Link Detection
- See UDLD
- unknown multicast traffic, preventing [2-624](#)
- unknown unicast traffic, preventing [2-624](#)
- unset (boot loader) command [A-24](#)
- upgrading
- software images [2-7](#)
  - monitoring status of [2-348](#)
- upgrading information
- See release notes
- UplinkFast, for STP [2-602](#)
- user EXEC mode [1-2, 1-3](#)

---

**V**

- version (boot loader) command [A-26](#)

## VLAN

- enabling guest VLAN supplicant [2-83](#)
  - vlan (global configuration) command [2-668](#)
  - vlan (VLAN configuration) command [2-674](#)
  - vlan access-map command [2-680](#)
- VLAN access map configuration mode [2-680](#)

## VLAN access maps

- actions [2-5](#)
  - displaying [2-539](#)
- VLAN-based QoS [2-274](#)

## VLAN configuration

- rules [2-671, 2-676](#)
- saving [2-668, 2-678](#)

## VLAN configuration mode

- commands
  - VLAN [2-674](#)
  - VTP [2-698](#)
- description [1-5](#)
- entering [2-682](#)
- summary [1-2](#)

vlan database command [2-682](#)vlan dot1q tag native command [2-685](#)vlan filter command [2-687](#)VLAN filters, displaying [2-540](#)VLAN ID range [2-668, 2-674](#)

## VLAN maps

- applying [2-687](#)
- creating [2-680](#)
- defining [2-232](#)
- displaying [2-539](#)

## VLAN Query Protocol

- See VQP

## VLANs

- adding [2-668](#)
- configuring [2-668, 2-674](#)
- debug messages, display
  - ISL [B-88](#)
  - VLAN IOS file system error tests [B-86](#)
  - VLAN manager activity [B-84](#)
  - VTP [B-90](#)
- displaying configurations [2-534](#)
- extended-range [2-668](#)
- MAC addresses
  - displaying [2-477](#)
  - number of [2-465](#)

## VLANs (continued)

- media types [2-671, 2-676](#)
- normal-range [2-668, 2-674](#)
- private [2-629](#)
  - configuring [2-317](#)
  - displaying [2-534](#)
- See also private VLANs
- restarting [2-550](#)
- saving the configuration [2-668](#)
- shutting down [2-550](#)
- SNMP traps for VTP [2-553, 2-556](#)
- suspending [2-550](#)
- variables [2-674](#)

## VLAN Trunking Protocol

See VTP

## VMPS

- configuring servers [2-692](#)
- displaying [2-541](#)
- error recovery timer [2-111](#)
- reconfirming dynamic VLAN assignments [2-689](#)
- vmmps reconfirm (global configuration) command [2-690](#)
- vmmps reconfirm (privileged EXEC) command [2-689](#)
- vmmps retry command [2-691](#)
- vmmps server command [2-692](#)

## voice VLAN

- configuring [2-649](#)
- setting port priority [2-640](#)

## VQP

- and dynamic-access ports [2-621](#)
- clearing client statistics [2-52](#)
- displaying information [2-541](#)
- per-server retry count [2-691](#)
- reconfirmation interval [2-690](#)
- reconfirming dynamic VLAN assignments [2-689](#)

## VTP

- changing characteristics [2-694](#)
- clearing pruning counters [2-53](#)
- configuring
  - domain name [2-694, 2-698](#)
  - file name [2-694](#)
  - mode [2-694, 2-698](#)
  - password [2-694, 2-698](#)
- counters display fields [2-545](#)
- displaying information [2-544](#)
- enabling
  - pruning [2-694, 2-698](#)
  - tunneling for [2-199](#)
  - Version 2 [2-694, 2-698](#)
- mode [2-694, 2-698](#)
- pruning [2-694, 2-698](#)
- saving the configuration [2-668, 2-678](#)
- statistics [2-544](#)
- status [2-544](#)
- status display fields [2-547](#)
- vtp (global configuration) command [2-694](#)
- vtp (VLAN configuration) command [2-698](#)