



INDEX

A

aaa accounting dot1x command **2-1**
aaa authentication dot1x command **2-3**
aaa authorization network command **2-5**
AAA methods **2-3**
abort command **2-706**
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP **2-132**
 MAC, displaying **2-480**
 access list, IPv6 **2-192**
 access map configuration mode **2-246**
 access mode **2-649**
 access ports **2-649**
 ACEs **2-83, 2-314**
 ACLs
 deny **2-81**
 displaying **2-364**
 for non-IP protocols **2-226**
 IP **2-132**
 matching **2-246**
 on Layer 2 interfaces **2-132**
 permit **2-312**
 action command **2-6**
 address aliasing **2-295**
 aggregate-port learner **2-300**
 allowed VLANs **2-669**
 apply command **2-706**
 archive download-sw command **2-8**

archive tar command **2-11**
archive upload-sw command **2-14**
arp access-list command **2-16**
audience **xv**
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port **2-108**
autonegotiation of duplex mode **2-117**
auto qos voip command **2-18**

B

BackboneFast, for STP **2-583**
backup interfaces
 configuring **2-644**
 displaying **2-423**
boot (boot loader) command **A-2**
boot boothlp command **2-23**
boot config-file command **2-24**
boot enable-break command **2-25**
boot helper command **2-26**
boot helper-config file command **2-27**
booting
 Cisco IOS image **2-30**
 displaying environment variables **2-374**
 interrupting **2-25**
 manually **2-28**

-
- boot loader
- accessing [A-1](#)
 - booting
 - Cisco IOS image [A-2](#)
 - helper image [2-26](#)
 - directories
 - creating [A-15](#)
 - displaying a list of [A-7](#)
 - removing [A-19](#)
 - displaying
 - available commands [A-12](#)
 - memory heap utilization [A-14](#)
 - version [A-26](#)
 - environment variables
 - described [A-20](#)
 - displaying settings [A-20](#)
 - location of [A-21](#)
 - setting [A-20](#)
 - unsetting [A-24](#)
 - files
 - copying [A-5](#)
 - deleting [A-6](#)
 - displaying a list of [A-7](#)
 - displaying the contents of [A-4, A-16, A-23](#)
 - renaming [A-17](#)
 - file system
 - formatting [A-10](#)
 - initializing flash [A-9](#)
 - running a consistency check [A-11](#)
 - loading helper images [A-13](#)
 - prompt [A-1](#)
 - resetting the system [A-18](#)
 - boot manual command [2-28](#)
 - boot private-config-file command [2-29](#)
 - boot system command [2-30](#)
 - BPDUs filtering, for spanning tree [2-584, 2-619](#)
 - BPDUs guard, for spanning tree [2-586, 2-619](#)
 - broadcast storm control [2-637](#)
-
- C**
- candidate switches
- See clusters
- cat (boot loader) command [A-4](#)
- caution, description [xvi](#)
- CDP, enabling protocol tunneling for [2-210](#)
- channel-group command [2-31](#)
- channel-protocol command [2-34](#)
- Cisco Network Assistant
- See Network Assistant [xvi](#)
- Cisco SoftPhone
- auto-QoS configuration [2-18](#)
 - trusting packets sent from [2-286](#)
- class command [2-35](#)
- class-map command [2-37](#)
- class maps
 - creating [2-37](#)
 - defining the match criteria [2-248](#)
 - displaying [2-378](#)
- class of service
- See CoS
- clear dot1x command [2-39](#)
- clear eap command [2-40](#)
- clear ip arp inspection log command [2-41](#)
- clear ip arp inspection statistics command [2-42](#)
- clear ipc command [2-44](#)
- clear ip dhcp snooping database command [2-43](#)
- clear l2protocol-tunnel counters command [2-45](#)
- clear lacp command [2-46](#)
- clear mac address-table command [2-47, 2-49](#)
- clear pagp command [2-50](#)
- clear port-security command [2-51](#)
- clear spanning-tree counters command [2-53](#)
- clear spanning-tree detected-protocols command [2-54](#)
- clear vmps statistics command [2-55](#)
- clear vtp counters command [2-56](#)
- cluster commander-address command [2-57](#)
- cluster discovery hop-count command [2-59](#)

- cluster enable command **2-60**
 cluster holdtime command **2-62**
 cluster member command **2-63**
 cluster outside-interface command **2-65**
 cluster requirements **xvii**
 cluster run command **2-66**
 clusters
 adding candidates **2-63**
 binding to HSRP group **2-68**
 building manually **2-63**
 communicating with
 devices outside the cluster **2-65**
 members by using Telnet **2-341**
 debug messages, display **B-5**
 displaying
 candidate switches **2-381**
 debug messages **B-5**
 member switches **2-383**
 status **2-379**
 hop-count limit for extended discovery **2-59**
 HSRP standby groups **2-68**
 redundancy **2-68**
 SNMP trap **2-573**
 cluster standby-group command **2-68**
 cluster timer command **2-70**
 command modes defined **1-1**
 commands changed in Cisco IOS Release 12.2(20)SE **1-5**
 command switch
 See clusters
 configuration, initial
 See getting started guide and hardware installation guide
 configuration files
 password recovery disable considerations **A-1**
 specifying the name **2-24, 2-29**
 configuring multiple interfaces **2-128**
 config-vlan mode
 commands **2-692**
 description **1-4**
 entering **2-691**
 summary **1-2**
 conventions
 command **xvi**
 for examples **xvi**
 publication **xvi**
 text **xvi**
 copy (boot loader) command **A-5**
 CoS
 assigning default value to incoming packets **2-256**
 assigning to Layer 2 protocol packets **2-213**
 overriding the incoming value **2-256**
 CoS-to-DSCP map **2-260**
 CPU ASIC statistics, displaying **2-385**
 crashinfo files **2-123**
-
- D**
- debug auto qos command **B-2**
 debug backup command **B-4**
 debug cluster command **B-5**
 debug dot1x command **B-7**
 debug dtp command **B-9**
 debug eap command **B-10**
 debug etherchannel command **B-12**
 debug ilpower command **B-14**
 debug interface command **B-17**
 debug ip dhcp snooping command **B-15**
 debug ip igmp filter command **B-19**
 debug ip igmp max-groups command **B-20**
 debug ip igmp snooping command **B-21**
 debug ip verify source packet command **B-16**
 debug lacp command **B-22**
 debug mac-notification command **B-23**
 debug matm command **B-24**
 debug matm move update command **B-25**

- debug monitor command **B-26**
 debug mvrdbg command **B-28**
 debug nvram command **B-29**
 debug pagp command **B-30**
 debug platform acl command **B-31**
 debug platform backup interface command **B-32**
 debug platform configuration command **B-40**
 debug platform cpu-queues command **B-33**
 debug platform device-manager command **B-35**
 debug platform dot1x command **B-36**
 debug platform etherchannel command **B-37**
 debug platform fallback-bridging command **B-38**
 debug platform forw-tcam command **B-39**
 debug platform ip arp inspection command **B-42**
 debug platform ip dhcp command **B-43**
 debug platform ip igmp snooping command **B-44**
 debug platform ip multicast command **B-46**
 debug platform ip unicast command **B-48**
 debug platform led command **B-50**
 debug platform matm command **B-51**
 debug platform messaging application command **B-53**
 debug platform phy command **B-54**
 debug platform pm command **B-56**
 debug platform port-asic command **B-58**
 debug platform port-security command **B-59**
 debug platform qos-acl-tcam command **B-60**
 debug platform remote-commands command **B-61**
 debug platform resource-manager command **B-62**
 debug platform snmp command **B-63**
 debug platform span command **B-64**
 debug platform supervisor-asic command **B-65**
 debug platform sw-bridge command **B-66**
 debug platform tcam command **B-67**
 debug platform udld command **B-70**
 debug platform vlan command **B-71**
 debug pm command **B-72**
 debug port-security command **B-74**
 debug qos-manager command **B-75**
 debug spanning-tree backbonefast command **B-78**
 debug spanning-tree bpdu command **B-79**
 debug spanning-tree bpdu-opt command **B-80**
 debug spanning-tree command **B-76**
 debug spanning-tree mstp command **B-81**
 debug spanning-tree switch command **B-83**
 debug spanning-tree uplinkfast command **B-85**
 debug sw-vlan command **B-86**
 debug sw-vlan ifs command **B-88**
 debug sw-vlan notification command **B-90**
 debug sw-vlan vtp command **B-92**
 debug udld command **B-94**
 debug vqpc command **B-96**
 define interface-range command **2-71**
 delete (boot loader) command **A-6**
 delete command **2-73**
 deny (ARP access-list configuration) command **2-74**
 deny (IPv6) command **2-76**
 deny command **2-81**
 detect mechanism, causes **2-118**
 device manager requirements **xvi**
 DHCP snooping
 accepting untrusted packets from edge switch **2-157**
 enabling
 on a VLAN **2-163**
 option 82 **2-155, 2-157**
 trust on an interface **2-161**
 error recovery timer **2-120**
 rate limiting **2-160**
 DHCP snooping binding database
 binding file, configuring **2-153**
 bindings
 adding **2-151**
 deleting **2-151**
 displaying **2-439**
 clearing database agent statistics **2-43**
 database agent, configuring **2-153**

- DHCP snooping binding database (continued)
- displaying
 - binding entries **2-439**
 - database agent status **2-441**
 - renewing **2-345**
- dir (boot loader) command **A-7**
- directories, deleting **2-73**
- documentation, related **xvi**
- document conventions **xvi**
- domain name, VTP **2-717, 2-721**
- dot1x auth-fail max-attempts **2-86**
- dot1x auth-fail vlan **2-88**
- dot1x command **2-84**
- dot1x control-direction command **2-90**
- dot1x critical global configuration command **2-92**
- dot1x critical interface configuration command **2-94**
- dot1x default command **2-96**
- dot1x guest-vlan command **2-97**
- dot1x host-mode command **2-100**
- dot1x initialize command **2-101**
- dot1x mac-auth-bypass command **2-102**
- dot1x max-reauth-req command **2-104**
- dot1x max-req command **2-105**
- dot1x multiple-hosts command **2-106**
- dot1x pae command **2-107**
- dot1x port-control command **2-108**
- dot1x re-authenticate command **2-110**
- dot1x re-authentication command **2-111**
- dot1x reauthentication command **2-112**
- dot1x timeout command **2-113**
- dropping packets, with ACL matches **2-6**
- drop threshold, Layer 2 protocol tunneling **2-210**
- DSCP-to-CoS map **2-260**
- DSCP-to-DSCP-mutation map **2-260**
- DTP **2-650**
- DTP flap
- error detection for **2-118**
 - error recovery timer **2-120**
- DTP negotiation **2-654**
- dual IPv4 and IPv6 templates **2-306**
- duplex command **2-116**
- dynamic-access ports
- configuring **2-642**
 - restrictions **2-643**
- dynamic ARP inspection
- ARP ACLs
 - apply to a VLAN **2-137**
 - define **2-16**
 - deny packets **2-74**
 - display **2-369**
 - permit packets **2-304**
- clear
- log buffer **2-41**
 - statistics **2-42**
- display
- ARP ACLs **2-369**
 - configuration and operating state **2-435**
 - log buffer **2-435**
 - statistics **2-435**
 - trust state and rate limit **2-435**
 - enable per VLAN **2-147**
 - error detection for **2-118**
 - error recovery timer **2-120**
 - log buffer
 - clear **2-41**
 - configure **2-141**
 - display **2-435**
 - rate-limit incoming ARP packets **2-139**
 - statistics
 - clear **2-42**
 - display **2-435**
- trusted interface state **2-143**
- type of packet logged **2-148**
- validation checks **2-145**
- dynamic auto VLAN membership mode **2-649**
- dynamic desirable VLAN membership mode **2-649**
- Dynamic Host Configuration Protocol (DHCP)
- See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

- maximum number to send **2-105**
- response time before retransmitting **2-113**
- encapsulation methods **2-669**
- environment variables, displaying **2-374**
- errdisable detect cause command **2-118**
- errdisable recovery command **2-120**
- error conditions, displaying **2-414**
- error disable detection **2-118**
- error-disabled interfaces, displaying **2-423**

EtherChannel

- assigning Ethernet interface to channel group **2-31**
- creating port-channel logical interface **2-126**
- debug EtherChannel/PAgP, display **B-12**
- debug platform-specific events, display **B-37**
- displaying **2-418**
- enabling Layer 2 protocol tunneling for
 - LACP **2-211**
 - PAgP **2-211**
 - UDLD **2-211**
- interface information, displaying **2-423**

LACP

- clearing channel-group information **2-46**
- debug messages, display **B-22**
- displaying **2-474**
- modes **2-31**
- port priority for hot-standby ports **2-214**
- restricting a protocol **2-34**
- system priority **2-216**

load-distribution methods **2-322**

EtherChannel (continued)

- PAgP
 - aggregate-port learner **2-300**
 - clearing channel-group information **2-50**
 - debug messages, display **B-30**
 - displaying **2-525**
 - error detection for **2-118**
 - error recovery timer **2-120**
 - learn method **2-300**
 - modes **2-31**
 - physical-port learner **2-300**
 - priority of interface for transmitted traffic **2-302**
- Ethernet controller, internal register display **2-387**
- Ethernet statistics, collecting **2-347**
- examples, conventions for **xvi**
- exception crashinfo command **2-123**
- exit command **2-706**
- extended discovery of candidate switches **2-59**
- extended-range VLANs
 - and allowed VLAN list **2-669**
 - and pruning-eligible list **2-669**
 - configuring **2-691**
- extended system ID for STP **2-592**

F

fan information, displaying **2-410**

- file name, VTP **2-717**
- files, deleting **2-73**
- flash_init (boot loader) command **A-9**
- Flex Links
 - configuring **2-644**
 - displaying **2-423**
- flowcontrol command **2-124**
- format (boot loader) command **A-10**
- forwarding packets, with ACL matches **2-6**
- forwarding results, display **C-6**
- frame forwarding information, displaying **C-6**

front-end controller
 counter and status information **C-8**
 fsck (boot loader) command **A-11**

G

global configuration mode **1-2, 1-3**

H

hardware ACL statistics **2-364**
 help (boot loader) command **A-12**
 hierarchical policy maps **2-320**
 hop-count limit for clusters **2-59**
 host connection, port configuration **2-648**
 host ports, private VLANs **2-652**
 Hot Standby Router Protocol

 See HSRP

HSRP

 binding HSRP group to cluster **2-68**
 standby group **2-68**

I
 IEEE 802.1Q trunk ports and native VLANs **2-708**

IEEE 802.1Q tunnel ports

 configuring **2-649**
 displaying **2-400**
 limitations **2-650**

IEEE 802.1x

 and switchport modes **2-650**
 violation error recovery **2-120**

 See also port-based authentication

IEEE 802.1X Port Based Authentication

 enabling guest VLAN supplicant **2-87**

IGMP filters

 applying **2-166**
 debug messages, display **B-19**

IGMP groups, setting maximum **2-167**
 IGMP maximum groups, debugging **B-20**
 IGMP profiles
 creating **2-169**
 displaying **2-443**
 IGMP snooping
 adding ports as a static member of a group **2-185**
 displaying **2-444, 2-449, 2-451**
 enabling **2-171**
 enabling the configurable-leave timer **2-173**
 enabling the Immediate-Leave feature **2-182**
 flooding query count **2-179**
 interface topology change notification behavior **2-181**
 multicast table **1-5, 2-447**
 querier **2-175**
 query solicitation **2-179**
 report suppression **2-177**
 switch topology change notification behavior **2-179**
 images
 See software images
 Immediate-Leave feature, MVR **2-297**
 Immediate-Leave processing
 IPv6 **2-206**
 immediate-leave processing **2-182**
 initial configuration
 See getting started guide and hardware installation guide
 interface configuration mode **1-2, 1-4**
 interface port-channel command **2-126**
 interface range command **2-128**
 interface-range macros **2-71**
 interfaces
 assigning Ethernet interface to channel group **2-31**
 configuring **2-116**
 configuring multiple **2-128**
 creating port-channel logical **2-126**
 debug messages, display **B-17**
 disabling **2-571**
 displaying the MAC address table **2-492**
 restarting **2-571**

- interface speed, configuring **2-629**
 interface vlan command **2-130**
 internal registers, displaying **2-387, 2-396**
 Internet Group Management Protocol
 See IGMP
 invalid GBIC
 error detection for **2-118**
 error recovery timer **2-120**
 ip access-group command **2-132**
 ip address command **2-135**
 IP addresses, setting **2-135**
 IP address matching **2-246**
 ip arp inspection filter vlan command **2-137**
 ip arp inspection limit command **2-139**
 ip arp inspection log-buffer command **2-141**
 ip arp inspection trust command **2-143**
 ip arp inspection validate command **2-145**
 ip arp inspection vlan command **2-147**
 ip arp inspection vlan logging command **2-148**
 IP DHCP snooping
 See DHCP snooping
 ip dhcp snooping binding command **2-151**
 ip dhcp snooping command **2-150**
 ip dhcp snooping database command **2-153**
 ip dhcp snooping information option allow-untrusted command **2-157**
 ip dhcp snooping information option command **2-155**
 ip dhcp snooping information option format remote-id command **2-159**
 ip dhcp snooping limit rate command **2-160**
 ip dhcp snooping trust command **2-161**
 ip dhcp snooping verify command **2-162**
 ip dhcp snooping vlan command **2-163**
 ip dhcp snooping vlan information option format-type circuit-id string command **2-164**
 ip igmp filter command **2-166**
 ip igmp max-groups command **2-167**
 ip igmp profile command **2-169**
 ip igmp snooping command **2-171**
 ip igmp snooping last-member-query-interval command **2-173**
 ip igmp snooping querier command **2-175**
 ip igmp snooping report-suppression command **2-177**
 ip igmp snooping tcn command **2-179**
 ip igmp snooping tcn flood command **2-181**
 ip igmp snooping vlan immediate-leave command **2-182**
 ip igmp snooping vlan mrouter command **2-183**
 ip igmp snooping vlan static command **2-185**
 IP multicast addresses **2-294**
 IP phones
 auto-QoS configuration **2-18**
 trusting packets sent from **2-286**
 IP-precedence-to-DSCP map **2-260**
 ip source binding command **2-187**
 IP source guard
 disabling **2-191**
 displaying
 binding entries **2-453**
 configuration **2-455**
 dynamic binding entries only **2-439**
 enabling **2-191**
 static IP source bindings **2-187**
 ip ssh command **2-189**
 IPv6 access list
 deny conditions **2-76**
 ipv6 access-list command **2-192**
 ipv6 mld snooping command **2-194**
 ipv6 mld snooping last-listener-query count command **2-196**
 ipv6 mld snooping last-listener-query-interval command **2-198**
 ipv6 mld snooping listener-message-suppression command **2-200**
 ipv6 mld snooping robustness-variable command **2-202**
 ipv6 mld snooping tcn command **2-204**
 ipv6 mld snooping vlan command **2-206**
 IPv6 SDM template **2-348**
 ipv6 traffic-filter command **2-208**
 ip verify source command **2-191**

J

jumbo frames

See MTU

L

l2protocol-tunnel command **2-210**

l2protocol-tunnel cos command **2-213**

LACP

See EtherChannel

lacp port-priority command **2-214**

lacp system-priority command **2-216**

Layer 2 mode, enabling **2-640**

Layer 2 protocol ports, displaying **2-471**

Layer 2 protocol-tunnel

error detection for **2-118**

error recovery timer **2-120**

Layer 2 protocol tunnel counters **2-45**

Layer 2 protocol tunneling error recovery **2-211**

Layer 2 traceroute

IP addresses **2-682**

MAC addresses **2-679**

Layer 3 mode, enabling **2-640**

line configuration mode **1-2, 1-5**

Link Aggregation Control Protocol

See EtherChannel

link flap

error detection for **2-118**

error recovery timer **2-120**

link state group command **2-218**

link state track command **2-220**

load_helper (boot loader) command **A-13**

load-distribution methods for EtherChannel **2-322**

logging event power-inline-status command **2-221**

logging file command **2-222**

logical interface **2-126**

loopback error

detection for **2-118**

recovery timer **2-120**

loop guard, for spanning tree **2-594, 2-598**

M

mac access-group command **2-224**

MAC access-groups, displaying **2-480**

MAC access list configuration mode **2-226**

mac access-list extended command **2-226**

MAC access lists **2-81**

MAC addresses

displaying

aging time **2-486**

all **2-484**

dynamic **2-490**

MAC address-table move updates **2-494**

notification settings **2-496**

number of addresses in a VLAN **2-488**

per interface **2-492**

per VLAN **2-500**

static **2-498**

static and dynamic entries **2-482**

dynamic

aging time **2-228**

deleting **2-47**

displaying **2-490**

enabling MAC address notification **2-231**

enabling MAC address-table move update **2-229**

matching **2-246**

static

adding and removing **2-233**

displaying **2-498**

dropping on an interface **2-234**

tables **2-484**

MAC address notification, debugging **B-23**

mac address-table aging-time **2-224, 2-246**

mac address-table aging-time command **2-228**

- mac address-table move update command **2-229**
 mac address-table notification command **2-231**
 mac address-table static command **2-233**
 mac address-table static drop command **2-234**
 macro apply command **2-236**
 macro description command **2-239**
 macro global command **2-240**
 macro global description command **2-243**
 macro name command **2-244**
 macros
 adding a description **2-239**
 adding a global description **2-243**
 applying **2-240**
 creating **2-244**
 displaying **2-527**
 interface range **2-71, 2-128**
 specifying parameter values **2-240**
 tracing **2-240**
 manual
 audience **xv**
 purpose of **xv**
 maps
 QoS
 defining **2-260**
 displaying **2-510**
 VLAN
 creating **2-703**
 defining **2-246**
 displaying **2-560**
 match (access-map configuration) command **2-246**
 match (class-map configuration) command **2-248**
 maximum transmission unit
 See MTU
 mdix auto command **2-250**
 MLD snooping
 displaying **2-465**
 member switches
 See clusters
 memory (boot loader) command **A-14**
 mkdir (boot loader) command **A-15**
 MLD snooping
 configuring **2-200, 2-202**
 configuring queries **2-196, 2-198**
 configuring topology change notification **2-204**
 displaying **2-463, 2-467, 2-469**
 enabling **2-194**
 MLD snooping on a VLAN
 enabling **2-206**
 mls qos aggregate-policer command **2-254**
 mls qos command **2-252**
 mls qos cos command **2-256**
 mls qos dscp-mutation command **2-258**
 mls qos map command **2-260**
 mls qos queue-set output buffers command **2-264**
 mls qos queue-set output threshold command **2-266**
 mls qos rewrite ip dscp command **2-268**
 mls qos srr-queue input bandwidth command **2-270**
 mls qos srr-queue input buffers command **2-272**
 mls qos-srr-queue input cos-map command **2-274**
 mls qos srr-queue input dscp-map command **2-276**
 mls qos srr-queue input priority-queue command **2-278**
 mls qos srr-queue input threshold command **2-280**
 mls qos-srr-queue output cos-map command **2-282**
 mls qos srr-queue output dscp-map command **2-284**
 mls qos trust command **2-286**
 mls qos vlan-based command **2-288**
 mode, MVR **2-294**
 Mode button, and password recovery **2-352**
 modes, commands **1-1**
 monitor session command **2-289**
 more (boot loader) command **A-16**
 MSTP
 displaying **2-542**
 interoperability **2-54**
 link type **2-596**

- MSTP (continued)
- MST region
 - aborting changes **2-602**
 - applying changes **2-602**
 - configuration name **2-602**
 - configuration revision number **2-602**
 - current or pending display **2-602**
 - displaying **2-542**
 - MST configuration mode **2-602**
 - VLANs-to-instance mapping **2-602**
 - path cost **2-604**
 - protocol mode **2-600**
 - restart protocol migration process **2-54**
 - root port
 - loop guard **2-594**
 - preventing from becoming designated **2-594**
 - restricting which can be root **2-594**
 - root guard **2-594**
 - root switch
 - affects of extended system ID **2-592**
 - hello-time **2-607, 2-615**
 - interval between BDPU messages **2-608**
 - interval between hello BPDU messages **2-607, 2-615**
 - max-age **2-608**
 - maximum hop count before discarding BPDU **2-609**
 - port priority for selection of **2-611**
 - primary or secondary **2-615**
 - switch priority **2-614**
 - state changes
 - blocking to forwarding state **2-621**
 - enabling BPDU filtering **2-584, 2-619**
 - enabling BPDU guard **2-586, 2-619**
 - enabling Port Fast **2-619, 2-621**
 - forward-delay time **2-606**
 - length of listening and learning states **2-606**
 - rapid transition to forwarding **2-596**
 - shutting down Port Fast-enabled ports **2-619**
 - state information display **2-541**
- MTU
- configuring size **2-676**
 - displaying global setting **2-549**
- Multicast Listener Discovery
- See MLD
- multicast group address, MVR **2-297**
- multicast groups, MVR **2-295**
- Multicast Listener Discovery
- See MLD
- multicast router learning method **2-183**
- multicast router ports
- IPv6 **2-206**
 - multicast router ports, configuring **2-183**
 - multicast storm control **2-637**
 - multicast VLAN, MVR **2-294**
 - multicast VLAN registration
 - See MVR
 - multiple hosts on authorized port **2-100**
- Multiple Spanning Tree Protocol
- See MSTP
- MVR
- and address aliasing **2-295**
 - configuring **2-294**
 - configuring interfaces **2-297**
 - debug messages, display **B-28**
 - displaying **2-519**
 - displaying interface information **2-521**
 - members, displaying **2-523**
 - mvr (global configuration) command **2-294**
 - mvr (interface configuration) command **2-297**
 - mvr vlan group command **2-298**
-
- N**
- native VLANs **2-669**
 - native VLAN tagging **2-708**
 - Network Assistant requirements **xvi**

- nonegotiate
 DTP messaging **2-654**
 nonegotiate, speed **2-629**
- non-IP protocols
 denying **2-81**
 forwarding **2-312**
- non-IP traffic access lists **2-226**
- non-IP traffic forwarding
 denying **2-81**
 permitting **2-312**
- normal-range VLANs **2-691, 2-697**
- note, description **xvi**
- no vlan command **2-691, 2-701**
-
- P**
- PAgP
 See EtherChannel
- pagp learn-method command **2-300**
 pagp port-priority command **2-302**
 password, VTP **2-717, 2-721**
 password-recovery mechanism, enabling and disabling **2-352**
 permit (ARP access-list configuration) command **2-304**
 permit (IPv6) command **2-306**
 permit (MAC access-list configuration) command **2-312**
 per-VLAN spanning-tree plus
 See STP
- physical-port learner **2-300**
 PID, displaying **2-434**
 PIM-DVMRP, as multicast router learning method **2-183**
- PoE
 configuring the power budget **2-327**
 configuring the power management mode **2-324**
 displaying controller register values **2-394**
 displaying power management information **2-535**
 logging of status **2-221**
- police aggregate command **2-317**
 police command **2-315**
- policed-DSCP map **2-260**
 policy-map command **2-319**
 policy maps
 applying to an interface **2-354, 2-359**
 creating **2-319**
 displaying **2-530**
 hierarchical **2-320**
 policers
 displaying **2-503**
 for a single class **2-315**
 for multiple classes **2-254, 2-317**
 policed-DSCP map **2-260**
 traffic classification
 defining the class **2-35**
 defining trust states **2-684**
 setting DSCP or IP precedence values **2-357**
- Port Aggregation Protocol
 See EtherChannel
- port-based authentication
 AAA method list **2-3**
 debug messages, display **B-7**
 enabling IEEE 802.1x
 globally **2-84**
 per interface **2-108**
 guest VLAN **2-97**
 host modes **2-100**
 IEEE 802.1x AAA accounting methods **2-1**
 initialize an interface **2-101**
 MAC authentication bypass **2-102**
 manual control of authorization state **2-108**
 multiple hosts on authorized port **2-100**
 PAE as authenticator **2-107**
 periodic re-authentication
 enabling **2-112**
 time between attempts **2-113**
 quiet period between failed authentication exchanges **2-113**
 re-authenticating IEEE 802.1x-enabled ports **2-110**
 resetting configurable IEEE 802.1x parameters **2-96**

- port-based authentication (continued)
- switch-to-authentication server retransmission time **2-113**
 - switch-to-client frame-retransmission number **2-104 to 2-105**
 - switch-to-client retransmission time **2-113**
- port-channel load-balance command **2-322**
- Port Fast, for spanning tree **2-621**
- port ranges, defining **2-71**
- ports, debugging **B-72**
- ports, protected **2-667**
- port security
- aging **2-661**
 - debug messages, display **B-74**
 - enabling **2-656**
 - violation error recovery **2-120**
- port trust states for QoS **2-286**
- port types, MVR **2-297**
- power information, displaying **2-410**
- power inline command **2-324**
- power inline consumption command **2-327**
- Power over Ethernet
- See PoE
- priority-queue command **2-329**
- private-vlan command **2-331**
- private-vlan mapping command **2-334**
- private VLANs
- association **2-665**
 - configuring **2-331**
 - configuring ports **2-652**
 - displaying **2-555**
 - host ports **2-652**
 - mapping
 - configuring **2-665**
 - displaying **2-423**
 - promiscuous ports **2-652**
- privileged EXEC mode **1-2, 1-3**
- product identification information, displaying **2-434**
- promiscuous ports, private VLANs **2-652**
- protected ports, displaying **2-429**
- pruning
- VLANs **2-669**
- VTP
- displaying interface information **2-423**
 - enabling **2-717, 2-721**
 - pruning-eligible VLAN list **2-671**
- PVST+
- See STP
-
- ## Q
- QoS
- auto-QoS
 - configuring **2-18**
 - debug messages, display **1-5, B-2**
 - displaying **2-370**
 - class maps
 - creating **2-37**
 - defining the match criteria **2-248**
 - displaying **2-378**
 - defining the CoS value for an incoming packet **2-256**
 - displaying configuration information **2-370, 2-502**
 - DSCP transparency **2-268**
 - DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to **2-258**
 - defining DSCP-to-DSCP-mutation map **2-260**
 - egress queues
 - allocating buffers **2-264**
 - defining the CoS output queue threshold map **2-282**
 - defining the DSCP output queue threshold map **2-284**
 - displaying buffer allocations **2-506**
 - displaying CoS output queue threshold map **2-510**
 - displaying DSCP output queue threshold map **2-510**
 - displaying queueing strategy **2-506**
 - displaying queue-set settings **2-513**
 - enabling bandwidth shaping and scheduling **2-633**
 - enabling bandwidth sharing and scheduling **2-635**
 - limiting the maximum output on a port **2-631**

- QoS (continued)
- egress queues (continued)
 - mapping a port to a queue-set **2-336**
 - mapping CoS values to a queue and threshold **2-282**
 - mapping DSCP values to a queue and threshold **2-284**
 - setting maximum and reserved memory allocations **2-266**
 - setting WTD thresholds **2-266**
 - enabling **2-252**
 - ingress queues
 - allocating buffers **2-272**
 - assigning SRR scheduling weights **2-270**
 - defining the CoS input queue threshold map **2-274**
 - defining the DSCP input queue threshold map **2-276**
 - displaying buffer allocations **2-506**
 - displaying CoS input queue threshold map **2-510**
 - displaying DSCP input queue threshold map **2-510**
 - displaying queueing strategy **2-506**
 - displaying settings for **2-504**
 - enabling the priority queue **2-278**
 - mapping CoS values to a queue and threshold **2-274**
 - mapping DSCP values to a queue and threshold **2-276**
 - setting WTD thresholds **2-280**
 - maps
 - defining **2-260, 2-274, 2-276, 2-282, 2-284**
 - displaying **2-510**
 - policy maps
 - applying an aggregate policer **2-317**
 - applying to an interface **2-354, 2-359**
 - creating **2-319**
 - defining policers **2-254, 2-315**
 - displaying policers **2-503**
 - displaying policy maps **2-530**
 - hierarchical **2-320**
 - policed-DSCP map **2-260**
 - setting DSCP or IP precedence values **2-357**
 - traffic classifications **2-35**
 - trust states **2-684**
 - port trust states **2-286**
- QoS (continued)
- queues, enabling the expedite **2-329**
 - statistics
 - in-profile and out-of-profile packets **2-506**
 - packets enqueued or dropped **2-506**
 - sent and received CoS values **2-506**
 - sent and received DSCP values **2-506**
 - trusted boundary for IP phones **2-286**
 - VLAN-based **2-288**
 - quality of service
 - See QoS
 - querytime, MVR **2-294**
 - queue-set command **2-336**
-
- R**
- radius-server dead-criteria command **2-337**
 - radius-server host command **2-339**
 - rapid per-VLAN spanning-tree plus
 - See STP
 - rapid PVST+
 - See STP
 - rcommand command **2-341**
 - re-authenticating IEEE 802.1x-enabled ports **2-110**
 - re-authentication
 - periodic **2-112**
 - time between attempts **2-113**
 - receiver ports, MVR **2-297**
 - receiving flow-control packets **2-124**
 - recovery mechanism
 - causes **2-120**
 - display **2-376, 2-412, 2-416**
 - timer interval **2-121**
 - redundancy for cluster switches **2-68**
 - remote-span command **2-343**
 - Remote Switched Port Analyzer
 - See RSPAN
 - rename (boot loader) command **A-17**
 - renew ip dhcp snooping database command **2-345**

- requirements
 cluster [xvii](#)
 device manager [xvi](#)
 Network Assistant [xvi](#)
- reset (boot loader) command [A-18](#)
 reset command [2-706](#)
 resource templates, displaying [2-537](#)
 restricted VLAN
 See dot1x auth-fail vlan
- rmdir (boot loader) command [A-19](#)
 rmon collection stats command [2-347](#)
 root guard, for spanning tree [2-594](#)
 routed ports
 IP addresses on [2-136](#)
 number supported [2-136](#)
- RSPAN
 configuring [2-289](#)
 displaying [2-516](#)
 filter RSPAN traffic [2-289](#)
 remote-span command [2-343](#)
 sessions
 add interfaces to [2-289](#)
 displaying [2-516](#)
 start new [2-289](#)
-
- S**
- sdm prefer command [2-348](#)
 SDM templates
 allowed resources [2-349](#)
 displaying [2-537](#)
 dual IPv4 and IPv6 [2-348](#)
 secure ports, limitations [2-658](#)
 sending flow-control packets [2-124](#)
 service password-recovery command [2-352](#)
 service-policy command [2-354](#)
 set (boot loader) command [A-20](#)
 set command [2-357](#)
 setup command [2-359](#)
- setup express command [2-362](#)
 show access-lists command [2-364](#)
 show archive status command [2-367](#)
 show arp access-list command [2-369](#)
 show auto qos command [2-370](#)
 show boot command [2-374](#)
 show cable-diagnostics tdr command [2-376](#)
 show changes command [2-706](#)
 show class-map command [2-378](#)
 show cluster candidates command [2-381](#)
 show cluster command [2-379](#)
 show cluster members command [2-383](#)
 show controllers cpu-interface command [2-385](#)
 show controllers ethernet-controller command [2-387](#)
 show controllers power inline command [2-394](#)
 show controllers tcam command [2-396](#)
 show controller utilization command [2-398](#)
 show current command [2-706](#)
 show dot1q-tunnel command [2-400](#)
 show dot1x command [2-401](#)
 show dtp [2-405](#)
 show eap command [2-407](#)
 show env command [2-410](#)
 show errdisable detect command [2-412](#)
 show errdisable flap-values command [2-414](#)
 show errdisable recovery command [2-416](#)
 show etherchannel command [2-418](#)
 show flowcontrol command [2-421](#)
 show interfaces command [2-423](#)
 show interfaces counters command [2-432](#)
 show inventory command [2-434](#)
 show ip arp inspection command [2-435](#)
 show ipc command [2-457](#)
 show ip dhcp snooping binding command [2-439](#)
 show ip dhcp snooping command [2-438](#)
 show ip dhcp snooping database command [2-441](#)
 show ip igmp profile command [2-443](#)
 show ip igmp snooping address command [2-465](#)
 show ip igmp snooping command [2-444, 2-463](#)

- show ip igmp snooping groups command **2-447**
 show ip igmp snooping mrouter command **2-449, 2-467**
 show ip igmp snooping querier command **2-451, 2-469**
 show ip source binding command **2-453**
 show ipv6 access-list command **2-461**
 show ip verify source command **2-455**
 show l2protocol-tunnel command **2-471**
 show lacp command **2-474**
 show link state group command **2-478**
 show mac access-group command **2-480**
 show mac address-table address command **2-484**
 show mac address-table aging time command **2-486**
 show mac address-table command **2-482**
 show mac address-table count command **2-488**
 show mac address-table dynamic command **2-490**
 show mac address-table interface command **2-492**
 show mac address-table move update command **2-494**
 show mac address-table notification command **2-49, 2-496, B-25**
 show mac address-table static command **2-498**
 show mac address-table vlan command **2-500**
 show mls qos aggregate-policer command **2-503**
 show mls qos command **2-502**
 show mls qos input-queue command **2-504**
 show mls qos interface command **2-506**
 show mls qos maps command **2-510**
 show mls qos queue-set command **2-513**
 show mls qos vlan command **2-515**
 show monitor command **2-516**
 show mvr command **2-519**
 show mvr interface command **2-521**
 show mvr members command **2-523**
 show pagp command **2-525**
 show parser macro command **2-527**
 show platform acl command **C-2**
 show platform backup interface command **C-3**
 show platform configuration command **C-4**
 show platform etherchannel command **C-5**
 show platform forward command **C-6**
 show platform frontend-controller command **C-8**
 show platform igmp snooping command **C-9**
 show platform ip multicast command **C-11**
 show platform ip unicast command **C-12**
 show platform ipv6 unicast command **C-16**
 show platform layer4op command **C-18**
 show platform mac-address-table command **C-19**
 show platform messaging command **C-20**
 show platform monitor command **C-21**
 show platform mvr table command **C-22**
 show platform pm command **C-23**
 show platform port-asic command **C-24**
 show platform port-security command **C-29**
 show platform qos command **C-30**
 show platform resource-manager command **C-31**
 show platform snmp counters command **C-33**
 show platform spanning-tree command **C-34**
 show platform stp-instance command **C-35**
 show platform tcam command **C-36**
 show platform vlan command **C-39**
 show policy-map command **2-530**
 show port security command **2-532**
 show power inline command **2-535**
 show proposed command **2-706**
 show sdm prefer command **2-537**
 show setup express command **2-540**
 show spanning-tree command **2-541**
 show storm-control command **2-547**
 show system mtu command **2-549**
 show trust command **2-684**
 show udld command **2-550**
 show version command **2-553**
 show vlan access-map command **2-560**
 show vlan command **2-555**
 show vlan command, fields **2-557**
 show vlan filter command **2-561**
 show vmps command **2-563**
 show vtp command **2-566**
 shutdown command **2-571**

- shutdown threshold, Layer 2 protocol tunneling **2-210**
 shutdown vlan command **2-572**
 Smartports macros
 See macros
 SNMP host, specifying **2-577**
 SNMP informs, enabling the sending of **2-573**
 snmp-server enable traps command **2-573**
 snmp-server host command **2-577**
 snmp trap mac-notification command **2-581**
 SNMP traps
 enabling MAC address notification trap **2-581**
 enabling the MAC address notification feature **2-231**
 enabling the sending of **2-573**
 SoftPhone
 See Cisco SoftPhone
 software images
 deleting **2-73**
 downloading **2-8**
 upgrading **2-8**
 uploading **2-14**
 software version, displaying **2-553**
 source ports, MVR **2-297**
 SPAN
 configuring **2-289**
 debug messages, display **B-26**
 displaying **2-516**
 filter SPAN traffic **2-289**
 sessions
 add interfaces to **2-289**
 displaying **2-516**
 start new **2-289**
 spanning **2-623**
 spanning-tree backbonefast command **2-583**
 spanning-tree bpdufilter command **2-584**
 spanning-tree bpduguard command **2-586**
 spanning-tree cost command **2-588**
 spanning-tree etherchannel command **2-590**
 spanning-tree extend system-id command **2-592**
 spanning-tree guard command **2-594**
 spanning-tree link-type command **2-596**
 spanning-tree loopguard default command **2-598**
 spanning-tree mode command **2-600**
 spanning-tree mst configuration command **2-602**
 spanning-tree mst cost command **2-604**
 spanning-tree mst forward-time command **2-606**
 spanning-tree mst hello-time command **2-607**
 spanning-tree mst max-age command **2-608**
 spanning-tree mst max-hops command **2-609**
 spanning-tree mst port-priority command **2-611**
 spanning-tree mst pre-standard command **2-613**
 spanning-tree mst priority command **2-614**
 spanning-tree mst root command **2-615**
 spanning-tree portfast (global configuration) command **2-619**
 spanning-tree portfast (interface configuration) command **2-621**
 spanning-tree port-priority command **2-617**
 Spanning Tree Protocol
 See STP
 spanning-tree transmit hold-count command **2-623**
 spanning-tree uplinkfast command **2-624**
 spanning-tree vlan command **2-626**
 speed command **2-629**
 srr-queue bandwidth limit command **2-631**
 srr-queue bandwidth shape command **2-633**
 srr-queue bandwidth share command **2-635**
 SSH, configuring version **2-189**
 static-access ports, configuring **2-642**
 statistics, Ethernet group **2-347**
 sticky learning, enabling **2-656**
 storm-control command **2-637**

- STP
- BackboneFast [2-583](#)
 - counters, clearing [2-53](#)
 - debug messages, display
 - BackboneFast events [B-78](#)
 - MSTP [B-81](#)
 - optimized BPDU handling [B-80](#)
 - spanning-tree activity [B-76](#)
 - switch shim [B-83](#)
 - transmitted and received BPDU [B-79](#)
 - UplinkFast [B-85](#)
 - detection of indirect link failures [2-583](#)
 - enabling protocol tunneling for [2-210](#)
 - EtherChannel misconfiguration [2-590](#)
 - extended system ID [2-592](#)
 - path cost [2-588](#)
 - protocol modes [2-600](#)
 - root port
 - accelerating choice of new [2-624](#)
 - loop guard [2-594](#)
 - preventing from becoming designated [2-594](#)
 - restricting which can be root [2-594](#)
 - root guard [2-594](#)
 - UplinkFast [2-624](#)
 - root switch
 - affects of extended system ID [2-592, 2-627](#)
 - hello-time [2-626](#)
 - interval between BDPU messages [2-626](#)
 - interval between hello BPDU messages [2-626](#)
 - max-age [2-626](#)
 - port priority for selection of [2-617](#)
 - primary or secondary [2-626](#)
 - switch priority [2-626](#)
 - state changes
 - blocking to forwarding state [2-621](#)
 - enabling BPDU filtering [2-584, 2-619](#)
 - enabling BPDU guard [2-586, 2-619](#)
 - enabling Port Fast [2-619, 2-621](#)
 - enabling timer to recover from error state [2-120](#)
 - STP (continued)
 - state changes (continued)
 - forward-delay time [2-626](#)
 - length of listening and learning states [2-626](#)
 - shutting down Port Fast-enabled ports [2-619](#)
 - state information display [2-541](#)
 - VLAN options [2-614, 2-626](#)
 - SVIs, creating [2-130](#)
 - Switched Port Analyzer
 - See SPAN
 - switching characteristics
 - modifying [2-640](#)
 - returning to interfaces [2-640](#)
 - switchport access command [2-642](#)
 - switchport backup interface command [2-644](#)
 - switchport block command [2-647](#)
 - switchport command [2-640](#)
 - switchport host command [2-648](#)
 - switchport mode command [2-649](#)
 - switchport mode private-vlan command [2-652](#)
 - switchport nonegotiate command [2-654](#)
 - switchport port-security aging command [2-661](#)
 - switchport port-security command [2-656](#)
 - switchport priority extend command [2-663](#)
 - switchport private-vlan command [2-665](#)
 - switchport protected command [2-667](#)
 - switchports, displaying [2-423](#)
 - switchport trunk command [2-669](#)
 - switchport voice vlan command [2-672](#)
 - system env temperature threshold yellow command [2-674](#)
 - system message logging [2-221](#)
 - system message logging, save message to flash [2-222](#)
 - system mtu command [2-676](#)
 - system resource templates [2-348](#)
-
- T**
- tar files, creating, listing, and extracting [2-11](#)
 - TDR, running [2-678](#)

Telnet, using to communicate to cluster switches **2-341**
 temperature information, displaying **2-410**
 templates, system resources **2-348**
 test cable-diagnostics tdr command **2-678**
 traceroute mac command **2-679**
 traceroute mac ip command **2-682**
 trunking, VLAN mode **2-649**
 trunk mode **2-649**
 trunk ports **2-649**
 trunks, to non-DTP device **2-650**
 trusted boundary for QoS **2-286**
 trusted port states for QoS **2-286**
 tunnel ports, Layer 2 protocol, displaying **2-471**
 type (boot loader) command **A-23**

U

UDLD
 aggressive mode **2-686, 2-688**
 debug messages, display **B-94**
 enable globally **2-686**
 enable per interface **2-688**
 error recovery timer **2-120**
 message timer **2-686**
 normal mode **2-686, 2-688**
 reset a shutdown interface **2-690**
 status **2-550**
 udld command **2-686**
 udld port command **2-688**
 udld reset command **2-690**
 unicast storm control **2-637**
 UniDirectional Link Detection
 See UDLD
 unknown multicast traffic, preventing **2-647**
 unknown unicast traffic, preventing **2-647**
 unset (boot loader) command **A-24**
 upgrading
 software images **2-8**
 monitoring status of **2-367**

upgrading information
 See release notes
 UplinkFast, for STP **2-624**
 user EXEC mode **1-2**

V

version (boot loader) command **A-26**
 VLAN
 enabling guest VLAN supplicant **2-87**
 vlan (global configuration) command **2-691**
 vlan (VLAN configuration) command **2-697**
 vlan access-map command **2-703**
 VLAN access map configuration mode **2-703**
 VLAN access maps
 actions **2-6**
 displaying **2-560**
 VLAN-based QoS **2-288**
 VLAN configuration
 rules **2-694, 2-699**
 saving **2-691, 2-701**
 VLAN configuration mode
 commands
 VLAN **2-697**
 VTP **2-721**
 description **1-4**
 entering **2-705**
 summary **1-2**
 vlan database command **2-705**
 vlan dot1q tag native command **2-708**
 vlan filter command **2-710**
 VLAN filters, displaying **2-561**
 VLAN ID range **2-691, 2-697**
 VLAN maps
 applying **2-710**
 creating **2-703**
 defining **2-246**
 displaying **2-560**

- VLAN Query Protocol
See VQP
- VLANs
adding **2-691**
configuring **2-691, 2-697**
debug messages, display
 ISL **B-90**
 VLAN IOS file system error tests **B-88**
 VLAN manager activity **B-86**
 VTP **B-92**
 displaying configurations **2-555**
 extended-range **2-691**
 MAC addresses
 displaying **2-500**
 number of **2-488**
 media types **2-694, 2-699**
 normal-range **2-691, 2-697**
 private **2-652**
 configuring **2-331**
 displaying **2-555**
 See also private VLANs
 restarting **2-572**
 saving the configuration **2-691**
 shutting down **2-572**
 SNMP traps for VTP **2-575, 2-578**
 suspending **2-572**
 variables **2-697**
- VLAN Trunking Protocol
See VTP
- VMPS
configuring servers **2-715**
displaying **2-563**
error recovery timer **2-121**
reconfirming dynamic VLAN assignments **2-712**
vmps reconfirm (global configuration) command **2-713**
vmps reconfirm (privileged EXEC) command **2-712**
vmps retry command **2-714**
vmps server command **2-715**
- voice VLAN
 configuring **2-672**
 setting port priority **2-663**
- VQP
 and dynamic-access ports **2-643**
 clearing client statistics **2-55**
 displaying information **2-563**
 per-server retry count **2-714**
 reconfirmation interval **2-713**
 reconfirming dynamic VLAN assignments **2-712**
- VTP
 changing characteristics **2-717**
 clearing pruning counters **2-56**
 configuring
 domain name **2-717, 2-721**
 file name **2-717**
 mode **2-717, 2-721**
 password **2-717, 2-721**
 counters display fields **2-567**
 displaying information **2-566**
 enabling
 pruning **2-717, 2-721**
 tunneling for **2-210**
 Version 2 **2-717, 2-721**
 mode **2-717, 2-721**
 pruning **2-717, 2-721**
 saving the configuration **2-691, 2-701**
 statistics **2-566**
 status **2-566**
 status display fields **2-569**
 vtp (global configuration) command **2-717**
 vtp (VLAN configuration) command **2-721**