



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-741](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-147](#)
 MAC, displaying [2-516](#)
access list, IPv6 [2-213](#)
access map configuration mode [2-269](#)
access mode [2-683](#)
access ports [2-683](#)
ACEs [2-87, 2-339](#)
ACLs
 deny [2-85](#)
 displaying [2-388](#)
 for non-IP protocols [2-249](#)
 IP [2-147](#)
 matching [2-269](#)
 on Layer 2 interfaces [2-147](#)
 permit [2-337](#)
action command [2-6](#)
address aliasing [2-320](#)
aggregate-port learner [2-325](#)
allowed VLANs [2-703](#)
apply command [2-741](#)
archive download-sw command [2-8](#)

archive tar command [2-11](#)
archive upload-sw command [2-14](#)
arp access-list command [2-16](#)
audience [xix](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-120](#)
autonegotiation of duplex mode [2-129](#)
auto qos voip command [2-18](#)

B

BackboneFast, for STP [2-617](#)
backup interfaces
 configuring [2-678](#)
 displaying [2-453](#)
boot (boot loader) command [A-2](#)
boot auto-download-sw command [2-23](#)
boot boothlpr command [2-25](#)
boot config-file command [2-26](#)
boot enable-break command [2-27](#)
boot helper command [2-28](#)
boot helper-config file command [2-29](#)
booting
 Cisco IOS image [2-32](#)
 displaying environment variables [2-398](#)
 interrupting [2-23, 2-27](#)
 manually [2-30](#)

boot loader

- accessing [A-1](#)

- booting

- Cisco IOS image [A-2](#)

- helper image [2-28](#)

- directories

- creating [A-15](#)

- displaying a list of [A-7](#)

- removing [A-19](#)

- displaying

- available commands [A-12](#)

- memory heap utilization [A-14](#)

- version [A-26](#)

- environment variables

- described [A-20](#)

- displaying settings [A-20](#)

- location of [A-21](#)

- setting [A-20](#)

- unsetting [A-24](#)

- files

- copying [A-5](#)

- deleting [A-6](#)

- displaying a list of [A-7](#)

- displaying the contents of [A-4, A-16, A-23](#)

- renaming [A-17](#)

- file system

- formatting [A-10](#)

- initializing flash [A-9](#)

- running a consistency check [A-11](#)

- loading helper images [A-13](#)

- prompt [A-1](#)

- resetting the system [A-18](#)

- boot manual command [2-30](#)

- boot private-config-file command [2-31](#)

- boot system command [2-32](#)

- BPDU filtering, for spanning tree [2-618, 2-653](#)

- BPDU guard, for spanning tree [2-620, 2-653](#)

- broadcast storm control [2-671](#)

C

- candidate switches

- See clusters

- cat (boot loader) command [A-4](#)

- caution, description **xx**

- CDP, enabling protocol tunneling for [2-232](#)

- channel-group command [2-33](#)

- channel-protocol command [2-36](#)

- Cisco Network Assistant

- See Network Assistant **xx**

- Cisco SoftPhone

- auto-QoS configuration [2-18](#)

- trusting packets sent from [2-311](#)

- class command [2-38](#)

- class-map command [2-40](#)

- class maps

- creating [2-40](#)

- defining the match criteria [2-271](#)

- displaying [2-403](#)

- class of service

- See CoS

- clear dot1x command [2-42](#)

- clear eap sessions command [2-43](#)

- clear errdisable interface [2-44](#)

- clear ip arp inspection log command [2-45](#)

- clear ip arp inspection statistics command [2-46](#)

- clear ipc command [2-49](#)

- clear ip dhcp snooping database command [2-47](#)

- clear l2protocol-tunnel counters command [2-50](#)

- clear lacp command [2-51](#)

- clear mac address-table command [2-52, 2-54](#)

- clear pagp command [2-55](#)

- clear port-security command [2-56](#)

- clear spanning-tree counters command [2-58](#)

- clear spanning-tree detected-protocols command [2-59](#)

- clear vmps statistics command [2-60](#)

- clear vtp counters command [2-61](#)

- cluster commander-address command [2-62](#)

- cluster discovery hop-count command [2-64](#)
 - cluster enable command [2-65](#)
 - cluster holdtime command [2-66](#)
 - cluster member command [2-67](#)
 - cluster outside-interface command [2-69](#)
 - cluster requirements [xxi](#)
 - cluster run command [2-70](#)
 - clusters
 - adding candidates [2-67](#)
 - binding to HSRP group [2-71](#)
 - building manually [2-67](#)
 - communicating with
 - devices outside the cluster [2-69](#)
 - members by using Telnet [2-366](#)
 - debug messages, display [B-5](#)
 - displaying
 - candidate switches [2-406](#)
 - debug messages [B-5](#)
 - member switches [2-408](#)
 - status [2-404](#)
 - hop-count limit for extended discovery [2-64](#)
 - HSRP standby groups [2-71](#)
 - redundancy [2-71](#)
 - SNMP trap [2-607](#)
 - cluster standby-group command [2-71](#)
 - cluster timer command [2-73](#)
 - command modes defined [1-1](#)
 - commands changed in Cisco IOS Release 12.2(20)SE [1-6](#)
 - command switch
 - See clusters
 - configuration, initial
 - See getting started guide and hardware installation guide
 - configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-26, 2-31](#)
 - configuring multiple interfaces [2-142](#)
 - config-vlan mode
 - commands [2-727](#)
 - description [1-4](#)
 - entering [2-726](#)
 - summary [1-2](#)
 - conventions
 - command [xx](#)
 - for examples [xx](#)
 - publication [xx](#)
 - text [xx](#)
 - copy (boot loader) command [A-5](#)
 - CoS
 - assigning default value to incoming packets [2-281](#)
 - assigning to Layer 2 protocol packets [2-235](#)
 - overriding the incoming value [2-281](#)
 - CoS-to-DSCP map [2-285](#)
 - CPU ASIC statistics, displaying [2-410](#)
 - crashinfo files [2-135](#)
-
- ## D
- debug auto qos command [B-2](#)
 - debug backup command [B-4](#)
 - debug cluster command [B-5](#)
 - debug dot1x command [B-7](#)
 - debug dtp command [B-8](#)
 - debug eap command [B-9](#)
 - debug etherchannel command [B-10](#)
 - debug ilpower command [B-11](#)
 - debug interface command [B-12](#)
 - debug ip dhcp snooping command [B-13](#)
 - debug ip igmp filter command [B-15](#)
 - debug ip igmp max-groups command [B-16](#)
 - debug ip igmp snooping command [B-17](#)
 - debug ip verify source packet command [B-14](#)
 - debug lacp command [B-18](#)
 - debug mac-notification command [B-19](#)
 - debug matm command [B-20](#)
 - debug matm move update command [B-21](#)

- debug monitor command [B-22](#)
- debug mvrdbg command [B-23](#)
- debug nvram command [B-24](#)
- debug pagp command [B-25](#)
- debug platform acl command [B-26](#)
- debug platform backup interface command [B-27](#)
- debug platform configuration command [B-35](#)
- debug platform cpu-queues command [B-28](#)
- debug platform device-manager command [B-30](#)
- debug platform dot1x command [B-31](#)
- debug platform etherchannel command [B-32](#)
- debug platform fallback-bridging command [B-33](#)
- debug platform forw-tcam command [B-34](#)
- debug platform ip arp inspection command [B-37](#)
- debug platform ip dhcp command [B-38](#)
- debug platform ip igmp snooping command [B-39](#)
- debug platform ip multicast command [B-41](#)
- debug platform ip unicast command [B-43](#)
- debug platform ip wccp command [B-45](#)
- debug platform led command [B-46](#)
- debug platform matm command [B-47](#)
- debug platform messaging application command [B-48](#)
- debug platform phy command [B-49](#)
- debug platform pm command [B-51](#)
- debug platform port-asic command [B-53](#)
- debug platform port-security command [B-54](#)
- debug platform qos-acl-tcam command [B-55](#)
- debug platform remote-commands command [B-56](#)
- debug platform resource-manager command [B-57](#)
- debug platform snmp command [B-58](#)
- debug platform span command [B-59](#)
- debug platform supervisor-asic command [B-60](#)
- debug platform sw-bridge command [B-61](#)
- debug platform tcam command [B-62](#)
- debug platform udd command [B-64](#)
- debug platform vlan command [B-65](#)
- debug pm command [B-66](#)
- debug port-security command [B-68](#)
- debug qos-manager command [B-69](#)
- debug spanning-tree backbonefast command [B-72](#)
- debug spanning-tree bpdu command [B-73](#)
- debug spanning-tree bpdu-opt command [B-74](#)
- debug spanning-tree command [B-70](#)
- debug spanning-tree mstp command [B-75](#)
- debug spanning-tree switch command [B-77](#)
- debug spanning-tree uplinkfast command [B-79](#)
- debug sw-vlan command [B-80](#)
- debug sw-vlan ifs command [B-82](#)
- debug sw-vlan notification command [B-83](#)
- debug sw-vlan vtp command [B-84](#)
- debug udd command [B-86](#)
- debug vqpc command [B-88](#)
- define interface-range command [2-75](#)
- delete (boot loader) command [A-6](#)
- delete command [2-77](#)
- deny (ARP access-list configuration) command [2-78](#)
- deny (IPv6) command [2-80](#)
- deny command [2-85](#)
- detect mechanism, causes [2-130](#)
- device manager requirements [xx](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-175](#)
 - enabling
 - on a VLAN [2-182](#)
 - option 82 [2-173, 2-175](#)
 - trust on an interface [2-180](#)
 - error recovery timer [2-132](#)
 - rate limiting [2-179](#)
- DHCP snooping binding database
 - binding file, configuring [2-171](#)
 - bindings
 - adding [2-169](#)
 - deleting [2-169](#)
 - displaying [2-470](#)
 - clearing database agent statistics [2-47](#)
 - database agent, configuring [2-171](#)

DHCP snooping binding database (continued)

- displaying
 - binding entries [2-470](#)
 - database agent status [2-472, 2-474](#)
 - renewing [2-370](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-77](#)
- documentation, related [xx](#)
- document conventions [xx](#)
- domain name, VTP [2-751, 2-755](#)
- dot1x auth-fail max-attempts [2-95](#)
- dot1x auth-fail vlan [2-97](#)
- dot1x command [2-93](#)
- dot1x control-direction command [2-99](#)
- dot1x critical global configuration command [2-101](#)
- dot1x critical interface configuration command [2-103](#)
- dot1x default command [2-105](#)
- dot1x fallback command [2-106](#)
- dot1x guest-vlan command [2-108](#)
- dot1x host-mode command [2-111](#)
- dot1x initialize command [2-113](#)
- dot1x mac-auth-bypass command [2-114](#)
- dot1x max-reauth-req command [2-116](#)
- dot1x max-req command [2-117](#)
- dot1x multiple-hosts command [2-118](#)
- dot1x pae command [2-119](#)
- dot1x port-control command [2-120](#)
- dot1x re-authenticate command [2-122](#)
- dot1x re-authentication command [2-123](#)
- dot1x reauthentication command [2-124](#)
- dot1x timeout command [2-125](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-232](#)
- DSCP-to-CoS map [2-285](#)
- DSCP-to-DSCP-mutation map [2-285](#)
- DTP [2-684](#)
- DTP flap
 - error detection for [2-130](#)
 - error recovery timer [2-132](#)

- DTP negotiation [2-688](#)
- dual-purpose uplink ports, selecting the type [2-275](#)
- duplex command [2-128](#)
- dynamic-access ports
 - configuring [2-676](#)
 - restrictions [2-677](#)
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [2-155](#)
 - define [2-16](#)
 - deny packets [2-78](#)
 - display [2-393](#)
 - permit packets [2-329](#)
 - clear
 - log buffer [2-45](#)
 - statistics [2-46](#)
 - display
 - ARP ACLs [2-393](#)
 - configuration and operating state [2-466](#)
 - log buffer [2-466](#)
 - statistics [2-466](#)
 - trust state and rate limit [2-466](#)
 - enable per VLAN [2-165](#)
 - error detection for [2-130](#)
 - error recovery timer [2-132](#)
 - log buffer
 - clear [2-45](#)
 - configure [2-159](#)
 - display [2-466](#)
 - rate-limit incoming ARP packets [2-157](#)
 - statistics
 - clear [2-46](#)
 - display [2-466](#)
 - trusted interface state [2-161](#)
 - type of packet logged [2-166](#)
 - validation checks [2-163](#)
- dynamic auto VLAN membership mode [2-683](#)
- dynamic desirable VLAN membership mode [2-683](#)

Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [2-117](#)

response time before retransmitting [2-125](#)

encapsulation methods [2-703](#)

environment variables, displaying [2-398](#)

errdisable detect cause command [2-130](#)

errdisable recovery command [2-132](#)

error conditions, displaying [2-442](#)

error disable detection [2-130](#)

error-disabled interfaces, displaying [2-453](#)

EtherChannel

assigning Ethernet interface to channel group [2-33](#)

creating port-channel logical interface [2-140](#)

debug EtherChannel/PAgP, display [B-10](#)

debug platform-specific events, display [B-32](#)

displaying [2-446](#)

enabling Layer 2 protocol tunneling for

LACP [2-233](#)

PAgP [2-233](#)

UDLD [2-233](#)

interface information, displaying [2-453](#)

LACP

clearing channel-group information [2-51](#)

debug messages, display [B-18](#)

displaying [2-510](#)

modes [2-33](#)

port priority for hot-standby ports [2-236](#)

restricting a protocol [2-36](#)

system priority [2-238](#)

load-distribution methods [2-347](#)

EtherChannel (continued)

PAgP

aggregate-port learner [2-325](#)

clearing channel-group information [2-55](#)

debug messages, display [B-25](#)

displaying [2-560](#)

error detection for [2-130](#)

error recovery timer [2-132](#)

learn method [2-325](#)

modes [2-33](#)

physical-port learner [2-325](#)

priority of interface for transmitted traffic [2-327](#)

Ethernet controller, internal register display [2-412](#)

Ethernet statistics, collecting [2-372](#)

examples, conventions for [xx](#)

exception crashinfo command [2-135](#)

exit command [2-741](#)

extended discovery of candidate switches [2-64](#)

extended-range VLANs

and allowed VLAN list [2-703](#)

and pruning-eligible list [2-703](#)

configuring [2-726](#)

extended system ID for STP [2-626](#)

F

fallback profile command [2-136](#)

fallback profiles, displaying [2-449](#)

fan information, displaying [2-438](#)

file name, VTP [2-751](#)

files, deleting [2-77](#)

flash_init (boot loader) command [A-9](#)

Flex Links

configuring [2-678](#)

displaying [2-453](#)

flowcontrol command [2-138](#)

format (boot loader) command [A-10](#)

forwarding packets, with ACL matches [2-6](#)

forwarding results, display [C-6](#)

frame forwarding information, displaying [C-6](#)
 front-end controller, counter and status information [C-8](#)
 fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-388](#)
 help (boot loader) command [A-12](#)
 hierarchical policy maps [2-345](#)
 hop-count limit for clusters [2-64](#)
 host connection, port configuration [2-682](#)
 host ports, private VLANs [2-686](#)
 Hot Standby Router Protocol
 See HSRP
 HSRP
 binding HSRP group to cluster [2-71](#)
 standby group [2-71](#)

I

IEEE 802.1Q trunk ports and native VLANs [2-743](#)
 IEEE 802.1Q tunnel ports
 configuring [2-683](#)
 displaying [2-427](#)
 limitations [2-684](#)
 IEEE 802.1x
 and switchport modes [2-684](#)
 violation error recovery [2-132](#)
 See also port-based authentication
 IEEE 802.1X Port Based Authentication
 enabling guest VLAN supplicant [2-96, 2-107, 2-137](#)
 IGMP filters
 applying [2-185](#)
 debug messages, display [B-15](#)

IGMP groups, setting maximum [2-187](#)
 IGMP maximum groups, debugging [B-16](#)
 IGMP profiles
 creating [2-189](#)
 displaying [2-477](#)
 IGMP snooping
 adding ports as a static member of a group [2-206](#)
 displaying [2-478, 2-483, 2-485](#)
 enabling [2-191](#)
 enabling the configurable-leave timer [2-193](#)
 enabling the Immediate-Leave feature [2-202](#)
 flooding query count [2-199](#)
 interface topology change notification behavior [2-201](#)
 multicast table [1-6, 2-481](#)
 querier [2-195](#)
 query solicitation [2-199](#)
 report suppression [2-197](#)
 switch topology change notification behavior [2-199](#)
 images
 See software images
 Immediate-Leave feature, MVR [2-322](#)
 immediate-leave processing [2-202](#)
 Immediate-Leave processing, IPv6 [2-228](#)
 initial configuration
 See getting started guide and hardware installation guide
 interface configuration mode [1-2, 1-4](#)
 interface port-channel command [2-140](#)
 interface range command [2-142](#)
 interface-range macros [2-75](#)
 interfaces
 assigning Ethernet interface to channel group [2-33](#)
 configuring [2-128](#)
 configuring multiple [2-142](#)
 creating port-channel logical [2-140](#)
 debug messages, display [B-12](#)
 disabling [2-605](#)
 displaying the MAC address table [2-528](#)
 restarting [2-605](#)

- interface speed, configuring [2-663](#)
- interface vlan command [2-145](#)
- internal registers, displaying [2-412](#), [2-421](#)
- Internet Group Management Protocol
 - See IGMP
- invalid GBIC
 - error detection for [2-130](#)
 - error recovery timer [2-132](#)
- ip access-group command [2-147](#)
- ip address command [2-150](#)
- IP addresses, setting [2-150](#)
- IP address matching [2-269](#)
- ip admission command [2-152](#)
- ip admission name proxy http command [2-153](#)
- ip arp inspection filter vlan command [2-155](#)
- ip arp inspection limit command [2-157](#)
- ip arp inspection log-buffer command [2-159](#)
- ip arp inspection trust command [2-161](#)
- ip arp inspection validate command [2-163](#)
- ip arp inspection vlan command [2-165](#)
- ip arp inspection vlan logging command [2-166](#)
- IP DHCP snooping
 - See DHCP snooping
- ip dhcp snooping binding command [2-169](#)
- ip dhcp snooping command [2-168](#)
- ip dhcp snooping database command [2-171](#)
- ip dhcp snooping information option allow-untrusted command [2-175](#)
- ip dhcp snooping information option command [2-173](#)
- ip dhcp snooping information option format remote-id command [2-177](#)
- ip dhcp snooping limit rate command [2-179](#)
- ip dhcp snooping trust command [2-180](#)
- ip dhcp snooping verify command [2-181](#)
- ip dhcp snooping vlan command [2-182](#)
- ip dhcp snooping vlan information option format-type circuit-id string command [2-183](#)
- ip igmp filter command [2-185](#)
- ip igmp max-groups command [2-187](#)
- ip igmp profile command [2-189](#)
- ip igmp snooping command [2-191](#)
- ip igmp snooping last-member-query-interval command [2-193](#)
- ip igmp snooping querier command [2-195](#)
- ip igmp snooping report-suppression command [2-197](#)
- ip igmp snooping tcn command [2-199](#)
- ip igmp snooping tcn flood command [2-201](#)
- ip igmp snooping vlan immediate-leave command [2-202](#)
- ip igmp snooping vlan mrouter command [2-204](#)
- ip igmp snooping vlan static command [2-206](#)
- IP multicast addresses [2-319](#)
- IP phones
 - auto-QoS configuration [2-18](#)
 - trusting packets sent from [2-311](#)
- IP-precedence-to-DSCP map [2-285](#)
- ip source binding command [2-208](#)
- IP source guard
 - disabling [2-212](#)
 - displaying
 - binding entries [2-487](#)
 - configuration [2-489](#)
 - dynamic binding entries only [2-470](#)
 - enabling [2-212](#)
 - static IP source bindings [2-208](#)
- ip ssh command [2-210](#)
- IPv6 access list, deny conditions [2-80](#)
- ipv6 access-list command [2-213](#)
- ipv6 mld snooping command [2-216](#)
- ipv6 mld snooping last-listener-query count command [2-218](#)
- ipv6 mld snooping last-listener-query-interval command [2-220](#)
- ipv6 mld snooping listener-message-suppression command [2-222](#)
- ipv6 mld snooping robustness-variable command [2-224](#)
- ipv6 mld snooping tcn command [2-226](#)
- ipv6 mld snooping vlan command [2-228](#)
- IPv6 SDM template [2-373](#)
- ipv6 traffic-filter command [2-230](#)
- ip verify source command [2-212](#)

J

jumbo frames

See MTU

L

l2protocol-tunnel command [2-232](#)

l2protocol-tunnel cos command [2-235](#)

LACP

See EtherChannel

lacp port-priority command [2-236](#)

lacp system-priority command [2-238](#)

Layer 2 mode, enabling [2-674](#)

Layer 2 protocol ports, displaying [2-507](#)

Layer 2 protocol-tunnel

error detection for [2-130](#)

error recovery timer [2-132](#)

Layer 2 protocol tunnel counters [2-50](#)

Layer 2 protocol tunneling error recovery [2-233](#)

Layer 2 traceroute

IP addresses [2-717](#)

MAC addresses [2-714](#)

Layer 3 mode, enabling [2-674](#)

line configuration mode [1-2, 1-5](#)

Link Aggregation Control Protocol

See EtherChannel

link flap

error detection for [2-130](#)

error recovery timer [2-132](#)

link state group command [2-240](#)

link state track command [2-242](#)

load_helper (boot loader) command [A-13](#)

load-distribution methods for EtherChannel [2-347](#)

logging event command [2-243](#)

logging event power-inline-status command [2-244](#)

logging file command [2-245](#)

logical interface [2-140](#)

loopback error

detection for [2-130](#)

recovery timer [2-132](#)

loop guard, for spanning tree [2-628, 2-632](#)

M

mac access-group command [2-247](#)

MAC access-groups, displaying [2-516](#)

MAC access list configuration mode [2-249](#)

mac access-list extended command [2-249](#)

MAC access lists [2-85](#)

MAC addresses

displaying

aging time [2-522](#)

all [2-520](#)

dynamic [2-526](#)

MAC address-table move updates [2-530](#)

notification settings [2-532](#)

number of addresses in a VLAN [2-524](#)

per interface [2-528](#)

per VLAN [2-536](#)

static [2-534](#)

static and dynamic entries [2-518](#)

dynamic

aging time [2-251](#)

deleting [2-52](#)

displaying [2-526](#)

enabling MAC address notification [2-254](#)

enabling MAC address-table move update [2-252](#)

matching [2-269](#)

static

adding and removing [2-256](#)

displaying [2-534](#)

dropping on an interface [2-257](#)

tables [2-520](#)

MAC address notification, debugging [B-19](#)

mac address-table aging-time [2-247, 2-269](#)

mac address-table aging-time command [2-251](#)

- mac address-table move update command [2-252](#)
- mac address-table notification command [2-254](#)
- mac address-table static command [2-256](#)
- mac address-table static drop command [2-257](#)
- macro apply command [2-259](#)
- macro description command [2-262](#)
- macro global command [2-263](#)
- macro global description command [2-266](#)
- macro name command [2-267](#)
- macros
 - adding a description [2-262](#)
 - adding a global description [2-266](#)
 - applying [2-263](#)
 - creating [2-267](#)
 - displaying [2-562](#)
 - interface range [2-75, 2-142](#)
 - specifying parameter values [2-263](#)
 - tracing [2-263](#)
- manual
 - audience [xix](#)
 - purpose of [xix](#)
- maps
 - QoS
 - defining [2-285](#)
 - displaying [2-546](#)
 - VLAN
 - creating [2-738](#)
 - defining [2-269](#)
 - displaying [2-595](#)
- match (access-map configuration) command [2-269](#)
- match (class-map configuration) command [2-271](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-273](#)
- media-type command [2-275](#)
- member switches
 - See clusters
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- MLD snooping
 - configuring [2-222, 2-224](#)
 - configuring queries [2-218, 2-220](#)
 - configuring topology change notification [2-226](#)
 - displaying [2-497, 2-499, 2-501, 2-503](#)
 - enabling [2-216](#)
- MLD snooping on a VLAN, enabling [2-228](#)
- mls qos aggregate-policer command [2-279](#)
- mls qos command [2-277](#)
- mls qos cos command [2-281](#)
- mls qos dscp-mutation command [2-283](#)
- mls qos map command [2-285](#)
- mls qos queue-set output buffers command [2-289](#)
- mls qos queue-set output threshold command [2-291](#)
- mls qos rewrite ip dscp command [2-293](#)
- mls qos srr-queue input bandwidth command [2-295](#)
- mls qos srr-queue input buffers command [2-297](#)
- mls qos-srr-queue input cos-map command [2-299](#)
- mls qos srr-queue input dscp-map command [2-301](#)
- mls qos srr-queue input priority-queue command [2-303](#)
- mls qos srr-queue input threshold command [2-305](#)
- mls qos-srr-queue output cos-map command [2-307](#)
- mls qos srr-queue output dscp-map command [2-309](#)
- mls qos trust command [2-311](#)
- mls qos vlan-based command [2-313](#)
- mode, MVR [2-319](#)
- Mode button, and password recovery [2-376](#)
- modes, commands [1-1](#)
- monitor session command [2-314](#)
- more (boot loader) command [A-16](#)
- MSTP
 - displaying [2-577](#)
 - interoperability [2-59](#)
 - link type [2-630](#)
 - MST region
 - aborting changes [2-636](#)
 - applying changes [2-636](#)
 - configuration name [2-636](#)
 - configuration revision number [2-636](#)

MSTP (continued)

- current or pending display [2-636](#)
- displaying [2-577](#)
- MST configuration mode [2-636](#)
- VLANs-to-instance mapping [2-636](#)
- path cost [2-638](#)
- protocol mode [2-634](#)
- restart protocol migration process [2-59](#)
- root port
 - loop guard [2-628](#)
 - preventing from becoming designated [2-628](#)
 - restricting which can be root [2-628](#)
 - root guard [2-628](#)
- root switch
 - affects of extended system ID [2-626](#)
 - hello-time [2-641, 2-649](#)
 - interval between BPDU messages [2-642](#)
 - interval between hello BPDU messages [2-641, 2-649](#)
 - max-age [2-642](#)
 - maximum hop count before discarding BPDU [2-643](#)
 - port priority for selection of [2-645](#)
 - primary or secondary [2-649](#)
 - switch priority [2-648](#)
- state changes
 - blocking to forwarding state [2-655](#)
 - enabling BPDU filtering [2-618, 2-653](#)
 - enabling BPDU guard [2-620, 2-653](#)
 - enabling Port Fast [2-653, 2-655](#)
 - forward-delay time [2-640](#)
 - length of listening and learning states [2-640](#)
 - rapid transition to forwarding [2-630](#)
 - shutting down Port Fast-enabled ports [2-653](#)
- state information display [2-576](#)

MTU

- configuring size [2-711](#)
- displaying global setting [2-584](#)

Multicast Listener Discovery

See MLD

multicast group address, MVR [2-322](#)

multicast groups, MVR [2-320](#)

Multicast Listener Discovery

See MLD

multicast router learning method [2-204](#)

multicast router ports, configuring [2-204](#)

multicast router ports, IPv6 [2-228](#)

multicast storm control [2-671](#)

multicast VLAN, MVR [2-319](#)

multicast VLAN registration

See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

and address aliasing [2-320](#)

configuring [2-319](#)

configuring interfaces [2-322](#)

debug messages, display [B-23](#)

displaying [2-554](#)

displaying interface information [2-556](#)

members, displaying [2-558](#)

mvr (global configuration) command [2-319](#)

mvr (interface configuration) command [2-322](#)

mvr vlan group command [2-323](#)

N

native VLANs [2-703](#)

native VLAN tagging [2-743](#)

Network Assistant requirements [xx](#)

nonegotiate, speed [2-663](#)

nonegotiating DTP messaging [2-688](#)

non-IP protocols

denying [2-85](#)

forwarding [2-337](#)

non-IP traffic access lists [2-249](#)

non-IP traffic forwarding

- denying [2-85](#)
- permitting [2-337](#)

normal-range VLANs [2-726, 2-732](#)

note, description [xx](#)

no vlan command [2-726, 2-736](#)

O

online diagnostics

- displaying
 - configured boot-up coverage level [2-425](#)
 - current scheduled tasks [2-425](#)
 - event logs [2-425](#)
 - supported test suites [2-425](#)
 - test ID [2-425](#)
 - test results [2-425](#)
 - test statistics [2-425](#)
- global configuration mode
 - clearing health monitoring diagnostic test schedule [2-45](#)
 - clearing test-based testing schedule [2-90](#)
 - setting health monitoring diagnostic testing [2-45](#)
 - setting test-based testing [2-90](#)
 - setting up health monitoring diagnostic test schedule [2-45](#)
 - setting up test-based testing [2-90](#)
- health monitoring diagnostic tests, configuring [2-88](#)
- scheduled switchover
 - disabling [2-90](#)
 - enabling [2-90](#)
- scheduling
 - enabling [2-90](#)
 - removing [2-90](#)
- test interval, setting [2-90](#)

P

PAgP

- See EtherChannel

pagp learn-method command [2-325](#)

pagp port-priority command [2-327](#)

password, VTP [2-751, 2-755](#)

password-recovery mechanism, enabling and disabling [2-376](#)

permit (ARP access-list configuration) command [2-329](#)

permit (IPv6) command [2-331](#)

permit (MAC access-list configuration) command [2-337](#)

per-VLAN spanning-tree plus

- See STP

physical-port learner [2-325](#)

PID, displaying [2-465](#)

PIM-DVMRP, as multicast router learning method [2-204](#)

PoE

- configuring the power budget [2-352](#)
- configuring the power management mode [2-349](#)
- displaying controller register values [2-419](#)
- displaying power management information [2-570](#)
- logging of status [2-244](#)

police aggregate command [2-342](#)

police command [2-340](#)

policed-DSCP map [2-285](#)

policy-map command [2-344](#)

policy maps

- applying to an interface [2-378, 2-383](#)
- creating [2-344](#)
- displaying [2-565](#)
- hierarchical [2-345](#)

policers

- displaying [2-539](#)
- for a single class [2-340](#)
- for multiple classes [2-279, 2-342](#)
- policed-DSCP map [2-285](#)

policy maps (continued)

- traffic classification
 - defining the class [2-38](#)
 - defining trust states [2-719](#)
 - setting DSCP or IP precedence values [2-381](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

- AAA method list [2-3](#)
- debug messages, display [B-7](#)
- enabling IEEE 802.1x
 - globally [2-93](#)
 - per interface [2-120](#)
- guest VLAN [2-108](#)
- host modes [2-111](#)
- IEEE 802.1x AAA accounting methods [2-1](#)
- initialize an interface [2-113](#)
- MAC authentication bypass [2-114](#)
- manual control of authorization state [2-120](#)
- PAE as authenticator [2-119](#)
- periodic re-authentication
 - enabling [2-124](#)
 - time between attempts [2-125](#)
- quiet period between failed authentication exchanges [2-125](#)
- re-authenticating IEEE 802.1x-enabled ports [2-122](#)
- resetting configurable IEEE 802.1x parameters [2-105](#)
- switch-to-authentication server retransmission time [2-125](#)
- switch-to-client frame-retransmission number [2-116 to 2-117](#)
- switch-to-client retransmission time [2-125](#)

port-channel load-balance command [2-347](#)

Port Fast, for spanning tree [2-655](#)

port ranges, defining [2-75](#)

ports, debugging [B-66](#)

ports, protected [2-701](#)

port security

- aging [2-695](#)
- debug messages, display [B-68](#)
- enabling [2-690](#)
- violation error recovery [2-132](#)

port trust states for QoS [2-311](#)

port types, MVR [2-322](#)

power information, displaying [2-438](#)

power inline command [2-349](#)

power inline consumption command [2-352](#)

Power over Ethernet

See PoE

priority-queue command [2-354](#)

private-vlan command [2-356](#)

private-vlan mapping command [2-359](#)

private VLANs

- association [2-699](#)
- configuring [2-356](#)
- configuring ports [2-686](#)
- displaying [2-590](#)
- host ports [2-686](#)
- mapping
 - configuring [2-699](#)
 - displaying [2-453](#)
- promiscuous ports [2-686](#)

privileged EXEC mode [1-2, 1-3](#)

product identification information, displaying [2-465](#)

promiscuous ports, private VLANs [2-686](#)

protected ports, displaying [2-459](#)

pruning

VLANs [2-703](#)

VTP

displaying interface information [2-453](#)

enabling [2-751, 2-755](#)

pruning-eligible VLAN list [2-705](#)

PVST+

See STP

Q**QoS**

auto-QoS

- configuring [2-18](#)
- debug messages, display [1-6, B-2](#)
- displaying [2-394](#)

class maps

- creating [2-40](#)
- defining the match criteria [2-271](#)
- displaying [2-403](#)

defining the CoS value for an incoming packet [2-281](#)

displaying configuration information [2-394, 2-538](#)

DSCP transparency [2-293](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-283](#)
- defining DSCP-to-DSCP-mutation map [2-285](#)

egress queues

- allocating buffers [2-289](#)
- defining the CoS output queue threshold map [2-307](#)
- defining the DSCP output queue threshold map [2-309](#)
- displaying buffer allocations [2-542](#)
- displaying CoS output queue threshold map [2-546](#)
- displaying DSCP output queue threshold map [2-546](#)
- displaying queueing strategy [2-542](#)
- displaying queue-set settings [2-549](#)
- enabling bandwidth shaping and scheduling [2-667](#)
- enabling bandwidth sharing and scheduling [2-669](#)
- limiting the maximum output on a port [2-665](#)
- mapping a port to a queue-set [2-361](#)
- mapping CoS values to a queue and threshold [2-307](#)
- mapping DSCP values to a queue and threshold [2-309](#)

QoS (continued)

setting maximum and reserved memory allocations [2-291](#)

setting WTD thresholds [2-291](#)

enabling [2-277](#)

ingress queues

- allocating buffers [2-297](#)
- assigning SRR scheduling weights [2-295](#)
- defining the CoS input queue threshold map [2-299](#)
- defining the DSCP input queue threshold map [2-301](#)
- displaying buffer allocations [2-542](#)
- displaying CoS input queue threshold map [2-546](#)
- displaying DSCP input queue threshold map [2-546](#)
- displaying queueing strategy [2-542](#)
- displaying settings for [2-540](#)
- enabling the priority queue [2-303](#)
- mapping CoS values to a queue and threshold [2-299](#)
- mapping DSCP values to a queue and threshold [2-301](#)
- setting WTD thresholds [2-305](#)

maps

- defining [2-285, 2-299, 2-301, 2-307, 2-309](#)
- displaying [2-546](#)

policy maps

- applying an aggregate policer [2-342](#)
- applying to an interface [2-378, 2-383](#)
- creating [2-344](#)
- defining policers [2-279, 2-340](#)
- displaying policers [2-539](#)
- displaying policy maps [2-565](#)
- hierarchical [2-345](#)
- policed-DSCP map [2-285](#)
- setting DSCP or IP precedence values [2-381](#)
- traffic classifications [2-38](#)
- trust states [2-719](#)

port trust states [2-311](#)

QoS (continued)

- queues, enabling the expedite [2-354](#)
- statistics
 - in-profile and out-of-profile packets [2-542](#)
 - packets enqueued or dropped [2-542](#)
 - sent and received CoS values [2-542](#)
 - sent and received DSCP values [2-542](#)
- trusted boundary for IP phones [2-311](#)
- VLAN-based [2-313](#)
- quality of service
 - See QoS
- querytime, MVR [2-319](#)
- queue-set command [2-361](#)

R

- radius-server dead-criteria command [2-362](#)
- radius-server host command [2-364](#)
- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- rcommand command [2-366](#)
- re-authenticating IEEE 802.1x-enabled ports [2-122](#)
- re-authentication
 - periodic [2-124](#)
 - time between attempts [2-125](#)
- receiver ports, MVR [2-322](#)
- receiving flow-control packets [2-138](#)
- recovery mechanism
 - causes [2-132](#)
 - display [2-44, 2-400, 2-440, 2-444](#)
 - timer interval [2-133](#)
- redundancy for cluster switches [2-71](#)
- remote-span command [2-368](#)
- Remote Switched Port Analyzer
 - See RSPAN
- rename (boot loader) command [A-17](#)
- renew ip dhcp snooping database command [2-370](#)

- requirements
 - cluster [xxi](#)
 - device manager [xx](#)
 - Network Assistant [xx](#)
 - reset (boot loader) command [A-18](#)
 - reset command [2-741](#)
 - resource templates, displaying [2-572](#)
 - restricted VLAN
 - See dot1x auth-fail vlan
 - rmdir (boot loader) command [A-19](#)
 - rmon collection stats command [2-372](#)
 - root guard, for spanning tree [2-628](#)
 - routed ports
 - IP addresses on [2-151](#)
 - number supported [2-151](#)
 - RSPAN
 - configuring [2-314](#)
 - displaying [2-552](#)
 - filter RSPAN traffic [2-314](#)
 - remote-span command [2-368](#)
 - sessions
 - add interfaces to [2-314](#)
 - displaying [2-552](#)
 - start new [2-314](#)
-
- S**
 - scheduled switchover
 - disabling [2-90](#)
 - enabling [2-90](#)
 - sdm prefer command [2-373](#)
 - SDM templates
 - allowed resources [2-374](#)
 - displaying [2-572](#)
 - dual IPv4 and IPv6 [2-373](#)
 - secure ports, limitations [2-692](#)
 - sending flow-control packets [2-138](#)
 - service password-recovery command [2-376](#)
 - service-policy command [2-378](#)

- set (boot loader) command [A-20](#)
- set command [2-381](#)
- setup command [2-383](#)
- setup express command [2-386](#)
- show access-lists command [2-388](#)
- show archive status command [2-391](#)
- show arp access-list command [2-393](#)
- show auto qos command [2-394](#)
- show boot command [2-398](#)
- show cable-diagnostics tdr command [2-400](#)
- show changes command [2-741](#)
- show class-map command [2-403](#)
- show cluster candidates command [2-406](#)
- show cluster command [2-404](#)
- show cluster members command [2-408](#)
- show controllers cpu-interface command [2-410](#)
- show controllers ethernet-controller command [2-412](#)
- show controllers power inline command [2-419](#)
- show controllers team command [2-421](#)
- show controller utilization command [2-423](#)
- show current command [2-741](#)
- show dot1q-tunnel command [2-427](#)
- show dot1x command [2-428](#)
- show dtp [2-433](#)
- show eap command [2-435](#)
- show env command [2-438](#)
- show errdisable detect command [2-440](#)
- show errdisable flap-values command [2-442](#)
- show errdisable recovery command [2-444](#)
- show etherchannel command [2-446](#)
- show fallback profile command [2-449](#)
- show flowcontrol command [2-451](#)
- show interfaces command [2-453](#)
- show interfaces counters command [2-463](#)
- show inventory command [2-465](#)
- show ip arp inspection command [2-466](#)
- show ipc command [2-491](#)
- show ip dhcp snooping binding command [2-470](#)
- show ip dhcp snooping command [2-469](#)
- show ip dhcp snooping database command [2-472, 2-474](#)
- show ip igmp profile command [2-477](#)
- show ip igmp snooping address command [2-499](#)
- show ip igmp snooping command [2-478, 2-497](#)
- show ip igmp snooping groups command [2-481](#)
- show ip igmp snooping mrouter command [2-483, 2-501](#)
- show ip igmp snooping querier command [2-485, 2-503](#)
- show ip source binding command [2-487](#)
- show ipv6 access-list command [2-495](#)
- show ipv6 route updated [2-505](#)
- show ip verify source command [2-489](#)
- show l2protocol-tunnel command [2-507](#)
- show lacp command [2-510](#)
- show link state group command [2-514](#)
- show mac access-group command [2-516](#)
- show mac address-table address command [2-520](#)
- show mac address-table aging time command [2-522](#)
- show mac address-table command [2-518](#)
- show mac address-table count command [2-524](#)
- show mac address-table dynamic command [2-526](#)
- show mac address-table interface command [2-528](#)
- show mac address-table move update command [2-530](#)
- show mac address-table notification command [2-54, 2-532, B-21](#)
- show mac address-table static command [2-534](#)
- show mac address-table vlan command [2-536](#)
- show mls qos aggregate-policer command [2-539](#)
- show mls qos command [2-538](#)
- show mls qos input-queue command [2-540](#)
- show mls qos interface command [2-542](#)
- show mls qos maps command [2-546](#)
- show mls qos queue-set command [2-549](#)
- show mls qos vlan command [2-551](#)
- show monitor command [2-552](#)
- show mvr command [2-554](#)
- show mvr interface command [2-556](#)
- show mvr members command [2-558](#)
- show pagp command [2-560](#)
- show parser macro command [2-562](#)

- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform frontend-controller command [C-8](#)
- show platform igmp snooping command [C-9](#)
- show platform ip multicast command [C-11](#)
- show platform ip unicast command [C-12](#)
- show platform ipv6 unicast command [C-17](#)
- show platform ip wecp command [C-16](#)
- show platform layer4op command [C-19](#)
- show platform mac-address-table command [C-20](#)
- show platform messaging command [C-21](#)
- show platform monitor command [C-22](#)
- show platform mvr table command [C-23](#)
- show platform pm command [C-24](#)
- show platform port-asic command [C-25](#)
- show platform port-security command [C-29](#)
- show platform qos command [C-30](#)
- show platform resource-manager command [C-31](#)
- show platform snmp counters command [C-33](#)
- show platform spanning-tree command [C-34](#)
- show platform stp-instance command [C-35](#)
- show platform team command [C-36](#)
- show platform vlan command [C-39](#)
- show policy-map command [2-565](#)
- show port security command [2-567](#)
- show power inline command [2-570](#)
- show proposed command [2-741](#)
- show sdm prefer command [2-572](#)
- show setup express command [2-575](#)
- show spanning-tree command [2-576](#)
- show storm-control command [2-582](#)
- show system mtu command [2-584](#)
- show trust command [2-719](#)
- show udd command [2-585](#)
- show version command [2-588](#)
- show vlan access-map command [2-595](#)
- show vlan command [2-590](#)
- show vlan command, fields [2-592](#)
- show vlan filter command [2-596](#)
- show vmps command [2-597](#)
- show vtp command [2-600](#)
- shutdown command [2-605](#)
- shutdown threshold, Layer 2 protocol tunneling [2-232](#)
- shutdown vlan command [2-606](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-611](#)
- SNMP informs, enabling the sending of [2-607](#)
- snmp-server enable traps command [2-607](#)
- snmp-server host command [2-611](#)
- snmp trap mac-notification command [2-615](#)
- SNMP traps
 - enabling MAC address notification trap [2-615](#)
 - enabling the MAC address notification feature [2-254](#)
 - enabling the sending of [2-607](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-77](#)
 - downloading [2-8](#)
 - upgrading [2-8](#)
 - uploading [2-14](#)
- software version, displaying [2-588](#)
- source ports, MVR [2-322](#)
- SPAN
 - configuring [2-314](#)
 - debug messages, display [B-22](#)
 - displaying [2-552](#)
 - filter SPAN traffic [2-314](#)
 - sessions
 - add interfaces to [2-314](#)
 - displaying [2-552](#)
 - start new [2-314](#)
- spanning-tree backbonefast command [2-617](#)
- spanning-tree bpdudfilter command [2-618](#)

- spanning-tree bpduguard command [2-620](#)
- spanning-tree cost command [2-622](#)
- spanning-tree etherchannel command [2-624](#)
- spanning-tree extend system-id command [2-626](#)
- spanning-tree guard command [2-628](#)
- spanning-tree link-type command [2-630](#)
- spanning-tree loopguard default command [2-632](#)
- spanning-tree mode command [2-634](#)
- spanning-tree mst configuration command [2-636](#)
- spanning-tree mst cost command [2-638](#)
- spanning-tree mst forward-time command [2-640](#)
- spanning-tree mst hello-time command [2-641](#)
- spanning-tree mst max-age command [2-642](#)
- spanning-tree mst max-hops command [2-643](#)
- spanning-tree mst port-priority command [2-645](#)
- spanning-tree mst pre-standard command [2-647](#)
- spanning-tree mst priority command [2-648](#)
- spanning-tree mst root command [2-649](#)
- spanning-tree portfast (global configuration) command [2-653](#)
- spanning-tree portfast (interface configuration) command [2-655](#)
- spanning-tree port-priority command [2-651](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-657](#)
- spanning-tree uplinkfast command [2-658](#)
- spanning-tree vlan command [2-660](#)
- speed command [2-663](#)
- srr-queue bandwidth limit command [2-665](#)
- srr-queue bandwidth shape command [2-667](#)
- srr-queue bandwidth share command [2-669](#)
- SSH, configuring version [2-210](#)
- static-access ports, configuring [2-676](#)
- statistics, Ethernet group [2-372](#)
- sticky learning, enabling [2-690](#)
- storm-control command [2-671](#)
- STP
 - BackboneFast [2-617](#)
 - counters, clearing [2-58](#)
 - debug messages, display
 - BackboneFast events [B-72](#)
 - MSTP [B-75](#)
 - optimized BPDUs handling [B-74](#)
 - spanning-tree activity [B-70](#)
 - switch shim [B-77](#)
 - transmitted and received BPDUs [B-73](#)
 - UplinkFast [B-79](#)
 - detection of indirect link failures [2-617](#)
 - enabling protocol tunneling for [2-232](#)
 - EtherChannel misconfiguration [2-624](#)
 - extended system ID [2-626](#)
 - path cost [2-622](#)
 - protocol modes [2-634](#)
 - root port
 - accelerating choice of new [2-658](#)
 - loop guard [2-628](#)
 - preventing from becoming designated [2-628](#)
 - restricting which can be root [2-628](#)
 - root guard [2-628](#)
 - UplinkFast [2-658](#)
 - root switch
 - affects of extended system ID [2-626, 2-661](#)
 - hello-time [2-660](#)
 - interval between BPDU messages [2-660](#)
 - interval between hello BPDU messages [2-660](#)
 - max-age [2-660](#)
 - port priority for selection of [2-651](#)
 - primary or secondary [2-660](#)
 - switch priority [2-660](#)

STP (continued)

- state changes
 - blocking to forwarding state [2-655](#)
 - enabling BPDU filtering [2-618, 2-653](#)
 - enabling BPDU guard [2-620, 2-653](#)
 - enabling Port Fast [2-653, 2-655](#)
 - enabling timer to recover from error state [2-132](#)
 - forward-delay time [2-660](#)
 - length of listening and learning states [2-660](#)
 - shutting down Port Fast-enabled ports [2-653](#)
- state information display [2-576](#)
- VLAN options [2-648, 2-660](#)
- SVIs, creating [2-145](#)
- Switched Port Analyzer
 - See SPAN
- switching characteristics
 - modifying [2-674](#)
 - returning to interfaces [2-674](#)
- switchport access command [2-676](#)
- switchport backup interface command [2-678](#)
- switchport block command [2-681](#)
- switchport command [2-674](#)
- switchport host command [2-682](#)
- switchport mode command [2-683](#)
- switchport mode private-vlan command [2-686](#)
- switchport nonegotiate command [2-688](#)
- switchport port-security aging command [2-695](#)
- switchport port-security command [2-690](#)
- switchport priority extend command [2-697](#)
- switchport private-vlan command [2-699](#)
- switchport protected command [2-701](#)
- switchports, displaying [2-453](#)
- switchport trunk command [2-703](#)
- switchport voice vlan command [2-706, 2-707](#)
- system env temperature threshold yellow command [2-709](#)
- system message logging [2-244](#)
- system message logging, save message to flash [2-245](#)
- system mtu command [2-711](#)
- system resource templates [2-373](#)

T

- tar files, creating, listing, and extracting [2-11](#)
- TDR, running [2-713](#)
- Telnet, using to communicate to cluster switches [2-366](#)
- temperature information, displaying [2-438](#)
- templates, system resources [2-373](#)
- test cable-diagnostics tdr command [2-713](#)
- traceroute mac command [2-714](#)
- traceroute mac ip command [2-717](#)
- trunking, VLAN mode [2-683](#)
- trunk mode [2-683](#)
- trunk ports [2-683](#)
- trunks, to non-DTP device [2-684](#)
- trusted boundary for QoS [2-311](#)
- trusted port states for QoS [2-311](#)
- tunnel ports, Layer 2 protocol, displaying [2-507](#)
- type (boot loader) command [A-23](#)

U**UDLD**

- aggressive mode [2-721, 2-723](#)
- debug messages, display [B-86](#)
- enable globally [2-721](#)
- enable per interface [2-723](#)
- error recovery timer [2-132](#)
- message timer [2-721](#)
- normal mode [2-721, 2-723](#)
- reset a shutdown interface [2-725](#)
- status [2-585](#)
- udld command [2-721](#)
- udld port command [2-723](#)
- udld reset command [2-725](#)
- unicast storm control [2-671](#)
- UniDirectional Link Detection
 - See UDLD
- unknown multicast traffic, preventing [2-681](#)
- unknown unicast traffic, preventing [2-681](#)

unset (boot loader) command [A-24](#)
 upgrading information
 See release notes
 upgrading software images
 downloading [2-8](#)
 monitoring status of [2-391](#)
 UplinkFast, for STP [2-658](#)
 user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-26](#)
 vlan (global configuration) command [2-726](#)
 vlan (VLAN configuration) command [2-732](#)
 vlan access-map command [2-738](#)
 VLAN access map configuration mode [2-738](#)
 VLAN access maps
 actions [2-6](#)
 displaying [2-595](#)
 VLAN-based QoS [2-313](#)
 VLAN configuration
 rules [2-729, 2-734](#)
 saving [2-726, 2-736](#)
 VLAN configuration mode
 commands
 VLAN [2-732](#)
 VTP [2-755](#)
 description [1-5](#)
 entering [2-740](#)
 summary [1-2](#)
 vlan database command [2-740](#)
 vlan dot1q tag native command [2-743](#)
 vlan filter command [2-744](#)
 VLAN filters, displaying [2-596](#)
 VLAN ID range [2-726, 2-732](#)
 VLAN maps
 applying [2-744](#)
 creating [2-738](#)
 defining [2-269](#)
 displaying [2-595](#)
 VLAN Query Protocol
 See VQP
 VLANs
 adding [2-726](#)
 configuring [2-726, 2-732](#)
 debug messages, display
 ISL [B-83](#)
 VLAN IOS file system error tests [B-82](#)
 VLAN manager activity [B-80](#)
 VTP [B-84](#)
 displaying configurations [2-590](#)
 enabling guest VLAN supplicant [2-96, 2-107, 2-137](#)
 extended-range [2-726](#)
 MAC addresses
 displaying [2-536](#)
 number of [2-524](#)
 media types [2-729, 2-734](#)
 normal-range [2-726, 2-732](#)
 private [2-686](#)
 configuring [2-356](#)
 displaying [2-590](#)
 See also private VLANs
 restarting [2-606](#)
 saving the configuration [2-726](#)
 shutting down [2-606](#)
 SNMP traps for VTP [2-609, 2-612](#)
 suspending [2-606](#)
 variables [2-732](#)
 VLAN Trunking Protocol
 See VTP

VMPS

- configuring servers [2-749](#)
- displaying [2-597](#)
- error recovery timer [2-133](#)
- reconfirming dynamic VLAN assignments [2-746](#)

vmmps reconfirm (global configuration) command [2-747](#)

vmmps reconfirm (privileged EXEC) command [2-746](#)

vmmps retry command [2-748](#)

vmmps server command [2-749](#)

voice VLAN

- configuring [2-706, 2-707](#)
- setting port priority [2-697](#)

VQP

- and dynamic-access ports [2-677](#)
- clearing client statistics [2-60](#)
- displaying information [2-597](#)
- per-server retry count [2-748](#)
- reconfirmation interval [2-747](#)
- reconfirming dynamic VLAN assignments [2-746](#)

VTP

changing characteristics [2-751](#)

clearing pruning counters [2-61](#)

configuring

domain name [2-751, 2-755](#)

file name [2-751](#)

mode [2-751, 2-755](#)

password [2-751, 2-755](#)

counters display fields [2-601](#)

displaying information [2-600](#)

enabling

pruning [2-751, 2-755](#)

tunneling for [2-232](#)

Version 2 [2-751, 2-755](#)

mode [2-751, 2-755](#)

pruning [2-751, 2-755](#)

saving the configuration [2-726, 2-736](#)

statistics [2-600](#)

status [2-600](#)

status display fields [2-602](#)

vtp (global configuration) command [2-751](#)

vtp (VLAN configuration) command [2-755](#)

