



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-749](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-146](#)
 MAC, displaying [2-520](#)
access list, IPv6 [2-211](#)
access map configuration mode [2-270](#)
access mode [2-690](#)
access ports [2-690](#)
ACEs [2-87, 2-340](#)
ACLs
 deny [2-85](#)
 displaying [2-389](#)
 for non-IP protocols [2-250](#)
 IP [2-146](#)
 matching [2-270](#)
 on Layer 2 interfaces [2-146](#)
 permit [2-338](#)
action command [2-6](#)
address aliasing [2-321](#)
aggregate-port learner [2-326](#)
allowed VLANs [2-710](#)
apply command [2-749](#)
archive download-sw command [2-8](#)

archive tar command [2-11](#)
archive upload-sw command [2-14](#)
arp access-list command [2-16](#)
audience [xix](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-119](#)
autonegotiation of duplex mode [2-128](#)
auto qos voip command [2-18](#)

B

BackboneFast, for STP [2-623](#)
backup interfaces
 configuring [2-684](#)
 displaying [2-453](#)
boot (boot loader) command [A-2](#)
boot auto-download-sw command [2-23](#)
boot boothlpr command [2-25](#)
boot config-file command [2-26](#)
boot enable-break command [2-27](#)
boot helper command [2-28](#)
boot helper-config file command [2-29](#)
booting
 Cisco IOS image [2-32](#)
 displaying environment variables [2-398](#)
 interrupting [2-23, 2-27](#)
 manually [2-30](#)

boot loader

- accessing [A-1](#)

- booting

- Cisco IOS image [A-2](#)

- helper image [2-28](#)

- directories

- creating [A-14](#)

- displaying a list of [A-7](#)

- removing [A-18](#)

- displaying

- available commands [A-12](#)

- memory heap utilization [A-13](#)

- version [A-25](#)

- environment variables

- described [A-19](#)

- displaying settings [A-19](#)

- location of [A-20](#)

- setting [A-19](#)

- unsetting [A-23](#)

- files

- copying [A-5](#)

- deleting [A-6](#)

- displaying a list of [A-7](#)

- displaying the contents of [A-4, A-15, A-22](#)

- renaming [A-16](#)

- file system

- formatting [A-10](#)

- initializing flash [A-9](#)

- running a consistency check [A-11](#)

- prompt [A-1](#)

- resetting the system [A-17](#)

- boot manual command [2-30](#)

- boot private-config-file command [2-31](#)

- boot system command [2-32](#)

- BPDU filtering, for spanning tree [2-624, 2-659](#)

- BPDU guard, for spanning tree [2-626, 2-659](#)

- broadcast storm control [2-677](#)

C

- candidate switches

- See clusters

- cat (boot loader) command [A-4](#)

- caution, description **xx**

- CDP, enabling protocol tunneling for [2-229](#)

- channel-group command [2-33](#)

- channel-protocol command [2-36](#)

- Cisco Network Assistant

- See Network Assistant **xx**

- Cisco SoftPhone

- auto-QoS configuration [2-18](#)

- trusting packets sent from [2-312](#)

- class command [2-38](#)

- class-map command [2-40](#)

- class maps

- creating [2-40](#)

- defining the match criteria [2-272](#)

- displaying [2-403](#)

- class of service

- See CoS

- clear dot1x command [2-42](#)

- clear eap sessions command [2-43](#)

- clear errdisable interface [2-44](#)

- clear ip arp inspection log command [2-45](#)

- clear ip arp inspection statistics command [2-46](#)

- clear ipc command [2-49](#)

- clear ip dhcp snooping database command [2-47](#)

- clear l2protocol-tunnel counters command [2-50](#)

- clear lacp command [2-51](#)

- clear mac address-table command [2-52, 2-54](#)

- clear pagp command [2-55](#)

- clear port-security command [2-56](#)

- clear spanning-tree counters command [2-58](#)

- clear spanning-tree detected-protocols command [2-59](#)

- clear vmps statistics command [2-60](#)

- clear vtp counters command [2-61](#)

- cluster commander-address command [2-62](#)

- cluster discovery hop-count command [2-64](#)
 - cluster enable command [2-65](#)
 - cluster holdtime command [2-66](#)
 - cluster member command [2-67](#)
 - cluster outside-interface command [2-69](#)
 - cluster requirements [xxi](#)
 - cluster run command [2-70](#)
 - clusters
 - adding candidates [2-67](#)
 - binding to HSRP group [2-71](#)
 - building manually [2-67](#)
 - communicating with
 - devices outside the cluster [2-69](#)
 - members by using Telnet [2-367](#)
 - debug messages, display [B-5](#)
 - displaying
 - candidate switches [2-406](#)
 - debug messages [B-5](#)
 - member switches [2-408](#)
 - status [2-404](#)
 - hop-count limit for extended discovery [2-64](#)
 - HSRP standby groups [2-71](#)
 - redundancy [2-71](#)
 - SNMP trap [2-613](#)
 - cluster standby-group command [2-71](#)
 - cluster timer command [2-73](#)
 - command modes defined [1-1](#)
 - commands changed in Cisco IOS Release 12.2(20)SE [1-5](#)
 - command switch
 - See clusters
 - configuration, initial
 - See getting started guide and hardware installation guide
 - configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-26, 2-31](#)
 - configuring multiple interfaces [2-141](#)
 - config-vlan mode
 - commands [2-735](#)
 - description [1-4](#)
 - entering [2-734](#)
 - summary [1-2](#)
 - conventions
 - command [xx](#)
 - for examples [xx](#)
 - publication [xx](#)
 - text [xx](#)
 - copy (boot loader) command [A-5](#)
 - CoS
 - assigning default value to incoming packets [2-282](#)
 - assigning to Layer 2 protocol packets [2-232](#)
 - overriding the incoming value [2-282](#)
 - CoS-to-DSCP map [2-286](#)
 - CPU ASIC statistics, displaying [2-410](#)
 - crashinfo files [2-134](#)
-
- ## D
- debug auto qos command [B-2](#)
 - debug backup command [B-4](#)
 - debug cluster command [B-5](#)
 - debug dot1x command [B-7](#)
 - debug dtp command [B-9](#)
 - debug eap command [B-10](#)
 - debug etherchannel command [B-12](#)
 - debug ilpower command [B-13](#)
 - debug interface command [B-14](#)
 - debug ip dhcp snooping command [B-15](#)
 - debug ip igmp filter command [B-17](#)
 - debug ip igmp max-groups command [B-18](#)
 - debug ip igmp snooping command [B-19](#)
 - debug ip verify source packet command [B-16](#)
 - debug lacp command [B-20](#)
 - debug mac-notification command [B-21](#)
 - debug matm command [B-22](#)
 - debug matm move update command [B-23](#)

- debug monitor command [B-24](#)
- debug mvrdbg command [B-25](#)
- debug nvram command [B-26](#)
- debug pagp command [B-27](#)
- debug platform acl command [B-28](#)
- debug platform backup interface command [B-29](#)
- debug platform configuration command [B-37](#)
- debug platform cpu-queues command [B-30](#)
- debug platform device-manager command [B-32](#)
- debug platform dot1x command [B-33](#)
- debug platform etherchannel command [B-34](#)
- debug platform fallback-bridging command [B-35](#)
- debug platform forw-tcam command [B-36](#)
- debug platform ip arp inspection command [B-38](#)
- debug platform ip dhcp command [B-39](#)
- debug platform ip igmp snooping command [B-40](#)
- debug platform ip multicast command [B-42](#)
- debug platform ip unicast command [B-44](#)
- debug platform ip wccp command [B-46](#)
- debug platform led command [B-47](#)
- debug platform matm command [B-48](#)
- debug platform messaging application command [B-49](#)
- debug platform phy command [B-50](#)
- debug platform pm command [B-52](#)
- debug platform port-asic command [B-54](#)
- debug platform port-security command [B-55](#)
- debug platform qos-acl-tcam command [B-56](#)
- debug platform remote-commands command [B-57](#)
- debug platform resource-manager command [B-58](#)
- debug platform snmp command [B-59](#)
- debug platform span command [B-60](#)
- debug platform supervisor-asic command [B-61](#)
- debug platform sw-bridge command [B-62](#)
- debug platform tcam command [B-63](#)
- debug platform udd command [B-65](#)
- debug platform vlan command [B-66](#)
- debug pm command [B-67](#)
- debug port-security command [B-69](#)
- debug qos-manager command [B-70](#)
- debug spanning-tree backbonefast command [B-73](#)
- debug spanning-tree bpdu command [B-74](#)
- debug spanning-tree bpdu-opt command [B-75](#)
- debug spanning-tree command [B-71](#)
- debug spanning-tree mstp command [B-76](#)
- debug spanning-tree switch command [B-78](#)
- debug spanning-tree uplinkfast command [B-80](#)
- debug sw-vlan command [B-81](#)
- debug sw-vlan ifs command [B-83](#)
- debug sw-vlan notification command [B-84](#)
- debug sw-vlan vtp command [B-86](#)
- debug udd command [B-88](#)
- debug vqpc command [B-90](#)
- define interface-range command [2-75](#)
- delete (boot loader) command [A-6](#)
- delete command [2-77](#)
- deny (ARP access-list configuration) command [2-78](#)
- deny (IPv6) command [2-80](#)
- deny command [2-85](#)
- detect mechanism, causes [2-129](#)
- device manager requirements [xx](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-174](#)
 - enabling
 - on a VLAN [2-180](#)
 - option 82 [2-172, 2-174](#)
 - trust on an interface [2-178](#)
 - error recovery timer [2-131](#)
 - rate limiting [2-177](#)
- DHCP snooping binding database
 - binding file, configuring [2-170](#)
 - bindings
 - adding [2-168](#)
 - deleting [2-168](#)
 - displaying [2-472](#)
 - clearing database agent statistics [2-47](#)
 - database agent, configuring [2-170](#)

DHCP snooping binding database (continued)

- displaying
 - binding entries [2-472](#)
 - database agent status [2-474, 2-476](#)
- renewing [2-371](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-77](#)
- documentation, related [xx](#)
- document conventions [xx](#)
- domain name, VTP [2-759, 2-763](#)
- dot1x auth-fail max-attempts [2-95](#)
- dot1x auth-fail vlan [2-97](#)
- dot1x command [2-93](#)
- dot1x control-direction command [2-99](#)
- dot1x critical global configuration command [2-101](#)
- dot1x critical interface configuration command [2-103](#)
- dot1x default command [2-105](#)
- dot1x fallback command [2-106](#)
- dot1x guest-vlan command [2-107](#)
- dot1x host-mode command [2-110](#)
- dot1x initialize command [2-112](#)
- dot1x mac-auth-bypass command [2-113](#)
- dot1x max-reauth-req command [2-115](#)
- dot1x max-req command [2-116](#)
- dot1x multiple-hosts command [2-117](#)
- dot1x pae command [2-118](#)
- dot1x port-control command [2-119](#)
- dot1x re-authenticate command [2-121](#)
- dot1x re-authentication command [2-122](#)
- dot1x reauthentication command [2-123](#)
- dot1x timeout command [2-124](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-229](#)
- DSCP-to-CoS map [2-286](#)
- DSCP-to-DSCP-mutation map [2-286](#)
- DTP [2-691](#)
- DTP flap
 - error detection for [2-129](#)
 - error recovery timer [2-131](#)

- DTP negotiation [2-695](#)
- dual-purpose uplink ports
 - selecting the type [2-276](#)
- duplex command [2-127](#)
- dynamic-access ports
 - configuring [2-682](#)
 - restrictions [2-683](#)
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [2-154](#)
 - define [2-16](#)
 - deny packets [2-78](#)
 - display [2-393](#)
 - permit packets [2-330](#)
 - clear
 - log buffer [2-45](#)
 - statistics [2-46](#)
 - display
 - ARP ACLs [2-393](#)
 - configuration and operating state [2-467](#)
 - log buffer [2-467](#)
 - statistics [2-467](#)
 - trust state and rate limit [2-467](#)
 - enable per VLAN [2-164](#)
 - error detection for [2-129](#)
 - error recovery timer [2-131](#)
 - log buffer
 - clear [2-45](#)
 - configure [2-158](#)
 - display [2-467](#)
 - rate-limit incoming ARP packets [2-156](#)
 - statistics
 - clear [2-46](#)
 - display [2-467](#)
 - trusted interface state [2-160](#)
 - type of packet logged [2-165](#)
 - validation checks [2-162](#)
- dynamic auto VLAN membership mode [2-690](#)
- dynamic desirable VLAN membership mode [2-690](#)

Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [2-116](#)

response time before retransmitting [2-124](#)

encapsulation methods [2-710](#)

environment variables, displaying [2-398](#)

errdisable detect cause command [2-129](#)

errdisable recovery command [2-131](#)

error conditions, displaying [2-442](#)

error disable detection [2-129](#)

error-disabled interfaces, displaying [2-453](#)

EtherChannel

assigning Ethernet interface to channel group [2-33](#)

creating port-channel logical interface [2-139](#)

debug EtherChannel/PAgP, display [B-12](#)

debug platform-specific events, display [B-34](#)

displaying [2-446](#)

enabling Layer 2 protocol tunneling for

LACP [2-230](#)

PAgP [2-230](#)

UDLD [2-230](#)

interface information, displaying [2-453](#)

LACP

clearing channel-group information [2-51](#)

debug messages, display [B-20](#)

displaying [2-511](#)

modes [2-33](#)

port priority for hot-standby ports [2-233](#)

restricting a protocol [2-36](#)

system priority [2-235](#)

load-distribution methods [2-348](#)

EtherChannel (continued)

PAgP

aggregate-port learner [2-326](#)

clearing channel-group information [2-55](#)

debug messages, display [B-27](#)

displaying [2-565](#)

error detection for [2-129](#)

error recovery timer [2-131](#)

learn method [2-326](#)

modes [2-33](#)

physical-port learner [2-326](#)

priority of interface for transmitted traffic [2-328](#)

Ethernet controller, internal register display [2-412](#)

Ethernet statistics, collecting [2-373](#)

examples, conventions for [xx](#)

exception crashinfo command [2-134](#)

exit command [2-749](#)

extended discovery of candidate switches [2-64](#)

extended-range VLANs

and allowed VLAN list [2-710](#)

and pruning-eligible list [2-710](#)

configuring [2-734](#)

extended system ID for STP [2-632](#)

F

fallback profile command [2-135](#)

fallback profiles, displaying [2-449](#)

fan information, displaying [2-438](#)

file name, VTP [2-759](#)

files, deleting [2-77](#)

flash_init (boot loader) command [A-9](#)

Flex Links

configuring [2-684](#)

configuring preferred VLAN [2-686](#)

displaying [2-453](#)

flowcontrol command [2-137](#)

format (boot loader) command [A-10](#)

forwarding packets, with ACL matches [2-6](#)

forwarding results, display [C-6](#)
 frame forwarding information, displaying [C-6](#)
 front-end controller, counter and status information [C-8](#)
 fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-389](#)
 help (boot loader) command [A-12](#)
 hierarchical policy maps [2-346](#)
 hop-count limit for clusters [2-64](#)
 host connection, port configuration [2-689](#)
 host ports, private VLANs [2-693](#)
 Hot Standby Router Protocol
 See HSRP
 HSRP
 binding HSRP group to cluster [2-71](#)
 standby group [2-71](#)

I

IEEE 802.1Q trunk ports and native VLANs [2-751](#)
 IEEE 802.1Q tunnel ports
 configuring [2-690](#)
 displaying [2-427](#)
 limitations [2-691](#)
 IEEE 802.1x
 and switchport modes [2-691](#)
 violation error recovery [2-131](#)
 See also port-based authentication
 IEEE 802.1X Port Based Authentication
 enabling guest VLAN supplicant [2-96, 2-106, 2-136](#)

IGMP filters
 applying [2-183](#)
 debug messages, display [B-17](#)
 IGMP groups, setting maximum [2-185](#)
 IGMP maximum groups, debugging [B-18](#)
 IGMP profiles
 creating [2-187](#)
 displaying [2-479](#)
 IGMP snooping
 adding ports as a static member of a group [2-203](#)
 displaying [2-480, 2-485, 2-487](#)
 enabling [2-189](#)
 enabling the configurable-leave timer [2-191](#)
 enabling the Immediate-Leave feature [2-200](#)
 flooding query count [2-197](#)
 interface topology change notification behavior [2-199](#)
 multicast table [1-5, 2-483](#)
 querier [2-193](#)
 query solicitation [2-197](#)
 report suppression [2-195](#)
 switch topology change notification behavior [2-197](#)
 images
 See software images
 Immediate-Leave feature, MVR [2-323](#)
 immediate-leave processing [2-200](#)
 Immediate-Leave processing, IPv6 [2-225](#)
 initial configuration
 See getting started guide and hardware installation guide
 interface configuration mode [1-2, 1-4](#)
 interface port-channel command [2-139](#)
 interface range command [2-141](#)
 interface-range macros [2-75](#)
 interfaces
 assigning Ethernet interface to channel group [2-33](#)
 configuring [2-127](#)
 configuring multiple [2-141](#)
 creating port-channel logical [2-139](#)
 debug messages, display [B-14](#)

interfaces (continued)

- disabling [2-611](#)
- displaying the MAC address table [2-532](#)
- restarting [2-611](#)
- interface speed, configuring [2-669](#)
- interface vlan command [2-144](#)
- internal registers, displaying [2-412, 2-421](#)
- Internet Group Management Protocol
 - See IGMP
- invalid GBIC
 - error detection for [2-129](#)
 - error recovery timer [2-131](#)
- ip access-group command [2-146](#)
- ip address command [2-149](#)
- IP addresses, setting [2-149](#)
- IP address matching [2-270](#)
- ip admission command [2-151](#)
- ip admission name proxy http command [2-152](#)
- ip arp inspection filter vlan command [2-154](#)
- ip arp inspection limit command [2-156](#)
- ip arp inspection log-buffer command [2-158](#)
- ip arp inspection trust command [2-160](#)
- ip arp inspection validate command [2-162](#)
- ip arp inspection vlan command [2-164](#)
- ip arp inspection vlan logging command [2-165](#)
- IP DHCP snooping
 - See DHCP snooping
- ip dhcp snooping binding command [2-168](#)
- ip dhcp snooping command [2-167](#)
- ip dhcp snooping database command [2-170](#)
- ip dhcp snooping information option allow-untrusted command [2-174](#)
- ip dhcp snooping information option command [2-172](#)
- ip dhcp snooping information option format remote-id command [2-176](#)
- ip dhcp snooping limit rate command [2-177](#)
- ip dhcp snooping trust command [2-178](#)
- ip dhcp snooping verify command [2-179](#)
- ip dhcp snooping vlan command [2-180](#)
- ip dhcp snooping vlan information option format-type circuit-id string command [2-181](#)
- ip igmp filter command [2-183](#)
- ip igmp max-groups command [2-185](#)
- ip igmp profile command [2-187](#)
- ip igmp snooping command [2-189](#)
- ip igmp snooping last-member-query-interval command [2-191](#)
- ip igmp snooping querier command [2-193](#)
- ip igmp snooping report-suppression command [2-195](#)
- ip igmp snooping tcn command [2-197](#)
- ip igmp snooping tcn flood command [2-199](#)
- ip igmp snooping vlan immediate-leave command [2-200](#)
- ip igmp snooping vlan mrouter command [2-201](#)
- ip igmp snooping vlan static command [2-203](#)
- IP multicast addresses [2-320](#)
- IP phones
 - auto-QoS configuration [2-18](#)
 - trusting packets sent from [2-312](#)
- IP-precedence-to-DSCP map [2-286](#)
- ip source binding command [2-205](#)
- IP source guard
 - disabling [2-209](#)
 - displaying
 - binding entries [2-489](#)
 - configuration [2-490](#)
 - dynamic binding entries only [2-472](#)
 - enabling [2-209](#)
 - static IP source bindings [2-205](#)
- ip ssh command [2-207](#)
- IPv6 access list, deny conditions [2-80](#)
- ipv6 access-list command [2-211](#)
- ipv6 mld snooping command [2-214](#)
- ipv6 mld snooping last-listener-query count command [2-216](#)
- ipv6 mld snooping last-listener-query-interval command [2-218](#)
- ipv6 mld snooping listener-message-suppression command [2-220](#)
- ipv6 mld snooping robustness-variable command [2-221](#)

ipv6 mld snooping tcn command [2-223](#)
 ipv6 mld snooping vlan command [2-225](#)
 IPv6 SDM template [2-374](#)
 ipv6 traffic-filter command [2-227](#)
 ip verify source command [2-209](#)

J

jumbo frames
 See MTU

L

l2protocol-tunnel command [2-229](#)
 l2protocol-tunnel cos command [2-232](#)
 LACP
 See EtherChannel
 lacp port-priority command [2-233](#)
 lacp system-priority command [2-235](#)
 Layer 2 mode, enabling [2-680](#)
 Layer 2 protocol ports, displaying [2-508](#)
 Layer 2 protocol-tunnel
 error detection for [2-129](#)
 error recovery timer [2-131](#)
 Layer 2 protocol tunnel counters [2-50](#)
 Layer 2 protocol tunneling error recovery [2-230](#)
 Layer 2 traceroute
 IP addresses [2-725](#)
 MAC addresses [2-722](#)
 Layer 3 mode, enabling [2-680](#)
 line configuration mode [1-2, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-129](#)
 error recovery timer [2-131](#)
 link state group command [2-241](#)
 link state track command [2-243](#)

load-distribution methods for EtherChannel [2-348](#)
 location (global configuration) command [2-237](#)
 location (interface configuration) command [2-239](#)
 logging event command [2-244](#)
 logging event power-inline-status command [2-245](#)
 logging file command [2-246](#)
 logical interface [2-139](#)
 loopback error
 detection for [2-129](#)
 recovery timer [2-131](#)
 loop guard, for spanning tree [2-634, 2-638](#)

M

mac access-group command [2-248](#)
 MAC access-groups, displaying [2-520](#)
 MAC access list configuration mode [2-250](#)
 mac access-list extended command [2-250](#)
 MAC access lists [2-85](#)
 MAC addresses
 displaying
 aging time [2-526](#)
 all [2-524](#)
 dynamic [2-530](#)
 MAC address-table move updates [2-534](#)
 notification settings [2-536](#)
 number of addresses in a VLAN [2-528](#)
 per interface [2-532](#)
 per VLAN [2-540](#)
 static [2-538](#)
 static and dynamic entries [2-522](#)
 dynamic
 aging time [2-252](#)
 deleting [2-52](#)
 displaying [2-530](#)
 enabling MAC address notification [2-255](#)
 enabling MAC address-table move update [2-253](#)
 matching [2-270](#)

MAC addresses (continued)

static

adding and removing [2-257](#)displaying [2-538](#)dropping on an interface [2-258](#)tables [2-524](#)MAC address notification, debugging [B-21](#)mac address-table aging-time [2-248, 2-270](#)mac address-table aging-time command [2-252](#)mac address-table move update command [2-253](#)mac address-table notification command [2-255](#)mac address-table static command [2-257](#)mac address-table static drop command [2-258](#)macro apply command [2-260](#)macro description command [2-263](#)macro global command [2-264](#)macro global description command [2-267](#)macro name command [2-268](#)

macros

adding a description [2-263](#)adding a global description [2-267](#)applying [2-264](#)creating [2-268](#)displaying [2-567](#)interface range [2-75, 2-141](#)specifying parameter values [2-264](#)tracing [2-264](#)

manual

audience [xix](#)purpose of [xix](#)

maps

QoS

defining [2-286](#)displaying [2-550](#)

VLAN

creating [2-746](#)defining [2-270](#)displaying [2-600](#)match (access-map configuration) command [2-270](#)match (class-map configuration) command [2-272](#)

maximum transmission unit

See MTU

mdix auto command [2-274](#)media-type command [2-276](#)

member switches

See clusters

memory (boot loader) command [A-13](#)mkdir (boot loader) command [A-14](#)

MLD snooping

configuring [2-220, 2-221](#)configuring queries [2-216, 2-218](#)configuring topology change notification [2-223](#)displaying [2-498, 2-500, 2-502, 2-504](#)enabling [2-214](#)MLD snooping on a VLAN, enabling [2-225](#)mls qos aggregate-policer command [2-280](#)mls qos command [2-278](#)mls qos cos command [2-282](#)mls qos dscp-mutation command [2-284](#)mls qos map command [2-286](#)mls qos queue-set output buffers command [2-290](#)mls qos queue-set output threshold command [2-292](#)mls qos rewrite ip dscp command [2-294](#)mls qos srr-queue input bandwidth command [2-296](#)mls qos srr-queue input buffers command [2-298](#)mls qos srr-queue input cos-map command [2-300](#)mls qos srr-queue input dscp-map command [2-302](#)mls qos srr-queue input priority-queue command [2-304](#)mls qos srr-queue input threshold command [2-306](#)mls qos srr-queue output cos-map command [2-308](#)mls qos srr-queue output dscp-map command [2-310](#)mls qos trust command [2-312](#)mls qos vlan-based command [2-314](#)mode, MVR [2-320](#)Mode button, and password recovery [2-377](#)modes, commands [1-1](#)monitor session command [2-315](#)more (boot loader) command [A-15](#)

MSTP

- displaying [2-582](#)
- interoperability [2-59](#)
- link type [2-636](#)
- MST region
 - aborting changes [2-642](#)
 - applying changes [2-642](#)
 - configuration name [2-642](#)
 - configuration revision number [2-642](#)
 - current or pending display [2-642](#)
 - displaying [2-582](#)
 - MST configuration mode [2-642](#)
 - VLANs-to-instance mapping [2-642](#)
- path cost [2-644](#)
- protocol mode [2-640](#)
- restart protocol migration process [2-59](#)
- root port
 - loop guard [2-634](#)
 - preventing from becoming designated [2-634](#)
 - restricting which can be root [2-634](#)
 - root guard [2-634](#)
- root switch
 - affects of extended system ID [2-632](#)
 - hello-time [2-647, 2-655](#)
 - interval between BPDU messages [2-648](#)
 - interval between hello BPDU messages [2-647, 2-655](#)
 - max-age [2-648](#)
 - maximum hop count before discarding BPDU [2-649](#)
 - port priority for selection of [2-651](#)
 - primary or secondary [2-655](#)
 - switch priority [2-654](#)
- state changes
 - blocking to forwarding state [2-661](#)
 - enabling BPDU filtering [2-624, 2-659](#)
 - enabling BPDU guard [2-626, 2-659](#)
 - enabling Port Fast [2-659, 2-661](#)
 - forward-delay time [2-646](#)

MSTP (continued)

- state changes
 - length of listening and learning states [2-646](#)
 - rapid transition to forwarding [2-636](#)
 - shutting down Port Fast-enabled ports [2-659](#)
 - state information display [2-581](#)
- MTU
 - configuring size [2-719](#)
 - displaying global setting [2-589](#)
- Multicast Listener Discovery
 - See MLD
- multicast group address, MVR [2-323](#)
- multicast groups, MVR [2-321](#)
- Multicast Listener Discovery
 - See MLD
- multicast router learning method [2-201](#)
- multicast router ports, configuring [2-201](#)
- multicast router ports, IPv6 [2-225](#)
- multicast storm control [2-677](#)
- multicast VLAN, MVR [2-320](#)
- multicast VLAN registration
 - See MVR
- Multiple Spanning Tree Protocol
 - See MSTP
- MVR
 - and address aliasing [2-321](#)
 - configuring [2-320](#)
 - configuring interfaces [2-323](#)
 - debug messages, display [B-25](#)
 - displaying [2-559](#)
 - displaying interface information [2-561](#)
 - members, displaying [2-563](#)
- mvr (global configuration) command [2-320](#)
- mvr (interface configuration) command [2-323](#)
- mvr vlan group command [2-324](#)

N

- native VLANs [2-710](#)
- native VLAN tagging [2-751](#)
- Network Admission Control Software Configuration Guide [2-151, 2-153](#)
- Network Assistant requirements **xx**
- nonegotiate, speed [2-669](#)
- nonegotiating DTP messaging [2-695](#)
- non-IP protocols
 - denying [2-85](#)
 - forwarding [2-338](#)
- non-IP traffic access lists [2-250](#)
- non-IP traffic forwarding
 - denying [2-85](#)
 - permitting [2-338](#)
- normal-range VLANs [2-734, 2-740](#)
- note, description **xx**
- no vlan command [2-734, 2-744](#)

O

- online diagnostics
 - displaying
 - configured boot-up coverage level [2-425](#)
 - current scheduled tasks [2-425](#)
 - event logs [2-425](#)
 - supported test suites [2-425](#)
 - test ID [2-425](#)
 - test results [2-425](#)
 - test statistics [2-425](#)
 - global configuration mode
 - clearing health monitoring diagnostic test schedule [2-45](#)
 - clearing test-based testing schedule [2-90, 2-92](#)
 - setting health monitoring diagnostic testing [2-45](#)
 - setting test-based testing [2-90, 2-92](#)
 - setting up health monitoring diagnostic test schedule [2-45](#)
 - setting up test-based testing [2-90, 2-92](#)

online diagnostics (continued)

- health monitoring diagnostic tests, configuring [2-88](#)
- scheduled switchover
 - disabling [2-90, 2-92](#)
 - enabling [2-90, 2-92](#)
- scheduling
 - enabling [2-90, 2-92](#)
 - removing [2-90, 2-92](#)
- test interval, setting [2-90, 2-92](#)

P

- PAgP
 - See EtherChannel
- pagp learn-method command [2-326](#)
- pagp port-priority command [2-328](#)
- password, VTP [2-759, 2-763](#)
- password-recovery mechanism, enabling and disabling [2-377](#)
- permit (ARP access-list configuration) command [2-330](#)
- permit (IPv6) command [2-332](#)
- permit (MAC access-list configuration) command [2-338](#)
- per-VLAN spanning-tree plus
 - See STP
- physical-port learner [2-326](#)
- PID, displaying [2-466](#)
- PIM-DVMRP, as multicast router learning method [2-201](#)
- PoE
 - configuring the power budget [2-353](#)
 - configuring the power management mode [2-350](#)
 - displaying controller register values [2-419](#)
 - displaying power management information [2-575](#)
 - logging of status [2-245](#)
- police aggregate command [2-343](#)
- police command [2-341](#)
- policed-DSCP map [2-286](#)
- policy-map command [2-345](#)

- policy maps
 - applying to an interface [2-379, 2-384](#)
 - creating [2-345](#)
 - displaying [2-570](#)
 - hierarchical [2-346](#)
 - policers
 - displaying [2-543](#)
 - for a single class [2-341](#)
 - for multiple classes [2-280, 2-343](#)
 - policed-DSCP map [2-286](#)
 - traffic classification
 - defining the class [2-38](#)
 - defining trust states [2-727](#)
 - setting DSCP or IP precedence values [2-382](#)
- Port Aggregation Protocol
 - See EtherChannel
- port-based authentication
 - AAA method list [2-3](#)
 - debug messages, display [B-7](#)
 - enabling IEEE 802.1x
 - globally [2-93](#)
 - per interface [2-119](#)
 - guest VLAN [2-107](#)
 - host modes [2-110](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-112](#)
 - MAC authentication bypass [2-113](#)
 - manual control of authorization state [2-119](#)
 - PAE as authenticator [2-118](#)
 - periodic re-authentication
 - enabling [2-123](#)
 - time between attempts [2-124](#)
 - quiet period between failed authentication exchanges [2-124](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-121](#)
 - resetting configurable IEEE 802.1x parameters [2-105](#)
 - switch-to-authentication server retransmission time [2-124](#)
- port-based authentication (continued)**
 - switch-to-client frame-retransmission number [2-115 to 2-116](#)
 - switch-to-client retransmission time [2-124](#)
- port-channel load-balance command [2-348](#)
- Port Fast, for spanning tree [2-661](#)
- port ranges, defining [2-75](#)
- ports, debugging [B-67](#)
- ports, protected [2-708](#)
- port security
 - aging [2-702](#)
 - debug messages, display [B-69](#)
 - enabling [2-697](#)
 - violation error recovery [2-131](#)
- port trust states for QoS [2-312](#)
- port types, MVR [2-323](#)
- power information, displaying [2-438](#)
- power inline command [2-350](#)
- power inline consumption command [2-353](#)
- Power over Ethernet
 - See PoE
- priority-queue command [2-355](#)
- private-vlan command [2-357](#)
- private-vlan mapping command [2-360](#)
- private VLANs
 - association [2-706](#)
 - configuring [2-357](#)
 - configuring ports [2-693](#)
 - displaying [2-595](#)
 - host ports [2-693](#)
 - mapping
 - configuring [2-706](#)
 - displaying [2-453](#)
 - promiscuous ports [2-693](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-466](#)
- promiscuous ports, private VLANs [2-693](#)
- protected ports, displaying [2-459](#)

pruning

- VLANs [2-710](#)

VTP

- displaying interface information [2-453](#)
- enabling [2-759, 2-763](#)

pruning-eligible VLAN list [2-712](#)

PVST+

- See STP

Q

QoS

auto-QoS

- configuring [2-18](#)
- debug messages, display [1-5, B-2](#)
- displaying [2-394](#)

class maps

- creating [2-40](#)
- defining the match criteria [2-272](#)
- displaying [2-403](#)

defining the CoS value for an incoming packet [2-282](#)

displaying configuration information [2-394, 2-542](#)

DSCP transparency [2-294](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-284](#)
- defining DSCP-to-DSCP-mutation map [2-286](#)

egress queues

- allocating buffers [2-290](#)
- defining the CoS output queue threshold map [2-308](#)
- defining the DSCP output queue threshold map [2-310](#)
- displaying buffer allocations [2-546](#)
- displaying CoS output queue threshold map [2-550](#)
- displaying DSCP output queue threshold map [2-550](#)
- displaying queueing strategy [2-546](#)
- displaying queue-set settings [2-553](#)

QoS (continued)

egress queues

- enabling bandwidth shaping and scheduling [2-673](#)
- enabling bandwidth sharing and scheduling [2-675](#)
- limiting the maximum output on a port [2-671](#)
- mapping a port to a queue-set [2-362](#)
- mapping CoS values to a queue and threshold [2-308](#)
- mapping DSCP values to a queue and threshold [2-310](#)
- setting maximum and reserved memory allocations [2-292](#)
- setting WTD thresholds [2-292](#)

enabling [2-278](#)

ingress queues

- allocating buffers [2-298](#)
- assigning SRR scheduling weights [2-296](#)
- defining the CoS input queue threshold map [2-300](#)
- defining the DSCP input queue threshold map [2-302](#)
- displaying buffer allocations [2-546](#)
- displaying CoS input queue threshold map [2-550](#)
- displaying DSCP input queue threshold map [2-550](#)
- displaying queueing strategy [2-546](#)
- displaying settings for [2-544](#)
- enabling the priority queue [2-304](#)
- mapping CoS values to a queue and threshold [2-300](#)
- mapping DSCP values to a queue and threshold [2-302](#)
- setting WTD thresholds [2-306](#)

maps

- defining [2-286, 2-300, 2-302, 2-308, 2-310](#)
- displaying [2-550](#)

QoS (continued)

- policy maps
 - applying an aggregate policer [2-343](#)
 - applying to an interface [2-379, 2-384](#)
 - creating [2-345](#)
 - defining policers [2-280, 2-341](#)
 - displaying policers [2-543](#)
 - displaying policy maps [2-570](#)
 - hierarchical [2-346](#)
 - policed-DSCP map [2-286](#)
 - setting DSCP or IP precedence values [2-382](#)
 - traffic classifications [2-38](#)
 - trust states [2-727](#)
- port trust states [2-312](#)
- queues, enabling the expedite [2-355](#)
- statistics
 - in-profile and out-of-profile packets [2-546](#)
 - packets enqueued or dropped [2-546](#)
 - sent and received CoS values [2-546](#)
 - sent and received DSCP values [2-546](#)
- trusted boundary for IP phones [2-312](#)
- VLAN-based [2-314](#)
- quality of service
 - See QoS
- querytime, MVR [2-320](#)
- queue-set command [2-362](#)

R

- radius-server dead-criteria command [2-363](#)
- radius-server host command [2-365](#)
- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- rcommand command [2-367](#)
- re-authenticating IEEE 802.1x-enabled ports [2-121](#)
- re-authentication
 - periodic [2-123](#)
 - time between attempts [2-124](#)
- receiver ports, MVR [2-323](#)
- receiving flow-control packets [2-137](#)
- recovery mechanism
 - causes [2-131](#)
 - display [2-44, 2-400, 2-440, 2-444](#)
 - timer interval [2-132](#)
- redundancy for cluster switches [2-71](#)
- remote-span command [2-369](#)
- Remote Switched Port Analyzer
 - See RSPAN
- rename (boot loader) command [A-16](#)
- renew ip dhcp snooping database command [2-371](#)
- requirements
 - cluster [xxi](#)
 - device manager [xx](#)
 - Network Assistant [xx](#)
- reset (boot loader) command [A-17](#)
- reset command [2-749](#)
- resource templates, displaying [2-577](#)
- restricted VLAN
 - See dot1x auth-fail vlan
- rmdir (boot loader) command [A-18](#)
- rmon collection stats command [2-373](#)
- root guard, for spanning tree [2-634](#)
- routed ports
 - IP addresses on [2-150](#)
 - number supported [2-150](#)
- RSPAN
 - configuring [2-315](#)
 - displaying [2-556](#)
 - filter RSPAN traffic [2-315](#)
 - remote-span command [2-369](#)
 - sessions
 - add interfaces to [2-315](#)
 - displaying [2-556](#)
 - start new [2-315](#)

S

scheduled switchover

disabling [2-90, 2-92](#)

enabling [2-90, 2-92](#)

sdm prefer command [2-374](#)

SDM templates

allowed resources [2-375](#)

displaying [2-577](#)

dual IPv4 and IPv6 [2-374](#)

secure ports, limitations [2-699](#)

sending flow-control packets [2-137](#)

service password-recovery command [2-377](#)

service-policy command [2-379](#)

set (boot loader) command [A-19](#)

set command [2-382](#)

setup command [2-384](#)

setup express command [2-387](#)

show access-lists command [2-389](#)

show archive status command [2-392](#)

show arp access-list command [2-393](#)

show auto qos command [2-394](#)

show boot command [2-398](#)

show cable-diagnostics tdr command [2-400](#)

show changes command [2-749](#)

show class-map command [2-403](#)

show cluster candidates command [2-406](#)

show cluster command [2-404](#)

show cluster members command [2-408](#)

show controllers cpu-interface command [2-410](#)

show controllers ethernet-controller command [2-412](#)

show controllers power inline command [2-419](#)

show controllers team command [2-421](#)

show controller utilization command [2-423](#)

show current command [2-749](#)

show dot1q-tunnel command [2-427](#)

show dot1x command [2-428](#)

show dtp [2-433](#)

show eap command [2-435](#)

show env command [2-438](#)

show errdisable detect command [2-440](#)

show errdisable flap-values command [2-442](#)

show errdisable recovery command [2-444](#)

show etherchannel command [2-446](#)

show fallback profile command [2-449](#)

show flowcontrol command [2-451](#)

show interfaces command [2-453](#)

show interfaces counters command [2-463](#)

show inventory command [2-466](#)

show ip arp inspection command [2-467](#)

show ipc command [2-492](#)

show ip dhcp snooping binding command [2-472](#)

show ip dhcp snooping command [2-471](#)

show ip dhcp snooping database command [2-474, 2-476](#)

show ip igmp profile command [2-479](#)

show ip igmp snooping address command [2-500](#)

show ip igmp snooping command [2-480, 2-498](#)

show ip igmp snooping groups command [2-483](#)

show ip igmp snooping mrouter command [2-485, 2-502](#)

show ip igmp snooping querier command [2-487, 2-504](#)

show ip source binding command [2-489](#)

show ipv6 access-list command [2-496](#)

show ipv6 route updated [2-506](#)

show ip verify source command [2-490](#)

show l2protocol-tunnel command [2-508](#)

show lacp command [2-511](#)

show link state group command [2-518](#)

show location [2-515](#)

show mac access-group command [2-520](#)

show mac address-table address command [2-524](#)

show mac address-table aging time command [2-526](#)

show mac address-table command [2-522](#)

show mac address-table count command [2-528](#)

show mac address-table dynamic command [2-530](#)

show mac address-table interface command [2-532](#)

show mac address-table move update command [2-534](#)

show mac address-table notification command [2-54, 2-536, B-23](#)

- show mac address-table static command [2-538](#)
- show mac address-table vlan command [2-540](#)
- show mls qos aggregate-policer command [2-543](#)
- show mls qos command [2-542](#)
- show mls qos input-queue command [2-544](#)
- show mls qos interface command [2-546](#)
- show mls qos maps command [2-550](#)
- show mls qos queue-set command [2-553](#)
- show mls qos vlan command [2-555](#)
- show monitor command [2-556](#)
- show mvr command [2-559](#)
- show mvr interface command [2-561](#)
- show mvr members command [2-563](#)
- show pagp command [2-565](#)
- show parser macro command [2-567](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform frontend-controller command [C-8](#)
- show platform igmp snooping command [C-9](#)
- show platform ip multicast command [C-11](#)
- show platform ip unicast command [C-12](#)
- show platform ipv6 unicast command [C-17](#)
- show platform ip wccp command [C-16](#)
- show platform layer4op command [C-19](#)
- show platform mac-address-table command [C-20](#)
- show platform messaging command [C-21](#)
- show platform monitor command [C-22](#)
- show platform mvr table command [C-23](#)
- show platform pm command [C-24](#)
- show platform port-asic command [C-25](#)
- show platform port-security command [C-29](#)
- show platform qos command [C-30](#)
- show platform resource-manager command [C-31](#)
- show platform snmp counters command [C-33](#)
- show platform spanning-tree command [C-34](#)
- show platform stp-instance command [C-35](#)
- show platform team command [C-36](#)
- show platform vlan command [C-39](#)
- show policy-map command [2-570](#)
- show port security command [2-572](#)
- show power inline command [2-575](#)
- show proposed command [2-749](#)
- show sdm prefer command [2-577](#)
- show setup express command [2-580](#)
- show spanning-tree command [2-581](#)
- show storm-control command [2-587](#)
- show system mtu command [2-589](#)
- show trust command [2-727](#)
- show uddl command [2-590](#)
- show version command [2-593](#)
- show vlan access-map command [2-600](#)
- show vlan command [2-595](#)
- show vlan command, fields [2-597](#)
- show vlan filter command [2-601](#)
- show vmps command [2-603](#)
- show vtp command [2-606](#)
- shutdown command [2-611](#)
- shutdown threshold, Layer 2 protocol tunneling [2-229](#)
- shutdown vlan command [2-612](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-617](#)
- SNMP informs, enabling the sending of [2-613](#)
- snmp-server enable traps command [2-613](#)
- snmp-server host command [2-617](#)
- snmp trap mac-notification command [2-621](#)
- SNMP traps
 - enabling MAC address notification trap [2-621](#)
 - enabling the MAC address notification feature [2-255](#)
 - enabling the sending of [2-613](#)
- SoftPhone
 - See Cisco SoftPhone

- software images
 - deleting [2-77](#)
 - downloading [2-8](#)
 - upgrading [2-8](#)
 - uploading [2-14](#)
- software version, displaying [2-593](#)
- source ports, MVR [2-323](#)
- SPAN
 - configuring [2-315](#)
 - debug messages, display [B-24](#)
 - displaying [2-556](#)
 - filter SPAN traffic [2-315](#)
 - sessions
 - add interfaces to [2-315](#)
 - displaying [2-556](#)
 - start new [2-315](#)
- spanning-tree backbonefast command [2-623](#)
- spanning-tree bpdufilter command [2-624](#)
- spanning-tree bpduguard command [2-626](#)
- spanning-tree cost command [2-628](#)
- spanning-tree etherchannel command [2-630](#)
- spanning-tree extend system-id command [2-632](#)
- spanning-tree guard command [2-634](#)
- spanning-tree link-type command [2-636](#)
- spanning-tree loopguard default command [2-638](#)
- spanning-tree mode command [2-640](#)
- spanning-tree mst configuration command [2-642](#)
- spanning-tree mst cost command [2-644](#)
- spanning-tree mst forward-time command [2-646](#)
- spanning-tree mst hello-time command [2-647](#)
- spanning-tree mst max-age command [2-648](#)
- spanning-tree mst max-hops command [2-649](#)
- spanning-tree mst port-priority command [2-651](#)
- spanning-tree mst pre-standard command [2-653](#)
- spanning-tree mst priority command [2-654](#)
- spanning-tree mst root command [2-655](#)
- spanning-tree portfast (global configuration) command [2-659](#)
- spanning-tree portfast (interface configuration) command [2-661](#)
- spanning-tree port-priority command [2-657](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-663](#)
- spanning-tree uplinkfast command [2-664](#)
- spanning-tree vlan command [2-666](#)
- speed command [2-669](#)
- srr-queue bandwidth limit command [2-671](#)
- srr-queue bandwidth share command [2-675](#)
- SSH, configuring version [2-207](#)
- static-access ports, configuring [2-682](#)
- statistics, Ethernet group [2-373](#)
- sticky learning, enabling [2-697](#)
- storm-control command [2-677](#)
- STP
 - BackboneFast [2-623](#)
 - counters, clearing [2-58](#)
 - debug messages, display
 - BackboneFast events [B-73](#)
 - MSTP [B-76](#)
 - optimized BPDUs handling [B-75](#)
 - spanning-tree activity [B-71](#)
 - switch shim [B-78](#)
 - transmitted and received BPDUs [B-74](#)
 - UplinkFast [B-80](#)
 - detection of indirect link failures [2-623](#)
 - enabling protocol tunneling for [2-229](#)
 - EtherChannel misconfiguration [2-630](#)
 - extended system ID [2-632](#)
 - path cost [2-628](#)
 - protocol modes [2-640](#)
 - root port
 - accelerating choice of new [2-664](#)
 - loop guard [2-634](#)
 - preventing from becoming designated [2-634](#)

STP (continued)

- root port
 - restricting which can be root [2-634](#)
 - root guard [2-634](#)
 - UplinkFast [2-664](#)
- root switch
 - affects of extended system ID [2-632, 2-667](#)
 - hello-time [2-666](#)
 - interval between BPDU messages [2-666](#)
 - interval between hello BPDU messages [2-666](#)
 - max-age [2-666](#)
 - port priority for selection of [2-657](#)
 - primary or secondary [2-666](#)
 - switch priority [2-666](#)
- state changes
 - blocking to forwarding state [2-661](#)
 - enabling BPDU filtering [2-624, 2-659](#)
 - enabling BPDU guard [2-626, 2-659](#)
 - enabling Port Fast [2-659, 2-661](#)
 - enabling timer to recover from error state [2-131](#)
 - forward-delay time [2-666](#)
 - length of listening and learning states [2-666](#)
 - shutting down Port Fast-enabled ports [2-659](#)
- state information display [2-581](#)
- VLAN options [2-654, 2-666](#)

SVIs, creating [2-144](#)

Switched Port Analyzer

- See SPAN

switching characteristics

- modifying [2-680](#)
- returning to interfaces [2-680](#)

switchport access command [2-682](#)

switchport backup interface command [2-684](#)

switchport block command [2-688](#)

switchport command [2-680](#)

switchport host command [2-689](#)

switchport mode command [2-690](#)

switchport mode private-vlan command [2-693](#)

switchport nonegotiate command [2-695](#)

switchport port-security aging command [2-702](#)

switchport port-security command [2-697](#)

switchport priority extend command [2-704](#)

switchport private-vlan command [2-706](#)

switchport protected command [2-708](#)

switchports, displaying [2-453](#)

switchport trunk command [2-710](#)

switchport voice vlan command [2-714, 2-715](#)

system env temperature threshold yellow command [2-717](#)

system message logging [2-245](#)

system message logging, save message to flash [2-246](#)

system mtu command [2-719](#)

system resource templates [2-374](#)

T

tar files, creating, listing, and extracting [2-11](#)

TDR, running [2-721](#)

Telnet, using to communicate to cluster switches [2-367](#)

temperature information, displaying [2-438](#)

templates, system resources [2-374](#)

test cable-diagnostics tdr command [2-721](#)

traceroute mac command [2-722](#)

traceroute mac ip command [2-725](#)

trunking, VLAN mode [2-690](#)

trunk mode [2-690](#)

trunk ports [2-690](#)

trunks, to non-DTP device [2-691](#)

trusted boundary for QoS [2-312](#)

trusted port states for QoS [2-312](#)

tunnel ports, Layer 2 protocol, displaying [2-508](#)

type (boot loader) command [A-22](#)

U**UDLD**

- aggressive mode [2-729, 2-731](#)
- debug messages, display [B-88](#)
- enable globally [2-729](#)
- enable per interface [2-731](#)
- error recovery timer [2-131](#)
- message timer [2-729](#)
- normal mode [2-729, 2-731](#)
- reset a shutdown interface [2-733](#)
- status [2-590](#)

udld command [2-729](#)

udld port command [2-731](#)

udld reset command [2-733](#)

unicast storm control [2-677](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-688](#)

unknown unicast traffic, preventing [2-688](#)

unset (boot loader) command [A-23](#)

upgrading

software images

downloading [2-8](#)

monitoring status of [2-392](#)

upgrading information

See release notes

UplinkFast, for STP [2-664](#)

user EXEC mode [1-2, 1-3](#)

VLAN access maps

actions [2-6](#)

displaying [2-600](#)

VLAN-based QoS [2-314](#)

VLAN configuration

rules [2-737, 2-742](#)

saving [2-734, 2-744](#)

VLAN configuration mode

commands

VLAN [2-740](#)

VTP [2-763](#)

description [1-5](#)

entering [2-748](#)

summary [1-2](#)

vlan database command [2-748](#)

vlan dot1q tag native command [2-751](#)

vlan filter command [2-752](#)

VLAN filters, displaying [2-601](#)

VLAN ID range [2-734, 2-740](#)

VLAN maps

applying [2-752](#)

creating [2-746](#)

defining [2-270](#)

displaying [2-600](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-734](#)

configuring [2-734, 2-740](#)

debug messages, display

ISL [B-84](#)

VLAN IOS file system error tests [B-83](#)

VLAN manager activity [B-81](#)

VTP [B-86](#)

displaying configurations [2-595](#)

enabling guest VLAN supplicant [2-96, 2-106, 2-136](#)

extended-range [2-734](#)

V

version (boot loader) command [A-25](#)

vlan (global configuration) command [2-734](#)

vlan (VLAN configuration) command [2-740](#)

vlan access-map command [2-746](#)

VLAN access map configuration mode [2-746](#)

VLANs (continued)

- MAC addresses
 - displaying [2-540](#)
 - number of [2-528](#)
- media types [2-737, 2-742](#)
- normal-range [2-734, 2-740](#)
- private [2-693](#)
 - configuring [2-357](#)
 - displaying [2-595](#)
 - See also private VLANs
- restarting [2-612](#)
- saving the configuration [2-734](#)
- shutting down [2-612](#)
- SNMP traps for VTP [2-615, 2-618](#)
- suspending [2-612](#)
- variables [2-740](#)

VLAN Trunking Protocol

See VTP

VMPS

- configuring servers [2-757](#)
- displaying [2-603](#)
- error recovery timer [2-132](#)
- reconfirming dynamic VLAN assignments [2-754](#)
- vmmps reconfirm (global configuration) command [2-755](#)
- vmmps reconfirm (privileged EXEC) command [2-754](#)
- vmmps retry command [2-756](#)
- vmmps server command [2-757](#)

voice VLAN

- configuring [2-714, 2-715](#)
- setting port priority [2-704](#)

VQP

- and dynamic-access ports [2-683](#)
- clearing client statistics [2-60](#)
- displaying information [2-603](#)
- per-server retry count [2-756](#)
- reconfirmation interval [2-755](#)
- reconfirming dynamic VLAN assignments [2-754](#)

VTP

- changing characteristics [2-759](#)
- clearing pruning counters [2-61](#)
- configuring
 - domain name [2-759, 2-763](#)
 - file name [2-759](#)
 - mode [2-759, 2-763](#)
 - password [2-759, 2-763](#)
- counters display fields [2-607](#)
- displaying information [2-606](#)
- enabling
 - pruning [2-759, 2-763](#)
 - tunneling for [2-229](#)
 - Version 2 [2-759, 2-763](#)
- mode [2-759, 2-763](#)
- pruning [2-759, 2-763](#)
- saving the configuration [2-734, 2-744](#)
- statistics [2-606](#)
- status [2-606](#)
- status display fields [2-609](#)
- vtp (global configuration) command [2-759](#)
- vtp (VLAN configuration) command [2-763](#)

