



Cisco Lightweight Access Point Commands

- [ap auth-list ap-policy](#), on page 5
- [ap bridging](#), on page 6
- [ap capwap backup](#), on page 6
- [ap capwap multicast](#), on page 7
- [ap capwap retransmit](#), on page 8
- [ap capwap timers](#), on page 9
- [ap cdp](#), on page 11
- [ap core-dump](#), on page 12
- [ap country](#), on page 12
- [ap crash-file](#), on page 13
- [ap dot11 24ghz preamble](#), on page 14
- [ap dot11 24ghz dot11g](#), on page 14
- [ap dot11 5ghz channelswitch mode](#), on page 15
- [ap dot11 5ghz dot11ac frame-burst automatic](#), on page 16
- [ap dot11 5ghz power-constraint](#), on page 16
- [ap dot11 beaconperiod](#), on page 17
- [ap dot11 beamforming](#), on page 18
- [ap dot11 cac media-stream](#), on page 19
- [ap dot11 cac multimedia](#), on page 21
- [ap dot11 cac video](#), on page 22
- [ap dot11 cac voice](#), on page 23
- [ap dot11 cleanair](#), on page 26
- [ap dot11 cleanair alarm air-quality](#), on page 27
- [ap dot11 cleanair alarm device](#), on page 28
- [ap dot11 cleanair device](#), on page 29
- [ap dot11 dot11n](#), on page 30
- [ap dot11 dtpc](#), on page 33
- [ap dot11 edca-parameters](#), on page 34
- [ap dot11 rrm group-mode](#), on page 35
- [ap dot11 rrm channel cleanair-event](#), on page 36
- [ap dot11 l2roam rf-params](#), on page 37
- [ap dot11 media-stream](#), on page 38
- [ap dot11 rrm ccx location-measurement](#), on page 39

- [ap dot11 rrm channel dca](#), on page 40
- [ap dot11 rrm group-member](#), on page 41
- [ap dot11 rrm logging](#), on page 42
- [ap dot11 rrm monitor](#), on page 44
- [ap dot11 rrm ndp-type](#), on page 45
- [ap dot11 5ghz dot11ac frame-burst](#), on page 46
- [ap dot1x max-sessions](#), on page 46
- [ap dot1x username](#), on page 47
- [ap ethernet duplex](#), on page 48
- [ap group](#), on page 49
- [ap image](#), on page 49
- [ap ipv6 tcp adjust-mss](#), on page 50
- [ap led](#), on page 51
- [ap link-encryption](#), on page 51
- [ap link-latency](#), on page 52
- [ap mgmtuser username](#), on page 52
- [ap name ap-groupname](#), on page 54
- [ap name antenna band mode](#), on page 54
- [ap name bhrate](#), on page 55
- [ap name bridgegroupname](#), on page 55
- [ap name bridging](#), on page 56
- [ap name cdp interface](#), on page 57
- [ap name console-redirect](#), on page 58
- [ap name capwap retransmit](#), on page 58
- [ap name command](#), on page 59
- [ap name core-dump](#), on page 59
- [ap name country](#), on page 60
- [ap name crash-file](#), on page 61
- [ap name dot11 24ghz rrm coverage](#), on page 62
- [ap name dot11 49ghz rrm profile](#), on page 63
- [ap name dot11 5ghz rrm channel](#), on page 64
- [ap name dot11 antenna](#), on page 65
- [ap name dot11 antenna extantgain](#), on page 66
- [ap name dot11 cleanair](#), on page 67
- [ap name dot11 dot11n antenna](#), on page 68
- [ap name dot11 dual-band cleanair](#), on page 68
- [ap name dot11 dual-band shutdown](#), on page 69
- [ap name dot11 rrm ccx](#), on page 69
- [ap name dot11 rrm profile](#), on page 70
- [ap name dot11 txpower](#), on page 72
- [ap name dot1x-user](#), on page 73
- [ap name ethernet](#), on page 74
- [ap name ethernet duplex](#), on page 75
- [ap name key-zeroize](#), on page 75
- [ap name image](#), on page 76
- [ap name ipv6 tcp adjust-mss](#), on page 77

- ap name jumbo mtu, on page 77
- ap name lan, on page 78
- ap name led, on page 78
- ap name link-encryption, on page 79
- ap name link-latency, on page 80
- ap name location, on page 80
- ap name mgmtuser, on page 81
- ap name mode, on page 82
- ap name monitor-mode, on page 83
- ap name monitor-mode dot11b, on page 84
- ap name name, on page 84
- ap name no dot11 shutdown, on page 85
- ap name power, on page 86
- ap name shutdown, on page 86
- ap name slot shutdown, on page 87
- ap name sniff, on page 87
- ap name ssh, on page 88
- ap name telnet, on page 89
- ap name power injector, on page 89
- ap name power pre-standard, on page 90
- ap name reset-button, on page 91
- ap name reset, on page 91
- ap name slot, on page 92
- ap name static-ip, on page 93
- ap name stats-timer, on page 94
- ap name syslog host, on page 94
- ap name syslog level, on page 95
- ap name tcp-adjust-mss, on page 96
- ap name tftp-downgrade, on page 97
- ap power injector, on page 97
- ap power pre-standard, on page 98
- ap reporting-period, on page 98
- ap reset-button, on page 99
- service-policy type control subscriber, on page 99
- ap static-ip, on page 100
- ap syslog, on page 101
- **ap name no controller** , on page 102
- ap tcp-adjust-mss size, on page 102
- ap tftp-downgrade, on page 103
- config wireless wps rogue client mse, on page 104
- clear ap name tsm dot11 all, on page 104
- clear ap config, on page 105
- clear ap eventlog-all, on page 105
- clear ap join statistics, on page 106
- clear ap mac-address, on page 106
- clear ap name wlan statistics, on page 107

- [debug ap mac-address](#), on page 107
- [show ap cac voice](#), on page 108
- [show ap capwap](#), on page 109
- [show ap cdp](#), on page 110
- [show ap config dot11](#), on page 111
- [show ap config dot11 dual-band summary](#), on page 112
- [show ap config fnf](#), on page 112
- [show ap config](#), on page 112
- [show ap crash-file](#), on page 113
- [show ap data-plane](#), on page 113
- [show ap dot11 l2roam](#), on page 114
- [show ap dot11 cleanair air-quality](#), on page 115
- [show ap dot11 cleanair config](#), on page 115
- [show ap dot11 cleanair summary](#), on page 117
- [show ap dot11](#), on page 117
- [show ap env summary](#), on page 123
- [show ap ethernet statistics](#), on page 123
- [show ap gps-location summary](#), on page 123
- [show ap groups](#), on page 124
- [show ap groups extended](#), on page 124
- [show ap image](#), on page 125
- [show ap is-supported](#), on page 125
- [show ap join stats summary](#), on page 126
- [show ap link-encryption](#), on page 126
- [show ap mac-address](#), on page 127
- [show ap monitor-mode summary](#), on page 128
- [show ap name auto-rf](#), on page 129
- [show ap name bhmode](#), on page 131
- [show ap name bhrate](#), on page 131
- [show ap name cac voice](#), on page 132
- [show ap name config fnf](#), on page 132
- [show ap name dot11 call-control](#), on page 133
- [show ap name cable-modem](#), on page 133
- [show ap name capwap retransmit](#), on page 134
- [show ap name ccx rm](#), on page 134
- [show ap name cdp](#), on page 135
- [show ap name channel](#), on page 136
- [show ap name config](#), on page 136
- [show ap name config dot11](#), on page 138
- [show ap name config slot](#), on page 141
- [show ap name core-dump](#), on page 145
- [show ap name data-plane](#), on page 145
- [show ap name dot11](#), on page 146
- [show ap name dot11 cleanair](#), on page 148
- [show ap name env](#), on page 149
- [show ap name ethernet statistics](#), on page 150

- [show ap name eventlog](#), on page 150
- [show ap gps-location summary](#), on page 151
- [show ap name image](#), on page 151
- [show ap name inventory](#), on page 152
- [show ap name lan port](#), on page 153
- [show ap name link-encryption](#), on page 153
- [show ap name service-policy](#), on page 154
- [show ap name tcp-adjust-mss](#), on page 154
- [show ap name wlan](#), on page 155
- [show ap name wlandot11 service policy](#), on page 156
- [show ap slots](#), on page 157
- [show ap summary](#), on page 157
- [show ap tcp-adjust-mss](#), on page 158
- [show ap universal summary](#), on page 158
- [show ap uptime](#), on page 159
- [show wireless ap summary](#), on page 159
- [show wireless client ap](#), on page 160
- [test ap name](#), on page 160
- [test capwap ap name](#), on page 161
- [trapflags ap](#), on page 162

ap auth-list ap-policy

To configure authorization policy for all Cisco lightweight access points joined to the device, use the **ap auth-list ap-policy** command. To disable authorization policy for all Cisco lightweight access points joined to the device, use the **no** form of this command.

```
ap auth-list ap-policy {authorize-ap | lsc | mic | ssc}
no ap auth-list ap-policy {authorize-ap | lsc | mic | ssc}
```

Syntax Description	authorize-ap	Enables the authorization policy.
	lsc	Enables access points with locally significant certificates to connect.
	mic	Enables access points with manufacture-installed certificates to connect.
	ssc	Enables access points with self signed certificates to connect.
Command Default	None	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable the access point authorization policy:

```
Device(config)# ap auth-list ap-policy authorize-ap
```

This example shows how to enable access points with locally significant certificates to connect:

```
Device(config)# ap auth-list ap-policy lsc
```

This example shows how to enable access points with manufacture-installed certificates to connect:

```
Device(config)# ap auth-list ap-policy mic
```

This example shows how to enable access points with self-signed certificates to connect:

```
Device(config)# ap auth-list ap-policy ssc
```

ap bridging

To enable Ethernet to 802.11 bridging on a Cisco lightweight access point, use the **ap bridging** command. To disable Ethernet to 802.11 bridging on a Cisco lightweight access point, use the **no** form of this command.

```
ap bridging
no ap bridging
```

Syntax Description	This command has no keywords and arguments.	
Command Default	None	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable Ethernet-to-Ethernet bridging on a lightweight access point:

```
Device(config)# ap bridging
```

This example shows how to disable Ethernet-to-Ethernet bridging on a lightweight access point:

```
Device(config)# no ap bridging
```

ap capwap backup

To configure a primary or secondary backup device for all access points that are joined to a specific device, use the **ap capwap backup** command.

```
ap capwap backup {primary primary-controller-name primary-controller-ip-address | secondary
secondary-controller-name secondary-controller-ip-address}
```

Syntax Description	primary	Specifies the primary backup device.
	<i>primary-controller-name</i>	Primary backup device name.
	<i>primary-controller-ip-address</i>	Primary backup device IP address.
	secondary	Specifies the secondary backup device.
	<i>secondary-controller-name</i>	Secondary backup device name.
	<i>secondary-controller-ip-address</i>	Secondary backup device IP address.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE

This example shows how to configure a primary backup device for all access points that are joined to a specific device:

```
Device(config)# ap capwap backup primary controller1 192.0.2.51
```

This example shows how to configure a secondary backup device for all access points that are joined to a specific device:

```
Device(config)# ap capwap backup secondary controller1 192.0.2.52
```

Related Topics

[ap capwap multicast](#), on page 7

[ap capwap retransmit](#), on page 8

[ap capwap timers](#), on page 9

ap capwap multicast

To configure the multicast address used by all access points to receive multicast traffic when multicast forwarding is enabled and to configure the outer Quality of Service (QoS) level of those multicast packets sent to the access points, use the **ap capwap multicast** command.

```
ap capwap multicast {multicast-ip-address | service-policy output pollicymap-name}
```

Syntax Description	<i>multicast-ip-address</i>	Multicast IP address.
	service-policy	Specifies the tunnel QoS policy for multicast access points.
	output	Assigns a policy map name to the output.

ap capwap retransmit

polycymap-name Service policy map name.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure a multicast address used by all access points to receive multicast traffic when multicast forwarding is enabled:

```
Device(config)# ap capwap multicast 239.2.2.2
```

This example shows how to configure a tunnel multicast QoS service policy for multicast access points:

```
Device(config)# ap capwap multicast service-policy output tunnmulpolicy
```

Related Topics

[ap capwap retransmit](#), on page 8

[ap capwap timers](#), on page 9

[ap capwap backup](#), on page 6

ap capwap retransmit

To configure Control and Provisioning of Wireless Access Points (CAPWAP) control packet retransmit count and control packet retransmit interval, use the **ap capwap retransmit** command.

```
ap capwap retransmit {count retransmit-count | interval retransmit-interval}
```

Syntax Description		
count <i>retransmit-count</i>	Specifies the access point CAPWAP control packet retransmit count.	
	Note	The count is from 3 to 8 seconds.
interval <i>retransmit-interval</i>	Specifies the access point CAPWAP control packet retransmit interval.	
	Note	The interval is from 2 to 5 seconds.

Command Default None

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure the CAPWAP control packet retransmit count for an access point:

```
Device# ap capwap retransmit count 3
```

This example shows how to configure the CAPWAP control packet retransmit interval for an access point:

```
Device# ap capwap retransmit interval 5
```

ap capwap timers

To configure advanced timer settings, use the **ap capwap timers** command.

```
ap capwap timers {discovery-timeout seconds | fast-heartbeat-timeout local seconds |  
heartbeat-timeout seconds | primary-discovery-timeout seconds | primed-join-timeout seconds}
```

Syntax Description		
discovery-timeout	Specifies the Cisco lightweight access point discovery timeout.	
	Note	The Cisco lightweight access point discovery timeout is how long a Cisco device waits for an unresponsive access point to answer before considering that the access point failed to respond.
<i>seconds</i>	Cisco lightweight access point discovery timeout from 1 to 10 seconds.	
	Note	The default is 10 seconds.
fast-heartbeat-timeout local	Enables the fast heartbeat timer that reduces the amount of time it takes to detect a device failure for local or all access points.	
<i>seconds</i>	Small heartbeat interval (from 1 to 10 seconds) that reduces the amount of time it takes to detect a device failure.	
	Note	The fast heartbeat time-out interval is disabled by default.
heartbeat-timeout	Specifies the Cisco lightweight access point heartbeat timeout.	
	Note	The Cisco lightweight access point heartbeat timeout controls how often the Cisco lightweight access point sends a heartbeat keep-alive signal to the Cisco device. This value should be at least three times larger than the fast heartbeat timer.
<i>seconds</i>	Cisco lightweight access point heartbeat timeout value from 1 to 30 seconds.	
	Note	The default is 30 seconds.

primary-discovery-timeout Specifies the access point primary discovery request timer. The timer determines the amount of time taken by an access point to discover the configured primary, secondary, or tertiary device.

seconds Access point primary discovery request timer from 30 to 3600 seconds.

Note The default is 120 seconds.

primed-join-timeout Specifies the authentication timeout. Determines the time taken by an access point to determine that the primary device has become unresponsive. The access point makes no further attempts to join the device until the connection to the device is restored.

seconds Authentication response timeout from 120 to 43200 seconds.

Note The default is 120 seconds.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure an access point discovery timeout with the timeout value of 7:

```
Device(config)# ap capwap timers discovery-timeout 7
```

This example shows how to enable the fast heartbeat interval for all access points:

```
Device(config)# ap capwap timers fast-heartbeat-timeout 6
```

This example shows how to configure an access point heartbeat timeout to 20:

```
Device(config)# ap capwap timers heartbeat-timeout 20
```

This example shows how to configure the access point primary discovery request timer to 1200 seconds:

```
Device(config)# ap capwap timers primary-discovery-timeout 1200
```

This example shows how to configure the authentication timeout to 360 seconds:

```
Device(config)# ap capwap timers primed-join-timeout 360
```

Related Topics

- [ap capwap multicast](#), on page 7
- [ap capwap retransmit](#), on page 8
- [ap capwap backup](#), on page 6

ap cdp

To enable the Cisco Discovery Protocol (CDP) on a Cisco lightweight access point, use the **ap cdp** command. To disable the Cisco Discovery Protocol (CDP) on a Cisco lightweight access point, use the **no** form of this command.

```
ap cdp [interface {ethernet ethernet-id | radio radio-id}]
no ap cdp [interface {ethernet ethernet-id | radio radio-id}]
```

Syntax Description

interface (Optional) Specifies CDP in a specific interface.

ethernet Specifies CDP for an Ethernet interface.

ethernet-id Ethernet interface number from 0 to 3.

radio Specifies CDP for a radio interface.

radio-id Radio number from 0 to 3.

Command Default

Disabled on all access points.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

The **no ap cdp** command disables CDP on all access points that are joined to the device and all access points that join in the future. CDP remains disabled on both current and future access points even after the device or access point reboots. To enable CDP, enter the **ap cdp** command.



Note

CDP over Ethernet/radio interfaces is available only when CDP is enabled. After you enable CDP on all access points joined to the device, you can disable and then reenable CDP on individual access points using the **ap name Cisco-AP cdp** command. After you disable CDP on all access points joined to the device, you can enable and then disable CDP on individual access points.

This example shows how to enable CDP on all access points:

```
Device(config)# ap cdp
```

This example shows how to enable CDP for Ethernet interface number 0 on all access points:

```
Device(config)# ap cdp ethernet 0
```

Related Topics

[show ap cdp](#), on page 110

ap core-dump

To enable a Cisco lightweight access point's memory core dump settings, use the **ap core-dump** command. To disable a Cisco lightweight access point's memory core dump settings, use the **no** form of this command.

```
ap core-dump tftp-ip-addr filename {compress | uncompress}
no ap core-dump
```

Syntax Description	<i>tftp-ip-addr</i>	IP address of the TFTP server to which the access point sends core dump files.
	<i>filename</i>	Name that the access point uses to label the core file.
	compress	Compresses the core dump file.
	uncompress	Uncompresses the core dump file.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines The access point must be able to reach the TFTP server.

This example shows how to configure and compress the core dump file:

```
Device(config)# ap core-dump 192.0.2.51 log compress
```

Related Topics

[ap crash-file](#), on page 13

[ap name crash-file](#), on page 61

ap country

To configure one or more country codes for a device, use the **ap country** command.

```
ap country country-code
```

Syntax Description	<i>country-code</i>	Two-letter or three-letter country code or several country codes separated by a comma.
---------------------------	---------------------	--

Command Default US (country code of the United States of America).

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

The Cisco device must be installed by a network administrator or qualified IT professional and the installer must select the proper country code. Following installation, access to the unit should be password protected by the installer to maintain compliance with regulatory requirements and to ensure proper unit functionality. See the related product guide for the most recent country codes and regulatory domains.

This example shows how to configure country codes on the device to IN (India) and FR (France):

```
Device(config)# ap country IN,FR
```

Related Topics

[ap name country](#), on page 60

ap crash-file

To delete crash and radio core dump files, use the **ap crash-file** command.

```
ap crash-file {clear-all | delete filename}
```

Syntax Description	
clear-all	Deletes all the crash and radio core dump files.
delete	Deletes a single crash and radio core dump file.
<i>filename</i>	Name of the file to delete.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to delete all crash files:

```
Device# ap crash-file clear-all
```

This example shows how to delete crash file 1:

```
Device# ap crash-file delete crash-file-1
```

Related Topics

[ap name crash-file](#), on page 61

[ap name core-dump](#), on page 59

ap dot11 24ghz preamble

To enable only a short preamble as defined in subclause 17.2.2.2 , use the **ap dot11 24ghz preamble** command. To enable long preambles (for backward compatibility with pre-802.11b devices, if these devices are still present in your network) or short preambles (recommended unless legacy pre-802.11b devices are present in the network), use the **no** form of this command.

```
ap dot11 24ghz preamble short
no ap dot11 24ghz preamble short
```

Syntax Description **short** Specifies the short 802.11b preamble.

Command Default short preambles

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines



Note You must reboot the Cisco device (reset system) with the **Save** command before you can use the **ap dot11 24ghz preamble** command.

This parameter may need to be set to long to optimize this Cisco device for some legacy clients, including SpectraLink NetLink telephones.

This command can be used any time that the CLI interface is active.

This example shows how to enable both long and short preambles:

```
Device(config)# no ap dot11 24ghz preamble short
```

ap dot11 24ghz dot11g

To enable the Cisco wireless LAN solution 802.11g network, use the **ap dot11 24ghz dot11g** command. To disable the Cisco wireless LAN solution 802.11g network, use the **no** form of this command.

```
ap dot11 24ghz dot11g
no ap dot11 24ghz dot11g
```

Syntax Description This command has no keywords and arguments.

Command Default

Enabled

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

Before you enter the **ap dot11 24ghz dot11g** command, disable the 802.11 Cisco radio with the **ap dot11 24ghz shutdown** command.

After you configure the support for the 802.11g network, use the **no ap dot11 24ghz shutdown** command to enable the 802.11 2.4 Ghz radio.

This example shows how to enable the 802.11g network:

```
Device(config)# ap dot11 24ghz dot11g
```

Related Topics

[show ap dot11](#), on page 117

ap dot11 5ghz channelswitch mode

To configure a 802.11h channel switch announcement, use the **ap dot11 5ghz channelswitch mode** command. To disable a 802.11h channel switch announcement, use the **no** form of this command.

ap dot11 5ghz channelswitch mode *value*
no ap dot11 5ghz channelswitch mode

Syntax Description

value 802.11h channel announcement value.

Note You can specify anyone of the following two values:

- 0—Indicates that the channel switch announcement is disabled.
- 1—Indicates that the channel switch announcement is enabled.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable the 802.11h switch announcement:

```
Device(config)# ap dot11 5ghz channelswitch mode 1
```

ap dot11 5ghz dot11ac frame-burst automatic

To configure a 802.11ac frame-burst, use the **ap dot11 5ghz dot11ac frame-burst automatic** command. To disable a 802.11ac frame-burst, use the **no** form of this command.

```
ap dot11 5ghz dot11ac frame-burst automatic
no ap dot11 5ghz dot11ac frame-burst automatic
```

Syntax Description	This command has no keywords and arguments.				
Command Default	None				
Command Modes	Global configuration				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.2SE</td> <td>Cisco IOS XE 3.3SE This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE This command was introduced.
Release	Modification				
Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE This command was introduced.				
Usage Guidelines	Before you enter the ap dot11 5ghz dot11ac frame-burst automatic command, disable the 802.11 Cisco radio with the ap dot11 5ghz shutdown command.				

Example

This example shows how to enable 802.11ac frame-burst

```
Device(config)# ap dot11 5ghz dot11ac frame-burst automatic
```

ap dot11 5ghz power-constraint

To configure the 802.11h power constraint value, use the **ap dot11 5ghz power-constraint** command. To remove the 802.11h power constraint value, use the **no** form of this command.

```
ap dot11 5ghz power-constraint value
no ap dot11 5ghz power-constraint
```

Syntax Description	<p><i>value</i> 802.11h power constraint value.</p> <p>Note The range is from 0 to 30 dBm.</p>
Command Default	None

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure the 802.11h power constraint to 5 dBm:

```
Device(config)# ap dot11 5ghz power-constraint 5
```

ap dot11 beaconperiod

To change the beacon period globally for 2.4 GHz or 5 GHz bands, use the **ap dot11 beaconperiod** command.



Note Disable the 802.11 network before using this command. See the “Usage Guidelines” section.

ap dot11 {24ghz | 5ghz} beaconperiod time

Syntax Description		
24ghz	Specifies the settings for 2.4 GHz band.	
5ghz	Specifies the settings for 5 GHz band.	
beaconperiod	Specifies the beacon for a network globally.	
<i>time</i>	Beacon interval in time units (TU). One TU is 1024 microseconds. The range is from 20 to 1000.	

Command Default	None
------------------------	------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines In Cisco wireless LAN 802.11 networks, all Cisco lightweight access point wireless LANs broadcast a beacon at regular intervals. This beacon notifies clients that the wireless service is available and allows the clients to synchronize with the lightweight access point.

Before you change the beacon period, make sure that you have disabled the 802.11 network by using the **ap dot11 {24ghz | 5ghz} shutdown** command. After changing the beacon period, enable the 802.11 network by using the **no ap dot11 {24ghz | 5ghz} shutdown** command.

This example shows how to configure the 5 GHz band for a beacon period of 120 time units:

```
Device(config)# ap dot11 5ghz beaconperiod 120
```

ap dot11 beamforming

To enable beamforming on the network or on individual radios, use the **ap dot11 beamforming** command.

ap dot11 {24ghz | 5ghz} **beamforming**

Syntax Description		
24ghz	Specifies the 2.4 GHz band.	
5ghz	Specifies the 5 GHz band.	
beamforming	Specifies beamforming on the network.	

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines When you enable beamforming on the network, it is automatically enabled for all the radios applicable to that network type.

Follow these guidelines for using beamforming:

- Beamforming is supported for legacy orthogonal frequency-division multiplexing (OFDM) data rates (6, 9, 12, 18, 24, 36, 48, and 54 Mbps).



Note Beamforming is not supported for Direct Sequence Spread Spectrum data rates (1 and 2 Mbps) and Complementary-Code Key (CCK) data rates (5.5 and 11 Mbps).

- Beamforming is supported only on access points that support 802.11n (AP1260, AP3500, and AP3600).
- Two or more antennas must be enabled for transmission.
- All three antennas must be enabled for reception.
- OFDM rates must be enabled.

If the antenna configuration restricts operation to a single transmit antenna, or if OFDM rates are disabled, beamforming is not used.

This example shows how to enable beamforming on the 5 GHz band:

```
Device(config)# ap dot11 5ghz beamforming
```

ap dot11 cac media-stream

To configure media stream Call Admission Control (CAC) voice and video quality parameters for 2.4 GHz and 5 GHz bands, use the **ap dot11 cac media-stream** command.

```
ap dot11 {24ghz | 5ghz} cac media-stream multicast-direct {max-retry-percent retryPercent |
min-client-rate {eighteen | eleven | fiftyFour | fivePointFive | fortyEight | nine | oneFifty |
oneFortyFourPointFour | oneThirty | oneThirtyFive | seventyTwoPointTwo | six | sixtyFive | thirtySix |
threeHundred | twelve | twentyFour | two | twoSeventy}}
```

Syntax	Description
24ghz	Specifies the 2.4 GHz band.
5ghz	Specifies the 5 GHz band.
multicast-direct	Specifies CAC parameters for multicast-direct media streams.
max-retry-percent	Specifies the percentage of maximum retries that are allowed for multicast-direct media streams.
<i>retryPercent</i>	Percentage of maximum retries that are allowed for multicast-direct media streams. Note The range is from 0 to 100.
min-client-rate	Specifies the minimum transmission data rate to the client for multicast-direct media streams (rate at which the client must transmit in order to receive multicast-direct unicast streams). If the transmission rate is below this rate, either the video will not start or the client may be classified as a bad client. The bad client video can be demoted for better effort QoS or subject to denial.

min-client-rate You can choose the following rates:

- **eighteen**
 - **eleven**
 - **fiftyFour**
 - **fivePointFive**
 - **fortyEight**
 - **nine**
 - **one**
 - **oneFifty**
 - **oneFortyFourPointFour**
 - **oneThirty**
 - **oneThirtyFive**
 - **seventyTwoPointTwo**
 - **six**
 - **sixtyFive**
 - **thirtySix**
 - **threeHundred**
 - **twelve**
 - **twentyFour**
 - **two**
 - **twoSeventy**
-

Command Default

The default value for the maximum retry percent is 80. If it exceeds 80, either the video will not start or the client might be classified as a bad client. The bad client video will be demoted for better effort QoS or is subject to denial.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

CAC commands require that the WLAN you are planning to modify is configured for the Wi-Fi Multimedia (WMM) protocol.

Before you can configure CAC parameters on a network, you must complete the following prerequisites:

- Disable all WLANs with WMM enabled by entering the **wlan wlan_name shutdown** command.

- Disable the radio network you want to configure by entering the **ap dot11 {24ghz | 5ghz} shutdown** command.
- Save the new configuration.
- Enable voice or video CAC for the network you want to configure by entering the **ap dot11 {24ghz | 5ghz} cac voice acm** or **ap dot11 {24ghz | 5ghz} cac video acm** commands.

This example shows how to configure the maximum retry percent for multicast-direct media streams as 90 on a 802.11a network:

```
Device(config)# ap dot11 5ghz cac media-stream multicast max-retry-percent 90
```

Related Topics

[ap dot11 cac multimedia](#), on page 21

[ap dot11 cac video](#), on page 22

[ap dot11 cac voice](#), on page 23

ap dot11 cac multimedia

To configure multimedia Call Admission Control (CAC) voice and video quality parameters for 2.4 GHz and 5 GHz bands, use the **ap dot11 cac multimedia** command.

```
ap dot11 {24ghz | 5ghz} cac multimedia max-bandwidth bandwidth
```

Syntax Description	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	max-bandwidth	Specifies the percentage of maximum bandwidth allocated to Wi-Fi Multimedia (WMM) clients for voice and video applications on the 2.4 GHz or 5 GHz band.
	<i>bandwidth</i>	Percentage of the maximum bandwidth allocated to WMM clients for voice and video applications on the 802.11a or 802.11b/g network. Once the client reaches the specified value, the access point rejects new multimedia flows this radio band. The range is from 5 to 85%.

Command Default The default value is 75%.

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines CAC commands require that the WLAN you are planning to modify is configured for the Wi-Fi Multimedia (WMM) protocol.

Before you can configure CAC parameters on a network, you must complete the following prerequisites:

- Disable all WLANs with WMM enabled by entering the **wlan wlan_name shutdown** command.
- Disable the radio network you want to configure by entering the **ap dot11 {24ghz | 5ghz} shutdown** command.
- Save the new configuration.
- Enable voice or video CAC for the network you want to configure by entering the **ap dot11 {24ghz | 5ghz} cac voice acm** or **ap dot11 {24ghz | 5ghz} cac video acm** commands.

This example shows how to configure the percentage of the maximum bandwidth allocated to WMM clients for voice and video applications on the 5 GHz band:

```
Device(config)# ap dot11 5ghz cac multimedia max-bandwidth 5
```

Related Topics

- [ap dot11 cac media-stream](#), on page 19
- [ap dot11 cac video](#), on page 22
- [ap dot11 cac voice](#), on page 23

ap dot11 cac video

To configure Call Admission Control (CAC) parameters for the video category, use the **ap dot11 cac video** command. To disable the CAC parameters for video category, use the **no** form of this command.

```
ap dot11 {24ghz | 5ghz} cac video {acm | max-bandwidth value | roam-bandwidth value}
no ap dot11 {24ghz | 5ghz} cac video {acm | max-bandwidth value | roam-bandwidth value}
```

Syntax Description		
	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	acm	Enables bandwidth-based video CAC for the 2.4 GHz or 5 GHz band. Note To disable bandwidth-based video CAC for the 2.4 GHz or 5 GHz band, use the no ap dot11 {24ghz 5ghz} cac video acm command.
	max-bandwidth	Sets the percentage of the maximum bandwidth allocated to clients for video applications on the 2.4 GHz or 5 GHz band.
	<i>value</i>	Bandwidth percentage value from 5 to 85%.
	roam-bandwidth	Sets the percentage of the CAC maximum allocated bandwidth reserved for roaming video clients on the 2.4 GHz or 5 GHz band.
	<i>value</i>	Bandwidth percentage value from 0 to 85%.
Command Default	None	
Command Modes	Global configuration	

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines CAC commands require that the WLAN you are planning to modify is configured for the Wi-Fi Multimedia (WMM) protocol.

Before you can configure CAC parameters on a network, you must complete the following prerequisites:

- Disable all WLANs with WMM enabled by entering the **wlan wlan_name shutdown** command.
- Disable the radio network you want to configure by entering the **ap dot11 {24ghz | 5ghz} shutdown** command.
- Save the new configuration.
- Enable voice or video CAC for the network you want to configure by entering the **ap dot11 {24ghz | 5ghz} cac voice acm** or **ap dot11 {24ghz | 5ghz} cac video acm** command.

This example shows how to enable the bandwidth-based CAC:

```
Device(config)# ap dot11 24ghz cac video acm
```

This example shows how to specify the percentage of the maximum allocated bandwidth for video applications on the selected radio band:

```
Device(config)# ap dot11 24ghz cac video max-bandwidth 50
```

This example shows how to configure the percentage of the maximum allocated bandwidth reserved for roaming video clients on the selected radio band:

```
Device(config)# ap dot11 24ghz cac video roam-bandwidth 10
```

Related Topics

[ap dot11 cac media-stream](#), on page 19

[ap dot11 cac multimedia](#), on page 21

[ap dot11 cac voice](#), on page 23

ap dot11 cac voice

To configure Call Admission Control (CAC) parameters for the voice category, use the **ap dot11 cac voice** command.

```
ap dot11 {24ghz | 5ghz} cac voice {acm | load-based | max-bandwidth value | roam-bandwidth value | sip [bandwidth bw] sample-interval value | stream-size x max-streams y | tspec-inactivity-timeout {enable | ignore}}
```

Syntax Description	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.

acm	Enables bandwidth-based voice CAC for the 2.4 GHz or 5 GHz band. Note To disable bandwidth-based voice CAC for the 2.4 GHz or 5 GHz band, use the no ap dot11 {24ghz 5ghz} cac voice acm command.
load-based	Enable load-based CAC on voice access category. Note To disable load-based CAC on voice access category for the 2.4 GHz or 5 GHz band, use the no ap dot11 {24ghz 5ghz} cac voice load-based command.
max-bandwidth	Sets the percentage of the maximum bandwidth allocated to clients for voice applications on the 2.4 GHz or 5 GHz band.
<i>value</i>	Bandwidth percentage value from 5 to 85%.
roam-bandwidth	Sets the percentage of the CAC maximum allocated bandwidth reserved for roaming voice clients on the 2.4 GHz or 5 GHz band.
<i>value</i>	Bandwidth percentage value from 0 to 85%.
sip	Specifies the CAC codec name and sample interval as parameters and calculates the required bandwidth per call for the 802.11 networks.
bandwidth	(Optional) Specifies bandwidth for a SIP-based call.
<i>bw</i>	Bandwidth in kbps. The following bandwidth values specify parameters for the SIP codecs: <ul style="list-style-type: none"> • 64kbps—Specifies CAC parameters for the SIP G711 codec. • 8kbps—Specifies CAC parameters for the SIP G729 codec. Note The default value is 64 Kbps.
sample-interval	Specifies the packetization interval for SIP codec.
<i>value</i>	Packetization interval in msec. The sample interval for SIP codec value is 20 seconds.
stream-size	Specifies the number of aggregated voice Wi-Fi Multimedia (WMM) traffic specification (TSPEC) streams at a specified data rate for the 2.4 GHz or 5 GHz band.

<i>x</i>	Stream size. The range of the stream size is from 84000 to 92100.
max-streams	Specifies the maximum number of streams per TSPEC.
<i>y</i>	Number (1 to 5) of voice streams.
	Note The default number of streams is 2 and the mean data rate of a stream is 84 kbps.
tspec-inactivity-timeout	Specifies TSPEC inactivity timeout processing mode.
	Note Use this keyword to process or ignore the Wi-Fi Multimedia (WMM) traffic specifications (TSPEC) inactivity timeout received from an access point. When the inactivity timeout is ignored, a client TSPEC is not deleted even if the access point reports an inactivity timeout for that client.
enable	Processes the TSPEC inactivity timeout messages.
ignore	Ignores the TSPEC inactivity timeout messages.
	Note The default is ignore (disabled).

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines CAC commands require that the WLAN you are planning to modify is configured for the Wi-Fi Multimedia (WMM) protocol and the quality of service (QoS) level be set to Platinum.

Before you can configure CAC parameters on a network, you must complete the following prerequisites:

- Disable all WLANs with WMM enabled by entering the **wlan wlan_name shutdown** command.
- Disable the radio network you want to configure by entering the **ap dot11 {24ghz | 5ghz} shutdown** command.
- Save the new configuration.
- Enable voice or video CAC for the network you want to configure by entering the **ap dot11 {24ghz | 5ghz} cac voice acm** or **ap dot11 {24ghz | 5ghz} cac video acm** commands.

This example shows how to enable the bandwidth-based CAC:

```
Device(config)# ap dot11 24ghz cac voice acm
```

This example shows how to enable the load-based CAC on the voice access category:

```
Device(config)# ap dot11 24ghz cac voice load-based
```

This example shows how to specify the percentage of the maximum allocated bandwidth for voice applications on the selected radio band:

```
Device(config)# ap dot11 24ghz cac voice max-bandwidth 50
```

This example shows how to configure the percentage of the maximum allocated bandwidth reserved for roaming voice clients on the selected radio band:

```
Device(config)# ap dot11 24ghz cac voice roam-bandwidth 10
```

This example shows how to configure the bandwidth and voice packetization interval for the G729 SIP codec on a 2.4 GHz band:

```
Device(config)# ap dot11 24ghz cac voice sip bandwidth 8 sample-interval 40
```

This example shows how to configure the number of aggregated voice traffic specifications stream with a stream size of 85000 and with a maximum of 5 streams:

```
Device(config)# ap dot11 24ghz cac voice stream-size 85000 max-streams 5
```

This example shows how to enable the voice TSPEC inactivity timeout messages received from an access point:

```
Device(config)# ap dot11 24ghz cac voice tspec-inactivity-timeout enable
```

Related Topics

[ap dot11 cac media-stream](#), on page 19

[ap dot11 cac multimedia](#), on page 21

[ap dot11 cac video](#), on page 22

ap dot11 cleanair

To configure CleanAir on 802.11 networks, use the **ap dot11 cleanair** command. To disable CleanAir on 802.11 networks, use the **no** form of this command.

```
ap dot11 {24ghz | 5ghz} cleanair
no ap dot11 {24ghz | 5ghz} cleanair
```

Syntax Description	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	cleanair	Specifies CleanAir on the 2.4 GHz or 5 GHz band.
Command Default	Disabled	

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable the CleanAir settings on the 2.4 GHz band:

```
Device(config)# ap dot11 24ghz cleanair
```

Related Topics

- [ap dot11 cleanair alarm air-quality](#), on page 27
- [ap dot11 cleanair alarm device](#), on page 28
- [ap dot11 cleanair device](#), on page 29
- [ap name dot11 dual-band cleanair](#), on page 68
- [ap name dot11 dual-band shutdown](#), on page 69

ap dot11 cleanair alarm air-quality

To configure CleanAir air-quality alarms for Cisco lightweight access points, use the **ap dot11 cleanair alarm air-quality** command.

```
ap dot11 {24ghz | 5ghz} cleanair alarm air-quality [threshold value]
```

Syntax Description	
24ghz	Specifies the 2.4 GHz band.
5ghz	Specifies the 5 GHz band.
threshold	Specifies the air-quality alarm threshold.
<i>value</i>	Air quality alarm threshold (1 is bad air quality, and 100 is good air quality).

Command Default	Disabled
------------------------	----------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure the CleanAir 2.4 GHz air-quality threshold to 90:

```
Device(config)# ap dot11 24ghz cleanair air-quality threshold 90
```

Related Topics

- [ap dot11 cleanair](#), on page 26

[ap dot11 cleanair alarm device](#), on page 28

[ap dot11 cleanair device](#), on page 29

ap dot11 cleanair alarm device

To configure the CleanAir interference devices alarms on the 2.4 GHz or 5 GHz bands, use the **ap dot11 cleanair alarm device** command. To disable the CleanAir interference devices alarms on the 802.11 networks, use the **no** form of this command.

```
ap dot11 {24ghz | 5ghz} cleanair alarm device {all | bt-discovery | bt-link | canopy | cont-tx | dect-like
| fh | inv | jammer | mw-oven | nonstd | superag | tdd-tx | video | wimax-fixed | wimax-mobile | xbox |
zigbee}
no ap dot11 {24ghz | 5ghz} cleanair
```

Syntax Description

24ghz	Specifies the 2.4 GHz band.
5ghz	Specifies the 5 GHz band.
all	Specifies all the device types at once.
bt-discovery	Specifies the Bluetooth device in discovery mode.
bt-link	Specifies the Bluetooth active link.
canopy	Specifies the Canopy devices.
cont-tx	Specifies the continuous transmitter.
dect-like	Specifies a Digital Enhanced Cordless Communication (DECT)-like phone.
fh	Specifies the frequency hopping devices.
inv	Specifies the devices using spectrally inverted Wi-Fi signals.
jammer	Specifies the jammer.
mw-oven	Specifies the microwave oven devices.
nonstd	Specifies the devices using nonstandard Wi-Fi channels.
superag	Specifies 802.11 SuperAG devices.
tdd-tx	Specifies the TDD transmitter.
video	Specifies video cameras.
wimax-fixed	Specifies a WiMax fixed device.
wimax-mobile	Specifies a WiMax mobile device.
xbox	Specifies the Xbox device.
zigbee	Specifies the ZigBee device.

Command Default Disabled

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to disable alarms for ZigBee interference detection:

```
Device(config)# no ap dot11 24ghz cleanair alarm device zigbee
```

This example shows how to enable alarms for detection of Bluetooth links:

```
Device(config)# ap dot11 24ghz cleanair alarm device bt-link
```

Related Topics

[ap dot11 cleanair alarm air-quality](#), on page 27

[ap dot11 cleanair](#), on page 26

[ap dot11 cleanair device](#), on page 29

ap dot11 cleanair device

To configure CleanAir interference device types, use the **ap dot11 cleanair device** command.

```
ap dot11 24ghz cleanair device [{all | bt-discovery | bt-link | canopy | cont-tx | dect-like | fh | inv | jammer | mw-oven | nonstd | superag | tdd-tx | video | wimax-fixed | wimax-mobile | xbox | zigbee}]
```

Syntax Description		
all		Specifies all device types.
device		Specifies the CleanAir interference device type.
bt-discovery		Specifies the Bluetooth device in discovery mode.
bt-link		Specifies the Bluetooth active link.
canopy		Specifies the Canopy devices.
cont-tx		Specifies the continuous transmitter.
dect-like		Specifies a Digital Enhanced Cordless Communication (DECT)-like phone.
fh		Specifies the 802.11 frequency hopping devices.
inv		Specifies the devices using spectrally inverted Wi-Fi signals.
jammer		Specifies the jammer.

mw-oven	Specifies the microwave oven devices.
nonstd	Specifies the devices using nonstandard Wi-Fi channels.
superag	Specifies 802.11 SuperAG devices.
tdd-tx	Specifies the TDD transmitter.
video	Specifies video cameras.
wimax-fixed	Specifies a WiMax fixed device.
wimax-mobile	Specifies a WiMax mobile device.
xbox	Specifies the Xbox device.
zigbee	Specifies the ZigBee device.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure the device to monitor ZigBee interferences:

```
Device(config)# ap dot11 24ghz cleanair device zigbee
```

Related Topics

[ap dot11 cleanair alarm air-quality](#), on page 27

[ap dot11 cleanair](#), on page 26

[ap dot11 cleanair alarm device](#), on page 28

ap dot11 dot11n

To configure settings for an 802.11n network, use the **ap dot11 dot11n** command.

```
ap dot11 {24ghz | 5ghz} dot11n {a-mpdu tx priority {priority_value all} | scheduler timeout rt scheduler_value} | a-msdu tx priority {priority_value all} | guard-interval {any long} | mcs tx rate | rifs rx}
```

Syntax Description

24ghz	Specifies the 2.4-GHz band.
5ghz	Specifies the 5-GHz band.
dot11n	Enables 802.11n support.

a-mpdu tx priority	Specifies the traffic that is associated with the priority level that uses Aggregated MAC Protocol Data Unit (A-MPDU) transmission.
<i>priority_value</i>	Aggregated MAC protocol data unit priority level from 0 to 7.
all	Specifies all of the priority levels at once.
a-msdu tx priority	Specifies the traffic that is associated with the priority level that uses Aggregated MAC Service Data Unit (A-MSDU) transmission.
<i>priority_value</i>	Aggregated MAC protocol data unit priority level from 0 to 7.
all	Specifies all of the priority levels at once.
scheduler timeout rt	Configures the 802.11n A-MPDU transmit aggregation scheduler timeout value in milliseconds.
<i>scheduler_value</i>	The 802.11n A-MPDU transmit aggregation scheduler timeout value from 1 to 10000 milliseconds.
guard-interval	Specifies the guard interval.
any	Enables either a short or a long guard interval.
long	Enables only a long guard interval.
mcs tx rate	Specifies the modulation and coding scheme (MCS) rates at which data can be transmitted between the access point and the client.
<i>rate</i>	Specifies the modulation and coding scheme data rates. Note The range is from 0 to 23.
rifs rx	Specifies the Reduced Interframe Space (RIFS) between data frames.

Command Default By default, priority 0 is enabled.

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
	Cisco IOS XE 3.3SE	The scheduler, timeout, and rt keywords were added.

Usage Guidelines

Aggregation is the process of grouping packet data frames together rather than transmitting them separately. The two aggregation methods available are:

- A-MPDU—This aggregation is performed in the software.
- A-MSDU—This aggregation is performed in the hardware

Aggregated MAC Protocol Data Unit priority levels assigned per traffic type are as follows:

- 0—Best effort
- 1—Background
- 2—Spare
- 3—Excellent effort
- 4—Controlled load
- 5—Video, less than 100-ms latency and jitter
- 6—Voice, less than 10-ms latency and jitter
- 7—Network control
- all—Configure all of the priority levels at once.



Note Configure the priority levels to match the aggregation method used by the clients.

This example shows how to enable 802.11n support on a 2.4-GHz band:

```
Device(config)# ap dot11 24ghz dot11n
```

This example shows how to configure all the priority levels at once so that the traffic that is associated with the priority level uses A-MSDU transmission:

```
Device(config)# ap dot11 24ghz dot11n a-msdu tx priority all
```

This example shows how to enable only long guard intervals:

```
Device(config)# ap dot11 24ghz dot11n guard-interval long
```

This example shows how to specify MCS rates:

```
Device(config)# ap dot11 24ghz dot11n mcs tx 5
```

This example shows how to enable RIFS:

```
Device(config)# ap dot11 24ghz dot11n rifs rx
```


Related Topics

[ap dot11 dtpc](#), on page 33

ap dot11 dtpc

To configure Dynamic Transmit Power Control (DTPC) settings, Cisco Client eXtension (CCX) version 5 expedited bandwidth request feature, and the fragmentation threshold on an 802.11 network, use the **ap dot11 dtpc** command.

```
ap dot11 {24ghz | 5ghz} {dtpc | exp-bwreq | fragmentation threshold}
```

Syntax Description		
24ghz	Specifies the 2.4 GHz band.	
5ghz	Specifies the 5 GHz band.	
dtpc	Specifies Dynamic Transport Power Control (DTPC) settings.	Note This option is enabled by default.
exp-bwreq	Specifies Cisco Client eXtension (CCX) version 5 expedited bandwidth request feature.	Note The expedited bandwidth request feature is disabled by default.
fragmentation threshold	Specifies the fragmentation threshold.	Note This option can only be used when the network is disabled using the ap dot11 {24ghz 5ghz} shutdown command.
<i>threshold</i>	Threshold. The range is from 256 to 2346 bytes (inclusive).	

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines When the CCX version 5 expedited bandwidth request feature is enabled, the device configures all joining access points for this feature.

This example shows how to enable DTPC for the 5 GHz band:

```
Device(config)# ap dot11 5ghz dtpc
```

This example shows how to enable the CCX expedited bandwidth settings:

```
Device(config)# ap dot11 5ghz exp-bwreq
```

This example shows how to configure the fragmentation threshold on the 5 GHz band with the threshold number of 1500 bytes:

```
Device (config)# ap dot11 5ghz fragmentation 1500
```

Related Topics

[ap dot11 beaconperiod](#), on page 17

ap dot11 edca-parameters

To enable a specific enhanced distributed channel access (EDCA) profile on the 2.4 GHz or 5 GHz bands, use the **ap dot11 edca-parameters** command. To disable an EDCA profile on the 2.4 GHz or 5 GHz bands, use the **no** form of this command.

```
ap dot11 {24ghz | 5ghz} edca-parameters {custom-voice | optimized-video-voice | optimized-voice |
svp-voice | wmm-default}
no ap dot11 {24ghz | 5ghz} edca-parameters {custom-voice | optimized-video-voice | optimized-voice |
svp-voice | wmm-default}
```

Syntax Description	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	edca-parameters	Specifies a specific enhanced distributed channel access (EDCA) profile on the 802.11 networks.
	custom-voice	Enables custom voice EDCA parameters.
	optimized-video-voice	Enables EDCA voice- and video-optimized profile parameters. Choose this option when both voice and video services are deployed on your network.
	optimized-voice	Enables EDCA voice-optimized profile parameters. Choose this option when voice services other than SpectraLink are deployed on your network.
	svp-voice	Enables SpectraLink voice priority parameters. Choose this option if SpectraLink phones are deployed on your network to improve the quality of calls.
	wmm-default	Enables the Wi-Fi Multimedia (WMM) default parameters. Choose this option when voice or video services are not deployed on your network.
Command Default	wmm-default	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Release	Modification
10.3	The custom-voice keyword was removed for Cisco 5700 Series WLC.

This example shows how to enable SpectraLink voice priority parameters:

```
Device(config)# ap dot11 24ghz edca-parameters svp-voice
```

ap dot11 rrm group-mode

To set the 802.11 automatic RF group selection mode on, use the **ap dot11 rrm group-mode** command. To set the 802.11 automatic RF group selection mode off, use the **no** form of this command.

```
ap dot11 {5ghz | 24ghz} rrm group-mode {auto | leader | off | restart}
no ap dot11 {5ghz | 24ghz} rrm group-mode
```

Syntax Description

5ghz	Specifies the 2.4 GHz band.
24ghz	Specifies the 5 GHz band.
auto	Sets the 802.11 RF group selection to automatic update mode.
leader	Sets the 802.11 RF group selection to static mode, and sets this device as the group leader.
off	Sets the 802.11 RF group selection to off.
restart	Restarts the 802.11 RF group selection.

Command Default

auto

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to turn the auto RF group selection mode on the 5 GHz band:

```
Device(config)# ap dot11 5ghz rrm group-mode auto
```

Related Topics

- [ap dot11 rrm ccx location-measurement](#), on page 39
- [ap dot11 rrm channel cleanair-event](#), on page 36
- [ap dot11 rrm channel dca](#), on page 40
- [ap dot11 rrm group-member](#), on page 41

- [ap dot11 rrm logging](#), on page 42
- [ap dot11 rrm monitor](#), on page 44
- [ap dot11 rrm ndp-type](#), on page 45

ap dot11 rrm channel cleanair-event

To configure CleanAir event-driven Radio Resource Management (RRM) parameters for all 802.11 Cisco lightweight access points, use the **ap dot11 rrm channel cleanair-event** command. When this parameter is configured, CleanAir access points can change their channel when a source of interference degrades the operations, even if the RRM interval has not expired yet.

ap dot11 {24ghz | 5ghz} **rrm channel** {cleanair-event sensitivity *value*}

Syntax Description	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	sensitivity	Sets the sensitivity for CleanAir event-driven RRM.
	<i>value</i>	Sensitivity value. You can specify any one of the following three optional sensitivity values: <ul style="list-style-type: none"> • low—Specifies low sensitivity. • medium—Specifies medium sensitivity. • high—Specifies high sensitivity.
Command Default	None	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to set the high sensitivity for CleanAir event-driven RRM:

```
Device(config)# ap dot11 24ghz rrm channel cleanair-event sensitivity high
```

Related Topics

- [ap dot11 rrm ccx location-measurement](#), on page 39
- [ap dot11 rrm group-mode](#), on page 35
- [ap dot11 rrm channel dca](#), on page 40
- [ap dot11 rrm group-member](#), on page 41
- [ap dot11 rrm logging](#), on page 42
- [ap dot11 rrm monitor](#), on page 44
- [ap dot11 rrm ndp-type](#), on page 45

ap dot11 l2roam rf-params

To configure the 2.4 GHz or 5 GHz Layer 2 client roaming parameters, use the **ap dot11 l2roam rf-params** command.

```
ap dot11 {24ghz | 5ghz} l2roam rf-params custom min-rssi roam-hyst scan-thresh trans-time
```

Syntax	Description
24ghz	Specifies the 2.4 GHz band.
5ghz	Specifies the 5 GHz band.
custom	Specifies custom Layer 2 client roaming RF parameters.
<i>min-rssi</i>	Minimum received signal strength indicator (RSSI) that is required for the client to associate to the access point. If the client's average received signal power dips below this threshold, reliable communication is usually impossible. Clients must already have found and roamed to another access point with a stronger signal before the minimum RSSI value is reached. The valid range is -80 to -90 dBm, and the default value is -85 dBm.
<i>roam-hyst</i>	How much greater the signal strength of a neighboring access point must be in order for the client to roam to it. This parameter is intended to reduce the amount of roaming between access points if the client is physically located on or near the border between the two access points. The valid range is 2 to 4 dB, and the default value is 2 dB.
<i>scan-thresh</i>	Minimum RSSI that is allowed before the client should roam to a better access point. When the RSSI drops below the specified value, the client must be able to roam to a better access point within the specified transition time. This parameter also provides a power-save method to minimize the time that the client spends in active or passive scanning. For example, the client can scan slowly when the RSSI is above the threshold and scan more rapidly when the RSSI is below the threshold. The valid range is -70 to -77 dBm, and the default value is -72 dBm.
<i>trans-time</i>	Maximum time allowed for the client to detect a suitable neighboring access point to roam to and to complete the roam, whenever the RSSI from the client's associated access point is below the scan threshold. The valid range is 1 to 10 seconds, and the default value is 5 seconds.

Command Default	Default Value
<i>min-rssi</i>	-85
<i>roam-hyst</i>	2
<i>scan-thresh</i>	-72
<i>trans-time</i>	5

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure custom Layer 2 client roaming parameters on an 802.11a network:

```
Device(config)# ap dot11 5ghz l2roam rf-params custom -80 2 -70 7
```

ap dot11 media-stream

To configure media stream multicast-direct and video-direct settings on an 802.11 network, use the **ap dot11 media-stream** command.

```
ap dot11 {24ghz | 5ghz} media-stream {multicast-direct {admission-besteffort | client-maximum value | radio-maximum value} | video-redirect}
```

Syntax Description		
	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	multicast-direct	Specifies the multicast-direct for the 2.4 GHz or a 5 GHz band.
	admission-besteffort	Admits the media stream to the best-effort queue.
	client-maximum value	Specifies the maximum number of streams allowed on a client.
	radio-maximum value	Specifies the maximum number of streams allowed on a 2.4 GHz or a 5 GHz band.
	video-redirect	Specifies the media stream video-redirect for the 2.4 GHz or a 5 GHz band.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Before you configure the media stream multicast-direct or video-redirect on a 802.11 network, ensure that the network is nonoperational.

This example shows how to enable media stream multicast-direct settings on the 5 GHz band:

```
Device(config)# ap dot11 5ghz media-stream multicast-direct
```

This example shows how to admit the media stream to the best-effort queue if there is not enough bandwidth to prioritize the flow:

```
Device(config)# ap dot11 5ghz media-stream multicast-direct admission-besteffort
```

This example shows how to set the maximum number of streams allowed on a client:

```
Device(config)# ap dot11 5ghz media-stream multicast-direct client-maximum 10
```

This example shows how to enable media stream traffic redirection on the 5 GHz band:

```
Device(config)# ap dot11 5ghz media-stream video-redirect
```

ap dot11 rrm ccx location-measurement

To configure Cisco client Extensions (CCX) client location measurements for 2.4 GHz and 5 GHz bands, use the **ap dot11 rrm ccx location-measurement** command.

```
ap dot11 {24ghz | 5ghz} rrm ccx location-measurement {disableinterval}
```

Syntax Description	
24ghz	Specifies the 2.4-GHz band.
5ghz	Specifies the 5-GHz band.
disable	Disables support for CCX client location measurements.
<i>interval</i>	Interval from 10 to 32400.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to disable support for 2.4 GHz CCX client location measurements:

```
Device(config)# no ap dot11 24ghz rrm ccx location-measurement
```

Related Topics

- [ap dot11 rrm group-mode](#), on page 35
- [ap dot11 rrm channel cleanair-event](#), on page 36
- [ap dot11 rrm channel dca](#), on page 40
- [ap dot11 rrm group-member](#), on page 41
- [ap dot11 rrm logging](#), on page 42
- [ap dot11 rrm monitor](#), on page 44
- [ap dot11 rrm ndp-type](#), on page 45

ap dot11 rrm channel dca

To configure Dynamic Channel Assignment (DCA) algorithm parameters on 802.11 networks, use the **ap dot11 rrm channel dca** command.

```
ap dot11 {24ghz | 5ghz} rrm channel dca {channel_number | anchor-time value | global {auto | once} | interval value | min-metric value | sensitivity {high | low | medium}}
```

Syntax Description		
24ghz		Specifies the 2.4 GHz band.
5ghz		Specifies the 5 GHz band.
<i>channel_number</i>		Channel number to be added to the DCA list. Note The range is from 1 to 14.
anchor-time		Specifies the anchor time for DCA.
<i>value</i>		Hour of time between 0 and 23. These values represent the hour from 12:00 a.m. to 11:00 p.m.
global		Specifies the global DCA mode for the access points in the 802.11 networks.
auto		Enables auto-RF.
once		Enables one-time auto-RF.
interval		Specifies how often the DCA is allowed to run.
<i>value</i>		Interval between the times when DCA is allowed to run. Valid values are 0, 1, 2, 3, 4, 6, 8, 12, or 24 hours. 0 is 10 minutes (600 seconds). Default value is 0 (10 minutes).
min-metric		Specifies the DCA minimum RSSI energy metric.
<i>value</i>		Minimum RSSI energy metric value from -100 to -60.
sensitivity		Specifies how sensitive the DCA algorithm is to environmental changes (for example, signal, load, noise, and interference) when determining whether or not to change channels.
high		Specifies that the DCA algorithm is not particularly sensitive to environmental changes. See the “Usage Guidelines” section for more information.
low		Specifies that the DCA algorithm is moderately sensitive to environmental changes. See the “Usage Guidelines” section for more information.
medium		Specifies that the DCA algorithm is highly sensitive to environmental changes. See the “Usage Guidelines” section for more information.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

The DCA sensitivity thresholds vary by radio band as shown in the table below.

To aid in troubleshooting, the output of this command shows an error code for any failed calls. The table below explains the possible error codes for failed calls.

Table 1: DCA Sensitivity Threshold

Sensitivity	2.4 Ghz DCA Sensitivity Threshold	5 Ghz DCA Sensitivity Threshold
High	5 dB	5 dB
Medium	15 dB	20 dB
Low	30 dB	35 dB

This example shows how to configure the device to start running DCA at 5 pm for the 2.4 GHz band:

```
Device(config)# ap dot11 24ghz rrm channel dca anchor-time 17
```

This example shows how to set the DCA algorithm to run every 10 minutes for the 2.4 GHz band:

```
Device(config)# ap dot11 24ghz rrm channel dca interval 0
```

This example shows how to configure the value of DCA algorithm's sensitivity to low on the 2.4 GHz band:

```
Device(config)# ap dot11 24ghz rrm channel dca sensitivity low
```

Related Topics

- [ap dot11 rrm ccx location-measurement](#), on page 39
- [ap dot11 rrm channel cleanair-event](#), on page 36
- [ap dot11 rrm group-mode](#), on page 35
- [ap dot11 rrm group-member](#), on page 41
- [ap dot11 rrm logging](#), on page 42
- [ap dot11 rrm monitor](#), on page 44
- [ap dot11 rrm ndp-type](#), on page 45

ap dot11 rrm group-member

To configure members in an 802.11 static RF group, use the **ap dot11 rrm group-member** command. To remove members from 802.11 RF group, use the **no** form of this command.

```
ap dot11 {24ghz|5ghz} rrm group-member controller-name controller-ip
```

```
no ap dot11 {24ghz | 5ghz} rrm group-member controller-name controller-ip
```

Syntax Description	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	<i>controller-name</i>	Name of the device to be added.
	<i>controller-ip</i>	IP address of the device to be added.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to add a device in the 5 GHz band RF group:

```
Device(config)# ap dot11 5ghz rrm group-member cisco-controller 192.0.2.54
```

Related Topics

- [ap dot11 rrm ccx location-measurement](#), on page 39
- [ap dot11 rrm channel cleanair-event](#), on page 36
- [ap dot11 rrm channel dca](#), on page 40
- [ap dot11 rrm group-mode](#), on page 35
- [ap dot11 rrm logging](#), on page 42
- [ap dot11 rrm monitor](#), on page 44
- [ap dot11 rrm ndp-type](#), on page 45

ap dot11 rrm logging

To configure report log settings on supported 802.11 networks, use the **ap dot11 rrm logging** command.

```
ap dot11 {24ghz | 5ghz} rrm logging {channel | coverage | foreign | load | noise | performance | txpower}
```

Syntax Description	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	channel	Turns the channel change logging mode on or off. The default mode is off (Disabled).
	coverage	Turns the coverage profile logging mode on or off. The default mode is off (Disabled).
	foreign	Turns the foreign interference profile logging mode on or off. The default mode is off (Disabled).

load	Turns the load profile logging mode on or off. The default mode is off (Disabled).
noise	Turns the noise profile logging mode on or off. The default mode is off (Disabled).
performance	Turns the performance profile logging mode on or off. The default mode is off (Disabled).
txpower	Turns the transit power change logging mode on or off. The default mode is off (Disabled).

Command Default

Disabled

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to turn the 5 GHz logging channel selection mode on:

```
Device(config)# ap dot11 5ghz rrm logging channel
```

This example shows how to turn the 5 GHz coverage profile violation logging selection mode on:

```
Device(config)# ap dot11 5ghz rrm logging coverage
```

This example shows how to turn the 5 GHz foreign interference profile violation logging selection mode on:

```
Device(config)# ap dot11 5ghz rrm logging foreign
```

This example shows how to turn the 5 GHz load profile logging mode on:

```
Device(config)# ap dot11 5ghz rrm logging load
```

This example shows how to turn the 5 GHz noise profile logging mode on:

```
Device(config)# ap dot11 5ghz rrm logging noise
```

This example shows how to turn the 5 GHz performance profile logging mode on:

```
Device(config)# ap dot11 5ghz rrm logging performance
```

This example shows how to turn the 5 GHz transmit power change mode on:

```
Device(config)# ap dot11 5ghz rrm logging txpower
```

Related Topics

- [ap dot11 rrm ccx location-measurement](#), on page 39
- [ap dot11 rrm channel cleanair-event](#), on page 36
- [ap dot11 rrm channel dca](#), on page 40
- [ap dot11 rrm group-member](#), on page 41
- [ap dot11 rrm group-mode](#), on page 35
- [ap dot11 rrm monitor](#), on page 44

[ap dot11 rrm ndp-type](#), on page 45

ap dot11 rrm monitor

To Configure monitor settings on the 802.11 networks, use the **ap dot11 rrm monitor** command.

```
ap dot11 {24ghz | 5ghz} rrm monitor {channel-list | {all | country | dca} | coverage | load | noise |
signal} seconds
```

Syntax Description		
24ghz		Specifies the 802.11b parameters.
5ghz		Specifies the 802.11a parameters.
channel-list all		Monitors the noise, interference, and rogue monitoring channel list for all channels.
channel-list country		Monitors the noise, interference, and rogue monitoring channel list for the channels used in the configured country code.
channel-list dca		Monitors the noise, interference, and rogue monitoring channel list for the channels used by automatic channel assignment.
coverage		Specifies the coverage measurement interval.
load		Specifies the load measurement interval.
noise		Specifies the noise measurement interval.
signal		Specifies the signal measurement interval.
rsi-normalization		Configure RRM Neighbor Discovery RSSI Normalization.
<i>seconds</i>		Measurement interval time from 60 to 3600 seconds.

Command Default None

Command Modes Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to monitor the channels used in the configured country:

```
Device(config)# ap dot11 24ghz rrm monitor channel-list country
```

This example shows how to set the coverage measurement interval to 60 seconds:

```
Device(config)# ap dot11 24ghz rrm monitor coverage 60
```

Related Topics

- [ap dot11 rrm ccx location-measurement](#), on page 39
- [ap dot11 rrm channel cleanair-event](#), on page 36
- [ap dot11 rrm channel dca](#), on page 40
- [ap dot11 rrm group-member](#), on page 41
- [ap dot11 rrm logging](#), on page 42
- [ap dot11 rrm group-mode](#), on page 35
- [ap dot11 rrm ndp-type](#), on page 45

ap dot11 rrm ndp-type

To configure the 802.11 access point radio resource management neighbor discovery protocol type, use the `ap dot11 rrm ndp-type` command.

```
ap dot11 {24ghz | 5ghz} rrm ndp-type {protected | transparent}
```

Syntax Description	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	protected	Specifies the Tx RRM protected (encrypted) neighbor discovery protocol.
	transparent	Specifies the Tx RRM transparent (not encrypted) neighbor discovery protocol.
Command Default	None	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

Before you configure the 802.11 access point RRM neighbor discovery protocol type, ensure that you have disabled the network by entering the `ap dot11 {24ghz | 5ghz} shutdown` command.

This example shows how to enable the 802.11a access point RRM neighbor discovery protocol type as protected:

```
Device(config)# ap dot11 5ghz rrm ndp-type protected
```

Related Topics

- [ap dot11 rrm ccx location-measurement](#), on page 39
- [ap dot11 rrm channel cleanair-event](#), on page 36
- [ap dot11 rrm channel dca](#), on page 40
- [ap dot11 rrm group-member](#), on page 41
- [ap dot11 rrm logging](#), on page 42
- [ap dot11 rrm group-mode](#), on page 35

[ap dot11 rrm monitor](#), on page 44

ap dot11 5ghz dot11ac frame-burst

To configure the 802.11ac Frame Burst use the **apdot115ghzdot11acframe-burst** command. Use the **no** forms to disable the bursting of 802.11ac A-MPDUs.

ap dot115ghzdot11acframe-burst

noap dot115ghzdot11acframe-burst

ap dot115ghzdot11acframe-burstautomatic

noap dot115ghzdot11acframe-burstautomatic

Syntax Description	5ghz	Configures the 802.11a parameters.
	frame-burst	Configures the bursting of 802.11ac A-MPDUs.
Command Default	No	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE 3.6E	This command was introduced.

Example

This is the example shows how to configure the bursting of 802.11ac A-MPDUs.

```
Device# ap dot11 5ghz
       dot11ac frame-burst
```

ap dot1x max-sessions

To configure the maximum number of simultaneous 802.1X sessions allowed per access point, use the **ap dot1x max-sessions** command.

ap dot1x max-sessions *num-of-sessions*

Syntax Description	<i>num-of-sessions</i>	Number of maximum 802.1X sessions initiated per AP at a time. The range is from 0 to 255, where 0 indicates unlimited.
Command Default	None	

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines It is required to limit the number of simultaneous 802.1X sessions initiated per access point to protect against flooding attacks caused by using 802.1X messages.

This example shows how to configure the maximum number of simultaneous 802.1X sessions:

```
Device(config)# ap dot1x max-sessions 100
```

ap dot1x username

To configure the 802.1X username and password for all access points that are currently joined to the device and any access points that join the device in the future, use the **ap dot1x username** command. To disable the 802.1X username and password for all access points that are currently joined to the device, use the **no** form of this command.

```
ap dot1x username user-id password {0 | 8} password-string
no ap dot1x username user-id password {0 | 8} password-string
```

Syntax Description	
<i>user-id</i>	Username.
password	Specifies an 802.1X password for all access points.
0	Specifies an unencrypted password.
8	Specifies an AES encrypted password.
<i>password_string</i>	Password.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines You should enter a strong password. Strong passwords have the following characteristics:

- They are at least eight characters long.
- They contain a combination of uppercase and lowercase letters, numbers, and symbols.
- They are not words in any language.

You can set the values for a specific access point.

This example shows how to configure the global authentication username and password for all access points:

```
Device(config)# ap dot1x username cisco123 password 0 cisco2020
```

Related Topics

[show ap summary](#), on page 157

ap ethernet duplex

To configure the Ethernet port duplex and speed settings of the lightweight access points, use the **ap ethernet duplex** command. To disable the Ethernet port duplex and speed settings of lightweight access points, use the **no** form of this command.

```
ap ethernet duplex duplex speed speed
no ap ethernet
```

Syntax Description	<i>duplex</i>	Ethernet port duplex settings. You can specify the following options to configure the duplex settings: <ul style="list-style-type: none"> • auto—Specifies the Ethernet port duplex auto settings. • half—Specifies the Ethernet port duplex half settings. • full—Specifies the Ethernet port duplex full settings.
	<i>speed</i>	Specifies the Ethernet port speed settings.
	<i>speed</i>	Ethernet port speed settings. You can specify the following options to configure the speed settings: <ul style="list-style-type: none"> • auto—Specifies the Ethernet port speed to auto. • 10—Specifies the Ethernet port speed to 10 Mbps. • 100—Specifies the Ethernet port speed to 100 Mbps. • 1000—Specifies the Ethernet port speed to 1000 Mbps.
Command Default	None	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure the Ethernet port duplex full settings as 1000 Mbps for all access points:

```
Device(config)# ap ethernet duplex full speed 1000
```

Related Topics

[show ap summary](#), on page 157

ap group

To create a new access point group, use the **ap group** command. To remove an access point group, use the **no** form of this command.

```
ap group group-name
no ap group group-name
```

Syntax Description	<i>group-name</i> Access point group name.	
Command Default	None	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
Usage Guidelines	An error message appears if you try to delete an access point group that is used by at least one access point. Before you can delete an AP group, move all APs in this group to another group. The access points are not moved to the default-group access point group automatically. To see the APs, enter the show ap summary command. To move access points, enter the ap name Cisco-AP ap-groupname Group-Name command.	

This example shows how to create a new access point group:

```
Device(config)# ap group sampleapgroup
```

Related Topics

[ap name ap-groupname](#), on page 54

ap image

To configure an image on all access points that are associated to the device, use the **ap image** command.

```
ap image {predownload | reset | swap}
```

Syntax Description	predownload	Instructs all the access points to start predownloading an image.
	reset	Instructs all the access points to reboot.
	swap	Instructs all the access points to swap the image.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to predownload an image to all access points:

```
Device# ap image predownload
```

This example shows how to reboot all access points:

```
Device# ap image reset
```

This example shows how to swap the access point's primary and secondary images:

```
Device# ap image swap
```

Related Topics

[show ap image](#), on page 125

ap ipv6 tcp adjust-mss

To configure IPv6 TCP maximum segment size (MSS) value for all Cisco APs, use the **ap ipv6 tcp adjust-mss** command.

ap ipv6 tcp adjust-mss *size*

no ap ipv6 tcp adjust-mss *size*

Syntax Description	adjust-mss	Configures IPv6 TCP MSS settings for all Cisco APs.
	<i>size</i>	MSS value in the range of 500 to 1440.

Command Default None

Command Modes Global configuration.

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

The MSS value must be in the range of 500 to 1440.

This example shows how to configure the IPv6 TCP MSS value to 600 for all Cisco APs:

```
Device(config)# ap ipv6 tcp adjust-mss 600
```

ap led

To enable the LED state for an access point, use the **ap led** command. To disable the LED state for an access point, use the **no** form of this command.

```
ap led
no ap led
```

Syntax Description

This command has no keywords and arguments.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable the LED state for an access point:

```
Device(config)# ap led
```

ap link-encryption

To enable Datagram Transport Layer Security (DTLS) data encryption for access points, use the **ap link-encryption** command. To disable the DTLS data encryption for access points, use the **no** form of this command.

```
ap link-encryption
no ap link-encryption
```

Syntax Description

This command has no keywords and arguments.

Command Default

Disabled

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable data encryption for all the access points that are joined to the controller:

```
Device(config)# ap link-encryption
```

Related Topics

[ap link-latency](#), on page 52

ap link-latency

To enable link latency for all access points that are currently associated to the device, use the **ap link-latency** command. To disable link latency all access points that are currently associated to the device, use the **no** form of this command.

```
ap link-latency [reset]
no ap link-latency
```

Syntax Description

reset (Optional) Resets all link latency for all access points.

Command Default

Link latency is disabled by default.

Command Modes

Global configuration

Command History

Release

Modification

Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE

This command was introduced.

Usage Guidelines

This command enables or disables link latency only for those access points that are currently joined to the device. It does not apply to access points that join in the future.

This example shows how to enable the link latency for all access points:

```
Device(config)# ap link-latency
```

Related Topics

[ap link-encryption](#), on page 51

ap mgmtuser username

To configure the username, password, and secret password for access point management, use the **ap mgmtuser username** command.

```
ap mgmtuser username username password password_type password secret secret_type secret
```

Syntax Description

username

Specifies the username for access point management.

password	Specifies the password for access point management.
<i>password_type</i>	<p>Password type. You can specify any one of the following two password types:</p> <ul style="list-style-type: none"> • 0—Specifies that an unencrypted password will follow. • 8—Specifies that an AES encrypted password will follow.
<i>password</i>	<p>Access point management password.</p> <p>Note The password does not get encrypted by service-password encryption.</p>
secret	Specifies the secret password for privileged access point management.
<i>secret_type</i>	<p>Secret type. You can specify any one of the following two secret types:</p> <ul style="list-style-type: none"> • 0—Specifies that an unencrypted secret password will follow. • 8—Specifies that an AES encrypted secret password will follow.
<i>secret</i>	Access point management secret password.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

To specify a strong password, the following password requirements should be met:

- The password should contain characters from at least three of the following classes: lowercase letters, uppercase letters, digits, and special characters.
- No character in the password can be repeated more than three times consecutively.
- The password should not contain a management username or the reverse of a username.
- The password should not contain words such as Cisco, oscic, admin, nimda or any variant obtained by changing the capitalization of letters by substituting 1, |, or ! or substituting 0 for o or substituting \$ for s.

To specify a strong secret password, the following requirement should be met:

- The secret password should contain characters from at least three of the following classes: lowercase letters, uppercase letters, digits, or special characters.

This example shows how to add a username, password, and secret password for access point management:

```
Device(config)# ap mgmtuser username glbusr password 0 Arc_1234 secret 0 Mid_1234
```

ap name ap-groupname

To add a Cisco lightweight access point to a specific access point group, use the **ap name ap-groupname** command.

```
ap name ap-name ap-groupname group-name
```

Syntax Description

ap-name Name of the Cisco lightweight access point.

group-name Descriptive name for the access point group.

Command Default

None

Command Modes

Any command mode

Command History

Release

Modification

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

The Cisco lightweight access point must be disabled before changing this parameter.

This example shows how to add the access point AP01 to the access point group superusers:

```
Device# ap name AP01 ap-groupname superusers
```

Related Topics

[ap group](#), on page 49

[show ap summary](#), on page 157

ap name antenna band mode

To configure the antenna mode, use the **ap name<AP name> antenna-band-mode{ single | dual }** command.

```
ap name ap-name antenna-band-mode { single | dual }
```

Syntax Description

ap-name Name of the Cisco lightweight access point.

antenna-band-mode Instructs the access point to enable the band mode of antenna.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Example

This example shows how to configure the antenna band mode of access point.

```
Device# ap name <ap-name> antenna-band-mode single
```

ap name bhrate

To configure the Cisco bridge backhaul Tx rate, use the **ap name bhrate** command.

```
ap name ap-name bhrate kbps
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco access point.
<i>kbps</i>	Cisco bridge backhaul Tx rate in kbps. The valid values are 6000, 12000, 18000, 24000, 36000, 48000, and 54000.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure the Cisco bridge backhaul Tx rate to 54000 kbps:

```
Device# ap name AP02 bhrate 54000
```

ap name bridgegroupname

To set a bridge group name on a Cisco lightweight access point, use the **ap name bridgegroupname** command. To delete a bridge group name on a Cisco lightweight access point, use the **no** form of this command.

```
ap name ap-name bridgegroupname bridge_group_name
```

ap name *ap-name* **no bridgegroupname**

Syntax Description *ap-name* Name of the Cisco lightweight access point.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Only access points with the same bridge group name can connect to each other. Changing the access point bridgegroupname may strand the bridge access point.

This example shows how to set a bridge group name on Cisco access point's bridge group name AP02:

```
Device# ap name AP02 bridgegroupname West
```

This example shows how to delete a bridge group name on Cisco access point's bridge group name AP02:

```
Device# ap name AP02 no bridgegroupname
```

ap name bridging

To enable Ethernet-to-Ethernet bridging on a Cisco lightweight access point, use the **ap name bridging** command. To disable Ethernet-to-Ethernet bridging on a Cisco lightweight access point, use the **no** form of this command.

ap name *ap-name* **bridging**
ap name *ap-name* **no bridging**

Syntax Description *ap-name* Name of the Cisco lightweight access point.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable Ethernet-to-Ethernet bridging on an access point:


```
Device# ap name TSIM_AP2 bridging
```

Related Topics

[ap bridging](#), on page 6

ap name cdp interface

To enable the Cisco Discovery Protocol (CDP) on a Cisco lightweight access point, use the **ap name** command. To disable the Cisco Discovery Protocol (CDP) on a Cisco lightweight access point, use the **no** form of this command.

```
ap name ap-name cdp interface {ethernet ethernet-id | radio radio-id}
ap name ap-name [no] cdp interface {ethernet ethernet-id | radio radio-id}
```

Syntax Description

<i>ap-name</i>	Name of the Cisco lightweight access point.
ethernet	Enables CDP on an Ethernet interface.
<i>ethernet-id</i>	Ethernet interface number from 0 to 3.
radio	Enables CDP for a radio interface.
<i>radio-id</i>	Radio ID slot number from 0 to 3.

Command Default

Disabled on all access points.

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

CDP over Ethernet/radio interfaces is available only when CDP is enabled. After you enable CDP on all access points that are joined to the device, you can disable and then reenable CDP on individual access points by using the **ap name ap-name cdp interface ethernet ethernet-id cisco_ap** command. After you disable CDP on all access points that are joined to the device, you cannot enable and then disable CDP on individual access points.

This example shows how to enable CDP for Ethernet interface number 0 on an access point:

```
Device# ap name TSIM_AP2 cdp interface ethernet 0
```

ap name console-redirect

To redirect the remote debug output of a Cisco lightweight access point to the console, use the **ap name console-redirect** command. To disable the redirection of the remote debug output of a Cisco lightweight access point to the console, use the **no** form of this command.

```
ap name ap-name console-redirect
ap name ap-name [no] console-redirect
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.	
Command Default	None	
Command Modes	Any command mode	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable redirecting remote debug output of a Cisco access point named AP02 to the console:

```
Device# ap name AP02 console-redirect
```

ap name capwap retransmit

To configure the access point control packet retransmission interval and control packet retransmission count, use the **ap name capwap retransmit** command.

```
ap name ap-name capwap retransmit {count count-value | interval interval-time}
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
	count Sets the number of times control packet will be retransmitted.
	<i>count-value</i> Number of times that the control packet will be retransmitted from 3 to 8.
	interval Sets the control packet retransmission timeout interval.
	<i>interval-time</i> Control packet retransmission timeout from 2 to 5 seconds.
Command Default	None
Command Modes	Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure the retransmission interval for an access point:

```
Device# ap name AP01 capwap retransmit interval 5
```

This example shows how to configure the retransmission retry count for a specific access point:

```
Device# ap name AP01 capwap retransmit count 5
```

ap name command

To execute a command remotely on a specific Cisco access point, use the **ap name command** command.

```
ap name ap-name command "command "
```

Syntax Description	
	<i>ap-name</i> Name of the Cisco access point.
	<i>command</i> Command to be executed on a Cisco access point.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to remotely enter the **show ip interface brief** command on the Cisco access point named TSIM_AP2:

```
Device# ap name AP2 command "show ip interface brief"
```

ap name core-dump

To configure a Cisco lightweight access point's memory core dump, use the **ap name core-dump** command. To disable a Cisco lightweight access point's memory core dump, use the **no** form of this command.

```
ap name ap-name core-dump ftp-ip-addr filename {compress | uncompress}
ap name ap-name [no] core-dump
```

Syntax Description	
	<i>ap-name</i> Name of the access point.

ap name country

ftp-ip-addr IP address of the TFTP server to which the access point sends core dump files.

filename Name that the access point used to label the core file.

compress Compresses the core dump file.

uncompress Uncompresses the core dump file.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines The access point must be able to reach the TFTP server before you can use this command.

This example shows how to configure and compress the core dump file:

```
Device# ap name AP2 core-dump 192.1.1.1 log compress
```

Related Topics

[ap core-dump](#), on page 12

ap name country

To configure the country of operation for a Cisco lightweight access point, use the **ap name country** command.

ap name *ap-name* **country** *country-code*

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.
<i>country-code</i>	Two-letter or three-letter country code.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Cisco devices must be installed by a network administrator or qualified IT professional and the installer must select the proper country code. Following installation, access to the unit should be password protected by the installer to maintain compliance with regulatory requirements and to ensure proper unit functionality. See the

related product guide for the most recent country codes and regulatory domains. Also, access point regulatory domains are defined during the access point manufacturing process. You can change the access point country code if the new country code matches a country that is valid within the access point regulatory domain. If you try to enter a country that is not valid to the access point regulatory domain, the command fails.

This example shows how to configure the Cisco lightweight access point's country code to DE:

```
Device# ap name AP2 country JP
```

Related Topics

[ap country](#), on page 12

ap name crash-file

To manage crash data and radio core files for the Cisco access point, use the **ap name crash-file** command.

```
ap name ap-name crash-file {get-crash-data | get-radio-core-dump {slot 0 | slot 1}}
```

Syntax Description		
<i>ap-name</i>	Name of the Cisco lightweight access point.	
get-crash-data	Collects the latest crash data for a Cisco lightweight access point.	
get-radio-core-dump	Gets a Cisco lightweight access point's radio core dump	
slot	Slot ID for Cisco access point.	
0	Specifies Slot 0.	
1	Specifies Slot 1.	

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to collect the latest crash data for access point AP3:

```
Device# ap name AP3 crash-file get-crash-data
```

This example shows how to collect the radio core dump for access point AP02 and slot 0:

```
Device# ap name AP02 crash-file get-radio-core-dump slot 0
```

Related Topics

[ap crash-file](#), on page 13

ap name dot11 24ghz rrm coverage

To configure coverage hole detection settings on the 2.4 GHz band, use the **ap name dot11 24ghz rrm coverage** command.

```
ap name ap-name dot11 24ghz rrm coverage {exception value | level value}
```

Syntax Description

<i>ap-name</i>	Name of the Cisco access point.
exception	Specifies the percentage of clients on an access point that are experiencing a low signal level but cannot roam to another access point.
<i>value</i>	Percentage of clients. Valid values are from 0 to 100%. Note The default is 25%.
level	Specifies the minimum number of clients on an access point with a received signal strength indication (RSSI) value at or below the data or voice RSSI threshold.
<i>value</i>	Minimum number of clients. Valid values are from 1 to 75. Note The default is 3.

Command Default

The default for the *exception* parameter is 25% and the default for the *level* parameter is 3.

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

If you enable coverage hole detection, the device automatically determines, based on data that is received from the access points, whether any access points have clients that are potentially located in areas with poor coverage.

If both the number and percentage of failed packets exceed the values that you entered in the **ap dot11 24ghz rrm coverage data packet-count** *count* and **ap dot11 24ghz rrm coverage data fail-percentage** *percentage* commands for a 5-second period, the client is considered to be in a pre-alarm condition. The device uses this information to distinguish between real and false coverage holes and excludes clients with poor roaming logic. A coverage hole is detected if both the number and percentage of failed clients meet or exceed the values entered in the **ap dot11 24ghz rrm coverage exception** and **ap dot11 24ghz rrm coverage level** commands over a 90-second period. The device determines whether the coverage hole can be corrected and, if appropriate, mitigates the coverage hole by increasing the transmit power level for that specific access point.

This example shows how to specify the percentage of clients for an access point 2.4 GHz radio that is experiencing a low signal level:

```
Device# ap name AP2 dot11 24ghz rrm coverage exception 25%
```

This example shows how to specify the minimum number of clients on an 802.11b access point with an RSSI value at or below the RSSI threshold:

```
Device# ap name AP2 dot11 24ghz rrm coverage level 60
```

Related Topics

[ap name dot11 49ghz rrm profile](#), on page 63

[ap name dot11 5ghz rrm channel](#), on page 64

ap name dot11 49ghz rrm profile

To configure Radio Resource Management (RRM) performance profile settings for a Cisco lightweight access point on a 4.9 GHz public safety channel, use the **ap name dot11 49ghz rrm profile** command.

ap name *ap-name* **dot11 49ghz rrm profile** {**clients** *value* | **customize** | **exception** *value* | **foreign** *value* | **level** *value* | **noise** *value* | **throughput** *value* | **utilization** *value*}

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.
clients	Sets the access point client threshold.
<i>value</i>	Access point client threshold from 1 to 75 clients. Note The default client threshold is 12.
customize	Turns on performance profile customization for an access point. Note Performance profile customization is off by default.
exception <i>value</i>	Sets the 802.11a Cisco access point coverage exception level from 0 to 100 percent.
foreign	Sets the foreign 802.11 transmitter interference threshold.
<i>value</i>	Foreign 802.11 transmitter interference threshold from 0 to 100 percent. Note The default is 10 percent.
level <i>value</i>	Sets the 802.11a Cisco access point client minimum exception level from 1 to 75 clients.
noise	Sets the 802.11 foreign noise threshold.
<i>value</i>	802.11 foreign noise threshold from -127 to 0 dBm. Note The default is -70 dBm.
throughput	Sets the data-rate throughput threshold.
<i>value</i>	802.11 throughput threshold from 1000 to 10000000 bytes per second. Note The default is 1,000,000 bytes per second.

utilization	Sets the RF utilization threshold.
Note	The operating system generates a trap when this threshold is exceeded.
value	802.11 RF utilization threshold from 0 to 100 percent.
Note	The default is 80 percent.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to set the AP1 clients threshold to 75 clients:

```
Device# ap name AP1 dot11 49ghz rrm profile clients 75
```

This example shows how to turn performance on profile customization for Cisco lightweight access point AP1 on the 4.9 GHz channel:

```
Device# ap name AP1 dot11 49ghz rrm profile customize
```

This example shows how to set the foreign transmitter interference threshold for AP1 to 0 percent:

```
Device# ap name AP1 dot11 49ghz rrm profile foreign 0
```

This example shows how to set the foreign noise threshold for AP1 to 0 dBm:

```
Device# ap name AP1 dot11 49ghz rrm profile noise 0
```

This example shows how to set the AP1 data-rate threshold to 10000000 bytes per second:

```
Device# ap name AP1 dot11 49ghz rrm profile throughput 10000000
```

This example shows how to set the RF utilization threshold for AP1 to 100 percent:

```
Device# ap name AP1 dot11 49ghz rrm profile utilization 100
```

Related Topics

[ap name dot11 24ghz rrm coverage](#), on page 62

[ap name dot11 5ghz rrm channel](#), on page 64

ap name dot11 5ghz rrm channel

To configure a new channel using an 802.11h channel announcement, use the **ap name dot11 5ghz rrm channel** command.

ap name *ap-name* **dot11 5ghz rrm channel** *channel*

Syntax Description	<i>ap-name</i>	Name of the Cisco lightweight access point.
	<i>channel</i>	New channel.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE
		This command was introduced.

This example shows how to configure a new channel using the 802.11h channel:

```
Device# ap name AP01 dot11 5ghz rrm channel 140
```

Related Topics

[ap name dot11 24ghz rrm coverage](#), on page 62

[ap name dot11 49ghz rrm profile](#), on page 63

ap name dot11 antenna

To configure radio antenna settings for Cisco lightweight access points on different 802.11 networks, use the **ap name dot11 antenna** command.

ap name *ap-name* **dot11** {**24ghz** | **5ghz**} **antenna** {**ext-ant-gain** *gain* | **mode** {**omni** | **sectorA** | **sectorB**} | **selection** {**external** | **internal**}}

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.
24ghz	Specifies the 2.4 GHz band.
5ghz	Specifies the 5 GHz band.
ext-ant-gain	Specifies the external antenna gain for an 802.11 network.
Note	Before you enter this command, disable the Cisco radio by using the ap dot11 {24ghz 5ghz} shutdown command. After you enter this command, reenable the Cisco radio by using the no ap dot11 {24ghz 5ghz} shutdown command.
<i>gain</i>	Antenna gain in 0.5 dBm units (for example, 2.5 dBm = 5).
mode	Specifies that the Cisco lightweight access point is to use one internal antenna for an 802.11 sectorized 180-degree coverage pattern or both internal antennas for an 802.11 360-degree omnidirectional pattern.
omni	Specifies to use both internal antennas.

sectorA	Specifies to use only the side A internal antenna.
sectorB	Specifies to use only the side B internal antenna.
selection	Selects the internal or external antenna selection for a Cisco lightweight access point on an 802.11 network.
external	Specifies the external antenna.
internal	Specifies the internal antenna.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure a 5 GHz external antenna gain of 0.5 dBm for AP1:

```
Device# ap name AP1 dot11 5ghz antenna ext-ant-gain 0.5
```

This example shows how to configure access point AP01 antennas for a 360-degree omnidirectional pattern on a 2.4 GHz band:

```
Device# ap name AP01 dot11 24ghz antenna mode omni
```

This example shows how to configure access point AP02 on a 2.4 GHz band to use the internal antenna:

```
Device# ap name AP02 dot11 24ghz antenna selection interval
```

Related Topics

[ap name dot11 antenna extantgain](#), on page 66

ap name dot11 antenna extantgain

To configure radio antenna settings for Cisco lightweight access points on 4.9 GHz and 5.8 GHz public safety channels, use the **ap name dot11 antenna extantgain** command.

```
ap name ap-name dot11 {49ghz | 58ghz} {antenna extantgain gain}
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.
49ghz	Specifies 4.9 GHz public safety channel settings.
58ghz	Specifies 5.8 GHz public safety channel settings.
<i>gain</i>	Antenna gain in 0.5 dBm units (for example, 2.5 dBm = 5).

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Before you enter this command, disable the Cisco radio by using the **ap dot11 {24ghz | 5ghz} shutdown** command. After you enter this command, reenable the Cisco radio by using the **no ap dot11 {24ghz | 5ghz} shutdown** command.

This example shows how to configure an external antenna gain of 0.5 dBm for AP1 on a 4.9 GHz public safety channel:

```
Device# ap name AP1 dot11 49ghz antenna extantgain 0.5
```

Related Topics

[ap name dot11 antenna](#), on page 65

ap name dot11 cleanair

To configure CleanAir settings for a specific Cisco lightweight access point on 802.11 networks, use the **ap name dot11 cleanair** command.

```
ap name ap-name dot11 {24ghz | 5ghz} cleanair
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.
24ghz	Specifies the 2.4 GHz band.
5ghz	Specifies the 5 GHz band.

Command Default Disabled.

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable CleanAir on the 2.4 GHz band:

```
Device# ap name AP01 dot11 24ghz cleanair
```

ap name dot11 dot11n antenna

To configure an access point to use a specific antenna, use the **ap name dot11 dot11n antenna** command.

```
ap name ap-name dot11 {24ghz|5ghz} dot11n antenna {A|B|C|D}
```

Syntax Description

<i>ap-name</i>	Access point name.
24ghz	Specifies the 2.4 GHz band.
5ghz	Specifies the 5 GHz band.
A	Specifies antenna port A.
B	Specifies antenna port B.
C	Specifies antenna port C.
D	Specifies antenna port D.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable antenna B on access point AP02:

```
Device# ap name AP02 dot11 5ghz dot11n antenna B
```

This example shows how to disable antenna C on access point AP02:

```
Device# ap name AP02 no dot11 5ghz dot11n C
```

ap name dot11 dual-band cleanair

To configure CleanAir for a dual band radio, use the **ap name dot11 dual-band cleanair** command.

```
ap name ap-name dot11 dual-band cleanair
ap name ap-name no dot11 dual-band cleanair
```

Syntax Description

<i>ap-name</i>	Name of the Cisco AP.
cleanair	Specifies the CleanAir feature.

Command Default	None
------------------------	------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable CleanAir for a dual band radio of the access point AP01:

```
Device# ap name AP01 dot11 dual-band cleanair
```

Related Topics

- [ap name dot11 dual-band shutdown](#), on page 69
- [show ap dot11 cleanair config](#), on page 115
- [show ap name config dot11](#), on page 138

ap name dot11 dual-band shutdown

To disable dual band radio on a Cisco AP, use the **ap name dot11 dual-band shutdown** command.

```
ap name ap-name dot11 dual-band shutdown
ap name ap-name no dot11 dual-band shutdown
```

Syntax Description	<i>ap-name</i> Name of the Cisco AP.
	shutdown Disables the dual band radio on the Cisco AP.

Command Default	None
------------------------	------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to disable dual band radio on the Cisco access point AP01:

```
Device# ap name AP01 dot11 dual-band shutdown
```

ap name dot11 rrm ccx

To configure Cisco Client eXtension (CCX) Radio Resource Management (RRM) settings for specific Cisco lightweight access points on 802.11 networks, use the **ap name dot11 rrm ccx** command.

```
ap name ap-name dot11 {24ghz | 5ghz} rrm ccx {customize | location-measurement interval}
```

Syntax Description	<i>ap-name</i>	Name of the Cisco lightweight access point.
	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	customize	Enables 802.11 CCX options.
	location-measurement	Configures the CCX client location measurements.
	<i>interval</i>	Interval from 10 to 32400.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure CCX client location measurements for an access point in the 2.4 GHz band:

```
Device# ap name AP01 dot11 24ghz rrm ccx location-measurement 3200
```

Related Topics

[ap name dot11 rrm profile](#), on page 70

ap name dot11 rrm profile

To configure Radio Resource Management (RRM) performance profile settings for a Cisco lightweight access point, use the **ap name dot11 rrm profile** command.

ap name *ap-name* **dot11** {**24ghz** | **5ghz**} **rrm profile** {**clients** *value* | **customize** | **foreign** *value* | **noise** *value* | **throughput** *value* | **utilization** *value*}

Syntax Description	<i>ap-name</i>	Name of the Cisco lightweight access point.
	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	clients	Sets the access point client threshold.
	<i>value</i>	Access point client threshold from 1 to 75 clients.
	Note	The default client threshold is 12.

customize	Turns on performance profile customization for an access point. Note Performance profile customization is off by default.
foreign	Sets the foreign 802.11 transmitter interference threshold.
<i>value</i>	Foreign 802.11 transmitter interference threshold from 0 to 100 percent. Note The default is 10 percent.
noise	Sets the 802.11 foreign noise threshold.
<i>value</i>	802.11 foreign noise threshold between -127 and 0 dBm. Note The default is -70 dBm.
throughput	Sets the data-rate throughput threshold.
<i>value</i>	802.11 throughput threshold from 1000 to 10000000 bytes per second. Note The default is 1,000,000 bytes per second.
utilization	Sets the RF utilization threshold. Note The operating system generates a trap when this threshold is exceeded.
<i>value</i>	802.11 RF utilization threshold from 0 to 100 percent. Note The default is 80 percent.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to set the AP1 clients threshold to 75 clients:

```
Device# ap name AP1 dot11 24ghz rrm profile clients 75
```

This example shows how to turn performance profile customization on for 802.11a Cisco lightweight access point AP1:

```
Device# ap name AP1 dot11 5ghz rrm profile customize
```

This example shows how to set the foreign 802.11a transmitter interference threshold for AP1 to 0 percent:

```
Device# ap name AP1 dot11 5ghz rrm profile foreign 0
```

This example shows how to set the 802.11a foreign noise threshold for AP1 to 0 dBm:

```
Device# ap name AP1 dot11 5ghz rrm profile noise 0
```

This example shows how to set the AP1 data-rate threshold to 10000000 bytes per second:

```
Device# ap name AP1 dot11 5ghz rrm profile throughput 10000000
```

This example shows how to set the RF utilization threshold for AP1 to 100 percent:

```
Device# ap name AP1 dot11 5ghz rrm profile utilization 100
```

Related Topics

[ap name dot11 rrm ccx](#), on page 69

ap name dot11 txpower

To configure the transmit power level for a single access point in an 802.11 network, use the **ap name dot11 txpower** command.

```
ap name ap-name dot11 {24ghz | 5ghz} {shutdown | txpower {autopower-level}}
```

Syntax Description

<i>ap-name</i>	Name of the Cisco lightweight access point.
24ghz	Specifies the 2.4 GHz band.
5ghz	Specifies the 5 GHz band.
shutdown	Disables the 802.11 networks.
auto	Specifies the power level is automatically set by Radio Resource Management (RRM) for the 802.11 Cisco radio.
<i>power-level</i>	Manual transmit power level number for the access point.

Command Default

The command default (txpower auto) is for automatic configuration by RRM.

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to automatically set the 2.4 GHz radio transmit power for access point AP1:

```
Device# ap name AP1 dot11 24ghz txpower auto
```


Related Topics

[show ap config dot11](#), on page 111

ap name dot1x-user

To configure the global authentication username and password for an access point that is currently joined to the device, use the **ap name dot1x-user** command. To disable 802.1X authentication for a specific access point, use the **no** form of this command.

```
ap name ap-name dot1x-user {global-override | username user-id password passwd}
ap name ap-name [no] dot1x-user
```

Syntax Description	
<i>ap-name</i>	Name of the access point.
global-override	Forces the access point to use the device's global authentication settings.
username	Specifies to add a username.
<i>user-id</i>	Username.
password	Specifies to add a password.
<i>passwd</i>	Password.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines You should enter a strong password. Strong passwords have the following characteristics:

- They are at least eight characters long.
- They contain a combination of uppercase and lowercase letters, numbers, and symbols.
- They are not words in any language.

You can set the values for a specific access point.

You can disable 802.1X authentication for a specific access point only if global 802.1X authentication is not enabled. If global 802.1X authentication is enabled, you can disable 802.1X for all access points only.

This example shows how to configure a specific username and password for dot1x authentication:

```
Device# ap name AP02 dot1x-user username Cisco123 password Cisco2020
```

This example shows how to disable the authentication for access point cisco_ap1:

```
Device# ap name cisco_ap1 no dot1x-user
```

Related Topics

[show ap summary](#), on page 157

ap name ethernet

To configure ethernet port settings of a Cisco lightweight access point, use the **ap name ethernet** command. To remove configured port settings or set of defaults, use the **no** form of this command.

```
ap name ap-name ethernet intf-number mode {access vlan-id | trunk [{add | delete}]} native-vlan
vlan-id
```

```
ap name ap-name no ethernet intf-number mode {access | trunk native-vlan}
```

Syntax Description

<i>ap-name</i>	Name of the Cisco lightweight access point.
<i>intf-number</i>	Ethernet interface number from 0 to 3.
mode	Configures access or trunk mode.
access	Configures the port in access mode.
<i>vlan-id</i>	VLAN identifier.
trunk	Specifies the port in trunk mode.
add	(Optional) Adds a VLAN or trunk mode.
delete	(Optional) Deletes a VLAN or trunk mode.
native-vlan	Specifies a native VLAN.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure access mode for a Cisco access point.

```
Device# ap name AP2 ethernet 0 mode access 1
```

ap name ethernet duplex

To configure the Ethernet port duplex and speed settings of the lightweight access points, use the **ap name ethernet duplex** command.

```
ap name ap-name ethernet duplex {auto | full | half} speed {10 | 100 | 1000 | auto}
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco access point.
auto	Specifies the Ethernet port duplex auto settings.
full	Specifies the Ethernet port duplex full settings.
half	Specifies the Ethernet port duplex half settings.
speed	Specifies the Ethernet port speed settings.
10	Specifies the Ethernet port speed to 10 Mbps.
100	Specifies the Ethernet port speed to 100 Mbps.
1000	Specifies the Ethernet port speed to 1000 Mbps.
auto	Specifies the Ethernet port setting for all connected access points.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure the Ethernet port to full duplex and 1 Gbps for an access point:

```
Device# ap name AP2 ethernet duplex full 1000
```

Related Topics

[show ap summary](#), on page 157

ap name key-zeroize

To enable the FIPS key-zeroization on an Access Point, use the **ap name<AP name> key-zeroize** command.

```
ap name ap-name key-zeroize
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.

key-zeroize Instructs the access point to enable the FIPS key-zeroization on AP.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Example

This example shows how to enable FIPS key-zeroization.

```
Device# ap name <AP Name> key-zeroize
```

ap name image

To configure an image on a specific access point, use the **ap name image** command.

```
ap name ap-name image {predownload | swap}
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.
predownload	Instructs the access point to start the image predownload.
swap	Instructs the access point to swap the image.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to predownload an image to an access point:

```
Device# ap name AP2 image predownload
```

This example shows how to swap an access point's primary and secondary images:

```
Device# ap name AP2 image swap
```

Related Topics

[show ap image](#), on page 125

[ap image](#), on page 49

ap name ipv6 tcp adjust-mss

To configure IPv6 TCP maximum segment size (MSS) value for a Cisco AP, use the **ap name ipv6 tcp adjust-mss** command.

```
ap name ap-name ipv6 tcp adjust-mss size
ap name ap-name no ipv6 tcp adjust-mss
```

Syntax Description	<i>ap-name</i>	Name of the Cisco AP.
	adjust-mss	Configures IPv6 TCP MSS settings for all Cisco APs.
	<i>size</i>	MSS value in the range of 500 to 1440.

Command Default None

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines The MSS value must be in the range of 500 to 1440.

This example shows how to configure the IPv6 TCP MSS value to 600 for a Cisco access point AP01:

```
Device# ap name AP01 ipv6 tcp adjust-mss 600
```

ap name jumbo mtu

To configure the Jumbo MTU support, use the **ap name<AP name>jumbo-mtu** command.

```
ap name ap-name {jumbo-mtu | no jumbo-mtu}
```

Syntax Description	<i>ap-name</i>	Name of the Cisco lightweight access point.
	jumbo-mtu	Instructs the access point to enable the Jumbo MTU support.
	no jumbo-mtu	Instructs the access point to disable the Jumbo MTU support.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Example

This example shows how to configure the Jumbo MTU support.

```
Device# ap name <AP Name> jumbo-mtu
```

ap name lan

To configure LAN port configurations for APs, use the **ap name lan** command. To remove LAN port configurations for APs, use the **ap name no lan** command.

```
ap name ap-name [ no ]lan port-id port-id { shutdown | vlan-access }
```

Syntax Description		
no		Removes LAN port configurations.
port-id		Configures the port.
<i>port-id</i>		The ID of the port. The range is 1-4
shutdown		Disables the Port.
vlan-access		Enables VLAN access to Port.

Command Default None

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.7.0 E	This command was introduced.

This example shows how to enable VLAN access to port:

```
Device# ap name AP1 lan port-id 1 vlan-access
```

ap name led

To enable the LED state for an access point, use the **ap name led** command. To disable the LED state for an access point, use the **no** form of this command.

```
ap name ap-name led
no ap name ap-name [led] led
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
	led Enables the access point's LED state.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable the LED state for an access point:

```
Device# ap name AP2 led
```

This example shows how to disable the LED state for an access point:

```
Device# ap name AP2 no led
```

ap name link-encryption

To enable Datagram Transport Layer Security (DTLS) data encryption for specific Cisco lightweight access points, use the **ap name link-encryption** command. To disable DTLS data encryption for specific Cisco lightweight access points, use the **no** form of this command.

```
ap name ap-name link-encryption
ap name ap-name no link-encryption
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable data encryption for an access point:

```
Device# ap name AP02 link-encryption
```

ap name link-latency

To enable link latency for a specific Cisco lightweight access point that is currently associated to the device, use the **ap name link-latency** command. To disable link latency for a specific Cisco lightweight access point that is currently associated to the device, use the **no** form of this command.

```
ap name ap-name link-latency
ap name ap-name no link-latency
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.	
Command Default	Link latency is disabled by default.	
Command Modes	Any command mode	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines This command enables or disables link latency only for access points that are currently joined to the device. It does not apply to access points that join in the future.

This example shows how to enable link latency on access points:

```
Device# ap name AP2 link-latency
```

ap name location

To modify the descriptive location of a Cisco lightweight access point, use the **ap name location** command.

```
ap name ap-name location location
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.	
	<i>location</i> Location name of the access point (enclosed by double quotation marks).	
Command Default	None	
Command Modes	Any command mode	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
Usage Guidelines	The Cisco lightweight access point must be disabled before changing this parameter.	

This example shows how to configure the descriptive location for access point AP1:

```
Device# ap name AP1 location Building1
```

Related Topics

[show ap summary](#), on page 157

ap name mgmtuser

To configure the username, password, and secret password for access point management, use the **ap name mgmtuser** command. To force a specific access point to use the device's global credentials, use the **no** form of this command.

```
ap name ap-name mgmtuser username username password password secret secret
ap name ap-name no mgmtuser
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.				
	username Specifies the username for access point management.				
	<i>username</i> Management username.				
	password Specifies the password for access point management.				
	<i>password</i> Access point management password.				
	secret Specifies the secret password for privileged access point management.				
	<i>secret</i> Access point management secret password.				
Command Default	None				
Command Modes	Any command mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.				

Usage Guidelines	<p>To specify a strong password, you should adhere to the following requirements:</p> <ul style="list-style-type: none"> • The password should contain characters from at least three of the following classes: lowercase letters, uppercase letters, digits, and special characters. • No character in the password can be repeated more than three times consecutively. • The password cannot contain a management username or the reverse of a username. • The password cannot contain words such as Cisco, oscic, admin, nimda or any variant obtained by changing the capitalization of letters by substituting 1, , or ! or substituting 0 for o or substituting \$ for s.
-------------------------	---

The following requirement is enforced on the secret password:

- The secret password cannot contain characters from at least three of the following classes: lowercase letters, uppercase letters, digits, or special characters.

This example shows how to add a username, password, and secret password for access point management:

```
Device# ap name AP01 mgmtuser username acd password Arc_1234 secret Mid_1234
```

ap name mode

To change a Cisco device communication option for an individual Cisco lightweight access point, use the **ap name mode** command.

ap name *ap-name* **mode** {**local submode** {**none** | **wips**} | **monitor submode** {**none** | **wips**} | **rogue** | **se-connect** | **sniffer**}

Syntax Description

<i>ap-name</i>	Name of the Cisco lightweight access point.
local	Converts from an indoor mesh access point (MAP or RAP) to a nonmesh lightweight access point (local mode).
submode	Specifies wIPS submode on an access point.
none	Disables the wIPS on an access point.
monitor	Specifies monitor mode settings.
wips	Enables the wIPS submode on an access point.
rogue	Enables wired rogue detector mode on an access point.
se-connect	Enables spectrum expert mode on an access point.
sniffer	Enables wireless sniffer mode on an access point.

Command Default

Local

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

The sniffer mode captures and forwards all the packets from the clients on that channel to a remote machine that runs AiroPeek or other supported packet analyzer software. It includes information on the timestamp, signal strength, packet size and so on.

This example shows how to set the device to communicate with access point AP01 in local mode:

```
Device# ap name AP01 mode local submode none
```

This example shows how to set the device to communicate with access point AP01 in a wired rogue access point detector mode:

```
Device# ap name AP01 mode rogue
```

This example shows how to set the device to communicate with access point AP02 in wireless sniffer mode:

```
Device# ap name AP02 mode sniffer
```

Related Topics

[show ap monitor-mode summary](#), on page 128

ap name monitor-mode

To configure Cisco lightweight access point channel optimization, use the **ap name monitor-mode** command.

```
ap name ap-name monitor-mode {no-optimization | tracking-opt | wips-optimized}
```

Syntax Description	<i>ap-name</i>	Name of the Cisco lightweight access point.
	no-optimization	Specifies no channel scanning optimization for the access point.
	tracking-opt	Enables tracking optimized channel scanning for the access point.
	wips-optimized	Enables wIPS optimized channel scanning for the access point.
Command Default	None	
Command Modes	Any command mode	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure a Cisco wireless intrusion prevention system (wIPS) monitor mode on access point AP01:

```
Device# ap name AP01 monitor-mode wips
```

Related Topics

[show ap monitor-mode summary](#), on page 128

[show ap config](#), on page 112

ap name monitor-mode dot11b

To configure 802.11b scanning channels for a monitor-mode access point, use the **ap name monitor-mode dot11b** command.

```
ap name ap-name monitor-mode dot11b fast-channel channel1 [channel2] [channel3] [channel4]
```

Syntax Description

<i>ap-name</i>	Name of the access point.
fast-channel	Specifies the 2.4 GHz band scanning channel (or channels) for a monitor-mode access point.
<i>channel1</i>	Scanning channel1.
<i>channel2</i>	(Optional) Scanning channel2.
<i>channel3</i>	(Optional) Scanning channel3.
<i>channel4</i>	(Optional) Scanning channel4.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure an access point in tracking optimized mode to listen to channels 1, 6, and 11:

```
Device# ap name AP01 monitor-mode dot11b fast-channel 1 6 11
```

Related Topics

[show ap monitor-mode summary](#), on page 128

ap name name

To modify the name of a Cisco lightweight access point, use the **ap name name** command.

```
ap name ap-name name new-name
```

Syntax Description

<i>ap-name</i>	Current Cisco lightweight access point name.
<i>new-name</i>	Desired Cisco lightweight access point name.

Command Default

None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to modify the name of access point AP1 to AP2:

```
Device# ap name AP1 name AP2
```

Related Topics

[show ap config](#), on page 112

ap name no dot11 shutdown

To enable radio transmission for an individual Cisco radio on an 802.11 network, use the **ap name no dot11 shutdown** command.

```
ap name ap-name no dot11 {24ghz | 5ghz} shutdown
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.
24ghz	Specifies the 2.4 GHz radios.
5ghz	Specifies the 5 GHz radios.

Command Default The transmission is enabled for the entire network by default.

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines



Note Use this command with the **ap name Cisco-AP dot11 5ghz shutdown** command when configuring 802.11 settings.

This command can be used any time that the CLI interface is active.

This example shows how to enable radio transmission on the 5 GHz band for access point AP1:

```
Device# ap name AP1 no dot11 5ghz shutdown
```

ap name power

To enable the Cisco Power over Ethernet (PoE) feature for access points, use the **ap name power** command. To disable the Cisco PoE feature for access points, use the **no** form of this command.

```
ap name ap-name power {injector | pre-standard}
ap name ap-name no power {injector | pre-standard}
```

Syntax Description	<i>ap-name</i>	Name of the Cisco lightweight access point.
	injector	Specifies the power injector state for an access point.
	pre-standard	Enables the inline power Cisco prestandard switch state for an access point.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable the power injector state for all access points:

```
Device# ap name AP01 power injector
```

This example shows how to enable the inline power Cisco prestandard switch state for access point AP02:

```
Device# ap name AP02 power pre-standard
```

ap name shutdown

To disable a Cisco lightweight access point, use the **ap name shutdown** command. To enable a Cisco lightweight access point, use the **no** form of this command.

```
ap name ap-name shutdown
ap name ap-name no shutdown
```

Syntax Description	<i>ap-name</i>	Name of the Cisco lightweight access point.
---------------------------	----------------	---

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to disable a specific Cisco lightweight access point:

```
Device# ap name AP2 shutdown
```

ap name slot shutdown

To disable a slot on a Cisco lightweight access point, use the **ap name slot shutdown** command. To enable a slot on a Cisco lightweight access point, use the **no** form of the command.

```
ap name ap-name slot {0 | 1 | 2 | 3} shutdown
ap name ap-name no slot {0 | 1 | 2 | 3} shutdown
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.
0	Enables slot number 0 on a Cisco lightweight access point.
1	Enables slot number 1 on a Cisco lightweight access point.
2	Enables slot number 2 on a Cisco lightweight access point.
3	Enables slot number 3 on a Cisco lightweight access point.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable slot 0 on a Cisco access point named TSIM_AP2:

```
Device# ap name TSIM_AP2 no slot 0 shutdown
```

ap name sniff

To enable sniffing on an access point, use the **ap name sniff** command. To disable sniffing on an access point, use the **no** form of this command.

```
ap name ap-name sniff {dot11a | dot11b}
ap name ap-name no sniff {dot11a | dot11b}
```

Syntax Description	<i>ap-name</i>	Name of the Cisco lightweight access point.
	dot11a	Specifies the 2.4 GHz band.
	dot11b	Specifies the 5 GHz band.
	<i>channel</i>	Valid channel to be sniffed. For the 5 GHz band, the range is 36 to 165. For the 2.4 GHz band, the range is 1 to 14.
	<i>server-ip-address</i>	IP address of the remote machine running Omnipeek, Airopeek, AirMagnet, or Wireshark software.

Command Default Channel 36

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE This command was introduced.

Usage Guidelines When the sniffer feature is enabled on an access point, it starts sniffing the signal on the given channel. It captures and forwards all the packets to the remote computer that runs Omnipeek, Airopeek, AirMagnet, or Wireshark software. It includes information about the timestamp, signal strength, packet size and so on.

Before an access point can act as a sniffer, a remote computer that runs one of the listed packet analyzers must be set up so that it can receive packets that are sent by the access point.

This example shows how to enable the sniffing on the 5 GHz band for an access point on the primary wireless LAN controller:

```
Device# ap name AP2 sniff dot11a 36 192.0.2.54
```

ap name ssh

To enable Secure Shell (SSH) connectivity on a specific Cisco lightweight access point, use the **ap name ssh** command. To disable SSH connectivity on a specific Cisco lightweight access point, use the **no** form of this command.

```
ap name ap-name ssh
ap name ap-name no ssh
```

Syntax Description	<i>ap-name</i>	Name of the Cisco lightweight access point.
---------------------------	----------------	---

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines The Cisco lightweight access point associates with this Cisco device for all network operations and in the event of a hardware reset.

This example shows how to enable SSH connectivity on access point Cisco_ap2:

```
Device# ap name Cisco_ap2 ssh
```

ap name telnet

To enable Telnet connectivity on an access point, use the **ap name telnet** command. To disable Telnet connectivity on an access point, use the **no** form of this command.

```
ap name ap-name telnet
ap name ap-name no telnet
```

Syntax Description	
	<i>ap-name</i> Name of the Cisco lightweight access point.

Command Default	
	None

Command Modes	
	Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to disable Telnet connectivity on access point cisco_ap1:

```
Device# ap name cisco_ap1 no telnet
```

ap name power injector

To configure the power injector state for an access point, use the **ap name power injector** command. To disable the Cisco Power over Ethernet (PoE) feature for access points, use the **no** form of this command.

```
ap name ap-name power injector {installed | override | switch-mac-address switch-MAC-address}
ap name ap-name no power injector
```

Syntax Description	
	<i>ap-name</i> Name of the Cisco lightweight access point.
	installed Detects the MAC address of the current switch port that has a power injector.

override	Overrides the safety checks and assumes a power injector is always installed.
switch-mac-address	Specifies the MAC address of the switch port with an installed power injector.
<i>switch-MAC-address</i>	MAC address of the switch port with an installed power injector.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable the power injector state for an access point:

```
Device# ap name AP01 power injector switch-mac-address aaaa.bbbb.cccc
```

ap name power pre-standard

To enable the inline power Cisco prestandard switch state for an access point, use the **ap name power pre-standard** command. To disable the inline power Cisco prestandard switch state for an access point, use the **no** form of this command.

```
ap name ap-name power pre-standard
ap name ap-name no power pre-standard
```

Syntax Description *ap-name* Name of the Cisco lightweight access point.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable the inline power Cisco prestandard switch state for access point AP02:

```
Device# ap name AP02 power pre-standard
```

This example shows how to disable the inline power Cisco prestandard switch state for access point AP02:

```
Device# ap name AP02 no power pre-standard
```

ap name reset-button

To configure the Reset button for an access point, use the **ap name reset-button** command.

ap name *ap-name* **reset-button**

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.								
Command Default	None								
Command Modes	Any command mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.2SE</td> <td>Cisco IOS XE 3.3SE</td> </tr> <tr> <td>Cisco IOS XE 3.3SE</td> <td>Cisco IOS XE 3.3SE</td> </tr> <tr> <td colspan="2">This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE	This command was introduced.	
Release	Modification								
Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE								
Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE								
This command was introduced.									

This example shows how to enable the Reset button for access point AP03:

```
Device# ap name AP03 reset-button
```

ap name reset

To reset a specific Cisco lightweight access point, use the **ap name reset** command.

ap name *ap-name* **reset**

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.								
Command Default	None								
Command Modes	Any command mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.2SE</td> <td>Cisco IOS XE 3.3SE</td> </tr> <tr> <td>Cisco IOS XE 3.3SE</td> <td>Cisco IOS XE 3.3SE</td> </tr> <tr> <td colspan="2">This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE	This command was introduced.	
Release	Modification								
Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE								
Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE								
This command was introduced.									

This example shows how to reset a Cisco lightweight access point named AP2:

```
Device# ap name AP2 reset
```

Related Topics

[show ap config](#), on page 112

ap name slot

To configure various slot parameters, use the **ap name slot** command. To disable a slot on a Cisco lightweight access point, use the **no** form of this command.

```
ap name ap-name slot slot-number {channel {global | number channel-number | width channel-width}
| rtsthreshold value | shutdown | txpower {globalchannel-level}}
ap name ap-name no slot {0 | 1 | 2 | 3} shutdown
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco access point.
<i>slot-number</i>	Slot downlink radio to which the channel is assigned. You can specify the following slot numbers: <ul style="list-style-type: none"> • 0—Enables slot number 0 on a Cisco lightweight access point. • 1—Enables slot number 1 on a Cisco lightweight access point. • 2—Enables slot number 2 on a Cisco lightweight access point. • 3—Enables slot number 3 on a Cisco lightweight access point.
channel	Specifies the channel for the slot.
global	Specifies channel global properties for the slot.
number	Specifies the channel number for the slot.
<i>channel-number</i>	Channel number from 1 to 169.
width	Specifies the channel width for the slot.
<i>channel-width</i>	Channel width from 20 to 40.
rtsthreshold	Specifies the RTS/CTS threshold for an access point.
<i>value</i>	RTS/CTS threshold value from 0 to 65535.
shutdown	Shuts down the slot.
txpower	Specifies Tx power for the slot.
global	Specifies auto-RF for the slot.
<i>channel-level</i>	Transmit power level for the slot from 1 to 7.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable slot 3 for the access point abc:

```
Device# ap name abc slot 3
```

This example shows how to configure RTS for the access point abc:

```
Device# ap name abc slot 3 rtsthreshold 54
```

ap name static-ip

To configure lightweight access point static IP settings, use the **ap name static-ip** command. To disable the Cisco lightweight access point static IP address, use the **no** form of this command.

```
ap name ap-name static-ip {domain domain-name | ip-address ip-address netmask netmask gateway
gateway | nameserver ip-address}
ap name ap-name no static-ip
```

Syntax Description

<i>ap-name</i>	Name of the access point.
domain	Specifies the Cisco access point domain name.
<i>domain-name</i>	Domain to which a specific access point belongs.
ip-address	Specifies the Cisco access point static IP address.
<i>ip-address</i>	Cisco access point static IP address.
netmask	Specifies the Cisco access point static IP netmask.
<i>netmask</i>	Cisco access point static IP netmask.
gateway	Specifies the Cisco access point gateway.
<i>gateway</i>	IP address of the Cisco access point gateway.
nameserver	Specifies a DNS server so that a specific access point can discover the device using DNS resolution.
<i>ip-address</i>	IP address of the DNS server.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

An access point cannot discover the device using Domain Name System (DNS) resolution if a static IP address is configured for the access point unless you specify a DNS server and the domain to which the access point belongs.

This example shows how to configure an access point static IP address:

```
Device# ap name AP2 static-ip ip-address 192.0.2.54 netmask 255.255.255.0 gateway 192.0.2.1
```

ap name stats-timer

To set the time in seconds that the Cisco lightweight access point sends its DOT11 statistics to the Cisco device, use the **ap name stats-timer** command.

```
ap name ap-name stats-timer timer-value
```

Syntax Description

ap-name Name of the Cisco lightweight access point.

timer-value Time in seconds from 0 to 65535. A zero value disables the timer.

Command Default

0 (Disabled).

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

A value of 0 (zero) means that the Cisco lightweight access point does not send any DOT11 statistics. The acceptable range for the timer is from 0 to 65535 seconds, and the Cisco lightweight access point must be disabled to set this value.

This example shows how to set the stats timer to 600 seconds for access point AP2:

```
Device# ap name AP2 stats-timer 600
```

ap name syslog host

To configure a syslog server for a specific Cisco lightweight access point, use the **ap name syslog host** command.

```
ap name ap-name syslog host syslog-host-ip-address
```

Syntax Description

ap-name Name of the Cisco lightweight access point.

syslog-host-ip-address IP address of the syslog server.

Command Default 255.255.255.255

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE
	Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines By default, the syslog server IP address for each access point is 255.255.255.255, which indicates that it is not yet set. When the default value is used, the global access point syslog server IP address is pushed to the access point.

This example shows how to configure a syslog server:

```
Device# ap name AP2 syslog host 192.0.2.54
```

Related Topics

[ap syslog](#), on page 101

[show ap config](#), on page 112

[show ap name config](#), on page 136

ap name syslog level

To configure the system logging level, use the **ap name syslog level** command.

ap name *ap-name* **syslog level** {**alert** | **critical** | **debug** | **emergency** | **errors** | **information** | **notification** | **warning**}

Syntax Description		
	<i>ap-name</i>	Name of the Cisco lightweight access point.
	alert	Specifies alert level system logging.
	critical	Specifies critical level system logging.
	debug	Specifies debug level system logging.
	emergency	Specifies emergency level system logging.
	errors	Specifies error level system logging.
	information	Specifies information level system logging.
	notification	Specifies notification level system logging.
	warning	Specifies warning level system logging.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure alert level system logging:

```
Device# ap name AP2 syslog level alert
```

ap name tcp-adjust-mss

To enable or disable the TCP maximum segment size (MSS) on a particular access point, use the **ap name tcp-adjust-mss** command. To disable the TCP maximum segment size (MSS) on a particular access point, use the **no** form of this command.

```
ap name ap-name tcp-adjust-mss size size
ap name ap-name no tcp-adjust-mss
```

Syntax Description	
	<i>ap-name</i> Name of the access point.
	<i>size</i> Maximum segment size, from 536 to 1363 bytes.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines When you enable this feature, the access point checks for TCP packets to and from wireless clients in its data path. If the MSS of these packets is greater than the value that you configured or greater than the default value for the Control and Provisioning of Wireless Access Points (CAPWAP) tunnel, the access point changes the MSS to the new configured value. If the MSS of these packets is greater than the value that you have configured or greater than the default value for the CAPWAP tunnel, the access point changes the MSS to the newly configured value.

This example shows how to enable the TCP MSS on access point Cisco_ap1:

```
Device# ap name ciscoap tcp-adjust-mss size 1200
```

Related Topics

[show ap name tcp-adjust-mss](#), on page 154

ap name tftp-downgrade

To configure the settings used for downgrading a lightweight access point to an autonomous access point, use the **ap name tftp-downgrade** command.

```
ap name ap-name tftp-downgrade tftp-server-ip filename
```

Syntax Description	<i>ap-name</i>	Name of the Cisco lightweight access point.
	<i>tftp-server-ip</i>	IP address of the TFTP server.
	<i>filename</i>	Filename of the access point image file on the TFTP server.
Command Default	None	
Command Modes	Any command mode	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE This command was introduced.	

This example shows how to configure the settings for downgrading access point AP1:

```
Device# ap name Ap01 tftp-downgrade 172.21.12.45 ap3g1-k9w7-tar.124-25d.JA.tar
```

ap power injector

To configure the power injector state for all the Cisco lightweight access points that are joined to the device, use the **ap power injector** command. To delete the power injector state for all access points, use the **no** form of this command.

```
ap power injector {installed | override | switch-mac-address switch-MAC-addr}
no ap power injector
```

Syntax Description	installed	Detects the MAC address of the current switch port that has a power injector.
	override	Overrides the safety checks and assumes a power injector is always installed.
	switch-mac-address	Specifies the MAC address of the switch port with an installed power injector.
	<i>switch-MAC-address</i>	Specifies the MAC address of the switch port with an installed power injector.
Command Default	None	
Command Modes	Global configuration	

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable the power injector state for all the Cisco lightweight access points that are joined to the device:

```
Device(config)# ap power injector switch-mac-address aaaa.bbbb.cccc
```

ap power pre-standard

To set the Cisco lightweight access points that are joined to the device to be powered by a high-power Cisco switch, use the **ap power pre-standard** command. To disable the pre standard power for all access points, use the **no** form of this command.

```
ap power pre-standard
no ap power pre-standard
```

Syntax Description	This command has no keywords and arguments.
---------------------------	---

Command Default	Disabled
------------------------	----------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to enable the inline power Cisco prestandard switch state for access point AP02:

```
Controller(config)# ap power pre-standard
```

ap reporting-period

To configure the access point rogue/error reporting period, use the **ap reporting-period** command. To disable the access point rogue/error reporting period, use the **no** form of this command.

```
ap reporting-period value
no ap reporting-period
```

Syntax Description	<i>value</i> Time period in seconds from 10 to 120.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example show how to configure the access point rogue/error reporting:

```
Device(config)# ap reporting-period 100
```

This example show how to disable the access point rogue/error reporting:

```
Device(config)# no ap reporting-period 100
```

ap reset-button

To configure the Reset button for all Cisco lightweight access points that are joined to the device, use the **ap reset-button** command. To disable the Reset button for all access points, use the **no** form of this command.

ap reset-button
no ap reset-button

Syntax Description	This command has no keywords and arguments.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure the Reset button for all access points that are joined to the controller:

```
Device(config)# ap reset-button
```

service-policy type control subscriber

To apply the global subscriber control policy, use the **service-policy type control subscriber** *<subscriber-policy-name>* command.

service-policy type control subscriber *<subscriber-policy-name>*

Syntax Description	service-policy	Instructs the access point to apply global subscriber control policy.
---------------------------	-----------------------	---

<*subscriber-policy-name*> Name of the subscriber policy.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Example

This example shows how to disable the global subscriber control policy.

```
Deviceno service-policy type control subscriber
```

ap static-ip

To configure Cisco lightweight access point static IP address settings, use the **ap static-ip** command. To disable access point static IP settings, use the **no** form of this command.

```
ap static-ip {domain domain-name | name-server ip-address}
```

```
no ap static-ip {domain | name-server}
```

Syntax Description	domain	Specifies the domain to which a specific access point or all access points belong.
	<i>domain-name</i>	Domain name.
	name-server	Specifies a DNS server so that a specific access point or all access points can discover the device using DNS resolution.
	<i>ip-address</i>	DNS server IP address.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines An access point cannot discover the device using Domain Name System (DNS) resolution if a static IP address is configured for the access point, unless you specify a DNS server and the domain to which the access point belongs.

This example shows how to configure a static IP address for all access points:

```
Device(config)# ap static-ip domain cisco.com
```

ap syslog

To configure the system logging settings for all Cisco lightweight access points that are joined to the device, use the **ap syslog** command.

```
ap syslog {host ipaddress | level{alert | critical | debug | emergency | errors | information | notification | warning}}
```

Syntax Description	host	Specifies a global syslog server for all access points that join the device.
	<i>ipaddress</i>	IP address of the syslog server.
	level	Specifies the system logging level for all the access points joined to the device.
	alert	Specifies alert level system logging for all Cisco access points.
	critical	Specifies critical level system logging for all Cisco access points.
	debug	Specifies debug level system logging for all Cisco access points.
	emergency	Specifies emergency level system logging for all Cisco access points.
	errors	Specifies errors level system logging for all Cisco access points.
	information	Specifies information level system logging for all Cisco access points.
	notification	Specifies notification level system logging for all Cisco access points.
	warning	Specifies warning level system logging for all Cisco access points.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines By default, the global syslog server IP address for all access points is 255.255.255.255. Make sure that the access points can reach the subnet on which the syslog server resides before configuring the syslog server on the device. If the access points cannot reach this subnet, the access points are unable to send out syslog messages.

This example shows how to configure a global syslog server for all access points:

```
Device(config)# ap syslog host 172.21.34.45
```

ap name no controller

To change the order of configured primary, secondary and tertiary wireless LAN controllers use the following commands.

ap name*ap-name* **no controller primary**

ap name*ap-name* **no controller secondary**

ap name*ap-name* **no controller tertiary**

Syntax Description		
	<i>ap- name</i>	Name of the Cisco lightweight access point.
	no controller primary	Instructs the access point to unconfigure the primary controller.
	no controller secondary	Instructs the access point to unconfigure the secondary controller.
	no controller tertiary	Instructs the access point to unconfigure the tertiary controller.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines If you have the primary, secondary, and tertiary wireless LAN controllers configured for an access point and you require swap the controller names and the corresponding IP addresses you can unconfigure the primary and configure the secondary controller.

Example

This example shows how to unconfigure the primary controller.

```
Device# ap name <AP Name> no controller primary.
```

ap tcp-adjust-mss size

To enable the TCP maximum segment size (MSS) on all Cisco lightweight access points, use the **ap tcp-adjust-mss size** command. To disable the TCP maximum segment size (MSS) on all Cisco lightweight access points **no** form of this command.

ap tcp-adjust-mss size *size*
no ap tcp-adjust-mss

Syntax Description	
	<i>size</i> Maximum segment size, from 536 to 1363 bytes.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines When you enable this feature, the access point checks for TCP packets to and from wireless clients in its data path. If the MSS of these packets is greater than the value that you configured or greater than the default value for the Control and Provisioning of Wireless Access Points (CAPWAP) tunnel, the access point changes the MSS to the new configured value.

This example shows how to enable the TCP MSS on all access points with a segment size of 1200:

```
Device(config)# ap tcp-adjust-mss 1200
```

Related Topics

[show ap name tcp-adjust-mss](#), on page 154

ap tftp-downgrade

To configure the settings used for downgrading a lightweight access point to an autonomous access point, use the **ap tftp-downgrade** command. To disable the settings used for downgrading a lightweight access point to an autonomous access point, use the **no** form of this command.

```
ap tftp-downgrade tftp-server-ip filename
no ap tftp-downgrade
```

Syntax Description	
<i>tftp-server-ip</i>	IP address of the TFTP server.
<i>filename</i>	Filename of the access point image file on the TFTP server.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to configure the settings for downgrading all access points:

```
Device(config)# ap tftp-downgrade 172.21.23.45 ap3g1-k9w7-tar.124-25d.JA.tar
```

config wireless wps rogue client mse

To configure a rogue MSE client, use **wirelesswps rogueclientmse** command.

To view the summary of the wireless client statistics, use **show wirelessclientclient-statisticssummary** command.

wirelesswpsrogueclientmse

showwirelessclientclient-statisticssummary

Syntax Description	Command	Description
	rogueclient mse	Instructs the access point to enable configuring a rogue MSE client.
	nowireless wps	Instructs the access point to disable the configuring a rogue MSE client.
	client-statisticssummary	Instructs to view the summary of the wireless client statistics.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Example

This example shows how to configure a rogue MSE client.

```
Device# wireless wps rogue client mse
```

clear ap name tsm dot11 all

To clear the traffic stream metrics (TSM) statistics for a particular access point or all the access points, use the **clear ap name tsm dot11 all** command.

clear ap name *ap-name* tsm dot11 {24ghz | 5ghz} all

Syntax Description	Parameter	Description
	<i>ap-name</i>	Name of the Cisco lightweight access point.
	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	all	Specifies all access points.

Command Default None

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to clear the TSM statistics for an access point on the 2.4 GHz band:

```
Device# clear ap name AP1 tsm dot11 24ghz all
```

clear ap config

To clear (reset to the default values) a lightweight access point's configuration settings, use the **clear ap config** command.

```
clear ap config ap-name [{eventlog | keep-ip-config}]
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.
eventlog	(Optional) Deletes the existing event log and creates an empty event log file for a specific access point or for all access points joined to the device.
keep-ip-config	(Optional) Specifies not to erase the static IP configuration of the Cisco access point.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines	Entering this command does not clear the static IP address of the access point.
-------------------------	---

This example shows how to clear the access point's configuration settings for the access point named AP01:

```
Device# clear ap config AP01
```

Related Topics

[show ap config](#), on page 112

clear ap eventlog-all

To delete the existing event log and create an empty event log file for all access points, use the **clear ap eventlog-all** command.

clear ap eventlog-all

Syntax Description	This command has no keywords and arguments.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to delete the event log for all access points:

```
Device# clear ap eventlog-all
```

clear ap join statistics

To clear the join statistics for all access points or for a specific access point, use the **clear ap join statistics** command.

clear ap join statistics

Syntax Description	This command has no keywords and arguments.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to clear the join statistics of all the access points:

```
Device# clear ap join statistics
```

clear ap mac-address

To clear the MAC address for the join statistics for a specific Cisco lightweight access point, use the **clear ap mac-address** command.

```
clear ap mac-address mac join statistics
```

Syntax Description	<i>mac</i> Access point MAC address.
	join statistics Clears join statistics.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to clear the join statistics of an access point:

```
Device# clear ap mac-address aaaa.bbbb.cccc join statistics
```

clear ap name wlan statistics

To clear WLAN statistics, use the **clear ap name wlan statistics** command.

```
clear ap name ap-name wlan statistics
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to clear the WLAN configuration elements of the access point cisco_ap:

```
Device# clear ap name cisco_ap wlan statistics
```

debug ap mac-address

To enable debugging of access point on the mac-address, use the **debug ap mac-address** command.

```
debug ap mac-address mac-address
no debug ap mac-address mac-address
```

Syntax Description	<i>mac-address</i> Access point Ethernet MAC address or the MAC address of the 802.11 radio interface.
---------------------------	--

show ap cac voice

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	10.3Cisco IOS XE 3.3 SE	This command was introduced.

This example shows how to enable debugging mac-address on an AP :

```
Device# debug ap mac-address
ap mac-address debugging is on
```

This example shows how to disable debugging mac-address on an AP :

```
Device# no debug ap mac-address
ap mac-address debugging is off
```

show ap cac voice

To display the list of all access points with brief voice statistics, which include bandwidth used, maximum bandwidth available, and the call information, use the **show ap cac voice** command.

show ap cac voice

Syntax Description This command has no keywords and arguments.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SECisco IOS XE 3.3SECisco IOS XE 3.3SE	This command was introduced.

This example shows how to display voice CAC details that correspond to Cisco lightweight access points:

```
controller# show ap cac voice
```

```
1) AP Name: AP01
```

```
=====
```

```
Wireless Bandwidth (In MeanTime mt)
```

	Slot#	Radio	Calls	BW-Max	BW-Alloc	Bw-InUse (%age)
1	0	802.11b/g	0	23437	0	0
2	1	802.11a	0	23437	0	0

```
Wired Bandwidth (in Kbps)
```

```

          Slot#  Wlan-ID  Wlan-Name          BW-Config  BW-Avail
-----
1         0         1         maria-open        0           0
2         0         12        24                0           0
3         1         1         maria-open        0           0
4         1         12        24                0           0

```

2) AP Name: AP02

=====

Wireless Bandwidth (In MeanTime mt)

```

          Slot#  Radio          Calls  BW-Max  BW-Alloc  Bw-InUse (%age)
-----
1         0      802.11b/g      0     23437    0         0
2         1      802.11a       0     23437    0         0

```

Wired Bandwidth (in Kbps)

```

          Slot#  Wlan-ID  Wlan-Name          BW-Config  BW-Avail
-----
1         0         1         maria-open        0           0
2         0         12        24                0           0
3         1         1         maria-open        0           0
4         1         12        24                0           0

```

show ap capwap

To display the Control and Provisioning of Wireless Access Points (CAPWAP) configuration that is applied to all access points, use the **show ap capwap** command.

show ap capwap {retransmit | timers | summary}

Syntax Description	retransmit	Displays the access point CAPWAP retransmit parameters.
	timers	Displays the rogue access point entry timers.
	summary	Displays the network configuration of the Cisco device.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the access point CAPWAP retransmit parameters:

```
Controller# show ap capwap retransmit
```

```
Global control packet retransmit interval : 3
Global control packet retransmit count : 5
```

AP Name	Retransmit Interval	Retransmit Count
AP01	3	5
AP02	3	5
AP03	3	5
AP04	3	5
AP05	3	5
AP07	3	5
AP08	3	5
AP09	3	5
AP10	3	5
AP11	3	5
AP12	3	5

This example shows how to display the rogue access point entry timers:

```
Controller# show ap capwap timers

AP Discovery timer      : 10
AP Heart Beat timeout  : 30
Primary Discovery timer : 120
Primed Join timeout    : 0
Fast Heartbeat         : Disabled
Fast Heartbeat timeout : 1
```

This example shows how to display the the network configuration of the Cisco device:

```
Controller# show ap capwap summary

AP Fallback           : Enabled
AP Join Priority      : Disabled
AP Master             : Disabled
Primary backup Controller Name :
Primary backup Controller IP  : 0.0.0.0
Secondary backup Controller Name :
Secondary backup Controller IP : 0.0.0.0
```

show ap cdp

To display the Cisco Discovery Protocol (CDP) information for all Cisco lightweight access points that are joined to the device, use the **show ap cdp** command.

```
show ap cdp [neighbors [detail]]
```

Syntax	Description
neighbors	(Optional) Displays neighbors using CDP.
detail	(Optional) Displays details about a specific access point neighbor that is using CDP.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the CDP status of all access points:

```
Device# show ap cdp
```

This example shows how to display details about all neighbors that are using CDP:

```
Device# show ap cdp neighbors
```

Related Topics

[ap cdp](#), on page 11

show ap config dot11

To display the detailed configuration of 802.11-58G radios on Cisco lightweight access points, use the **show ap config dot11** command.

show ap config dot11 58ghz summary

Syntax Description	
58ghz	Displays the 802.11-58G radios.
summary	Displays a summary of the radios on the access points.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the detailed configuration of 802.11a-58G radios on access points:

```
Device# show ap config dot11 58ghz summary
```

show ap config dot11 dual-band summary

To view a summary of configuration settings for dual band radios of Cisco APs, use the **show ap config dot11 dual-band summary** command.

show ap config dot11 dual-band summary

Syntax Description	dual-band	Specifies the dual band radio.
	summary	Displays a summary of configuration settings for dual band radios of Cisco APs.
Command Default	None	
Command Modes	Any command mode	
Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

show ap config fnf

To view Netflow input and output monitors for all Cisco APs, use the **show ap config fnf** command.

show ap config fnf

Syntax Description	fnf	Netflow input and output monitors for all Cisco APs.
Command Default	None	
Command Modes	Any command mode	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

show ap config

To display configuration settings for all access points that join the device, use the **show ap config** command.

show ap config {**ethernet** | **general** | **global**}

Syntax Description	ethernet	Displays ethernet VLAN tagging information for all Cisco APs.
	general	Displays common information for all Cisco APs.

global Displays global settings for all Cisco APs.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display global syslog server settings:

```
Device# show ap config global
```

```
AP global system logging host          : 255.255.255.255
```

show ap crash-file

To display the list of both crash and radio core dump files generated by lightweight access points, use the **show ap crash-file** command.

show ap crash-file

Syntax Description	
	This command has no keywords and arguments.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the crash file generated by the access point:

```
Device# show ap crash-file
```

Related Topics

[ap crash-file](#), on page 13

show ap data-plane

To display the data plane status, use the **show ap data-plane** command.

show ap data-plane

show ap dot11 l2roam

Syntax Description	This command has no keywords and arguments.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example show how to display the data plane status for all access points:

```
Device# show ap data-plane
```

show ap dot11 l2roam

To display 802.11a or 802.11b/g Layer 2 client roaming information, use the **show ap dot11 l2roam** command.

```
show ap dot11 {24ghz | 5ghz} l2roam {mac-address mac-address statistics | rf-param | statistics}
```

Syntax Description		
24ghz		Specifies the 2.4 GHz band.
5ghz		Specifies the 5 GHz band.
mac-address mac-address statistics		Specifies the MAC address of a Cisco lightweight access point.
rf-param		Specifies the Layer 2 frequency parameters.
statistics		Specifies the Layer 2 client roaming statistics.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display 802.11b Layer 2 client roaming information:

```
Device# show ap dot11 24ghz l2roam rf-param
```

```
L2Roam 802.11bg RF Parameters
 Config Mode       : Default
 Minimum RSSI     : -85
 Roam Hysteresis  : 2
 Scan Threshold   : -72
 Transition time   : 5
```

show ap dot11 cleanair air-quality

To display the air-quality summary information and air-quality worst information for the 802.11 networks, use the **show ap dot11 cleanair air-quality** command.

```
show ap dot11 {24ghz | 5ghz} cleanair air-quality {summary | worst}
```

Syntax Description	24ghz	Displays the 2.4 GHz band.
	5ghz	Displays the 5 GHz band.
	summary	Displays a summary of 802.11 radio band air-quality information.
	worst	Displays the worst air-quality information for 802.11 networks.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the worst air-quality information for the 5 GHz band:

```
Device# show ap dot11 5ghz cleanair air-quality worst
```

```
AQ = Air Quality
DFS = Dynamic Frequency Selection
AP Name      Channel Avg AQ Min AQ Interferers DFS
-----
CISCO_AP3500 36      95      70      0          40
```

This example shows how to display the worst air-quality information for the 2.4 GHz band:

```
Device# show ap dot11 24ghz cleanair air-quality worst
```

```
AQ = Air Quality
DFS = Dynamic Frequency Selection
AP Name      Channel Avg AQ Min AQ Interferers DFS
-----
CISCO_AP3500 1       83      57      3          5
```

show ap dot11 cleanair config

To display the CleanAir configuration for the 802.11 networks, use the **show ap dot11 cleanair config** command.

```
show ap dot11 {24ghz | 5ghz} cleanair config
```

Syntax Description	24ghz Displays the 2.4 GHz band.
	5ghz Displays the 5 GHz band.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the CleanAir configuration for the 2.4 GHz band:

```
Device# show ap dot11 24ghz cleanair config
Clean Air Solution..... : Disabled
Air Quality Settings:
  Air Quality Reporting..... : Disabled
  Air Quality Reporting Period (min)..... : 15
  Air Quality Alarms..... : Enabled
  Air Quality Alarm Threshold..... : 10
Interference Device Settings:
  Interference Device Reporting..... : Enabled
  Bluetooth Link..... : Enabled
  Microwave Oven..... : Enabled
  802.11 FH..... : Enabled
  Bluetooth Discovery..... : Enabled
  TDD Transmitter..... : Enabled
  Jammer..... : Enabled
  Continuous Transmitter..... : Enabled
  DECT-like Phone..... : Enabled
  Video Camera..... : Enabled
  802.15.4..... : Enabled
  WiFi Inverted..... : Enabled
  WiFi Invalid Channel..... : Enabled
  SuperAG..... : Enabled
  Canopy..... : Enabled
  Microsoft Device..... : Enabled
  WiMax Mobile..... : Enabled
  WiMax Fixed..... : Enabled
Interference Device Types Triggering Alarms:
  Bluetooth Link..... : Disabled
  Microwave Oven..... : Disabled
  802.11 FH..... : Disabled
  Bluetooth Discovery..... : Disabled
  TDD Transmitter..... : Disabled
  Jammer..... : Disabled
  Continuous Transmitter..... : Disabled
  DECT-like Phone..... : Disabled
  Video Camera..... : Disabled
  802.15.4..... : Disabled
  WiFi Inverted..... : Enabled
  WiFi Invalid Channel..... : Enabled
  SuperAG..... : Disabled
  Canopy..... : Disabled
  Microsoft Device..... : Disabled
  WiMax Mobile..... : Disabled
  WiMax Fixed..... : Disabled
Interference Device Alarms..... : Enabled
Additional Clean Air Settings:
```

```
CleanAir Event-driven RRM State..... : Disabled
CleanAir Driven RRM Sensitivity..... : LOW
CleanAir Persistent Devices state..... : Disabled
```

show ap dot11 cleanair summary

To view CleanAir configurations for all 802.11a Cisco APs, use the **show ap dot11 cleanair summary** command.

show ap dot11 {24ghz | 5ghz} cleanair summary

Syntax Description	24ghz	Specifies the 2.4-GHz band
	5ghz	Specifies the 5-GHz band
	cleanair summary	Summary of CleanAir configurations for all 802.11a Cisco APs
Command Default	None	
Command Modes	Any command mode	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

show ap dot11

To view 802.11a or 802.11b configuration information, use the **show ap dot11** command.

show ap dot11 {24ghz | 5ghz} {channel | coverage | group | load-info | logging | media-stream | monitor | network | profile | receiver | service-policy | summary | txpower | ccx global}

Syntax Description	24ghz	Specifies the 2.4 GHz band.
	5ghz	Specifies the 5 GHz band.
	channel	Displays the automatic channel assignment configuration and statistics.
	coverage	Displays the configuration and statistics for coverage hole detection.
	group	Displays 802.11a or 802.11b Cisco radio RF grouping.
	load-info	Displays channel utilization and client count information for all Cisco APs.

logging	Displays 802.11a or 802.11b RF event and performance logging.
media-stream	Display 802.11a or 802.11b Media Resource Reservation Control configurations.
monitor	Displays the 802.11a or 802.11b default Cisco radio monitoring.
network	Displays the 802.11a or 802.11b network configuration.
profile	Displays the 802.11a or 802.11b lightweight access point performance profiles.
receiver	Displays the configuration and statistics of the 802.11a or 802.11b receiver.
service-policy	Displays the Quality of Service (QoS) service policies for 802.11a or 802.11b radio for all Cisco access points.
summary	Displays the 802.11a or 802.11b Cisco lightweight access point name, channel, and transmit level summary.
txpower	Displays the 802.11a or 802.11b automatic transmit power assignment.
ccx global	Displays 802.11a or 802.11b Cisco Client eXtensions (CCX) information for all Cisco access points that are joined to the device.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
Cisco IOS XE 3.3SE	The load-info parameter was added.

This example shows how to display the automatic channel assignment configuration and statistics:

```
Device# show ap dot11 5ghz channel
Automatic Channel Assignment
  Channel Assignment Mode           : AUTO
  Channel Update Interval          : 12 Hours
  Anchor time (Hour of the day)    : 20
  Channel Update Contribution      : SNI.
  Channel Assignment Leader        : web (9.9.9.2)
  Last Run                         : 13105 seconds ago
  DCA Sensitivity Level            : MEDIUM (15 dB)
  DCA 802.11n Channel Width       : 40 Mhz
  Channel Energy Levels
    Minimum                        : unknown
    Average                        : unknown
```

```

Maximum : unknown
Channel Dwell Times
  Minimum : unknown
  Average : unknown
  Maximum : unknown
802.11a 5 GHz Auto-RF Channel List
Allowed Channel List : 36,40,44,48,52,56,60,64,149,153,1
57,161
Unused Channel List : 100,104,108,112,116,132,136,140,1
65
802.11a 4.9 GHz Auto-RF Channel List
Allowed Channel List :
Unused Channel List : 1,2,3,4,5,6,7,8,9,10,11,12,13,14,
15,16,17,18,19,20,21,22,23,24,25,26
DCA Outdoor AP option : Disabled

```

This example shows how to display the statistics for coverage hole detection:

```

Device# show ap dot11 5ghz coverage
Coverage Hole Detection
802.11a Coverage Hole Detection Mode : Enabled
802.11a Coverage Voice Packet Count : 100 packet(s)
802.11a Coverage Voice Packet Percentage : 50 %
802.11a Coverage Voice RSSI Threshold : -80dBm
802.11a Coverage Data Packet Count : 50 packet(s)
802.11a Coverage Data Packet Percentage : 50 %
802.11a Coverage Data RSSI Threshold : -80dBm
802.11a Global coverage exception level : 25
802.11a Global client minimum exception level : 3 clients

```

This example shows how to display Cisco radio RF group settings:

```

Device# show ap dot11 5ghz group
Radio RF Grouping

802.11a Group Mode : STATIC
802.11a Group Update Interval : 600 seconds
802.11a Group Leader : web(10.10.10.1)
802.11a Group Member : web(10.10.10.1)
                        nb1(172.13.21.45) (*Unreachable)
802.11a Last Run : 438 seconds ago

Mobility Agents RF membership information
-----
No of 802.11a MA RF-members : 0

```

This example shows how to display 802.11a RF event and performance logging:

```

Device# show ap dot11 5ghz logging
RF Event and Performance Logging

Channel Update Logging : Off
Coverage Profile Logging : Off
Foreign Profile Logging : Off
Load Profile Logging : Off
Noise Profile Logging : Off
Performance Profile Logging : Off
TxPower Update Logging : Off

```

This example shows how to display the 802.11a media stream configuration:

```

Device# show ap dot11 5ghz media-stream
Multicast-direct          : Disabled
Best Effort               : Disabled
Video Re-Direct          : Disabled
Max Allowed Streams Per Radio : Auto
Max Allowed Streams Per Client : Auto
Max Video Bandwidth      : 0
Max Voice Bandwidth      : 75
Max Media Bandwidth      : 85
Min PHY Rate (Kbps)      : 6000
Max Retry Percentage      : 80

```

This example shows how to display the radio monitoring for the 802.11b network:

```

Device# show ap dot11 5ghz monitor
Default 802.11a AP monitoring

802.11a Monitor Mode          : Enabled
802.11a Monitor Mode for Mesh AP Backhaul : disabled
802.11a Monitor Channels     : Country channels
802.11a RRM Neighbor Discover Type : Transparent
802.11a AP Coverage Interval : 180 seconds
802.11a AP Load Interval    : 60 seconds
802.11a AP Noise Interval   : 180 seconds
802.11a AP Signal Strength Interval : 60 seconds

```

This example shows how to display the global configuration and statistics of an 802.11a profile:

```

Device# show ap dot11 5ghz profile
Default 802.11a AP performance profiles
802.11a Global Interference threshold..... 10%
802.11a Global noise threshold..... -70 dBm
802.11a Global RF utilization threshold..... 80%
802.11a Global throughput threshold..... 1000000 bps
802.11a Global clients threshold..... 12 clients
802.11a Global coverage threshold..... 12 dB
802.11a Global coverage exception level..... 80%
802.11a Global client minimum exception lev..... 3 clients

```

This example shows how to display the network configuration of an 802.11a profile:

```

Device# show ap dot11 5ghz network
802.11a Network : Enabled
11nSupport : Enabled
  802.11a Low Band : Enabled
  802.11a Mid Band : Enabled
  802.11a High Band : Enabled

802.11a Operational Rates
  802.11a 6M : Mandatory
  802.11a 9M : Supported
  802.11a 12M : Mandatory
  802.11a 18M : Supported
  802.11a 24M : Mandatory
  802.11a 36M : Supported
  802.11a 48M : Supported
  802.11a 54M : Supported
802.11n MCS Settings:
  MCS 0 : Supported
  MCS 1 : Supported
  MCS 2 : Supported
  MCS 3 : Supported
  MCS 4 : Supported

```



```
MCS 5 : Supported
MCS 6 : Supported
MCS 7 : Supported
MCS 8 : Supported
MCS 9 : Supported
MCS 10 : Supported
MCS 11 : Supported
MCS 12 : Supported
MCS 13 : Supported
MCS 14 : Supported
MCS 15 : Supported
MCS 16 : Supported
MCS 17 : Supported
MCS 18 : Supported
MCS 19 : Supported
MCS 20 : Supported
MCS 21 : Supported
MCS 22 : Supported
MCS 23 : Supported
802.11n Status:
A-MPDU Tx:
  Priority 0 : Enabled
  Priority 1 : Disabled
  Priority 2 : Disabled
  Priority 3 : Disabled
  Priority 4 : Enabled
  Priority 5 : Enabled
  Priority 6 : Disabled
  Priority 7 : Disabled
A-MSDU Tx:
  Priority 0 : Enabled
  Priority 1 : Enabled
  Priority 2 : Enabled
  Priority 3 : Enabled
  Priority 4 : Enabled
  Priority 5 : Enabled
  Priority 6 : Disabled
  Priority 7 : Disabled
Guard Interval : Any
Rifs Rx : Enabled
Beacon Interval : 100
CF Pollable mandatory : Disabled
CF Poll Request Mandatory : Disabled
CFP Period : 4
CFP Maximum Duration : 60
Default Channel : 36
Default Tx Power Level : 1
DTPC Status : Enabled
Fragmentation Threshold : 2346
Pico-Cell Status : Disabled
Pico-Cell-V2 Status : Disabled
TI Threshold : 0
Legacy Tx Beamforming setting : Disabled
Traffic Stream Metrics Status : Disabled
Expedited BW Request Status : Disabled
EDCA profile type check : default-wmm
Call Admission Control (CAC) configuration
Voice AC
  Voice AC - Admission control (ACM) : Disabled
  Voice Stream-Size : 84000
  Voice Max-Streams : 2
  Voice Max RF Bandwidth : 75
  Voice Reserved Roaming Bandwidth : 6
  Voice Load-Based CAC mode : Enabled
```

```

Voice tspec inactivity timeout : Enabled
CAC SIP-Voice configuration
SIP based CAC : Disabled
SIP call bandwidth : 64
SIP call bandwidth sample-size : 20
Video AC
Video AC - Admission control (ACM) : Disabled
Video max RF bandwidth : Infinite
Video reserved roaming bandwidth : 0

```

This example shows how to display the global configuration and statistics of an 802.11a profile:

```

Device# show ap dot11 5ghz receiver
Default 802.11a AP performance profiles
802.11a Global Interference threshold..... 10%
802.11a Global noise threshold..... -70 dBm
802.11a Global RF utilization threshold..... 80%
802.11a Global throughput threshold..... 1000000 bps
802.11a Global clients threshold..... 12 clients
802.11a Global coverage threshold..... 12 dB
802.11a Global coverage exception level..... 80%
802.11a Global client minimum exception lev..... 3 clients

```

This example shows how to display the global configuration and statistics of an 802.11a profile:

```

Device# show ap dot11 5ghz service-policy

```

This example shows how to display a summary of the 802.11b access point settings:

```

Device# show ap dot11 5ghz summary
AP Name  MAC Address      Admin State  Operation State  Channel  TxPower
-----  -
CJ-1240  00:21:1b:ea:36:60  ENABLED     UP                161     1( )
CJ-1130  00:1f:ca:cf:b6:60  ENABLED     UP                56*     1(*)

```

This example shows how to display the configuration and statistics of the 802.11a transmit power cost:

```

Device# show ap dot11 5ghz txpower
Automatic Transmit Power Assignment

Transmit Power Assignment Mode      : AUTO
Transmit Power Update Interval      : 600 seconds
Transmit Power Threshold             : -70 dBm
Transmit Power Neighbor Count        : 3 APs
Min Transmit Power                   : -10 dBm
Max Transmit Power                   : 30 dBm
Transmit Power Update Contribution   : SNI.
Transmit Power Assignment Leader     : web (10.10.10.1)
Last Run                             : 437 seconds ago

```

This example shows how to display the configuration and statistics of the 802.11a transmit power cost:

```

Device# show ap dot11 5ghz ccx global
802.11a Client Beacon Measurements:
disabled

```

Related Topics

[ap dot11 rrm channel dca](#), on page 40

show ap env summary

To show ap environment summary, use the **show ap env summary** command.

There is no keyword or argument.

Command Default None

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.7.0 E	This command was introduced.

This example shows how to show ap environment summary:

```
Device#show ap env summary
```

show ap ethernet statistics

To display Ethernet statistics for all Cisco lightweight access points, use the **show ap ethernet statistics** command.

show ap ethernet statistics

Syntax Description This command has no keywords and arguments.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display Ethernet statistics for all access points:

```
Device# show ap ethernet statistics
```

show ap gps-location summary

To show GPS location summary of all connected Cisco APs, use the **show ap gps-location summary** command.

There is no keyword or argument.

Command Default None

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.7.0 E	This command was introduced.

This example shows how to show GPS location summary of all connected Cisco APs:

```
Device# show ap gps-location summary
```

show ap groups

To display information about all access point groups that are defined in the system, use the **show ap groups** command.

show ap groups

Syntax Description This command has no keywords and arguments.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display information about all access point groups:

```
Device# show ap groups
```

show ap groups extended

To view information about all AP groups defined in the system in detail, use the **show ap groups extended** command.

show ap groups extended

Syntax Description **extended** Displays information about all AP groups defined in the system in detail.

Command Default None

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

show ap image

To display the images present on Cisco lightweight access points, use the **show ap image** command.

```
show ap image
```

Syntax Description
This command has no keywords and arguments.

Command Default
None

Command Modes
Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE
	Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display images on the access points:

```
Device# show ap image
```

show ap is-supported

To see if an AP model is supported or not, use the **show ap is-supported** command.

```
show ap is-supported model-part-number
```

Syntax Description
<i>model-part-number</i> Part number of the AP model. For example, AIR-LAP1142N-N-K9.

Command Default
None

Command Modes
Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.7.0E	This command was introduced.

This example shows how to check if an AP model is supported or not:

```
Device# show ap is-supported AIR-LAP1142N-N-K9
```

```
AP Support: Yes
```

show ap join stats summary

To display the last join error detail for a specific access point, use the **show ap join stats summary** command.

show ap join stats summary

Syntax Description	This command has no keywords and arguments.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines	To obtain the MAC address of the 802.11 radio interface, enter the show interface command on the access point.
-------------------------	---

This example shows how to display specific join information for an access point:

```
Device# show ap join stats summary
Number of APs : 1
```

Base MAC	Ethernet MAC	AP Name	IP Address	Status
c8f9.f91a.aa80	0000.0000.0000	N A	0.0.0.0	Not Joined

show ap link-encryption

To display the link encryption status, use the **show ap link-encryption** command.

show ap link-encryption

Syntax Description	This command has no keywords and arguments.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example show how to display the link-encryption status:

```
Device# show ap link-encryption
```

show ap mac-address

To display join-related statistics collected and last join error details for access points, use the **show ap mac-address** command.

```
show ap mac-address mac-address join stats {detailed | summary}
```

Syntax Description	
<i>mac-address</i>	Access point Ethernet MAC address or the MAC address of the 802.11 radio interface.
join stats	Displays join information and statistics for Cisco access points.
detailed	Displays all join-related statistics collected.
summary	Displays the last join error detail.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display join information for a specific access point that is trying to join the device:

```
Device# show ap mac-address d0c2.8267.8b00 join stats detailed
```

```
Discovery phase statistics
  Discovery requests received           : 6
  Successful discovery responses sent   : 6
  Unsuccessful discovery request processing : 0
  Reason for last unsuccessful discovery attempt : Not applicable
  Time at last successful discovery attempt : Nov 20 17:25:10.841
  Time at last unsuccessful discovery attempt : Not applicable

Join phase statistics
  Join requests received           : 3
  Successful join responses sent    : 3
  Unsuccessful join request processing : 0
  Reason for last unsuccessful join attempt : Not applicable
  Time at last successful join attempt : Nov 20 17:25:20.998
  Time at last unsuccessful join attempt : Not applicable

Configuration phase statistics
  Configuration requests received           : 8
  Successful configuration responses sent    : 3
  Unsuccessful configuration request processing : 0
  Reason for last unsuccessful configuration attempt : Not applicable
  Time at last successful configuration attempt : Nov 20 17:25:21.177
  Time at last unsuccessful configuration attempt : Not applicable
```

```

Last AP message decryption failure details
  Reason for last message decryption failure           : Not applicable

Last AP disconnect details
  Reason for last AP connection failure               : Number of message retransmission
  to the AP has reached maximum

Last join error summary
  Type of error that occurred last                   : AP got or has been disconnected

  Reason for error that occurred last                 : Number of message retransmission
  to the AP has reached maximum

  Time at which the last join error occurred         : Nov 20 17:22:36.438

```

This example shows how to display specific join information for an access point:

```

Device# show ap mac-address d0c2.8267.8b00 join stats detailed

Is the AP currently connected to controller..... No
Time at which the AP joined this controller last time..... Aug 21 12:50:36:061
Type of error that occurred last..... Lwapp join request
rejected
Reason for error that occurred last..... RADIUS authorization
is pending for the AP
Time at which the last join error occurred..... Aug 21 12:50:34:374

```

show ap monitor-mode summary

To display the current channel-optimized monitor mode settings, use the **show ap monitor-mode summary** command.

show ap monitor-mode summary

Syntax Description	This command has no keywords and arguments.						
Command Default	None						
Command Modes	Any command mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.2SE</td> <td>Cisco IOS XE 3.3SE</td> </tr> <tr> <td></td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE		This command was introduced.
Release	Modification						
Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE						
	This command was introduced.						

This example shows how to display current channel-optimized monitor mode settings:

```

Device# show ap monitor-mode summary

AP Name Ethernet MAC      Status  Scanning Channel List
-----
AP_004  xx:xx:xx:xx:xx:xx Tracking 1,6,11, 4

```


show ap name auto-rf

To display the auto-RF settings for a Cisco lightweight access point, use the **show ap name auto-rf** command.

```
show ap name ap-name auto-rf dot11 {24ghz | 5ghz}
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.								
	24ghz Displays the 2.4 GHz band.								
	5ghz Displays the 5 GHz band.								
Command Default	None								
Command Modes	Privileged EXEC.								
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.2SE</td> <td>Cisco IOS XE 3.3SE</td> </tr> <tr> <td>Cisco IOS XE 3.3SE</td> <td>Cisco IOS XE 3.3SE</td> </tr> <tr> <td colspan="2">This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE	This command was introduced.	
Release	Modification								
Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE								
Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE								
This command was introduced.									

This example shows how to display auto-RF information for an access point:

```
Device# show ap name AP01 auto-rf dot11 24ghz

Number of Slots                : 2
AP Name                        : TSIM_AP-1
MAC Address                    : 0000.2000.02f0
Slot ID                        : 0
Radio Type                     : 802.11b/g
Subband Type                   : All

Noise Information
  Noise Profile                : Failed
  Channel 1                    : 24 dBm
  Channel 2                    : 48 dBm
  Channel 3                    : 72 dBm
  Channel 4                    : 96 dBm
  Channel 5                    : 120 dBm
  Channel 6                    : -112 dBm
  Channel 7                    : -88 dBm
  Channel 8                    : -64 dBm
  Channel 9                    : -40 dBm
  Channel 10                   : -16 dBm
  Channel 11                   : 8 dBm

Interference Information
  Interference Profile         : Passed
  Channel 1                    : -128 dBm @ 0% busy
  Channel 2                    : -71 dBm @ 1% busy
  Channel 3                    : -72 dBm @ 1% busy
  Channel 4                    : -73 dBm @ 2% busy
  Channel 5                    : -74 dBm @ 3% busy
  Channel 6                    : -75 dBm @ 4% busy
  Channel 7                    : -76 dBm @ 5% busy
  Channel 8                    : -77 dBm @ 5% busy
  Channel 9                    : -78 dBm @ 6% busy
```

show ap name auto-rf

```

Channel 10                : -79 dBm @ 7% busy
Channel 11                : -80 dBm @ 8% busy

Rogue Histogram (20/40_ABOVE/40_BELOW)
Channel 36                : 27/ 4/ 0
Channel 40                : 13/ 0/ 0
Channel 44                : 5/ 0/ 0
Channel 48                : 6/ 0/ 1
Channel 52                : 4/ 0/ 0
Channel 56                : 5/ 0/ 0
Channel 60                : 1/ 3/ 0
Channel 64                : 3/ 0/ 0
Channel 100               : 0/ 0/ 0
Channel 104               : 0/ 0/ 0
Channel 108               : 0/ 1/ 0

Load Information
Load Profile              : Passed
Receive Utilization      : 10%
Transmit Utilization     : 20%
Channel Utilization      : 50%
Attached Clients         : 0 clients

Coverage Information
Coverage Profile          : Passed
Failed Clients           : 0 clients

Client Signal Strengths
RSSI -100 dBm            : 0 clients
RSSI -92 dBm             : 0 clients
RSSI -84 dBm             : 0 clients
RSSI -76 dBm             : 0 clients
RSSI -68 dBm             : 0 clients
RSSI -60 dBm             : 0 clients
RSSI -52 dBm             : 0 clients

Client Signal to Noise Ratios
SNR 0 dB                  : 0 clients
SNR 5 dB                  : 0 clients
SNR 10 dB                 : 0 clients
SNR 15 dB                 : 0 clients
SNR 20 dB                 : 0 clients
SNR 25 dB                 : 0 clients
SNR 30 dB                 : 0 clients
SNR 35 dB                 : 0 clients
SNR 40 dB                 : 0 clients
SNR 45 dB                 : 0 clients

Nearby APs
AP 0000.2000.0300 slot 0 : -68 dBm on 11 (10.10.10.1)
AP 0000.2000.0400 slot 0 : -68 dBm on 11 (10.10.10.1)
AP 0000.2000.0600 slot 0 : -68 dBm on 11 (10.10.10.1)

Radar Information

Channel Assignment Information
Current Channel Average Energy : 0 dBm
Previous Channel Average Energy : 0 dBm
Channel Change Count          : 0
Last Channel Change Time      : Wed Oct 17 08:13:36 2012
Recommended Best Channel      : 11

RF Parameter Recommendations
Power Level                   : 1

```

```

RTS/CTS Threshold           : 2347
Fragmentation Threshold    : 2346
Antenna Pattern             : 0

```

Persistent Interference Devices

show ap name bhmode

To display Cisco bridge backhaul mode, use the **show ap name bhmode** command.

```
show ap name ap-name bhmode
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE
	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE
	This command was introduced.	

This example shows how to display Cisco bridge backhaul mode of an access point:

```
Device# show ap name TSIM_AP-1 bhmode
```

show ap name bhrate

To display the Cisco bridge backhaul rate, use the **show ap name bhrate** command.

```
show ap name ap-name bhrate
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE
	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE
	This command was introduced.	

This example shows how to display the Cisco bridge backhaul rate for an access point:

```
Device# show ap name AP01 bhrate
```

show ap name cac voice

To display voice call admission control details for a specific Cisco lightweight access point, use the **show ap name cac voice** command.

show ap name *ap-name* cac voice

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.				
Command Default	None				
Command Modes	Any command mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.				

This example shows how to display voice call admission control details for an access point:

```
Device# show ap name AP01 cac voice
```

```
1) AP Name: AP01
```

```
=====
```

```
Wireless Bandwidth (In MeanTime mt)
```

Slot#	Radio	Calls	BW-Max	BW-Alloc	Bw-InUse (%age)
1	0	802.11b/g	0	23437	0
2	1	802.11a	0	23437	0

```
Wired Bandwidth (in Kbps)
```

Slot#	Wlan-ID	Wlan-Name	BW-Config	BW-Avail
1	0	1	maria-open	0
2	0	12	24	0
3	1	1	maria-open	0
4	1	12	24	0

show ap name config fnf

To view the Netflow input and output monitors for a Cisco AP, use the **show ap name config fnf** command.

show ap name *ap-name* config fnf

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point
fnf	Netflow input and output monitors for a Cisco AP
Command Default	None

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE
	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE
		This command was introduced.

show ap name dot11 call-control

To display call control information and the metrics for successful calls, use the **show ap name dot11 call-control** command.

```
show ap name ap-name dot11 {24ghz | 5ghz} call-control {call-info | metrics}
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point
24ghz	Displays the 2.4 GHz band.
5ghz	Displays the 5 GHz band.
call-info	Displays call information.
metrics	Displays call metrics.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE
	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE
		This command was introduced.

This example shows how to display metrics for successful calls for an access point:

```
Device# show ap name AP01 dot11 24ghz call-control metrics

Slot#      Call Count      Call Duration
-----
0          0                0
```

show ap name cable-modem

To show AP CAPWAP CCX on a specific AP, use the **show ap name cable-modem** command.

```
show ap name ap-name cable-modem
```

Syntax Description	<i>ap-name</i> Name of the specific AP.
---------------------------	---

show ap name capwap retransmit

Command Default	None
Command Modes	Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.7.0 E	This command was introduced.

This example shows how to show AP CAPWAP CCX on AP1:

```
Device# show ap name ap1 cable-modem
```

show ap name capwap retransmit

To display Control and Provisioning of Wireless Access Points (CAPWAP) retransmit settings, use the **show ap name capwap retransmit** command.

```
show ap name ap-name capwap retransmit
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display CAPWAP retransmit settings of an access point:

```
Device# show ap name AP01 capwap retransmit

AP Name      Retransmit Interval Retransmit Count
-----      -
AP01         3                   5
```

show ap name ccx rm

To display an access point's Cisco Client eXtensions (CCX) radio management status information, use the **show ap name ccx rm** command.

```
show ap name ap-name ccx rm status
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default	None
------------------------	------

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display CCX radio management information for an access point:

```
Device# show ap name AP01 ccx rm status
```

```
802.11b/g Radio
  Beacon Request           : Disabled
  Channel Load Request     : Disabled
  Frame Request            : Disabled
  Noise Histogram Request  : Disabled
  Path Loss Request        : Disabled
  Interval                  : 60
  Iteration                 : 0

802.11a Radio
  Beacon Request           : Disabled
  Channel Load Request     : Disabled
  Frame Request            : Disabled
  Noise Histogram Request  : Disabled
  Path Loss Request        : Disabled
  Interval                  : 60
  Iteration                 : 0
```

show ap name cdp

To display the Cisco Discovery Protocol (CDP) information for an access point, use the **show ap name cdp** command.

```
show ap name ap-name cdp [neighbors [detail]]
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.
neighbors	(Optional) Displays neighbors that are using CDP.
detail	(Optional) Displays details about a specific access point neighbor that is using CDP.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display CDP information for an access point:

```
Device# show ap name AP01 cdp neighbors detail
```

show ap name channel

To display the available channels for a specific mesh access point, use the **show ap name channel** command.

show ap name *ap-name* **channel**

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE
	Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the available channels for a particular access point:

```
Device# show ap name AP01 channel
```

```
Slot ID : 0
Allowed Channel List : 1, 2, 3, 4, 5, 6, 7, 8, 9
                    10, 11
Slot ID : 1
Allowed Channel List : 36, 40, 44, 48, 52, 56, 60, 64, 100
                    104, 108, 112, 116, 132, 136, 140, 149,
                    153
                    157, 161
```

show ap name config

To display common information and Ethernet VLAN tagging information for a specific Cisco lightweight access point, use the **show ap name config** command.

show ap name *ap-name* **config** {**ethernet** | **general**}

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

ethernet	Displays Ethernet tagging configuration information for an access point.
-----------------	--

general	Displays common information for an access point.
----------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE
	Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display Ethernet tagging information for an access point:

```
Device# show ap name AP01 config ethernet
```

```
VLAN Tagging Information for AP01
```

This example shows how to display common information for an access point:

```
Device# show ap name AP01 config general
```

```
Cisco AP Name                : AP01
Cisco AP Identifier           : 5
Country Code                  : US - United States
Regulatory Domain Allowed by Country : 802.11bg:-A      802.11a:-A
AP Country Code               : US - United States
AP Regulatory Domain           : Unconfigured
Switch Port Number            : Tel/0/1
MAC Address                   : 0000.2000.02f0
IP Address Configuration      : Static IP assigned
IP Address                    : 10.10.10.12
IP Netmask                    : 255.255.0.0
Gateway IP Address            : 10.10.10.1
Fallback IP Address Being Used : 10.10.10.12
Domain                         : Cisco
Name Server                   : 0.0.0.0
CAPWAP Path MTU               : 1485
Telnet State                   : Enabled
SSH State                      : Disabled
Cisco AP Location             : sanjose
Cisco AP Group Name           : default-group
Primary Cisco Controller Name  : CAPWAP Controller
Primary Cisco Controller IP Address : 10.10.10.1
Secondary Cisco Controller Name :
Secondary Cisco Controller IP Address : Not Configured
Tertiary Cisco Controller Name  :
Tertiary Cisco Controller IP Address : Not Configured
Administrative State           : Enabled
Operation State                : Registered
AP Mode                        : Local
AP Submode                     : Not Configured
Remote AP Debug                : Disabled
Logging Trap Severity Level    : informational
Software Version               : 7.4.0.5
Boot Version                   : 7.4.0.5
Stats Reporting Period         : 180
LED State                      : Enabled
PoE Pre-Standard Switch       : Disabled
PoE Power Injector MAC Address : Disabled
Power Type/Mode                : Power Injector/Normal Mode
Number of Slots                : 2
AP Model                       : 1140AG
AP Image                       : C1140-K9W8-M
IOS Version                    :
Reset Button                   :
AP Serial Number               : SIM1140K001
AP Certificate Type            : Manufacture Installed
Management Frame Protection Validation : Disabled
AP User Mode                   : Customized
AP User Name                   : cisco
AP 802.1X User Mode           : Not Configured
AP 802.1X User Name           : Not Configured
Cisco AP System Logging Host   : 255.255.255.255
AP Up Time                     : 15 days 16 hours 19 minutes 57
```

```

seconds
AP CAPWAP Up Time           : 4 minutes 56 seconds
Join Date and Time         : 10/18/2012 04:48:56
Join Taken Time           : 15 days 16 hours 15 minutes 0
seconds
Join Priority               : 1
Ethernet Port Duplex       : Auto
Ethernet Port Speed        : Auto
AP Link Latency            : Disabled
Rogue Detection            : Disabled
AP TCP MSS Adjust          : Disabled
AP TCP MSS Size            : 6146

```

show ap name config dot11

To display 802.11 configuration information that corresponds to specific Cisco lightweight access points, use the **show ap name config dot11** command.

```
show ap name ap-name config dot11 {24ghz | 49ghz | 58ghz | 5ghz | dual-band}
```

Syntax Description

<i>ap-name</i>	Name of the Cisco lightweight access point.
24ghz	Displays the 2.4 GHz band.
49ghz	Displays 802.11-4.9G network settings.
58ghz	Displays 802.11-5.8G network settings.
5ghz	Displays the 5 GHz band settings.
dual-band	Displays the dual band radio settings.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE, Cisco IOS XE 3.3SE, Cisco IOS XE 3.3SE	This command was introduced.
Cisco IOS XE 3.3SE	The dual-band parameter was added.

This example shows how to display 802.11b configuration information that corresponds to a specific Cisco lightweight access point:

```

Device# show ap name AP01 config dot11 24ghz

Cisco AP Identifier           : 5
Cisco AP Name                 : AP01
Country Code                  : US - United States
Regulatory Domain Allowed by Country : 802.11bg:-A      802.11a:-A
AP Country Code               : US - United States
AP Regulatory Domain          : -A
Switch Port Number           : Tel/0/1

```

```

MAC Address : 0000.2000.02f0
IP Address Configuration : Static IP assigned
IP Address : 10.10.10.12
IP Netmask : 255.255.0.0
Gateway IP Address : 10.10.10.1
Fallback IP Address Being Used : 10.10.10.12
Domain : Cisco
Name Server : 0.0.0.0
CAPWAP Path MTU : 1485
Telnet State : Enabled
SSH State : Disabled
Cisco AP Location : sanjose
Cisco AP Group Name : default-group
Administrative State : Enabled
Operation State : Registered
AP Mode : Local
AP Submode : Not Configured
Remote AP Debug : Disabled
Logging Trap Severity Level : informational
Software Version : 7.4.0.5
Boot Version : 7.4.0.5
Mini IOS Version : 3.0.51.0
Stats Reporting Period : 180
LED State : Enabled
PoE Pre-Standard Switch : Disabled
PoE Power Injector MAC Address : Disabled
Power Type/Mode : Power Injector/Normal Mode
Number of Slots : 2
AP Model : 1140AG
AP Image : C1140-K9W8-M
IOS Version :
Reset Button :
AP Serial Number : SIM1140K001
AP Certificate Type : Manufacture Installed
Management Frame Protection Validation : Disabled
AP User Mode : Customized
AP User Name : cisco
AP 802.1X User Mode : Not Configured
AP 802.1X User Name : Not Configured
Cisco AP System Logging Host : 255.255.255.255
AP Up Time : 15 days 17 hours 9 minutes 41
seconds
AP CAPWAP Up Time : 54 minutes 40 seconds
Join Date and Time : 10/18/2012 04:48:56
Join Taken Time : 15 days 16 hours 15 minutes 0
seconds

Attributes for Slot 0
Radio Type : 802.11n - 2.4 GHz
Administrative State : Enabled
Operation State : Up
Cell ID : 0

Station Configuration
Configuration : Automatic
Number of WLANs : 1
Medium Occupancy Limit : 100
CFP Period : 4
CFP Maximum Duration : 60
BSSID : 000020000200

Operation Rate Set
1000 Kbps : MANDATORY
2000 Kbps : MANDATORY

```

show ap name config dot11

```

5500 Kbps : MANDATORY
11000 Kbps : MANDATORY
6000 Kbps : SUPPORTED
9000 Kbps : SUPPORTED
12000 Kbps : SUPPORTED
18000 Kbps : SUPPORTED
24000 Kbps : SUPPORTED
36000 Kbps : SUPPORTED
48000 Kbps : SUPPORTED
54000 Kbps : SUPPORTED

MCS Set
MCS 0 : SUPPORTED
MCS 1 : SUPPORTED
MCS 2 : SUPPORTED
MCS 3 : SUPPORTED
MCS 4 : SUPPORTED
MCS 5 : SUPPORTED
MCS 6 : SUPPORTED
MCS 7 : SUPPORTED
MCS 8 : SUPPORTED
MCS 9 : SUPPORTED
MCS 10 : SUPPORTED
MCS 11 : SUPPORTED
MCS 12 : SUPPORTED
MCS 13 : SUPPORTED
MCS 14 : SUPPORTED
MCS 15 : SUPPORTED
MCS 16 : DISABLED
MCS 17 : DISABLED
MCS 18 : DISABLED
MCS 19 : DISABLED
MCS 20 : DISABLED
MCS 21 : DISABLED
MCS 22 : DISABLED
MCS 23 : DISABLED

Beacon Period : 100
Fragmentation Threshold : 2346
Multi Domain Capability Implemented : True
Multi Domain Capability Enabled : True
Country String : US

Multi Domain Capability
Configuration : Automatic
First Channel : 0
Number of Channels : 0
Country String : US

MAC Operation Parameters
Configuration : Automatic
Fragmentation Threshold : 2346
Packet Retry Limit : 64
Legacy Tx Beamforming Setting : Disabled

Tx Power
Number of Supported Power Levels : 8
Tx Power Level 1 : 20 dBm
Tx Power Level 2 : 17 dBm
Tx Power Level 3 : 14 dBm
Tx Power Level 4 : 11 dBm
Tx Power Level 5 : 8 dBm
Tx Power Level 6 : 5 dBm
Tx Power Level 7 : 2 dBm

```

```

Tx Power Level 8                : -1 dBm
Tx Power Configuration          : Automatic
Current Tx Power Level         : 1

Phy OFDM Parameters
Configuration                    : Automatic
Current Channel                  : 11
Extension Channel                : None
Channel Width                    : 20 MHz
Allowed Channel List            : 1, 2, 3, 4, 5, 6, 7, 8, 9
                                10, 11

TI Threshold                     : 0
Antenna Type                     : Internal
Internal Antenna Gain (in .5 dBi units) : 0
Diversity                        : Diversity enabled

802.11n Antennas
Tx                               : A, B, C
Rx                               : A, B, C

Performance Profile Parameters
Configuration                    : Automatic
Interference Threshold           : 10%
Noise Threshold                  : -70 dBm
RF Utilization Threshold         : 80%
Data Rate Threshold              : 1000000 bps
Client Threshold                 : 12 clients
Coverage SNR Threshold          : 15 dB
Coverage Exception Level         : 25%
Client Minimum Exception Level   : 3 clients
RTS/CTS Threshold               : 2347
Short Retry Limit                : 7
Long Retry Limit                 : 4
Max Tx MSDU Lifetime             : 512
Max Rx Lifetime                  : 512

CleanAir Management Information
CleanAir Capable                 : Yes
CleanAir Management Admin State  : Enabled
CleanAir Management Operation State : Up
Rapid Update Mode                : Disabled
Spectrum Expert connection       : Disabled
CleanAir NSI Key                  : 377313C8F290E246E640C4EF177BED
88
Spectrum Expert connections counter : 0
CleanAir Sensor State             : Configured

Rogue Containment Information
Containment Count                 : 0

```

show ap name config slot

To display configuration information for slots on a specific Cisco lightweight access point, use the **show ap name config slot** command.

```
show ap name ap-name config slot {0|1|2|3}
```

Syntax Description

ap-name Name of the Cisco lightweight access point.

show ap name config slot

0	Displays slot number 0.
1	Displays slot number 1.
2	Displays slot number 2.
3	Displays slot number 3.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display configuration information for slots on an access point:

```
Device# show ap name AP01 config slot 0
```

```

Cisco AP Identifier           : 3
Cisco AP Name                 : AP01
Country Code                  : US - United States
Regulatory Domain Allowed by Country : 802.11bg:-A      802.11a:-A
AP Country Code               : US - United States
AP Regulatory Domain          : -A
Switch Port Number            : Te1/0/1
MAC Address                    : 0000.2000.02f0
IP Address Configuration      : Static IP assigned
IP Address                    : 10.10.10.12
IP Netmask                    : 255.255.0.0
Gateway IP Address            : 10.10.10.1
Fallback IP Address Being Used : 10.10.10.12
Domain                         : Cisco
Name Server                   : 0.0.0.0
CAPWAP Path MTU               : 1485
Telnet State                   : Enabled
SSH State                      : Disabled
Cisco AP Location              : sanjose
Cisco AP Group Name            : default-group
Administrative State           : Enabled
Operation State                : Registered
AP Mode                        : Local
AP Submode                     : Not Configured
Remote AP Debug                : Disabled
Logging Trap Severity Level    : informational
Software Version               : 7.4.0.5
Boot Version                   : 7.4.0.5
Mini IOS Version               : 3.0.51.0
Stats Reporting Period         : 180
LED State                      : Enabled
PoE Pre-Standard Switch        : Disabled
PoE Power Injector MAC Address : Disabled
Power Type/Mode                : Power Injector/Normal Mode
Number of Slots                 : 2
AP Model                       : 1140AG
AP Image                       : C1140-K9W8-M
IOS Version                    :
Reset Button                   :

```

```

AP Serial Number                : SIM1140K001
AP Certificate Type             : Manufacture Installed
Management Frame Protection Validation : Disabled
AP User Mode                   : Customized
AP User Name                   : cisco
AP 802.1X User Mode            : Not Configured
AP 802.1X User Name           : Not Configured
Cisco AP System Logging Host   : 255.255.255.255
AP Up Time                     : 15 days 16 hours 1 minute 19 s
econds
AP CAPWAP Up Time              : 20 hours 21 minutes 37 seconds

Join Date and Time             : 10/17/2012 08:13:36
Join Taken Time                : 14 days 19 hours 39 minutes 41
seconds

Attributes for Slot 0
Radio Type                     : 802.11n - 2.4 GHz
Administrative State           : Enabled
Operation State                : Up
Cell ID                        : 0

Station Configuration
Configuration                   : Automatic
Number of WLANs                : 1
Medium Occupancy Limit         : 100
CFP Period                     : 4
CFP Maximum Duration           : 60
BSSID                          : 000020000200

Operation Rate Set
1000 Kbps                      : MANDATORY
2000 Kbps                      : MANDATORY
5500 Kbps                      : MANDATORY
11000 Kbps                     : MANDATORY
6000 Kbps                      : SUPPORTED
9000 Kbps                      : SUPPORTED
12000 Kbps                     : SUPPORTED
18000 Kbps                     : SUPPORTED
24000 Kbps                     : SUPPORTED
36000 Kbps                     : SUPPORTED
48000 Kbps                     : SUPPORTED
54000 Kbps                     : SUPPORTED

MCS Set
MCS 0                          : SUPPORTED
MCS 1                          : SUPPORTED
MCS 2                          : SUPPORTED
MCS 3                          : SUPPORTED
MCS 4                          : SUPPORTED
MCS 5                          : SUPPORTED
MCS 6                          : SUPPORTED
MCS 7                          : SUPPORTED
MCS 8                          : SUPPORTED
MCS 9                          : SUPPORTED
MCS 10                         : SUPPORTED
MCS 11                         : SUPPORTED
MCS 12                         : SUPPORTED
MCS 13                         : SUPPORTED
MCS 14                         : SUPPORTED
MCS 15                         : SUPPORTED
MCS 16                         : DISABLED
MCS 17                         : DISABLED
MCS 18                         : DISABLED

```

show ap name config slot

```

MCS 19 : DISABLED
MCS 20 : DISABLED
MCS 21 : DISABLED
MCS 22 : DISABLED
MCS 23 : DISABLED

Beacon Period : 100
Fragmentation Threshold : 2346
Multi Domain Capability Implemented : True
Multi Domain Capability Enabled : True
Country String : US

Multi Domain Capability
Configuration : Automatic
First Channel : 0
Number of Channels : 0
Country String : US

MAC Operation Parameters
Configuration : Automatic
Fragmentation Threshold : 2346
Packet Retry Limit : 64

Tx Power
Number of Supported Power Levels : 8
Tx Power Level 1 : 20 dBm
Tx Power Level 2 : 17 dBm
Tx Power Level 3 : 14 dBm
Tx Power Level 4 : 11 dBm
Tx Power Level 5 : 8 dBm
Tx Power Level 6 : 5 dBm
Tx Power Level 7 : 2 dBm
Tx Power Level 8 : -1 dBm
Tx Power Configuration : Automatic
Current Tx Power Level : 1

Phy OFDM Parameters
Configuration : Automatic
Current Channel : 11
Extension Channel : None
Channel Width : 20 MHz
Allowed Channel List : 1, 2, 3, 4, 5, 6, 7, 8, 9
10, 11
TI Threshold : 0
Antenna Type : Internal
Internal Antenna Gain (in .5 dBi units) : 0
Diversity : Diversity enabled

802.11n Antennas
Tx : A, B, C
Rx : A, B, C

Performance Profile Parameters
Configuration : Automatic
Interference Threshold : 10%
Noise Threshold : -70 dBm
RF Utilization Threshold : 80%
Data Rate Threshold : 1000000 bps
Client Threshold : 12 clients
Coverage SNR Threshold : 15 dB
Coverage Exception Level : 25%
Client Minimum Exception Level : 3 clients

```



```
Rogue Containment Information
  Containment Count           : 0
```

show ap name core-dump

To display the memory core dump information for a lightweight access point, use the **show ap name core-dump** command.

```
show ap name ap-name core-dump
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the memory core dump information:

```
Device# show ap name 3602a core-dump

TFTP server IP : 172.31.25.21
Memory core dump file : 3602a.dump
Memory core dump file compressed : Disabled
```

Related Topics

[ap name core-dump](#), on page 59

show ap name data-plane

To display the data plane status of a specific Cisco lightweight access point, use the **show ap name data-plane** command.

```
show ap name ap-name data-plane
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the data plane status of an access point:

```
Device# show ap name AP01 data-plane
```

AP Name	Min Data Round Trip	Data Round Trip	Max Data Round Trip	Last Update
AP01	0.000s	0.000s	0.000s	00:00:00

show ap name dot11

To display 802.11a or 802.11b configuration information that corresponds to specific Cisco lightweight access points, use the **show ap name dot11** command.

```
show ap name ap-name dot11 {24ghz | 5ghz} {ccx | cdp | profile | service-policy output | stats | tsm}
{allclient-mac}}
```

Syntax Description

<i>ap-name</i>	Name of the Cisco lightweight access point.
24ghz	Displays the 2.4 GHz band.
5ghz	Displays the 5 GHz band.
ccx	Displays the Cisco Client eXtensions (CCX) radio management status information.
cdp	Displays Cisco Discovery Protocol (CDP) information.
profile	Displays configuration and statistics of 802.11 profiling.
service-policy output	Displays downstream service policy information.
stats	Displays Cisco lightweight access point statistics.
tsm	Displays 802.11 traffic stream metrics statistics.
all	Displays the list of all access points to which the client has associations.
<i>client-mac</i>	MAC address of the client.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the service policy that is associated with the access point:

```
Device# show ap name test-ap dot11 24ghz service-policy output
```

```
Policy Name : test-ap1
```

Policy State : Installed

This example shows how to display the CCX RRM 802.11 configuration for a specific access point:

```
Device# show ap name AP01 dot11 24ghz ccx
```

This example show how to display CDP information for a specific access point:

```
Device# show ap name AP01 dot11 24ghz cdp
```

AP Name	AP CDP State
AP03	Disabled

This example show how to display the configuration and statistics of 802.11b profiling for a specific access point:

```
Device# show ap name AP01 dot11 24ghz profile
```

```
802.11b Cisco AP performance profile mode      : GLOBAL
802.11b Cisco AP Interference threshold      : 10 %
802.11b Cisco AP noise threshold            : -70 dBm
802.11b Cisco AP RF utilization threshold    : 80 %
802.11b Cisco AP throughput threshold      : 1000000 bps
802.11b Cisco AP clients threshold         : 12 clients
```

This example show how to display downstream service policy information for a specific access point:

```
Device# show ap name AP01 dot11 24ghz service-policy output
```

```
Policy Name : def-11gn
Policy State : Installed
```

This example show how to display statistics for a specific access point:

```
Device# show ap name AP01 dot11 24ghz stats
```

```
Number of Users.....: 0
TxFragmentCount.....: 0
MulticastTxFrameCnt.....: 0
FailedCount.....: 0
RetryCount.....: 0
MultipleRetryCount.....: 0
FrameDuplicateCount.....: 0
RtsSuccessCount.....: 0
RtsFailureCount.....: 0
AckFailureCount.....: 0
RxIncompleteFragment.....: 0
MulticastRxFrameCnt.....: 0
FcsErrorCount.....: 0
TxFrameCount.....: 0
WepUndecryptableCount.....: 0
TxFramesDropped.....: 0

Call Admission Control (CAC) Stats
Voice Bandwidth in use(% of config bw).....: 0
Video Bandwidth in use(% of config bw).....: 0
Total BW in use for Voice(%).....: 0
Total BW in use for SIP Preferred call(%).....: 0
```

show ap name dot11 cleanair

```

Load based Voice Call Stats
  Total channel MT free.....: 0
  Total voice MT free.....: 0
  Na Direct.....: 0
  Na Roam.....: 0

WMM TSPEC CAC Call Stats
  Total num of voice calls in progress.....: 0
  Num of roaming voice calls in progress.....: 0
  Total Num of voice calls since AP joined.....: 0
  Total Num of roaming calls since AP joined.....: 0
  Total Num of exp bw requests received.....: 0
  Total Num of exp bw requests admitted.....: 0
  Num of voice calls rejected since AP joined....: 0
  Num of roam calls rejected since AP joined.....: 0
  Num of calls rejected due to insufficient bw....: 0
  Num of calls rejected due to invalid params....: 0
  Num of calls rejected due to PHY rate.....: 0
  Num of calls rejected due to QoS policy.....: 0

SIP CAC Call Stats
  Total Num of calls in progress.....: 0
  Num of roaming calls in progress.....: 0
  Total Num of calls since AP joined.....: 0
  Total Num of roaming calls since AP joined.....: 0
  Total Num of Preferred calls received.....: 0
  Total Num of Preferred calls accepted.....: 0
  Total Num of ongoing Preferred calls.....: 0
  Total Num of calls rejected(Insuff BW).....: 0
  Total Num of roam calls rejected(Insuff BW)....: 0

Band Select Stats
  Num of dual band client .....: 0
  Num of dual band client added.....: 0
  Num of dual band client expired .....: 0
  Num of dual band client replaced.....: 0
  Num of dual band client detected .....: 0
  Num of suppressed client .....: 0
  Num of suppressed client expired.....: 0
  Num of suppressed client replaced.....: 0

```

This example show how to display the traffic stream configuration for all clients that correspond to a specific access point:

```
Device# show ap name AP01 dot11 24ghz tsm all
```

show ap name dot11 cleanair

To display CleanAir configuration information that corresponds to an access point, use the **show ap name dot11 cleanair** command.

```
show ap name ap-name dot11 {24ghz | 5ghz} cleanair {air-quality | device}
```

Syntax Description

ap-name	Name of the Cisco lightweight access point.
24ghz	Displays the 2.4 GHz band.

5ghz	Displays the 5 GHz band.
cleanair	Displays CleanAir configuration information.
air-quality	Displays CleanAir air-quality (AQ) data.
device	Displays CleanAir interferers for an access point on the 5 GHz band.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display CleanAir air-quality information for an access point in the 802.11b network:

```
Device# show ap name AP01 dot11 24ghz cleanair air-quality
```

AQ = Air Quality

DFS = Dynamic Frequency Selection

This example shows how to display CleanAir interferers information for an access point in the 802.11b network:

```
Device# show ap name AP01 dot11 24ghz cleanair device
```

DC = Duty Cycle (%)

ISI = Interference Severity Index (1-Low Interference, 100-High Interference)

RSSI = Received Signal Strength Index (dBm)

DevID = Device ID

```
No ClusterID DevID Type AP Name ISI RSSI DC Channel
```

```
-- -----
```

show ap name env

To show AP environment on a specific AP, use the **show ap name env** command.

```
show ap name ap-name env
```

Syntax Description

ap-name Name of the specific AP.

Command Default

None

Command Modes

Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.7.0 E	This command was introduced.

This example shows how to show AP environment on AP1:

```
Device# show ap name ap1 env
```

show ap name ethernet statistics

To display the Ethernet statistics of a specific Cisco lightweight access point, use the **show ap name ethernet statistics** command.

```
show ap name ap-name ethernet statistics
```

Syntax Description	
	<i>ap-name</i> Name of the Cisco lightweight access point.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the Ethernet statistics of an access point:

```
Device# show ap name 3602a ethernet statistics
```

```
Ethernet Stats for AP 3602a
```

Interface Name	Status	Speed	Rx Packets	Tx Packets	Discarded Packets
GigabitEthernet0	UP	1000 Mbps	3793	5036	0

show ap name eventlog

To download and display the event log of a specific Cisco lightweight access point, use the **show ap name eventlog** command.

```
show ap name ap-name eventlog
```

Syntax Description	
	<i>ap-name</i> Name of the Cisco lightweight access point.

Command Default None

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display the event log for a specific access point:

```
Device# show ap name AP01 eventlog
```

show ap gps-location summary

To show GPS location summary of all connected Cisco APs, use the **show ap gps-location summary** command.

There is no keyword or argument.

Command Default	None
------------------------	------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	Cisco IOS XE 3.7.0 E	This command was introduced.

This example shows how to show GPS location summary of all connected Cisco APs:

```
Device# show ap gps-location summary
```

show ap name image

To display the detailed information about the predownloaded image for specified access points, use the **show ap name image** command.

```
show ap name ap-name image
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display images present on all access points:

show ap name inventory

```

Device# show ap name 3602a image

Total number of APs : 1

Number of APs
  Initiated           : 0
  Predownloading     : 0
  Completed predownloading : 0
  Not Supported       : 1
  Failed to Predownload : 0

AP Name      Primary Image  Backup Image  Predownload Status  Predownload Ver...  Next
  Retry Time  Retry Count
-----
3602a        10.0.1.234      0.0.0.0      Not supported       None                 NA

```

show ap name inventory

To display inventory information for an access point, use the **show ap name inventory** command.

show ap name *ap-name* **inventory**

Syntax Description	
	<i>ap-name</i> Name of the Cisco lightweight access point.

Command Default	
	None

Command Modes	
	Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display inventory information for an access point:

```

Device# show ap name 3502b inventory

NAME: Cisco AP      , DESCR: Cisco Wireless Access Point
PID: 1140AG  , VID: V01, SN: SIM1140K001

NAME:      , DESCR:
PID:  , VID:  , SN:

NAME:      , DESCR:
PID:  , VID:  , SN:
NAME: Cisco AP      , DESCR: Cisco Wireless Access Point
PID: 3502I  , VID: V01, SN: FTX1525E94A

NAME: Dot11Radio0   , DESCR: 802.11N 2.4GHz Radio
PID: UNKNOWN, VID:  , SN: FOC1522BLNA

```



```
NAME: Dot11Radio1 , DESCR: 802.11N 5GHz Radio
PID: UNKNOWN, VID: , SN: FOC1522BLNA
```

show ap name lan port

To display LAN information, use **show ap name lan port** command.

```
show ap name lan portsummary |port-id
```

Syntax Description	summary Displays brief summary for LAN information.				
	<i>port-id</i> Port ID of the port that the LAN information will be displayed.				
Command Default	None				
Command Modes	Privileged EXEC				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.7SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.7SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.7SE	This command was introduced.				

This example shows how to display the brief summary for LAN information:

```
Device# show ap name ap1 lan port summary
```

show ap name link-encryption

To display the link-encryption status for a specific Cisco lightweight access point, use the **show ap name link-encryption** command.

```
show ap name ap-name link-encryption
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.				
Command Default	None				
Command Modes	Any command mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.				

This example shows how to display the link-encryption status for a specific Cisco lightweight access point:

```
Device# show ap name AP01 link-encryption
```

AP Name	Encryption State	Dnstream Count	Upstream Count	Last Update
AP01	Disabled	0	0	Never

show ap name service-policy

To display service-policy information for a specific Cisco lightweight access point, use the **show ap name service-policy** command.

show ap name *ap-name* **service-policy**

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE	Cisco IOS XE 3.3SE
	Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display service-policy information for a specific Cisco lightweight access point:

```
Device# show ap name 3502b service-policy
```

```
NAME: Cisco AP      , DESCR: Cisco Wireless Access Point
PID: 3502I  , VID: V01, SN: FTX1525E94A
```

```
NAME: Dot11Radio0  , DESCR: 802.11N 2.4GHz Radio
PID: UNKNOWN, VID:  , SN: FOC1522BLNA
```

```
NAME: Dot11Radio1  , DESCR: 802.11N 5GHz Radio
PID: UNKNOWN, VID:  , SN: FOC1522BLNA
```

show ap name tcp-adjust-mss

To display TCP maximum segment size (MSS) for an access point, use the **show ap name tcp-adjust-mss** command.

show ap name *ap-name* **tcp-adjust-mss**

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
---------------------------	--

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display TCP MSS for an access point:

```
Device# show ap name AP01 tcp-adjust-mss
```

```
AP Name          TCP State      MSS Size
-----
AP01             Disabled      6146
```

show ap name wlan

To display the Basic Service Set Identifier (BSSID) value for each WLAN defined on an access point and to display WLAN statistics, use the **show ap name wlan** command.

```
show ap name ap-name wlan {dot11 {24ghz | 5ghz} | statistic}
```

Syntax Description	
<i>ap-name</i>	Name of the Cisco lightweight access point.
dot11	Displays 802.11 parameters.
24ghz	Displays 802.11b network settings.
5ghz	Displays 802.11a network settings.
statistic	Displays WLAN statistics.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display BSSID information of an access point in an 802.11b network:

```
Device# show ap name AP01 wlan dot11 24ghz
```

```
Site Name          : default-group
Site Description    :

WLAN ID  Interface  BSSID
-----
1        default    00:00:20:00:02:00
```

show ap name wlandot11 service policy

```
12          default      00:00:20:00:02:0b
```

This example shows how to display WLAN statistics for an access point:

```
Device# show ap name AP01 wlan statistic
```

```
WLAN ID   : 1
WLAN Profile Name : maria-open

EAP Id Request Msg Timeouts      : 0
EAP Id Request Msg Timeouts Failures : 0
EAP Request Msg Timeouts         : 0
EAP Request Msg Timeouts Failures : 0
EAP Key Msg Timeouts             : 0
EAP Key Msg Timeouts Failures    : 0
```

```
WLAN ID   : 12
WLAN Profile Name : 24

EAP Id Request Msg Timeouts      : 0
EAP Id Request Msg Timeouts Failures : 0
EAP Request Msg Timeouts         : 0
EAP Request Msg Timeouts Failures : 0
EAP Key Msg Timeouts             : 0
EAP Key Msg Timeouts Failures    : 0
```

show ap name wlandot11 service policy

To display the QoS policies for each Basic Service Set Identifier (BSSID) for an access point use commands

```
show apnameap -namewlan dot1124ghzservice-policy
```

```
show apnameap -namewlan dot115ghzservice-policy
```

Syntax Description	<i>ap- name</i> Name of the Cisco lightweight access point.				
	<i>service-policy</i> Service policy information for access point.				
Command Default	None				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.3SE	This command was introduced.				

Example

The following example shows how to display QoS policies for each BSSID.

```
Device# show ap name <ap-name> wlan dot11 24ghz service-policy
```

show ap slots

To display a slot summary of all connected Cisco lightweight access points, use the **show ap slots** command.

show ap slots

Syntax Description	This command has no keywords and arguments.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display a slot summary of all connected Cisco lightweight access points:

```
Controller# show ap slots
```

AP Name	Slots	AP Model	Slot0	Slot1	Slot2	Slot3
3602a	2	3502I	802.11b/g	802.11a	Unknown	Unknown

show ap summary

To display the status summary of all Cisco lightweight access points attached to the device, use the **show ap summary** command.

show ap summary

Syntax Description	This command has no keywords and arguments.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines	Use this command to display a list that contains each lightweight access point name, number of slots, manufacturer, MAC address, location, and the device port number.
-------------------------	--

This example shows how to display a summary of all connected access points:

```
Controller# show ap summary
```

show ap tcp-adjust-mss

```
Number of APs: 1
```

```
Global AP User Name: Cisco
Global AP Dot1x User Name: Not configured
```

AP Name	AP Model	Ethernet MAC	Radio MAC	State
3602a	3502I	003a.99eb.3fa8	d0c2.8267.8b00	Registered

show ap tcp-adjust-mss

To display information about the Cisco lightweight access point TCP Maximum Segment Size (MSS), use the **show ap tcp-adjust-mss** command.

show ap tcp-adjust-mss

Syntax Description	This command has no keywords and arguments.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to display information about the access point TCP MSS information:

```
Controller# show ap tcp-adjust-mss
```

AP Name	TCP State	MSS Size
3602a	Disabled	0

show ap universal summary

To show universal summary of all connected Cisco APs, use the **show ap universal summary** command.

There is no keyword or argument.

Command Default	None
------------------------	------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	Cisco IOS XE 3.7.0 E	This command was introduced.

This example shows how to show universal summary of all connected Cisco APs:

```
Device# show ap universal summary
```

show ap uptime

To display the up time of all connected Cisco lightweight access points, use the **show ap uptime** command.

```
show ap uptime
```

Syntax Description	This command has no keywords and arguments.	
Command Default	None	
Command Modes	Any command mode	
Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to the display up time of all connected access points:

```
Controller# show ap uptime
```

```
Number of APs : 1
```

```
Global AP User Name : Cisco
```

```
Global AP Dot1x User Name : Not configured
```

```
AP Name Ethernet MAC      AP Up Time                Association Up Time
-----
3602a  003a.99eb.3fa8  5 hours 13 minutes 40 seconds  5 hours 12 minutes 15 seconds
```

show wireless ap summary

To display the status summary of all wireless access points, use the **show wireless apsummary** command.

```
show wirelessap summary
```

Syntax Description	This command has no keywords and arguments.	
Command Default	None	
Command Modes	Any command mode	
Command History	Release	Modification
	10.4	This command was introduced

This example shows how to display a summary of all wireless access points:

```
Controller# show wireless ap summary
Sub-Domain Access Point Summary

Maximum AP limit: 1010
Total AP Licence Installed: 1000
Total AP Licence Available: 1000
Total AP joined :0
```

show wireless client ap

To display the clients on a Cisco lightweight access point, use the **show wireless client ap** command.

```
show wireless client ap [name ap-name] dot11 {24ghz | 5ghz}
```

Syntax Description

name <i>ap-name</i>	(Optional) Displays the name of the Cisco lightweight access point.
dot11	Displays 802.11 parameters.
24ghz	Displays the 2.4 GHz band.
5ghz	Displays the 5 GHz band.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

The **show client ap** command might list the status of automatically disabled clients. Use the **show exclusionlist** command to view clients on the exclusion list (blacklisted).

This example shows how to display client information on a specific Cisco lightweight access point in the 2.4 GHz band:

```
Device# show wireless client ap name AP01 dot11 24ghz

MAC Address          AP Id  Status      WLAN Id  Authenticated
-----
xx:xx:xx:xx:xx:xx  1      Associated  1        No
```

test ap name

To enable automatic testing of the path Maximum Transmit Unit (MTU) between the access point and the device, use the **test ap name** command.


```
test ap name ap-name pmtu {disable size size | enable}
```

Syntax Description	<i>ap-name</i> Name of the target Cisco lightweight access point.
pmtu	Tests the MTU configuration for the access point.
disable	Disables path MTU testing and manually configures the MTU value in bytes.
size <i>size</i>	Specifies the path MTU size. Note The range is from 576 to 1700.
enable	Enables the path MTU testing for the access point.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to disable the path MTU configuration for all access points associated to the device:

```
Controller# test ap name 3602a pmtu enable
```

test capwap ap name

To test Control and Provisioning of Wireless Access Points (CAPWAP) parameters for a specific Cisco lightweight access points, use the **test capwap ap name** command.

```
test capwap ap name ap-name {encryption {enable | disable} | message token}
```

Syntax Description	<i>ap-name</i> Name of the Cisco lightweight access point.
encryption	Tests the Datagram Transport Layer Security (DTLS) encryption.
enable	Tests if DTLS encryption is enabled.
disable	Tests if DTLS encryption is disabled.
message <i>token</i>	Specifies an RRM neighbor message to send.

Command Default None

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to test if DTLS encryption is enabled for a specific access point:

```
Controller# test capwap ap name 3602a encryption enable
```

This example shows how to test if DTLS encryption is disabled for a specific access point:

```
Controller# test capwap ap name 3602a encryption disable
```

trapflags ap

To enable the sending of specific Cisco lightweight access point traps, use the **trapflags ap** command. To disable the sending of Cisco lightweight access point traps, use the **no** form of this command.

```
trapflags ap {register | interfaceup}
no trapflags ap {register | interfaceup}
```

Syntax Description	register	interfaceup
	Enables sending a trap when a Cisco lightweight access point registers with a Cisco switch.	Enables sending a trap when a Cisco lightweight access point interface (A or B) comes up.

Command Default	Enabled
------------------------	---------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	Cisco IOS XE 3.2SE Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to prevent traps from sending access point-related traps:

```
Device(config)# no trapflags ap register
```