



Security

- [aaa accounting, on page 4](#)
- [aaa accounting dot1x, on page 7](#)
- [aaa accounting identity, on page 9](#)
- [aaa authentication dot1x, on page 11](#)
- [aaa authorization network, on page 12](#)
- [aaa new-model, on page 13](#)
- [aaa policy interface-config allow-subinterface, on page 15](#)
- [authentication host-mode, on page 16](#)
- [authentication mac-move permit, on page 18](#)
- [authentication priority, on page 19](#)
- [authentication violation, on page 22](#)
- [cisp enable, on page 24](#)
- [clear errdisable interface vlan, on page 25](#)
- [clear mac address-table, on page 26](#)
- [deny \(MAC access-list configuration\), on page 28](#)
- [device-role \(IPv6 snooping\), on page 32](#)
- [device-role \(IPv6 nd inspection\), on page 33](#)
- [device-tracking policy, on page 34](#)
- [dot1x critical \(global configuration\), on page 36](#)
- [dot1x pae, on page 37](#)
- [dot1x supplicant controlled transient, on page 38](#)
- [dot1x supplicant force-multicast, on page 39](#)
- [dot1x test eapol-capable, on page 40](#)
- [dot1x test timeout, on page 41](#)
- [dot1x timeout, on page 42](#)
- [enable password, on page 44](#)
- [enable secret, on page 46](#)
- [epm access-control open, on page 49](#)
- [ip access-list role-based, on page 50](#)
- [ip admission, on page 51](#)
- [ip admission name, on page 52](#)
- [ip dhcp snooping database, on page 54](#)
- [ip dhcp snooping information option format remote-id, on page 56](#)

- ip dhcp snooping verify no-relay-agent-address, on page 57
- ip http access-class, on page 58
- ip radius source-interface, on page 60
- ip source binding, on page 62
- ip ssh source-interface, on page 63
- ip verify source, on page 64
- ipv6 access-list, on page 65
- ipv6 snooping policy, on page 67
- key chain macsec, on page 68
- key config-key password-encrypt, on page 69
- limit address-count, on page 71
- mab request format attribute 32, on page 72
- macsec network-link, on page 74
- match (access-map configuration), on page 75
- mka policy (global configuration), on page 77
- mka pre-shared-key, on page 79
- authentication logging verbose, on page 80
- dot1x logging verbose, on page 81
- mab logging verbose, on page 82
- password encryption aes, on page 83
- permit (MAC access-list configuration), on page 85
- protocol (IPv6 snooping), on page 89
- radius server, on page 90
- sap mode-list (cts manual), on page 92
- security level (IPv6 snooping), on page 94
- server-private (RADIUS), on page 95
- show aaa clients, on page 97
- show aaa command handler, on page 98
- **show aaa local**, on page 99
- show aaa servers, on page 100
- show aaa sessions, on page 101
- show authentication brief, on page 102
- show authentication sessions, on page 105
- show cisp, on page 108
- show dot1x, on page 110
- show eap pac peer, on page 112
- show ip dhcp snooping statistics, on page 113
- show macsec, on page 116
- show mka policy, on page 118
- show mka session, on page 121
- show mka statistics, on page 124
- show mka summary, on page 127
- show radius server-group, on page 130
- show storm-control, on page 132
- show tech-support acl, on page 134
- show tech-support identity, on page 138

- [show vlan access-map](#), on page 147
- [show vlan filter](#), on page 148
- [show vlan group](#), on page 149
- [storm-control](#), on page 150
- [switchport port-security aging](#), on page 153
- [switchport port-security mac-address](#), on page 155
- [switchport port-security maximum](#), on page 157
- [switchport port-security violation](#), on page 159
- [tacacs server](#), on page 161
- [tracking \(IPv6 snooping\)](#), on page 162
- [trusted-port](#), on page 164
- [username](#), on page 165
- [vlan access-map](#), on page 170
- [vlan filter](#), on page 172
- [vlan group](#), on page 173

aaa accounting

To enable authentication, authorization, and accounting (AAA) accounting of requested services for billing or security purposes when you use RADIUS or TACACS+, use the **aaa accounting** command in global configuration mode. To disable AAA accounting, use the **no** form of this command.

```
aaa accounting {auth-proxy | system | network | exec | connections | commands level}
{default | list-name} {start-stop | stop-only | none} [broadcast] group group-name
no aaa accounting {auth-proxy | system | network | exec | connections | commands level}
{default | list-name} {start-stop | stop-only | none} [broadcast] group group-name
```

Syntax Description

auth-proxy	Provides information about all authenticated-proxy user events.
system	Performs accounting for all system-level events not associated with users, such as reloads.
network	Runs accounting for all network-related service requests.
exec	Runs accounting for EXEC shell session. This keyword might return user profile information such as what is generated by the autocommand command.
connection	Provides information about all outbound connections made from the network access server.
commands level	Runs accounting for all commands at the specified privilege level. Valid privilege level entries are integers from 0 through 15.
default	Uses the listed accounting methods that follow this argument as the default list of methods for accounting services.
<i>list-name</i>	Character string used to name the list of at least one of the accounting methods described in
start-stop	Sends a "start" accounting notice at the beginning of a process and a "stop" accounting notice at the end of a process. The "start" accounting record is sent in the background. The requested user process begins regardless of whether the "start" accounting notice was received by the accounting server.
stop-only	Sends a "stop" accounting notice at the end of the requested user process.
none	Disables accounting services on this line or interface.
broadcast	(Optional) Enables sending accounting records to multiple AAA servers. Simultaneously sends accounting records to the first server in each group. If the first server is unavailable, fail over occurs using the backup servers defined within that group.
<i>group groupname</i>	At least one of the keywords described in Table 1: AAA accounting Methods, on page 5

Command Default

AAA accounting is disabled.

Command Modes

Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Use the **aaa accounting** command to enable accounting and to create named method lists defining specific accounting methods on a per-line or per-interface basis.

Table 1: AAA accounting Methods

Keyword	Description
group radius	Uses the list of all RADIUS servers for authentication as defined by the aaa group server radius command.
group tacacs+	Uses the list of all TACACS+ servers for authentication as defined by the aaa group server tacacs+ command.
group <i>group-name</i>	Uses a subset of RADIUS or TACACS+ servers for accounting as defined by the server group <i>group-name</i> .

In [Table 1: AAA accounting Methods, on page 5](#), the **group radius** and **group tacacs+** methods refer to a set of previously defined RADIUS or TACACS+ servers. Use the **radius server** and **tacacs server** commands to configure the host servers. Use the **aaa group server radius** and **aaa group server tacacs+** commands to create a named group of servers.

Cisco IOS software supports the following two methods of accounting:

- **RADIUS**—The network access server reports user activity to the RADIUS security server in the form of accounting records. Each accounting record contains accounting attribute-value (AV) pairs and is stored on the security server.
- **TACACS+**—The network access server reports user activity to the TACACS+ security server in the form of accounting records. Each accounting record contains accounting attribute-value (AV) pairs and is stored on the security server.

Method lists for accounting define the way accounting will be performed. Named accounting method lists enable you to designate a particular security protocol to be used on specific lines or interfaces for particular types of accounting services. Create a list by entering the *list-name* and the *method*, where *list-name* is any character string used to name this list (excluding the names of methods, such as radius or tacacs+) and *method* identifies the methods to be tried in sequence as given.

If the **aaa accounting** command for a particular accounting type is issued without a named method list specified, the default method list is automatically applied to all interfaces or lines (where this accounting type applies) except those that have a named method list explicitly defined. (A defined method list overrides the default method list.) If no default method list is defined, then no accounting takes place.



Note System accounting does not use named accounting lists; you can only define the default list for system accounting.

For minimal accounting, include the **stop-only** keyword to send a stop record accounting notice at the end of the requested user process. For more accounting, you can include the **start-stop** keyword, so that RADIUS

or TACACS+ sends a start accounting notice at the beginning of the requested process and a stop accounting notice at the end of the process. Accounting is stored only on the RADIUS or TACACS+ server. The none keyword disables accounting services for the specified line or interface.

When AAA accounting is activated, the network access server monitors either RADIUS accounting attributes or TACACS+ AV pairs pertinent to the connection, depending on the security method you have implemented. The network access server reports these attributes as accounting records, which are then stored in an accounting log on the security server. For a list of supported RADIUS accounting attributes, refer to the appendix RADIUS Attributes in the *Cisco IOS Security Configuration Guide*. For a list of supported TACACS+ accounting AV pairs, refer to the appendix TACACS+ Attribute-Value Pairs in the *Cisco IOS Security Configuration Guide*.



Note This command cannot be used with TACACS or extended TACACS.

This example defines a default commands accounting method list, where accounting services are provided by a TACACS+ security server, set for privilege level 15 commands with a stop-only restriction:

```
Device(config)# aaa accounting commands 15 default stop-only group TACACS+
```

This example defines a default auth-proxy accounting method list, where accounting services are provided by a TACACS+ security server with a stop-only restriction. The aaa accounting commands activates authentication proxy accounting.

```
Device(config)# aaa new model
Device(config)# aaa authentication login default group TACACS+
Device(config)# aaa authorization auth-proxy default group TACACS+
Device(config)# aaa accounting auth-proxy default start-stop group TACACS+
```

aaa accounting dot1x

To enable authentication, authorization, and accounting (AAA) accounting and to create method lists defining specific accounting methods on a per-line or per-interface basis for IEEE 802.1x sessions, use the **aaa accounting dot1x** command in global configuration mode. To disable IEEE 802.1x accounting, use the **no** form of this command.

```
aaa accounting dot1x {name | default} start-stop {broadcast group {name | radius | tacacs+}
[group {name | radius | tacacs+} ... ] | group {name | radius | tacacs+} [group
{name | radius | tacacs+} ... ]}
no aaa accounting dot1x {name | default}
```

Syntax Description

name	Name of a server group. This is optional when you enter it after the broadcast group and group keywords.
default	Specifies the accounting methods that follow as the default list for accounting services.
start-stop	Sends a start accounting notice at the beginning of a process and a stop accounting notice at the end of a process. The start accounting record is sent in the background. The requested user process begins regardless of whether or not the start accounting notice was received by the accounting server.
broadcast	Enables accounting records to be sent to multiple AAA servers and sends accounting records to the first server in each group. If the first server is unavailable, the switch uses the list of backup servers to identify the first server.
group	Specifies the server group to be used for accounting services. These are valid server group names: <ul style="list-style-type: none"> • name — Name of a server group. • radius — Lists of all RADIUS hosts. • tacacs+ — Lists of all TACACS+ hosts. <p>The group keyword is optional when you enter it after the broadcast group and group keywords. You can enter more than optional group keyword.</p>
radius	(Optional) Enables RADIUS accounting.
tacacs+	(Optional) Enables TACACS+ accounting.

Command Default

AAA accounting is disabled.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

This command requires access to a RADIUS server.

We recommend that you enter the **dot1x reauthentication** interface configuration command before configuring IEEE 802.1x RADIUS accounting on an interface.

This example shows how to configure IEEE 802.1x accounting:

```
Device(config)# aaa new-model  
Device(config)# aaa accounting dot1x default start-stop group radius
```


aaa accounting identity

To enable authentication, authorization, and accounting (AAA) accounting for IEEE 802.1x, MAC authentication bypass (MAB), and web authentication sessions, use the **aaa accounting identity** command in global configuration mode. To disable IEEE 802.1x accounting, use the **no** form of this command.

```
aaa accounting identity {name | default} start-stop {broadcast group {name | radius | tacacs+}
[group {name | radius | tacacs+} ... ] | group {name | radius | tacacs+} [group
{name | radius | tacacs+} ... ]}
no aaa accounting identity {name | default}
```

Syntax Description

name	Name of a server group. This is optional when you enter it after the broadcast group and group keywords.
default	Uses the accounting methods that follow as the default list for accounting services.
start-stop	Sends a start accounting notice at the beginning of a process and a stop accounting notice at the end of a process. The start accounting record is sent in the background. The requested-user process begins regardless of whether or not the start accounting notice was received by the accounting server.
broadcast	Enables accounting records to be sent to multiple AAA servers and send accounting records to the first server in each group. If the first server is unavailable, the switch uses the list of backup servers to identify the first server.
group	Specifies the server group to be used for accounting services. These are valid server group names: <ul style="list-style-type: none"> • name — Name of a server group. • radius — Lists of all RADIUS hosts. • tacacs+ — Lists of all TACACS+ hosts. <p>The group keyword is optional when you enter it after the broadcast group and group keywords. You can enter more than optional group keyword.</p>
radius	(Optional) Enables RADIUS authorization.
tacacs+	(Optional) Enables TACACS+ accounting.

Command Default

AAA accounting is disabled.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

To enable AAA accounting identity, you need to enable policy mode. To enable policy mode, enter the **authentication display new-style** command in privileged EXEC mode.

This example shows how to configure IEEE 802.1x accounting identity:

```
Device# authentication display new-style
```

Please note that while you can revert to legacy style configuration at any time unless you have explicitly entered new-style configuration, the following caveats should be carefully read and understood.

- (1) If you save the config in this mode, it will be written to NVRAM in NEW-style config, and if you subsequently reload the router without reverting to legacy config and saving that, you will no longer be able to revert.
- (2) In this and legacy mode, Webauth is not IPv6-capable. It will only become IPv6-capable once you have entered new-style config manually, or have reloaded with config saved in 'authentication display new' mode.

```
Device# configure terminal
```

```
Device(config)# aaa accounting identity default start-stop group radius
```

aaa authentication dot1x

To specify the authentication, authorization, and accounting (AAA) method to use on ports complying with the IEEE 802.1x authentication, use the **aaa authentication dot1x** command in global configuration mode on the switch stack or on a standalone switch. To disable authentication, use the **no** form of this command.

```
aaa authentication dot1x {default} method1
no aaa authentication dot1x {default} method1
```

Syntax Description	<p>default The default method when a user logs in. Use the listed authentication method that follows this argument.</p> <hr/> <p><i>method1</i> Specifies the server authentication. Enter the group radius keywords to use the list of all RADIUS servers for authentication.</p> <p>Note Though other keywords are visible in the command-line help strings, only the default and group radius keywords are supported.</p>						
Command Default	No authentication is performed.						
Command Modes	Global configuration						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.3SE</td> <td>Cisco IOS XE 3.3SE</td> </tr> <tr> <td></td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE		This command was introduced.
Release	Modification						
Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE						
	This command was introduced.						

Usage Guidelines The **method** argument identifies the method that the authentication algorithm tries in the specified sequence to validate the password provided by the client. The only method that is IEEE 802.1x-compliant is the **group radius** method, in which the client data is validated against a RADIUS authentication server.

If you specify **group radius**, you must configure the RADIUS server by entering the **radius-server host** global configuration command.

Use the **show running-config** privileged EXEC command to display the configured lists of authentication methods.

This example shows how to enable AAA and how to create an IEEE 802.1x-compliant authentication list. This authentication first tries to contact a RADIUS server. If this action returns an error, the user is not allowed access to the network.

```
Device(config)# aaa new-model
Device(config)# aaa authentication dot1x default group radius
```

aaa authorization network

To the configure the switch to use user-RADIUS authorization for all network-related service requests, such as IEEE 802.1x VLAN assignment, use the **aaa authorization network** command in global configuration mode. To disable RADIUS user authorization, use the **no** form of this command

aaa authorization network default group radius
no aaa authorization network default

Syntax Description	default group radius Use the list of all RADIUS hosts in the server group as the default authorization list.						
Command Default	Authorization is disabled.						
Command Modes	Global configuration						
Command History	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Release</th> <th style="text-align: left;">Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.3SE</td> <td>Cisco IOS XE 3.3SE</td> </tr> <tr> <td></td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE		This command was introduced.
Release	Modification						
Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE						
	This command was introduced.						

Usage Guidelines Use the **aaa authorization network default group radius** global configuration command to allow the switch to download IEEE 802.1x authorization parameters from the RADIUS servers in the default authorization list. The authorization parameters are used by features such as VLAN assignment to get parameters from the RADIUS servers.

Use the **show running-config** privileged EXEC command to display the configured lists of authorization methods.

This example shows how to configure the switch for user RADIUS authorization for all network-related service requests:

```
Device(config)# aaa authorization network default group radius
```

aaa new-model

To enable the authentication, authorization, and accounting (AAA) access control model, issue the **aaa new-model** command in global configuration mode. To disable the AAA access control model, use the **no** form of this command.

```
aaa new-model
no aaa new-model
```

Syntax Description This command has no arguments or keywords.

Command Default AAA is not enabled.

Command Modes Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines This command enables the AAA access control system.

If the **login local** command is configured for a virtual terminal line (VTY), and the **aaa new-model** command is removed, you must reload the switch to get the default configuration or the **login** command. If the switch is not reloaded, the switch defaults to the **login local** command under the VTY.



Note We do not recommend removing the **aaa new-model** command.

The following example shows this restriction:

```
Device(config)# aaa new-model
Device(config)# line vty 0 15
Device(config-line)# login local
Device(config-line)# exit
Device(config)# no aaa new-model
Device(config)# exit
Device# show running-config | b line vty

line vty 0 4
  login local !<=== Login local instead of "login"
line vty 5 15
  login local
!
```

Examples

The following example initializes AAA:

```
Device(config)# aaa new-model
Device(config)#
```

Related Commands	Command	Description
	aaa accounting	Enables AAA accounting of requested services for billing or security purposes.
	aaa authentication arap	Enables an AAA authentication method for ARAP using TACACS+.
	aaa authentication enable default	Enables AAA authentication to determine if a user can access the privileged command level.
	aaa authentication login	Sets AAA authentication at login.
	aaa authentication ppp	Specifies one or more AAA authentication method for use on serial interfaces running PPP.
	aaa authorization	Sets parameters that restrict user access to a network.

aaa policy interface-config allow-subinterface

To enable authentication, authorization, and accounting (AAA) Link Control Protocol (LCP) interface configuration policy parameters, issue the **aaa policy interface-config allow-subinterface** command in global configuration mode. To disable LCP interface configuration policy parameters, use the **no** form of this command.

```
aaa policy interface-config allow-subinterface
no aaa policy interface-config allow-subinterface
```

Syntax Description

interface-config Specifies the LCP interface configuration policy parameters.

allow-subinterface Specifies not to create a full virtual access interface by default.

Command Modes

Global configuration (config)

Command History

Release	Modification
Cisco IOS XE 3.6.0E	This command was introduced.

Usage Guidelines

Use the interface-config keyword to apply interface configuration mode commands on the virtual access interface associated with the session.

Examples

The following example shows how to enable AAA LCP interface configuration policy parameters:

```
Device# configure terminal
Device(config)# aaa new-model
Device(config)# aaa policy interface-config allow-subinterface
```

Related Commands

Command	Description
aaa new-model	Enables the AAA access control model.

authentication host-mode

To set the authorization manager mode on a port, use the **authentication host-mode** command in interface configuration mode. To return to the default setting, use the **no** form of this command.

authentication host-mode { **multi-auth** | **multi-domain** | **multi-host** | **single-host** }
no authentication host-mode

Syntax Description		
multi-auth	Enables multiple-authorization mode (multi-auth mode) on the port.	
multi-domain	Enables multiple-domain mode on the port.	
multi-host	Enables multiple-host mode on the port.	
single-host	Enables single-host mode on the port.	

Command Default Single host mode is enabled.

Command Modes Interface configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Single-host mode should be configured if only one data host is connected. Do not connect a voice device to authenticate on a single-host port. Voice device authorization fails if no voice VLAN is configured on the port.

Multi-domain mode should be configured if data host is connected through an IP phone to the port. Multi-domain mode should be configured if the voice device needs to be authenticated.

Multi-auth mode should be configured to allow devices behind a hub to obtain secured port access through individual authentication. Only one voice device can be authenticated in this mode if a voice VLAN is configured.

Multi-host mode also offers port access for multiple hosts behind a hub, but multi-host mode gives unrestricted port access to the devices after the first user gets authenticated.

This example shows how to enable multi-auth mode on a port:

```
Device(config-if)# authentication host-mode multi-auth
```

This example shows how to enable multi-domain mode on a port:

```
Device(config-if)# authentication host-mode multi-domain
```

This example shows how to enable multi-host mode on a port:


```
Device(config-if) # authentication host-mode multi-host
```

This example shows how to enable single-host mode on a port:

```
Device(config-if) # authentication host-mode single-host
```

You can verify your settings by entering the **show authentication sessions interface** *interface* **details** privileged EXEC command.

authentication mac-move permit

To enable MAC move on a device, use the **authentication mac-move permit** command in global configuration mode. To disable MAC move, use the **no** form of this command.

authentication mac-move permit

no authentication mac-move permit

Syntax Description This command has no arguments or keywords.

Command Default MAC move is disabled.

Command Modes Global configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

The command enables authenticated hosts to move between ports on a device. For example, if there is a device between an authenticated host and port, and that host moves to another port, the authentication session is deleted from the first port, and the host is reauthenticated on the new port.

If MAC move is disabled, and an authenticated host moves to another port, it is not reauthenticated, and a violation error occurs.

This example shows how to enable MAC move on a device:

```
Device(config)# authentication mac-move permit
```

authentication priority

To add an authentication method to the port-priority list, use the **authentication priority** command in interface configuration mode. To return to the default, use the **no** form of this command.

```
authentication priority [dot1x | mab] {webauth}
no authentication priority [dot1x | mab] {webauth}
```

Syntax Description	dot1x	(Optional) Adds 802.1x to the order of authentication methods.
	mab	(Optional) Adds MAC authentication bypass (MAB) to the order of authentication methods.
	webauth	Adds web authentication to the order of authentication methods.

Command Default The default priority is 802.1x authentication, followed by MAC authentication bypass and web authentication.

Command Modes Interface configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE
		This command was introduced.

Usage Guidelines Ordering sets the order of methods that the switch attempts when trying to authenticate a new device is connected to a port.

When configuring multiple fallback methods on a port, set web authentication (webauth) last.

Assigning priorities to different authentication methods allows a higher-priority method to interrupt an in-progress authentication method with a lower priority.



Note If a client is already authenticated, it might be reauthenticated if an interruption from a higher-priority method occurs.

The default priority of an authentication method is equivalent to its position in execution-list order: 802.1x authentication, MAC authentication bypass (MAB), and web authentication. Use the **dot1x**, **mab**, and **webauth** keywords to change this default order.

This example shows how to set 802.1x as the first authentication method and web authentication as the second authentication method:

```
Device(config-if) # authentication priority dotx webauth
```

This example shows how to set MAB as the first authentication method and web authentication as the second authentication method:

```
Device(config-if)# authentication priority mab webauth
```

Related Commands	Command	Description
	authentication control-direction	Configures the port mode as unidirectional or bidirectional.
	authentication event fail	Specifies how the Auth Manager handles authentication failures as a result of unrecognized user credentials.
	authentication event no-response action	Specifies how the Auth Manager handles authentication failures as a result of a nonresponsive host.
	authentication event server alive action reinitialize	Reinitializes an authorized Auth Manager session when a previously unreachable authentication, authorization, and accounting server becomes available.
	authentication event server dead action authorize	Authorizes Auth Manager sessions when the authentication, authorization, and accounting server becomes unreachable.
	authentication fallback	Enables a web authentication fallback method.
	authentication host-mode	Allows hosts to gain access to a controlled port.
	authentication open	Enables open access on a port.
	authentication order	Specifies the order in which the Auth Manager attempts to authenticate a client on a port.
	authentication periodic	Enables automatic reauthentication on a port.
	authentication port-control	Configures the authorization state of a controlled port.
	authentication timer inactivity	Configures the time after which an inactive Auth Manager session is terminated.
	authentication timer reauthenticate	Specifies the period of time between which the Auth Manager attempts to reauthenticate authorized ports.
	authentication timer restart	Specifies the period of time after which the Auth Manager attempts to authenticate an unauthorized port.
	authentication violation	Specifies the action to be taken when a security violation occurs on a port.
	mab	Enables MAC authentication bypass on a port.

Command	Description
show authentication registrations	Displays information about the authentication methods that are registered with the Auth Manager.
show authentication sessions	Displays information about current Auth Manager sessions.
show authentication sessions interface	Displays information about the Auth Manager for a given interface.

authentication violation

To configure the violation modes that occur when a new device connects to a port or when a new device connects to a port after the maximum number of devices are connected to that port, use the **authentication violation** command in interface configuration mode.

```
authentication violation { protect | replace | restrict | shutdown }
no authentication violation { protect | replace | restrict | shutdown }
```

Syntax Description	protect	Drops unexpected incoming MAC addresses. No syslog errors are generated.
	replace	Removes the current session and initiates authentication with the new host.
	restrict	Generates a syslog error when a violation error occurs.
	shutdown	Error-disables the port or the virtual port on which an unexpected MAC address occurs.
Command Default	Authentication violation shutdown mode is enabled.	
Command Modes	Interface configuration	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Use the **authentication violation** command to specify the action to be taken when a security violation occurs on a port.

This example shows how to configure an IEEE 802.1x-enabled port as error-disabled and to shut down when a new device connects it:

```
Device(config-if)# authentication violation shutdown
```

This example shows how to configure an 802.1x-enabled port to generate a system error message and to change the port to restricted mode when a new device connects to it:

```
Device(config-if)# authentication violation restrict
```

This example shows how to configure an 802.1x-enabled port to ignore a new device when it connects to the port:

```
Device(config-if)# authentication violation protect
```

This example shows how to configure an 802.1x-enabled port to remove the current session and initiate authentication with a new device when it connects to the port:

```
Device(config-if) # authentication violation replace
```

You can verify your settings by entering the **show authentication** privileged EXEC command.

cisp enable

To enable Client Information Signaling Protocol (CISP) on a switch so that it acts as an authenticator to a supplicant switch and a supplicant to an authenticator switch, use the **cisp enable** global configuration command.

cisp enable

no cisp enable

Syntax Description This command has no arguments or keywords.

Command Default No default behavior or values.

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
	Cisco IOS XE Denali 16.3.1	This command was reintroduced. This command was not supported in Cisco IOS XE Denali 16.1.x and Cisco IOS XE Denali 16.2.x

Usage Guidelines The link between the authenticator and supplicant switch is a trunk. When you enable VTP on both switches, the VTP domain name must be the same, and the VTP mode must be server.

To avoid the MD5 checksum mismatch error when you configure VTP mode, verify that:

- VLANs are not configured on two different switches, which can be caused by two VTP servers in the same domain.
- Both switches have different configuration revision numbers.

This example shows how to enable CISP:

```
Device(config)# cisp enable
```

Related Commands

Command	Description
dot1x credentials <i>profile</i>	Configures a profile on a supplicant switch.
dot1x supplicant force-multicast	Forces 802.1X supplicant to send multicast packets.
dot1x supplicant controlled transient	Configures controlled access by 802.1X supplicant.
show cisp	Displays CISP information for a specified interface.

clear errdisable interface vlan

To reenabling a VLAN that was error-disabled, use the **clear errdisable interface** command in privileged EXEC mode.

```
clear errdisable interface interface-id vlan [vlan-list]
```

Syntax Description	<i>interface-id</i>	Specifies an interface.
	<i>vlan list</i>	(Optional) Specifies a list of VLANs to be reenabled. If a VLAN list is not specified, then all VLANs are reenabled.
Command Default	No default behavior or values.	
Command Modes	Privileged EXEC	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines You can reenabling a port by using the **shutdown** and **no shutdown** interface configuration commands, or you can clear error-disable for VLANs by using the **clear errdisable** interface command.

This example shows how to reenabling all VLANs that were error-disabled on Gigabit Ethernet port 4/0/2:

```
Device# clear errdisable interface gigabitethernet4/0/2 vlan
```

Related Commands	Command	Description
	errdisable detect cause	Enables error-disabled detection for a specific cause or all causes.
	errdisable recovery	Configures the recovery mechanism variables.
	show errdisable detect	Displays error-disabled detection status.
	show errdisable recovery	Displays error-disabled recovery timer information.
	show interfaces status err-disabled	Displays interface status of a list of interfaces in error-disabled state.

clear mac address-table

To delete from the MAC address table a specific dynamic address, all dynamic addresses on a particular interface, all dynamic addresses on stack members, or all dynamic addresses on a particular VLAN, use the **clear mac address-table** command in privileged EXEC mode. This command also clears the MAC address notification global counters.

clear mac address-table { **dynamic** [**address** *mac-addr* | **interface** *interface-id* | **vlan** *vlan-id*] | **move update** | **notification** }

Syntax Description		
dynamic		Deletes all dynamic MAC addresses.
address <i>mac-addr</i>		(Optional) Deletes the specified dynamic MAC address.
interface <i>interface-id</i>		(Optional) Deletes all dynamic MAC addresses on the specified physical port or port channel.
vlan <i>vlan-id</i>		(Optional) Deletes all dynamic MAC addresses for the specified VLAN. The range is 1 to 4094.
move update		Clears the MAC address table move-update counters.
notification		Clears the notifications in the history table and reset the counters.

Command Default No default behavior or values.

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines You can verify that the information was deleted by entering the **show mac address-table** privileged EXEC command.

This example shows how to remove a specific MAC address from the dynamic address table:

```
Device# clear mac address-table dynamic address 0008.0070.0007
```

Related Commands	Command	Description
	mac address-table notification	Enables the MAC address notification feature.
	mac address-table move update { receive transmit }	Configures MAC address-table move update on the switch.

Command	Description
show mac address-table	Displays the MAC address table static and dynamic entries.
show mac address-table move update	Displays the MAC address-table move update information on the switch.
show mac address-table notification	Displays the MAC address notification settings for all interfaces or on the specified interface when the interface keyword is appended.
snmp trap mac-notification change	Enables the SNMP MAC address notification trap on a specific interface.

deny (MAC access-list configuration)

To prevent non-IP traffic from being forwarded if the conditions are matched, use the **deny** MAC access-list configuration command on the switch stack or on a standalone switch. To remove a deny condition from the named MAC access list, use the **no** form of this command.

```
deny {any | host src-MAC-addr | src-MAC-addr mask} {any | host dst-MAC-addr |
dst-MAC-addr mask} [type mask | aarp | amber | appletalk | dec-spanning | decnet-iv |
diagnostic | dsm | etype-6000 | etype-8042 | lat | larc-sca | lsap lsap mask | mop-console
| mop-dump | msdos | mumps | netbios | vines-echo | vines-ip | xns-idp] [cos cos]
no deny {any | host src-MAC-addr | src-MAC-addr mask} {any | host dst-MAC-addr |
dst-MAC-addr mask} [type mask | aarp | amber | appletalk | dec-spanning | decnet-iv |
diagnostic | dsm | etype-6000 | etype-8042 | lat | larc-sca | lsap lsap mask | mop-console
| mop-dump | msdos | mumps | netbios | vines-echo | vines-ip | xns-idp] [cos cos]
```

Syntax Description

any	Denies any source or destination MAC address.
host <i>src-MAC-addr</i> <i>src-MAC-addr mask</i>	Defines a host MAC address and optional subnet mask. If the source address for a packet matches the defined address, non-IP traffic from that address is denied.
host <i>dst-MAC-addr</i> <i>dst-MAC-addr mask</i>	Defines a destination MAC address and optional subnet mask. If the destination address for a packet matches the defined address, non-IP traffic to that address is denied.
<i>type mask</i>	(Optional) Specifies the EtherType number of a packet with Ethernet II or SNAP encapsulation to identify the protocol of the packet. The type is 0 to 65535, specified in hexadecimal. The mask is a mask of don't care bits applied to the EtherType before testing for a match.
aarp	(Optional) Specifies EtherType AppleTalk Address Resolution Protocol that maps a data-link address to a network address.
amber	(Optional) Specifies EtherType DEC-Amber.
appletalk	(Optional) Specifies EtherType AppleTalk/EtherTalk.
dec-spanning	(Optional) Specifies EtherType Digital Equipment Corporation (DEC) spanning tree.
decnet-iv	(Optional) Specifies EtherType DECnet Phase IV protocol.
diagnostic	(Optional) Specifies EtherType DEC-Diagnostic.

dsm	(Optional) Specifies EtherType DEC-DSM.
etype-6000	(Optional) Specifies EtherType 0x6000.
etype-8042	(Optional) Specifies EtherType 0x8042.
lat	(Optional) Specifies EtherType DEC-LAT.
lavc-sca	(Optional) Specifies EtherType DEC-LAVC-SCA.
lsap <i>lsap-number mask</i>	(Optional) Specifies the LSAP number (0 to 65535) of a packet with 802.2 encapsulation to identify the protocol of the packet. <i>mask</i> is a mask of don't care bits applied to the LSAP number before testing for a match.
mop-console	(Optional) Specifies EtherType DEC-MOP Remote Console.
mop-dump	(Optional) Specifies EtherType DEC-MOP Dump.
msdos	(Optional) Specifies EtherType DEC-MSDOS.
mumps	(Optional) Specifies EtherType DEC-MUMPS.
netbios	(Optional) Specifies EtherType DEC- Network Basic Input/Output System (NetBIOS).
vines-echo	(Optional) Specifies EtherType Virtual Integrated Network Service (VINES) Echo from Banyan Systems.
vines-ip	(Optional) Specifies EtherType VINES IP.
xns-idp	(Optional) Specifies EtherType Xerox Network Systems (XNS) protocol suite (0 to 65535), an arbitrary EtherType in decimal, hexadecimal, or octal.
cos <i>cos</i>	(Optional) Specifies a class of service (CoS) number from 0 to 7 to set priority. Filtering on CoS can be performed only in hardware. A warning message reminds the user if the cos option is configured.

Command Default

This command has no defaults. However, the default action for a MAC-named ACL is to deny.

Command Modes

Mac-access list configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

You enter MAC-access list configuration mode by using the **mac access-list extended** global configuration command.

If you use the **host** keyword, you cannot enter an address mask; if you do not use the **host** keyword, you must enter an address mask.

When an access control entry (ACE) is added to an access control list, an implied **deny-any-any** condition exists at the end of the list. That is, if there are no matches, the packets are denied. However, before the first ACE is added, the list permits all packets.

To filter IPX traffic, you use the *type mask* or **lsap lsap mask** keywords, depending on the type of IPX encapsulation being used. Filter criteria for IPX encapsulation types as specified in Novell terminology and Cisco IOS terminology are listed in the table.

Table 2: IPX Filtering Criteria

IPX Encapsulation Type		Filter Criterion
Cisco IOS Name	Novel Name	
arpa	Ethernet II	EtherType 0x8137
snap	Ethernet-snap	EtherType 0x8137
sap	Ethernet 802.2	LSAP 0xE0E0
novell-ether	Ethernet 802.3	LSAP 0xFFFF

This example shows how to define the named MAC extended access list to deny NETBIOS traffic from any source to MAC address 00c0.00a0.03fa. Traffic matching this list is denied.

```
Device(config-ext-macl)# deny any host 00c0.00a0.03fa netbios.
```

This example shows how to remove the deny condition from the named MAC extended access list:

```
Device(config-ext-macl)# no deny any 00c0.00a0.03fa 0000.0000.0000 netbios.
```

This example denies all packets with EtherType 0x4321:

```
Device(config-ext-macl)# deny any any 0x4321 0
```

You can verify your settings by entering the **show access-lists** privileged EXEC command.

Related Commands

Command	Description
mac access-list extended	Creates an access list based on MAC addresses for non-IP traffic.
permit	Permits from the MAC access-list configuration. Permits non-IP traffic to be forwarded if conditions are matched.

Command	Description
show access-lists	Displays access control lists configured on a switch.

device-role (IPv6 snooping)

To specify the role of the device attached to the port, use the **device-role** command in IPv6 snooping configuration mode.

device-role { **node** | **switch** }

Syntax Description	
node	Sets the role of the attached device to node.
switch	Sets the role of the attached device to switch.

Command Default The device role is node.

Command Modes IPv6 snooping configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines The **device-role** command specifies the role of the device attached to the port. By default, the device role is node.

The **switch** keyword indicates that the remote device is a switch and that the local switch is now operating in multiswitch mode; binding entries learned from the port will be marked with trunk_port preference level. If the port is configured as a trust-port, binding entries will be marked with trunk_trusted_port preference level.

This example shows how to define an IPv6 snooping policy name as policy1, place the device in IPv6 snooping configuration mode, and configure the device as the node:

```
Device(config)# ipv6 snooping policy policy1
Device(config-ipv6-snooping)# device-role node
```


device-role (IPv6 nd inspection)

To specify the role of the device attached to the port, use the **device-role** command in neighbor discovery (ND) inspection policy configuration mode.

```
device-role {host | switch}
```

Syntax Description	host	Sets the role of the attached device to host.
	switch	Sets the role of the attached device to switch.

Command Default The device role is host.

Command Modes ND inspection policy configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE
		This command was introduced.

Usage Guidelines The **device-role** command specifies the role of the device attached to the port. By default, the device role is host, and therefore all the inbound router advertisement and redirect messages are blocked.

The **switch** keyword indicates that the remote device is a switch and that the local switch is now operating in multiswitch mode; binding entries learned from the port will be marked with trunk_port preference level. If the port is configured as a trust-port, binding entries will be marked with trunk_trusted_port preference level.

The following example defines a Neighbor Discovery Protocol (NDP) policy name as policy1, places the device in ND inspection policy configuration mode, and configures the device as the host:

```
Device(config)# ipv6 nd inspection policy policy1
Device(config-nd-inspection)# device-role host
```

device-tracking policy

To configure a Switch Integrated Security Features (SISF)-based IP device tracking policy, use the **device-tracking** command in global configuration mode. To delete a device tracking policy, use the **no** form of this command.

device -tracking policy *policy-name*
no device-tracking policy *policy-name*

Syntax Description	<i>policy-name</i> User-defined name of the device tracking policy. The policy name can be a symbolic string (such as Engineering) or an integer (such as 0).				
Command Default	A device tracking policy is not configured.				
Command Modes	Global configuration				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE Denali 16.1.1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE Denali 16.1.1	This command was introduced.
Release	Modification				
Cisco IOS XE Denali 16.1.1	This command was introduced.				

Usage Guidelines	<p>Use the SISF-based device-tracking policy command to create a device tracking policy. When the device-tracking policy command is enabled, the configuration mode changes to device-tracking configuration mode. In this mode, the administrator can configure the following first-hop security commands:</p> <ul style="list-style-type: none"> • (Optional) device-role {node switch}—Specifies the role of the device attached to the port. Default is node. • (Optional) limit address-count <i>value</i>—Limits the number of addresses allowed per target. • (Optional) no—Negates a command or sets it to defaults. • (Optional) destination-glean {recovery log-only} [dhcp]}—Enables binding table recovery by data traffic source address gleaning. • (Optional) data-glean {recovery log-only} [dhcp ndp]}—Enables binding table recovery using source or data address gleaning. • (Optional) security-level {glean guard inspect}—Specifies the level of security enforced by the feature. Default is guard. <ul style="list-style-type: none"> glean—Gleans addresses from messages and populates the binding table without any verification. guard—Gleans addresses and inspects messages. In addition, it rejects RA and DHCP server messages. This is the default option. inspect—Gleans addresses, validates messages for consistency and conformance, and enforces address ownership. • (Optional) tracking {disable enable}—Specifies a tracking option. • (Optional) trusted-port—Sets up a trusted port. It disables the guard on applicable targets. Bindings learned through a trusted port have preference over bindings learned through any other port. A trusted port is given preference in case of a collision while making an entry in the table.
-------------------------	---

This example shows how to configure an a device-tracking policy:

```
Device(config)# device-tracking policy policy1  
Device(config-device-tracking)# trusted-port
```

dot1x critical (global configuration)

To configure the IEEE 802.1X critical authentication parameters, use the **dot1x critical** command in global configuration mode.

dot1x critical eapol

Syntax Description	eapol Specifies that the switch send an EAPOL-Success message when the switch successfully authenticates the critical port.				
Command Default	eapol is disabled				
Command Modes	Global configuration				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.3SE	This command was introduced.				

This example shows how to specify that the switch sends an EAPOL-Success message when the switch successfully authenticates the critical port:

```
Device(config)# dot1x critical eapol
```

dot1x pae

To set the Port Access Entity (PAE) type, use the **dot1x pae** command in interface configuration mode. To disable the PAE type that was set, use the **no** form of this command.

```
dot1x pae {supplicant | authenticator | both}
no dot1x pae {supplicant | authenticator | both}
```

Syntax Description	
supplicant	The interface acts only as a supplicant and will not respond to messages that are meant for an authenticator.
authenticator	The interface acts only as an authenticator and will not respond to any messages meant for a supplicant.
both	(Optional) The interface behaves both as a supplicant and as an authenticator and thus will respond to all dot1x messages.

Command Default PAE type is not set.

Command Modes Interface configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.
	Cisco IOS XE Denali 16.3.1	This command was reintroduced. This command was not supported in Cisco IOS XE Denali 16.1.x and Cisco IOS XE Denali 16.2.x

Usage Guidelines Use the **no dot1x pae** interface configuration command to disable IEEE 802.1x authentication on the port. When you configure IEEE 802.1x authentication on a port, such as by entering the **dot1x port-control** interface configuration command, the switch automatically configures the port as an IEEE 802.1x authenticator. After the **no dot1x pae** interface configuration command is entered, the Authenticator PAE operation is disabled.

The following example shows that the interface has been set to act as a supplicant:

```
Device(config)# interface g1/0/3
Device(config-if)# dot1x pae supplicant
```

dot1x supplicant controlled transient

To control access to an 802.1x supplicant port during authentication, use the **dot1x supplicant controlled transient** command in global configuration mode. To open the supplicant port during authentication, use the **no** form of this command

dot1x supplicant controlled transient
no dot1x supplicant controlled transient

Syntax Description

This command has no arguments or keywords.

Command Default

Access is allowed to 802.1x supplicant ports during authentication.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
Cisco IOS XE Denali 16.3.1	This command was reintroduced. This command was not supported in Cisco IOS XE Denali 16.1.x and Cisco IOS XE Denali 16.2.x

Usage Guidelines

In the default state, when you connect a supplicant switch to an authenticator switch that has BPCU guard enabled, the authenticator port could be error-disabled if it receives a Spanning Tree Protocol (STP) bridge protocol data unit (BPDU) packets before the supplicant switch has authenticated. Beginning with Cisco IOS Release 15.0(1)SE, you can control traffic exiting the supplicant port during the authentication period. Entering the **dot1x supplicant controlled transient** global configuration command temporarily blocks the supplicant port during authentication to ensure that the authenticator port does not shut down before authentication completes. If authentication fails, the supplicant port opens. Entering the **no dot1x supplicant controlled transient** global configuration command opens the supplicant port during the authentication period. This is the default behavior.

We strongly recommend using the **dot1x supplicant controlled transient** command on a supplicant switch when BPDU guard is enabled on the authenticator switch port with the **spanning-tree bpduguard enable** interface configuration command.

This example shows how to control access to 802.1x supplicant ports on a switch during authentication:

```
Device(config)# dot1x supplicant controlled transient
```

dot1x supplicant force-multicast

To force a supplicant switch to send only multicast Extensible Authentication Protocol over LAN (EAPOL) packets whenever it receives multicast or unicast EAPOL packets, use the **dot1x supplicant force-multicast** command in global configuration mode. To return to the default setting, use the **no** form of this command.

dot1x supplicant force-multicast
no dot1x supplicant force-multicast

Syntax Description

This command has no arguments or keywords.

Command Default

The supplicant switch sends unicast EAPOL packets when it receives unicast EAPOL packets. Similarly, it sends multicast EAPOL packets when it receives multicast EAPOL packets.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
Cisco IOS XE Denali 16.3.1	This command was reintroduced. This command was not supported in Cisco IOS XE Denali 16.1.x and Cisco IOS XE Denali 16.2.x

Usage Guidelines

Enable this command on the supplicant switch for Network Edge Access Topology (NEAT) to work in all host modes.

This example shows how force a supplicant switch to send multicast EAPOL packets to the authenticator switch:

```
Device(config)# dot1x supplicant force-multicast
```

Related Commands

Command	Description
cisp enable	Enable Client Information Signalling Protocol (CISP) on a switch so that it acts as an authenticator to a supplicant switch.
dot1x credentials	Configure the 802.1x supplicant credentials on the port.
dot1x pae supplicant	Configure an interface to act only as a supplicant.

dot1x test eapol-capable

To monitor IEEE 802.1x activity on all the switch ports and to display information about the devices that are connected to the ports that support IEEE 802.1x, use the **dot1x test eapol-capable** command in privileged EXEC mode on the switch stack or on a standalone switch.

dot1x test eapol-capable [**interface** *interface-id*]

Syntax Description	interface <i>interface-id</i>	(Optional) Port to be queried.
Command Default	There is no default setting.	
Command Modes	Privileged EXEC	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Use this command to test the IEEE 802.1x capability of the devices connected to all ports or to specific ports on a switch.

There is not a no form of this command.

This example shows how to enable the IEEE 802.1x readiness check on a switch to query a port. It also shows the response received from the queried port verifying that the device connected to it is IEEE 802.1x-capable:

```
Device# dot1x test eapol-capable interface gigabitethernet1/0/13
```

```
DOT1X_PORT_EAPOL_CAPABLE:DOT1X: MAC 00-01-02-4b-f1-a3 on gigabitethernet1/0/13 is EAPOL capable
```

Related Commands	Command	Description
	dot1x test timeout <i>timeout</i>	Configures the timeout used to wait for EAPOL response to an IEEE 802.1x readiness query.

dot1x test timeout

To configure the timeout used to wait for EAPOL response from a port being queried for IEEE 802.1x readiness, use the **dot1x test timeout** command in global configuration mode on the switch stack or on a standalone switch.

dot1x test timeout *timeout*

Syntax Description

timeout

Time in seconds to wait for an EAPOL response. The range is from 1 to 65535 seconds.

Command Default

The default setting is 10 seconds.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE
	This command was introduced.

Usage Guidelines

Use this command to configure the timeout used to wait for EAPOL response.

There is not a no form of this command.

This example shows how to configure the switch to wait 27 seconds for an EAPOL response:

```
Device# dot1x test timeout 27
```

You can verify the timeout configuration status by entering the **show run** privileged EXEC command.

Related Commands

Command	Description
dot1x test eapol-capable [<i>interface interface-id</i>]	Checks for IEEE 802.1x readiness on devices connected to all or to specified IEEE 802.1x-capable ports.

dot1x timeout

To configure the value for retry timeouts, use the **dot1x timeout** command in global configuration or interface configuration mode. To return to the default value for retry timeouts, use the **no** form of this command.

```
dot1x timeout {auth-period seconds | held-period seconds | quiet-period seconds | ratelimit-period
seconds | server-timeout seconds | start-period seconds | supp-timeout seconds | tx-period
seconds}
```

Syntax Description		
auth-period <i>seconds</i>		Configures the time, in seconds for which a supplicant will stay in the HELD state (that is, the length of time it will wait before trying to send the credentials again after a failed attempt). The range is from 1 to 65535. The default is 30.
held-period <i>seconds</i>		Configures the time, in seconds for which a supplicant will stay in the HELD state (that is, the length of time it will wait before trying to send the credentials again after a failed attempt). The range is from 1 to 65535. The default is 60
quiet-period <i>seconds</i>		Configures the time, in seconds, that the authenticator (server) remains quiet (in the HELD state) following a failed authentication exchange before trying to reauthenticate the client. The range is from 1 to 65535. The default is 60
ratelimit-period <i>seconds</i>		Throttles the EAP-START packets that are sent from misbehaving client PCs (for example, PCs that send EAP-START packets that result in the wasting of switch processing power). <ul style="list-style-type: none"> • The authenticator ignores EAPOL-Start packets from clients that have successfully authenticated for the rate-limit period duration. • The range is from 1 to 65535. By default, rate limiting is disabled.
server-timeout <i>seconds</i>		Configures the interval, in seconds, between two successive EAPOL-Start frames when they are being retransmitted. <ul style="list-style-type: none"> • The range is from 1 to 65535. The default is 30. <p>If the server does not send a response to an 802.1X packet within the specified period, the packet is sent again.</p>
start-period <i>seconds</i>		Configures the interval, in seconds, between two successive EAPOL-Start frames when they are being retransmitted. The range is from 1 to 65535. The default is 30. In Cisco IOS Release 15.2(5)E, this command is only available in the supplicant mode. If the command is applied in any other mode, the command misses from the configuration.

supp-timeout <i>seconds</i>	Sets the authenticator-to-supplicant retransmission time for all EAP messages other than EAP Request ID. The range is from 1 to 65535. The default is 30.
tx-period <i>seconds</i>	Configures the number of seconds between retransmission of EAP request ID packets (assuming that no response is received) to the client. <ul style="list-style-type: none"> • The range is from 1 to 65535. The default is 30. • If an 802.1X packet is sent to the supplicant and the supplicant does not send a response after the retry period, the packet will be sent again.

Command Default Periodic reauthentication and periodic rate-limiting are done.

Command Modes Interface configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines You should change the default value of this command only to adjust for unusual circumstances such as unreliable links or specific behavioral problems with certain clients and authentication servers.

The **dot1x timeout reauth-period** interface configuration command affects the behavior of the switch only if you have enabled periodic re-authentication by using the **dot1x reauthentication** interface configuration command.

During the quiet period, the switch does not accept or initiate any authentication requests. If you want to provide a faster response time to the user, enter a number smaller than the default.

When the **ratelimit-period** is set to 0 (the default), the switch does not ignore EAPOL packets from clients that have been successfully authenticated and forwards them to the RADIUS server.

The following example shows that various 802.1X retransmission and timeout periods have been set:

```
Device(config)# configure terminal
Device(config)# interface g1/0/3
Device(config-if)# dot1x port-control auto
Device(config-if)# dot1x timeout auth-period 2000
Device(config-if)# dot1x timeout held-period 2400
Device(config-if)# dot1x timeout quiet-period 600
Device(config-if)# dot1x timeout start-period 90
Device(config-if)# dot1x timeout supp-timeout 300
Device(config-if)# dot1x timeout tx-period 60
Device(config-if)# dot1x timeout server-timeout 60
```

enable password

To set a local password to control access to various privilege levels, use the **enable password** command in global configuration mode. To remove the password requirement, use the **no** form of this command.

```
enable password [level level] {[0] unencrypted-password | [encryption-type] encrypted-password}
no enable password [level level]
```

Syntax Description

level <i>level</i>	(Optional) Level for which the password applies. You can specify up to 16 privilege levels, using numbers 0 through 15. Level 1 is normal EXEC-mode user privileges. If this argument is not specified in the command or the no form of the command, the privilege level defaults to 15 (traditional enable privileges).
0	(Optional) Specifies an unencrypted clear-text password. The password is converted to a Secure Hash Algorithm (SHA) 256 secret and gets stored in the device.
<i>unencrypted-password</i>	Password users type to enter enable mode.
<i>encryption-type</i>	(Optional) Cisco-proprietary algorithm used to encrypt the password. If you specify <i>encryption-type</i> , the next argument you supply must be an encrypted password (a password already encrypted by a Cisco device). You can specify type 7, which indicates a hidden password will follow.
<i>encrypted-password</i>	Encrypted password you enter, copied from another device configuration.

Command Default

No password is defined. The default is level 15.

Command Modes

Global configuration (config)

Command History

Release	Modification
Cisco IOS XE Gibraltar 16.11.1	This command was introduced.

Usage Guidelines



Caution

If neither the **enable password** command nor the **enable secret** command is configured, and if there is a line password configured for the console, the console line password will serve as the **enable password** for all VTY (Telnet and Secure Shell [SSH]) sessions.

Use this command with the **level** option to define a password for a specific privilege level. After you specify the level and the password, give the password to the users who need to access this level. Use the **privilege level** configuration command to specify commands accessible at various levels.

You will not ordinarily enter an encryption type. Typically you enter an encryption type only if you copy and paste into this command a password that has already been encrypted by a Cisco device.

**Caution**

If you specify an encryption type and then enter a clear text password, you will not be able to reenter enable mode. You cannot recover a lost password that has been encrypted by any method.

If the **service password-encryption** command is set, the encrypted form of the password you create with the **enable password** command is displayed when a **more nvram:startup-config** command is entered.

You can enable or disable password encryption with the **service password-encryption** command.

An enable password is defined as follows:

- Must contain from 1 to 25 uppercase and lowercase alphanumeric characters.
- Can have leading spaces, but they are ignored. However, intermediate and trailing spaces are recognized.
- Can contain the question mark (?) character if you precede the question mark with the key combination Ctrl-v when you create the password; for example, to create the password *abc?123*, do the following:
 - Enter **abc**.
 - Type **Ctrl-v**.
 - Enter **?123**.

When the system prompts you to enter the enable password, you need not precede the question mark with the Ctrl-v; you can simply enter *abc?123* at the password prompt.

Examples

The following example enables the password “pswd2” for privilege level 2:

```
Device(config)# enable password level 2 pswd2
```

The following example sets the encrypted password “\$1\$15Rkls3LoyxzS8t9”, which has been copied from a device configuration file, for privilege level 2 using encryption type 7:

```
Device(config)# enable password level 2 5 $1$15Rkls3LoyxzS8t9
```

Related Commands

Command	Description
enable secret	Specifies an additional layer of security over the enable password command.

enable secret

To specify an additional layer of security over the **enable password** command, use the **enable secret** command in global configuration mode. To turn off the **enable secret** function, use the **no** form of this command.

```
enable secret [level level] {[0] unencrypted-password | encryption-type encrypted-password}
no enable secret [level level] [encryption-type encrypted-password]
```

Syntax Description

level <i>level</i>	(Optional) Specifies the level for which the password applies. You can specify up to 15 privilege levels, using numerals 1 through 15. Level 1 is normal EXEC-mode user privileges. If the <i>level</i> argument is not specified in the command or in the no form of the command, the privilege level defaults to 15 (traditional enable privileges).
0	(Optional) Specifies an unencrypted clear-text password. The password is converted to a Secure Hash Algorithm (SHA) 256 secret and gets stored in the device.
<i>unencrypted-password</i>	Password for users to enter enable mode. This password should be different from the password created with the enable password command.
<i>encryption-type</i>	Cisco-proprietary algorithm used to hash the password. <ul style="list-style-type: none"> • 5—Specifies a message digest algorithm 5 (MD5) encrypted secret. • 8—Specifies a Password-Based Key Derivation Function 2 (PBKDF2) with SHA-256 hashed secret. • 9—Specifies a scrypt hashed secret.
<i>encrypted-password</i>	Hashed password that is copied from another device configuration.

Command Default

No password is defined.

Command Modes

Global configuration (config)

Command History

Release	Modification
Cisco IOS XE Gibraltar 16.11.1	This command was introduced.

Usage Guidelines



Caution

If neither the **enable password** command or the **enable secret** command is configured, and if a line password is configured for the console, the console line password will serve as the enable password for all vty (Telnet and Secure Shell [SSH]) sessions.

Use the **enable secret** command to provide an additional layer of security over the enable password. The **enable secret** command provides better security by storing the enable secret password using a nonreversible

cryptographic function. The added layer of security encryption provides is useful in environments where the password crosses the network or is stored on a TFTP server.

Typically you enter an encryption type only when you paste an encrypted password that you copied from a device configuration file into this command.

**Caution**

If you specify an encryption type and then enter a clear-text password, you will not be able to reenter enable mode. You cannot recover a lost password that has been encrypted by any method.

If you use the same password for the **enable password** and **enable secret** commands, you receive an error message warning that this practice is not recommended, but the password will be accepted. By using the same password, however, you undermine the additional security the **enable secret** command provides.

**Note**

After you set a password using the **enable secret** command, a password set using the **enable password** command works only if the **enable secret** is disabled or an older version of Cisco IOS software is being used, such as when running an older rxboot image. Additionally, you cannot recover a lost password that has been encrypted by any method.

If the **service password-encryption** command is set, the encrypted form of the password you create is displayed when the **more nvram:startup-config** command is entered.

You can enable or disable password encryption with the **service password-encryption** command.

An enable password is defined as follows:

- Must contain 1 to 25 alphanumeric characters, both uppercase and lowercase.
- Can have leading spaces, but they are ignored. However, intermediate and trailing spaces are recognized.
- Can contain the question mark (?) character if you precede the question mark with the key combination Ctrl-v when you create the password; for example, to create the password *abc?123*, do the following:
 - Enter **abc**.
 - Press **Ctrl-v**.
 - Enter **?123**.

When the system prompts you to enter the enable password, you need not precede the question mark with the Ctrl-v; you can enter **abc?123** at the password prompt.

**Note**

If you use type 8 or type 9 passwords and then downgrade to an older version of Cisco IOS software that does not support type 8 and type 9 passwords, you must reconfigure the passwords to use type 5 hashing before downgrading. If not, you are locked out of the device and password recovery is required. If you are using an external AAA server to manage privilege levels, you are not locked out of the device.

Examples

The following example shows how to specify the password with the **enable secret** command:

```
Device> enable
```

```
Device# configure terminal
Device(config)# enable secret password
```

After specifying a password with the **enable secret** command, users must enter this password to gain access. Any passwords set through **enable password** command will no longer work.

```
Password: password
```

The following example shows how to enable the encrypted password “\$1\$FaD0\$Xyti5Rkls3LoyxzS8”, which has been copied from a device configuration file, for privilege level 2 using the encryption type 4:

```
Device> enable
Device# configure terminal
Device(config)# enable password level 2 4 $1$FaD0$Xyti5Rkls3LoyxzS8
```

The following example shows the sample warning message that is displayed when a user enters the **enable secret 4 encrypted-password** command:

```
Device# configure terminal
Device(config)# enable secret 4 tnhtc92DXBhelxjYk8LWJrPV36S2i4ntXrpb4RFmfqY

WARNING: Command has been added to the configuration but Type 4 passwords have been
depreciated.
Migrate to a supported password type

Device(config)# end
Device# show running-config | inc secret

enable secret 4 tnhtc92DXBhelxjYk8LWJrPV36S2i4ntXrpb4RFmfqY
```

Related Commands

Command	Description
enable password	Sets a local password to control access to various privilege levels.
more nvram:startup-config	Displays the startup configuration file contained in NVRAM or specified by the CONFIG_FILE environment variable.
service password-encryption	Encrypt passwords.

epm access-control open

To configure an open directive for ports that do not have an access control list (ACL) configured, use the **epm access-control open** command in global configuration mode. To disable the open directive, use the **no** form of this command.

epm access-control open
no epm access-control open

Syntax Description This command has no arguments or keywords.

Command Default The default directive applies.

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Use this command to configure an open directive that allows hosts without an authorization policy to access ports configured with a static ACL. If you do not configure this command, the port applies the policies of the configured ACL to the traffic. If no static ACL is configured on a port, both the default and open directives allow access to the port.

You can verify your settings by entering the **show running-config** privileged EXEC command.

This example shows how to configure an open directive.

```
Device(config)# epm access-control open
```

Related Commands	Command	Description
	show running-config	Displays the contents of the current running configuration file.

ip access-list role-based

To create a role-based (security group) access control list (RBACL) and enter role-based ACL configuration mode, use the **ip access-list role-based** command in global configuration mode. To remove the configuration, use the **no** form of this command.

```
ip access-list role-based access-list-name
no ip access-list role-based access-list-name
```

Syntax Description	<i>access-list-name</i> Name of the security group access control list (SGACL).
---------------------------	---

Command Default	Role-based ACLs are not configured.
------------------------	-------------------------------------

Command Modes	Global configuration (config)
----------------------	-------------------------------

Command History	Release	Modification
	Cisco IOS XE Denali 16.3.1	This command was introduced.

Usage Guidelines	For SGACL logging, you must configure the permit ip log command. Also, this command must be configured in Cisco Identity Services Engine (ISE) to enable logging for dynamic SGACLs.
-------------------------	---

The following example shows how to define an SGACL that can be applied to IPv4 traffic and enter role-based access list configuration mode:

```
Switch(config)# ip access-list role-based rbacl1
Switch(config-rb-acl)# permit ip log
```

Related Commands	Command	Description
	permit ip log	Permits logging that matches the configured entry.
	show ip access-list	Displays contents of all current IP access lists.

ip admission

To enable web authentication, use the **ip admission** command in interface configuration mode. You can also use this command in fallback-profile configuration mode. To disable web authentication, use the **no** form of this command.

ip admission *rule*
no ip admission *rule*

Syntax Description

rule IP admission rule name.

Command Default

Web authentication is disabled.

Command Modes

Interface configuration
 Fallback-profile configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

The **ip admission** command applies a web authentication rule to a switch port.

This example shows how to apply a web authentication rule to a switchport:

```
Device# configure terminal
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# ip admission rule1
```

This example shows how to apply a web authentication rule to a fallback profile for use on an IEEE 802.1x enabled switch port.

```
Device# configure terminal
Device(config)# fallback profile profile1
Device(config-fallback-profile)# ip admission rule1
```

ip admission name

To enable web authentication, use the **ip admission name** command in global configuration mode. To disable web authentication, use the **no** form of this command.

```
ip admission name name {consent | proxy http} [absolute timer minutes | inactivity-time
minutes | list {acl | acl-name} | service-policy type tag service-policy-name]
no ip admission name name {consent | proxy http} [absolute timer minutes | inactivity-time
minutes | list {acl | acl-name} | service-policy type tag service-policy-name]
```

Syntax Description		
	<i>name</i>	Name of network admission control rule.
	consent	Associates an authentication proxy consent web page with the IP admission rule specified using the <i>admission-name</i> argument.
	proxy http	Configures web authentication custom page.
	absolute-timer <i>minutes</i>	(Optional) Elapsed time, in minutes, before the external server times out.
	inactivity-time <i>minutes</i>	(Optional) Elapsed time, in minutes, before the external file server is deemed unreachable.
	list	(Optional) Associates the named rule with an access control list (ACL).
	<i>acl</i>	Applies a standard, extended list to a named admission control rule. The value ranges from 1 through 199, or from 1300 through 2699 for expanded range.
	<i>acl-name</i>	Applies a named access list to a named admission control rule.
	service-policy type tag	(Optional) A control plane service policy is to be configured.
	<i>service-policy-name</i>	Control plane tag service policy that is configured using the policy-map type control tag <i>polycyname</i> command, keyword, and argument. This policy map is used to apply the actions on the host when a tag is received.
Command Default	Web authentication is disabled.	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

The **ip admission name** command globally enables web authentication on a switch.

After you enable web authentication on a switch, use the **ip access-group in** and **ip admission web-rule** interface configuration commands to enable web authentication on a specific interface.

Examples

This example shows how to configure only web authentication on a switch port:

```
Device# configure terminal
Device(config) ip admission name http-rule proxy http
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# ip access-group 101 in
Device(config-if)# ip admission rule
Device(config-if)# end
```

This example shows how to configure IEEE 802.1x authentication with web authentication as a fallback mechanism on a switch port:

```
Device# configure terminal
Device(config)# ip admission name rule2 proxy http
Device(config)# fallback profile profile1
Device(config)# ip access group 101 in
Device(config)# ip admission name rule2
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# dot1x port-control auto
Device(config-if)# dot1x fallback profile1
Device(config-if)# end
```

Related Commands

Command	Description
dot1x fallback	Configures a port to use web authentication as a fallback method for clients that do not support IEEE 802.1x authentication.
fallback profile	Creates a web authentication fallback profile.
ip admission	Enables web authentication on a port.
show authentication sessions interface <i>interface</i> detail	Displays information about the web authentication session status.
show ip admission	Displays information about NAC cached entries or the NAC configuration.

ip dhcp snooping database

To configure the Dynamic Host Configuration Protocol (DHCP)-snooping database, use the **ip dhcp snooping database** command in global configuration mode. To disable the DHCP-snooping database, use the **no** form of this command.

no ip dhcp snooping database [**timeout** | **write-delay**]

Syntax Description		
	flash:url	Specifies the database URL for storing entries using flash.
	ftp:url	Specifies the database URL for storing entries using FTP.
	http:url	Specifies the database URL for storing entries using HTTP.
	https:url	Specifies the database URL for storing entries using secure HTTP (https).
	rcp:url	Specifies the database URL for storing entries using remote copy (rcp).
	scp:url	Specifies the database URL for storing entries using Secure Copy (SCP).
	tftp:url	Specifies the database URL for storing entries using TFTP.
	timeout <i>seconds</i>	Specifies the timeout interval; valid values are from 0 to 86400 seconds.
	write-delay <i>seconds</i>	Specifies the amount of time before writing the DHCP-snooping entries to an external server after a change is seen in the local DHCP-snooping database; valid values are from 15 to 86400 seconds.
Command Default	The DHCP-snooping database is not configured.	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

You must enable DHCP snooping on the interface before entering this command. Use the **ip dhcp snooping** command to enable DHCP snooping.

This example shows how to specify the database URL using TFTP:

```
Device(config)# ip dhcp snooping database tftp://10.90.90.90/snooping-rp2
```


This example shows how to specify the amount of time before writing DHCP snooping entries to an external server:

```
Device(config)# ip dhcp snooping database write-delay 15
```

ip dhcp snooping information option format remote-id

To configure the option-82 remote-ID suboption, use the **ip dhcp snooping information option format remote-id** command in global configuration mode on the switch to configure the option-82 remote-ID suboption. To configure the default remote-ID suboption, use the **no** form of this command.

```
ip dhcp snooping information option format remote-id {hostname | string string}
no ip dhcp snooping information option format remote-id {hostname | string string}
```

Syntax Description	hostname Specify the switch hostname as the remote ID.				
	string <i>string</i> Specify a remote ID, using from 1 to 63 ASCII characters (no spaces).				
Command Default	The switch MAC address is the remote ID.				
Command Modes	Global configuration				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.3SE	This command was introduced.				
Usage Guidelines	<p>You must globally enable DHCP snooping by using the ip dhcp snooping global configuration command for any DHCP snooping configuration to take effect.</p> <p>When the option-82 feature is enabled, the default remote-ID suboption is the switch MAC address. This command allows you to configure either the switch hostname or a string of up to 63 ASCII characters (but no spaces) to be the remote ID.</p>				
 Note	If the hostname exceeds 63 characters, it will be truncated to 63 characters in the remote-ID configuration.				

This example shows how to configure the option- 82 remote-ID suboption:

```
Device(config)# ip dhcp snooping information option format remote-id hostname
```


ip dhcp snooping verify no-relay-agent-address

To disable the DHCP snooping feature from verifying that the relay agent address (giaddr) in a DHCP client message matches the client hardware address on an untrusted port, use the **ip dhcp snooping verify no-relay-agent-address** command in global configuration mode. To enable verification, use the **no** form of this command.

ip dhcp snooping verify no-relay-agent-address
no ip dhcp snooping verify no-relay-agent-address

Syntax Description

This command has no arguments or keywords.

Command Default

The DHCP snooping feature verifies that the relay-agent IP address (giaddr) field in DHCP client message on an untrusted port is 0.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

By default, the DHCP snooping feature verifies that the relay-agent IP address (giaddr) field in DHCP client message on an untrusted port is 0; the message is dropped if the giaddr field is not 0. Use the **ip dhcp snooping verify no-relay-agent-address** command to disable the verification. Use the **no ip dhcp snooping verify no-relay-agent-address** to reenble verification.

This example shows how to enable verification of the giaddr in a DHCP client message:

```
Device(config)# no ip dhcp snooping verify no-relay-agent-address
```

ip http access-class

To specify the access list that should be used to restrict access to the HTTP server, use the **ip http access-class** command in global configuration mode. To remove a previously configured access list association, use the **no** form of this command.



Note The existing **ip http access-class** *access-list-number* command is currently supported, but is going to be deprecated. Use the **ip http access-class ipv4** { *access-list-number* | *access-list-name* } and **ip http access-class ipv6** *access-list-name* instead.

```
ip http access-class { access-list-number | ipv4 { access-list-number | access-list-name } |
ipv6 access-list-name }
no ip http access-class { access-list-number | ipv4 { access-list-number | access-list-name }
| ipv6 access-list-name }
```

Syntax Description

ipv4	Specifies the IPv4 access list to restrict access to the secure HTTP server.
ipv6	Specifies the IPv6 access list to restrict access to the secure HTTP server.
<i>access-list-number</i>	Standard IP access list number in the range 0 to 99, as configured by the access-list global configuration command.
<i>access-list-name</i>	Name of a standard IPv4 access list, as configured by the ip access-list command.

Command Default

No access list is applied to the HTTP server.

Command Modes

Global configuration (config)

Command History

Release	Modification
Cisco IOS XE Denali 16.3.1	This command was modified. The ipv4 and ipv6 keyword were added.
Cisco IOS XE Release 3.3SE	This command was introduced.

Usage Guidelines

If this command is configured, the specified access list is assigned to the HTTP server. Before the HTTP server accepts a connection, it checks the access list. If the check fails, the HTTP server does not accept the request for a connection.

Examples

The following example shows how to define an access list as 20 and assign it to the HTTP server:

```
Device(config)# ip access-list standard 20
Device(config-std-nacl)# permit 209.165.202.130 0.0.0.255
Device(config-std-nacl)# permit 209.165.201.1 0.0.255.255
```

```
Device(config-std-nacl)# permit 209.165.200.225 0.255.255.255
Device(config-std-nacl)# exit
Device(config)# ip http access-class 20
```

The following example shows how to define an IPv4 named access list as and assign it to the HTTP server.

```
Device(config)# ip access-list standard Internet_filter
Device(config-std-nacl)# permit 1.2.3.4
Device(config-std-nacl)# exit
Device(config)# ip http access-class ipv4 Internet_filter
```

Related Commands

Command	Description
ip access-list	Assigns an ID to an access list and enters access list configuration mode.
ip http server	Enables the HTTP 1.1 server, including the Cisco web browser user interface.

ip radius source-interface

To force RADIUS to use the IP address of a specified interface for all outgoing RADIUS packets, use the **ip radius source-interface** command in global configuration mode. To prevent RADIUS from using the IP address of a specified interface for all outgoing RADIUS packets, use the no form of this command.

ip radius source-interface *interface-name* [**vrf** *vrf-name*]

no ip radius source-interface

Syntax Description

<i>interface-name</i>	Name of the interface that RADIUS uses for all of its outgoing packets.
vrf <i>vrf-name</i>	(Optional) Per virtual route forwarding (VRF) configuration.

Command Default

No default behavior or values.

Command Modes

Global configuration (config)

Command History

Release	Modification
Cisco IOS XE Denali 16.1.1	This command was introduced.

Usage Guidelines

Use this command to set the IP address of an interface to be used as the source address for all outgoing RADIUS packets. The IP address is used as long as the interface is in the *up* state. The RADIUS server can use one IP address entry for every network access client instead of maintaining a list of IP addresses. RADIUS uses the IP address of the interface that it is associated to, regardless of whether the interface is in the *up* or *down* state.

The **ip radius source-interface** command is especially useful in cases where the router has many interfaces and you want to ensure that all RADIUS packets from a particular router have the same IP address.

The specified interface should have a valid IP address and should be in the *up* state for a valid configuration. If the specified interface does not have a valid IP address or is in the *down* state, RADIUS selects a local IP that corresponds to the best possible route to the AAA server. To avoid this, add a valid IP address to the interface or bring the interface to the *up* state.

Use the **vrf** *vrf-name* keyword and argument to configure this command per VRF, which allows multiple disjointed routing or forwarding tables, where the routes of one user have no correlation with the routes of another user.

Examples

The following example shows how to configure RADIUS to use the IP address of interface s2 for all outgoing RADIUS packets:

```
ip radius source-interface s2
```

The following example shows how to configure RADIUS to use the IP address of interface Ethernet0 for VRF definition:

```
ip radius source-interface Ethernet0 vrf vrf1
```

ip source binding

To add a static IP source binding entry, use the **ip source binding** command. Use the **no** form of this command to delete a static IP source binding entry

ip source binding *mac-address* **vlan** *vlan-id* *ip-address* **interface** *interface-id*
no ip source binding *mac-address* **vlan** *vlan-id* *ip-address* **interface** *interface-id*

Syntax Description	<i>mac-address</i>	Binding MAC address.
	vlan <i>vlan-id</i>	Specifies the Layer 2 VLAN identification; valid values are from 1 to 4094.
	<i>ip-address</i>	Binding IP address.
	interface <i>interface-id</i>	ID of the physical interface.
Command Default	No IP source bindings are configured.	
Command Modes	Global configuration.	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

You can use this command to add a static IP source binding entry only.

The **no** format deletes the corresponding IP source binding entry. It requires the exact match of all required parameter in order for the deletion to be successful. Note that each static IP binding entry is keyed by a MAC address and a VLAN number. If the command contains the existing MAC address and VLAN number, the existing binding entry is updated with the new parameters instead of creating a separate binding entry.

This example shows how to add a static IP source binding entry:

```
Device# configure terminal
Device(config) ip source binding 0100.0230.0002 vlan 11 10.0.0.4 interface gigabitethernet1/0/1
```

ip ssh source-interface

To specify the IP address of an interface as the source address for a Secure Shell (SSH) client device, use the **ip ssh source-interface** command in global configuration mode. To remove the IP address as the source address, use the **no** form of this command.

```
ip ssh source-interface interface
no ip ssh source-interface interface
```

Syntax Description	<i>interface</i>	The interface whose address is used as the source address for the SSH client.
---------------------------	------------------	---

Command Default The address of the closest interface to the destination is used as the source address (the closest interface is the output interface through which the SSH packet is sent).

Command Modes Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.10.1	This command was introduced.
	Cisco IOS XE Gibraltar 16.11.1	

Usage Guidelines By specifying this command, you can force the SSH client to use the IP address of the source interface as the source address.

Examples In the following example, the IP address assigned to GigabitEthernet interface 1/0/1 is used as the source address for the SSH client:

```
Device> enable
Device# configure terminal
Device(config)# ip ssh source-interface GigabitEthernet 1/0/1
Device(config)# exit
```

ip verify source

To enable IP source guard on an interface, use the **ip verify source** command in interface configuration mode. To disable IP source guard, use the **no** form of this command.

ip verify source [mac-check]
no ip verify source

mac-check	(Optional) Enables IP source guard with MAC address verification.
------------------	---

Command Default IP source guard is disabled.

Command Modes Interface configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines To enable IP source guard with source IP address filtering, use the **ip verify source** interface configuration command.

To enable IP source guard with source IP address filtering and MAC address verification, use the **ip verify source mac-check** interface configuration command.

Examples

This example shows how to enable IP source guard with source IP address filtering on an interface:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# ip verify source
```

This example shows how to enable IP source guard with MAC address verification:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# ip verify source mac-check
```

You can verify your settings by entering the **show ip verify source** privileged EXEC command.

ipv6 access-list

To define an IPv6 access list and to place the device in IPv6 access list configuration mode, use the **ipv6 access-list** command in global configuration mode. To remove the access list, use the **no** form of this command.

ipv6 access-list *access-list-name* | **match-local-traffic** | **log-update threshold** *threshold-in-msgs* | **role-based** *list-name*
no ipv6 access-list *access-list-name* | **client** *permit-control-packets* | **log-update** *threshold* | **role-based** *list-name*

Syntax Description		
ipv6 <i>access-list-name</i>	Creates a named IPv6 ACL (up to 64 characters in length) and enters IPv6 ACL configuration mode. <i>access-list-name</i> - Name of the IPv6 access list. Names cannot contain a space or quotation mark, or begin with a numeric.	
match-local-traffic	Enables matching for locally-generated traffic.	
log-update threshold <i>threshold-in-msgs</i>	Determines how syslog messages are generated after the initial packet match. <i>threshold-in-msgs</i> - Number of packets generated.	
role-based <i>list-name</i>	Creates a role-based IPv6 ACL.	

Command Default No IPv6 access list is defined.

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE Denali 16.3.1	This command was reintroduced. This command was not supported in Cisco IOS XE Denali 16.1.x and Cisco IOS XE Denali 16.2.x

Usage Guidelines IPv6 ACLs are defined by using the **ipv6 access-list** command in global configuration mode and their permit and deny conditions are set by using the **deny** and **permit** commands in IPv6 access list configuration mode. Configuring the **ipv6 access-list** command places the device in IPv6 access list configuration mode--the device prompt changes to Device(config-ipv6-acl)#. From IPv6 access list configuration mode, permit and deny conditions can be set for the defined IPv6 ACL.



Note IPv6 ACLs are defined by a unique name (IPv6 does not support numbered ACLs). An IPv4 ACL and an IPv6 ACL cannot share the same name.

IPv6 is automatically configured as the protocol type in **permit any any** and **deny any any** statements that are translated from global configuration mode to IPv6 access list configuration mode.

Every IPv6 ACL has implicit **permit icmp any any nd-na**, **permit icmp any any nd-ns**, and **deny ipv6 any any** statements as its last match conditions. (The former two match conditions allow for ICMPv6 neighbor discovery.) An IPv6 ACL must contain at least one entry for the implicit **deny ipv6 any any** statement to take effect. The IPv6 neighbor discovery process makes use of the IPv6 network layer service; therefore, by default, IPv6 ACLs implicitly allow IPv6 neighbor discovery packets to be sent and received on an interface. In IPv4, the Address Resolution Protocol (ARP), which is equivalent to the IPv6 neighbor discovery process, makes use of a separate data link layer protocol; therefore, by default, IPv4 ACLs implicitly allow ARP packets to be sent and received on an interface.

Use the **ipv6 traffic-filter** interface configuration command with the *access-list-name* argument to apply an IPv6 ACL to an IPv6 interface. Use the **ipv6 access-class** line configuration command with the *access-list-name* argument to apply an IPv6 ACL to incoming and outgoing IPv6 virtual terminal connections to and from the device.

An IPv6 ACL applied to an interface with the **ipv6 traffic-filter** command filters traffic that is forwarded, not originated, by the device.

Examples

The example configures the IPv6 ACL list named list1 and places the device in IPv6 access list configuration mode.

```
Device(config)# ipv6 access-list list1
Device(config-ipv6-acl)#
```

The following example configures the IPv6 ACL named list2 and applies the ACL to outbound traffic on Ethernet interface 0. Specifically, the first ACL entry keeps all packets from the network FEC0:0:0:2::/64 (packets that have the site-local prefix FEC0:0:0:2 as the first 64 bits of their source IPv6 address) from exiting out of Ethernet interface 0. The second entry in the ACL permits all other traffic to exit out of Ethernet interface 0. The second entry is necessary because an implicit deny all condition is at the end of each IPv6 ACL.

```
Device(config)# ipv6 access-list list2 deny FEC0:0:0:2::/64 any
Device(config)# ipv6 access-list list2 permit any any
Device(config)# interface ethernet 0
Device(config-if)# ipv6 traffic-filter list2 out
```

ipv6 snooping policy



Note All existing IPv6 Snooping commands (prior to Cisco IOS XE Denali 16.1.1) now have corresponding SISF-based device-tracking commands that allow you to apply your configuration to both IPv4 and IPv6 address families. For more information, see [device-tracking policy](#)

To configure an IPv6 snooping policy and enter IPv6 snooping configuration mode, use the **ipv6 snooping policy** command in global configuration mode. To delete an IPv6 snooping policy, use the **no** form of this command.

ipv6 snooping policy *snooping-policy*
no ipv6 snooping policy *snooping-policy*

Syntax Description	<i>snooping-policy</i> User-defined name of the snooping policy. The policy name can be a symbolic string (such as Engineering) or an integer (such as 0).
---------------------------	--

Command Default	An IPv6 snooping policy is not configured.
------------------------	--

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Use the **ipv6 snooping policy** command to create an IPv6 snooping policy. When the **ipv6 snooping policy** command is enabled, the configuration mode changes to IPv6 snooping configuration mode. In this mode, the administrator can configure the following IPv6 first-hop security commands:

- The **device-role** command specifies the role of the device attached to the port.
- The **limit address-count** *maximum* command limits the number of IPv6 addresses allowed to be used on the port.
- The **protocol** command specifies that addresses should be gleaned with Dynamic Host Configuration Protocol (DHCP) or Neighbor Discovery Protocol (NDP).
- The **security-level** command specifies the level of security enforced.
- The **tracking** command overrides the default tracking policy on a port.
- The **trusted-port** command configures a port to become a trusted port; that is, limited or no verification is performed when messages are received.

This example shows how to configure an IPv6 snooping policy:

```
Device(config)# ipv6 snooping policy policy1
Device(config-ipv6-snooping)#
```

key chain macsec

To configure a MACsec key chain name on a device interface to fetch a Pre Shared Key (PSK), use the **key chain macsec** command in global configuration mode. To disable it, use the **no** form of this command.

key chain *name* **macsec** { **description** | **key** | **exit** }

Syntax Description	
name	Name of a key chain to be used to get keys.
description	Provides description of the MACsec key chain.
key	Configure a MACsec key.
exit	Exits from the MACsec key-chain configuration mode.
no	Negates the command or sets the default values.

Command Default key chain macsec is disabled.

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE Denali 16.3.1	This command was introduced.

This example shows how to configure MACsec key chain to fetch a 128-bit Pre Shared Key (PSK):

```
Switch#configure terminal
Switch(config)#key chain kc1 macsec
Switch(config-keychain-macsec)#key 1000
Switch(config-keychain-macsec)#cryptographic-algorithm aes-128-cmac
Switch(config-keychain-macsec-key)# key-string fb63e0269e2768c49bab8ee9a5c2258f
Switch(config-keychain-macsec-key)#end
Switch#
```

This example shows how to configure MACsec key chain to fetch a 256-bit Pre Shared Key (PSK):

```
Switch#configure terminal
Switch(config)#key chain kc1 macsec
Switch(config-keychain-macsec)#key 2000
Switch(config-keychain-macsec)#cryptographic-algorithm aes-256-cmac
Switch(config-keychain-macsec-key)# key-string
c865632acb269022447c417504a1bf5db1c296449b52627ba01f2ba2574c2878
Switch(config-keychain-macsec-key)#end
Switch#
```

key config-key password-encrypt

To store a type 6 encryption key in private NVRAM, use the **key config-key password-encrypt** command in global configuration mode. To disable the encryption, use the **no** form of this command.

key config-key password-encrypt [*text*]
no key config-key password-encrypt [*text*]

Syntax Description	<p><i>text</i> (Optional) Password or master key.</p> <p>Note It is recommended that you do not use the <i>text</i> argument but instead use interactive mode (using the enter key after you enter the key config-key password-encrypt command) so that the preshared key will not be printed anywhere and, therefore, cannot be seen.</p>
---------------------------	--

Command Default No type 6 password encryption

Command Modes Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.11.1	This command was introduced.

Usage Guidelines You can securely store plain text passwords in type 6 format in NVRAM using a command-line interface (CLI). Type 6 passwords are encrypted. Although the encrypted passwords can be seen or retrieved, it is difficult to decrypt them to find out the actual password. Use the **key config-key password-encrypt** command with the **password encryption aes** command to configure and enable the password (symmetric cipher Advanced Encryption Standard [AES] is used to encrypt the keys). The password (key) configured using the **key config-key password-encrypt** command is the primary encryption key that is used to encrypt all other keys in the device.

If you configure the **password encryption aes** command without configuring the **key config-key password-encrypt** command, the following message is printed at startup or during any nonvolatile generation (NVGEN) process, such as when the **show running-config** or **copy running-config startup-config** commands have been configured:

```
"Can not encrypt password. Please configure a configuration-key with 'key config-key'"
```

Changing a Password

If the password (primary key) is changed, or reencrypted, using the **key config-key password-encryption** command), the list registry passes the old key and the new key to the application modules that are using type 6 encryption.

Deleting a Password

If the primary key that was configured using the **key config-key password-encrypt** command is deleted from the system, a warning is printed (and a confirm prompt is issued) that states that all type 6 passwords will become useless. As a security measure, after the passwords have been encrypted, they will never be decrypted in the Cisco IOS software. However, passwords can be reencrypted as explained in the previous paragraph.



Caution If the password configured using the **key config-key password-encrypt** command is lost, it cannot be recovered. The password should be stored in a safe location.

Unconfiguring Password Encryption

If you later unconfigure password encryption using the **no password encryption aes** command, all existing type 6 passwords are left unchanged, and as long as the password (primary key) that was configured using the **key config-key password-encryption** command exists, the type 6 passwords will be decrypted as and when required by the application.

Storing Passwords

Because no one can “read” the password (configured using the **key config-key password-encrypt** command), there is no way that the password can be retrieved from the device. Existing management stations cannot “know” what it is unless the stations are enhanced to include this key somewhere, in which case the password needs to be stored securely within the management system. If configurations are stored using TFTP, the configurations are not standalone, meaning that they cannot be loaded onto a device. Before or after the configurations are loaded onto a device, the password must be manually added (using the **key config-key password-encrypt** command). The password can be manually added to the stored configuration but is not recommended because adding the password manually allows anyone to decrypt all passwords in that configuration.

Configuring New or Unknown Passwords

If you enter or cut and paste cipher text that does not match the primary key, or if there is no primary key, the cipher text is accepted or saved, but an alert message is printed. The alert message is as follows:

```
"ciphertext>[for username bar] is incompatible with the configured master key."
```

If a new primary key is configured, all the plain keys are encrypted and made type 6 keys. The existing type 6 keys are not encrypted. The existing type 6 keys are left as is.

If the old primary key is lost or unknown, you have the option of deleting the primary key using the **no key config-key password-encrypt** command. Deleting the primary key using the **no key config-key password-encrypt** command causes the existing encrypted passwords to remain encrypted in the device configuration. The passwords will not be decrypted.

Examples

The following example shows that a type 6 encryption key is to be stored in NVRAM:

```
Device (config)# key config-key password-encrypt
```

Related Commands

Command	Description
password encryption aes	Enables a type 6 encrypted preshared key.

limit address-count

To limit the number of IPv6 addresses allowed to be used on the port, use the **limit address-count** command in Neighbor Discovery Protocol (NDP) inspection policy configuration mode or IPv6 snooping configuration mode. To return to the default, use the **no** form of this command.

limit address-count *maximum*

no limit address-count

Syntax Description	<i>maximum</i> The number of addresses allowed on the port. The range is from 1 to 10000.	
Command Default	The default is no limit.	
Command Modes	ND inspection policy configuration IPv6 snooping configuration	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
Usage Guidelines	<p>The limit address-count command limits the number of IPv6 addresses allowed to be used on the port on which the policy is applied. Limiting the number of IPv6 addresses on a port helps limit the binding table size. The range is from 1 to 10000.</p> <p>This example shows how to define an NDP policy name as policy1, place the switch in NDP inspection policy configuration mode, and limit the number of IPv6 addresses allowed on the port to 25:</p> <pre>Device(config)# ipv6 nd inspection policy policy1 Device(config-nd-inspection)# limit address-count 25</pre> <p>This example shows how to define an IPv6 snooping policy name as policy1, place the switch in IPv6 snooping policy configuration mode, and limit the number of IPv6 addresses allowed on the port to 25:</p> <pre>Device(config)# ipv6 snooping policy policy1 Device(config-ipv6-snooping)# limit address-count 25</pre>	

mab request format attribute 32

To enable VLAN ID-based MAC authentication on a switch, use the **mab request format attribute 32 vlan access-vlan** command in global configuration mode. To return to the default setting, use the **no** form of this command.

mab request format attribute 32 vlan access-vlan
no mab request format attribute 32 vlan access-vlan

Syntax Description This command has no arguments or keywords.

Command Default VLAN-ID based MAC authentication is disabled.

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Use this command to allow a RADIUS server to authenticate a new user based on the host MAC address and VLAN.

Use this feature on networks with the Microsoft IAS RADIUS server. The Cisco ACS ignores this command.

This example shows how to enable VLAN-ID based MAC authentication on a switch:

```
Device(config)# mab request format attribute 32 vlan access-vlan
```

Related Commands	Command	Description
	authentication event	Sets the action for specific authentication events.
	authentication fallback	Configures a port to use web authentication as a fallback method for clients that do not support IEEE 802.1x authentication.
	authentication host-mode	Sets the authorization manager mode on a port.
	authentication open	Enables or disables open access on a port.
	authentication order	Sets the order of authentication methods used on a port.
	authentication periodic	Enables or disables reauthentication on a port.
	authentication port-control	Enables manual control of the port authorization state.
	authentication priority	Adds an authentication method to the port-priority list.

Command	Description
authentication timer	Configures the timeout and reauthentication parameters for an 802.1x-enabled port.
authentication violation	Configures the violation modes that occur when a new device connects to a port or when a new device connects to a port with the maximum number of devices already connected to that port.
mab	Enables MAC-based authentication on a port.
mab eap	Configures a port to use the Extensible Authentication Protocol (EAP).
show authentication	Displays information about authentication manager events on the switch.

macsec network-link

To enable MKA MACsec configuration on the uplink interfaces, use the **macsec network-link** command on the interface. To disable it, use the **no** form of this command.

macsec network-link

Syntax Description

macsec network-link Enables MKA MACsec configuration on device interfaces using EAP-TLS authentication protocol.

Command Default

macsec network-link is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
Cisco IOS XE Denali 16.3.1	This command was introduced.

This example shows how to configure MACsec MKA on an interface using the EAP-TLS authentication protocol:

```
Switch#configure terminal
Switch(config)# int G1/0/20
Switch(config-if)# macsec network-link
Switch(config-if)# end
Switch#
```

match (access-map configuration)

To set the VLAN map to match packets against one or more access lists, use the **match** command in access-map configuration mode on the switch stack or on a standalone switch. To remove the match parameters, use the **no** form of this command.

```
match {ip address {namenumber} [{namenumber}] [{namenumber}]... | ipv6 address {namenumber}
[namenumber] [{namenumber}]... | mac address {name} [{name}] [{name}]...}
no match {ip address {namenumber} [{namenumber}] [{namenumber}]... | ipv6 address
{namenumber} [{namenumber}] [{namenumber}]... | mac address {name} [{name}] [{name}]...}
```

Syntax Description	
ip address	Sets the access map to match packets against an IP address access list.
ipv6 address	Sets the access map to match packets against an IPv6 address access list.
mac address	Sets the access map to match packets against a MAC address access list.
<i>name</i>	Name of the access list to match packets against.
<i>number</i>	Number of the access list to match packets against. This option is not valid for MAC access lists.

Command Default The default action is to have no match parameters applied to a VLAN map.

Command Modes Access-map configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines You enter access-map configuration mode by using the **vlan access-map** global configuration command.

You must enter one access list name or number; others are optional. You can match packets against one or more access lists. Matching any of the lists counts as a match of the entry.

In access-map configuration mode, use the **match** command to define the match conditions for a VLAN map applied to a VLAN. Use the **action** command to set the action that occurs when the packet matches the conditions.

Packets are matched only against access lists of the same protocol type; IP packets are matched against IP access lists, IPv6 packets are matched against IPv6 access lists, and all other packets are matched against MAC access lists.

IP, IPv6, and MAC addresses can be specified for the same map entry.

This example shows how to define and apply a VLAN access map vmap4 to VLANs 5 and 6 that will cause the interface to drop an IP packet if the packet matches the conditions defined in access list al2:

```
Device(config)# vlan access-map vmap4
Device(config-access-map)# match ip address al2
Device(config-access-map)# action drop
```

```
Device(config-access-map) # exit  
Device(config) # vlan filter vmap4 vlan-list 5-6
```

You can verify your settings by entering the **show vlan access-map** privileged EXEC command.

mka policy (global configuration)

To create a MACsec Key Agreement (MKA) protocol policy and to enter MKA policy configuration mode, use the **no** form of this command. **mka policy** command in global configuration mode. To delete the policy, use the **no** form of this command.

mka policy *policy-name*
no mka policy *policy-name*

Syntax Description	<i>policy-name</i> Identifies an MKA policy and enters MKA policy configuration mode. The maximum length for the policy name is 16 characters.
---------------------------	--

Command Default No MKA policies are created.

Command Modes Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Denali 16.3.1	This command was introduced.

Usage Guidelines If you enter the name of an existing policy, you see a warning that any changes to the policy deletes all active MKA sessions with that policy. Whenever you change an MKA policy, active MKA sessions with that policy applied are cleared. If you try to create a policy name with more than 16 characters, you see a warning message, and the policy is not created.

If you enter the **no mka policy** *policy-name* command to delete a policy that is applied to at least one interface, you are prompted to first remove the policy from all interfaces that it is applied to and then to reenter the command. If you attempt to delete a policy and the policy name does not exist, you are notified.

When you enter MKA policy mode, these commands are available:

- confidentiality-offset—Sets the confidentiality offset for MACsec operation
- replay-protection—Configures MKA to use replay protection for MACsec operation

Examples

The following example shows how to configure an MKA policy and what you see if you create a policy name that already exists:

```
Device(config)# mka policy test-policy
Device(config-mka-policy)# exit
Device(config)# mka policy test-policy
%MKA policy "test-policy" may have associated active MKA Sessions.
Changes to MKA Policy "test-policy" values
will cause all associated active MKA Sessions to be cleared.
```

Related Commands

Command	Description
mka policy (interface configuration)	Applies an MKA policy to an interface.
show mka policy	Displays information about defined MKA protocol policies.

mka pre-shared-key

To configure MKA MACsec on a device interface using a Pre Shared Key (PSK), use the **mka pre-shared-key key-chain** *key-chain name* command in global configuration mode. To disable it, use the **no** form of this command.

mka pre-shared-key key-chain *key-chain-name*

Syntax Description	mka pre-shared-key key-chain Enables MACsec MKA configuration on device interfaces using a PSK.	
Command Default	mka pre-shared-key is disabled.	
Command Modes	Interface configuration	
Command History	Release	Modification
	Cisco IOS XE Denali 16.3.1	This command was introduced.

This example shows how to configure MKA MACsec on an interface using a PSK:

```
Switch#
Switch(config)# int G1/0/20
Switch(config-if)# mka pre-shared-key key-chain kc1
Switch(config-if)# end
Switch#
```

authentication logging verbose

To filter detailed information from authentication system messages, use the **authentication logging verbose** command in global configuration mode on the switch stack or on a standalone switch.

authentication logging verbose
no authentication logging verbose

Syntax Description This command has no arguments or keywords.

Command Default Detailed logging of system messages is not enabled.

Command Modes Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines This command filters details, such as anticipated success, from authentication system messages. Failure messages are not filtered.

To filter verbose authentication system messages:

```
Device(config)# authentication logging verbose
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands	Command	Description
	authentication logging verbose	Filters details from authentication system messages.
	dot1x logging verbose	Filters details from 802.1x system messages.
	mab logging verbose	Filters details from MAC authentication bypass (MAB) system messages.

dot1x logging verbose

To filter detailed information from 802.1x system messages, use the **dot1x logging verbose** command in global configuration mode on the switch stack or on a standalone switch.

dot1x logging verbose
no dot1x logging verbose

Syntax Description This command has no arguments or keywords.

Command Default Detailed logging of system messages is not enabled.

Command Modes Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines This command filters details, such as anticipated success, from 802.1x system messages. Failure messages are not filtered.

To filter verbose 802.1x system messages:

```
Device(config)# dot1x logging verbose
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands	Command	Description
	authentication logging verbose	Filters details from authentication system messages.
	dot1x logging verbose	Filters details from 802.1x system messages.
	mab logging verbose	Filters details from MAC authentication bypass (MAB) system messages.

mab logging verbose

To filter detailed information from MAC authentication bypass (MAB) system messages, use the **mab logging verbose** command in global configuration mode on the switch stack or on a standalone switch.

mab logging verbose
no mab logging verbose

Syntax Description This command has no arguments or keywords.

Command Default Detailed logging of system messages is not enabled.

Command Modes Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines This command filters details, such as anticipated success, from MAC authentication bypass (MAB) system messages. Failure messages are not filtered.

To filter verbose MAB system messages:

```
Device(config)# mab logging verbose
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands	Command	Description
	authentication logging verbose	Filters details from authentication system messages.
	dot1x logging verbose	Filters details from 802.1x system messages.
	mab logging verbose	Filters details from MAC authentication bypass (MAB) system messages.

password encryption aes

To enable a type 6 encrypted preshared key, use the **password encryption aes** command in global configuration mode. To disable password encryption, use the **no** form of this command.

password encryption aes
no password encryption aes

Syntax Description

This command has no arguments or keywords.

Command Default

Preshared keys are not encrypted.

Command Modes

Global configuration (config)

Command History

Release	Modification
Cisco IOS XE Gibraltar 16.11.1	This command was introduced.

Usage Guidelines

You can securely store plain text passwords in type 6 format in NVRAM using a command-line interface (CLI). Type 6 passwords are encrypted. Although the encrypted passwords can be seen or retrieved, it is difficult to decrypt them to find out the actual password. Use the **key config-key password-encrypt** command with the **password encryption aes** command to configure and enable the password (symmetric cipher Advanced Encryption Standard [AES] is used to encrypt the keys). The password (key) configured using the **key config-key password-encrypt** command is the primary encryption key that is used to encrypt all other keys in the router.

If you configure the **password encryption aes** command without configuring the **key config-key password-encrypt** command, the following message is printed at startup or during any nonvolatile generation (NVGEN) process, such as when the **show running-config** or **copy running-config startup-config** commands have been configured:

```
"Can not encrypt password. Please configure a configuration-key with 'key config-key'"
```

Changing a Password

If the password (primary key) is changed, or reencrypted, using the **key config-key password-encrypt** command, the list registry passes the old key and the new key to the application modules that are using type 6 encryption.

Deleting a Password

If the primary key that was configured using the **key config-key password-encrypt** command is deleted from the system, a warning is printed (and a confirm prompt is issued) that states that all type 6 passwords will become useless. As a security measure, after the passwords have been encrypted, they will never be decrypted in the Cisco IOS software. However, passwords can be reencrypted as explained in the previous paragraph.



Caution

If the password configured using the **key config-key password-encrypt** command is lost, it cannot be recovered. The password should be stored in a safe location.

Unconfiguring Password Encryption

If you later unconfigure password encryption using the **no password encryption aes** command, all existing type 6 passwords are left unchanged, and as long as the password (primary key) that was configured using the **key config-key password-encrypt** command exists, the type 6 passwords will be decrypted as and when required by the application.

Storing Passwords

Because no one can “read” the password (configured using the **key config-key password-encrypt** command), there is no way that the password can be retrieved from the router. Existing management stations cannot “know” what it is unless the stations are enhanced to include this key somewhere, in which case the password needs to be stored securely within the management system. If configurations are stored using TFTP, the configurations are not standalone, meaning that they cannot be loaded onto a router. Before or after the configurations are loaded onto a router, the password must be manually added (using the **key config-key password-encrypt** command). The password can be manually added to the stored configuration but is not recommended because adding the password manually allows anyone to decrypt all passwords in that configuration.

Configuring New or Unknown Passwords

If you enter or cut and paste cipher text that does not match the primary key, or if there is no primary key, the cipher text is accepted or saved, but an alert message is printed. The alert message is as follows:

```
"ciphertext>[for username bar>] is incompatible with the configured master key."
```

If a new primary key is configured, all the plain keys are encrypted and made type 6 keys. The existing type 6 keys are not encrypted. The existing type 6 keys are left as is.

If the old primary key is lost or unknown, you have the option of deleting the primary key using the **no key config-key password-encrypt** command. Deleting the primary key using the **no key config-key password-encrypt** command causes the existing encrypted passwords to remain encrypted in the router configuration. The passwords will not be decrypted.

Examples

The following example shows that a type 6 encrypted preshared key has been enabled:

```
Device (config)# password encryption aes
```

Related Commands

Command	Description
key config-key password-encrypt	Stores a type 6 encryption key in private NVRAM.

permit (MAC access-list configuration)

To allow non-IP traffic to be forwarded if the conditions are matched, use the **permit** MAC access-list configuration command on the switch stack or on a standalone switch. To remove a permit condition from the extended MAC access list, use the **no** form of this command.

```
{permit {any | hostsrc-MAC-addr | src-MAC-addr mask} {any | hostdst-MAC-addr |
dst-MAC-addr mask} [type mask | aarp | amber | appletalk | dec-spanning | decnet-iv |
diagnostic | dsm | etype-6000 | etype-8042 | lat | larc-sca | lsaplsap mask | mop-console
| mop-dump | msdos | mumps | netbios | vines-echo | vines-ip | xns-idp] [coscos]
nopermit {any | host src-MAC-addr | src-MAC-addr mask} {any | host dst-MAC-addr |
dst-MAC-addr mask} [type mask | aarp | amber | appletalk | dec-spanning | decnet-iv |
diagnostic | dsm | etype-6000 | etype-8042 | lat | larc-sca | lsap lsap mask | mop-console
| mop-dump | msdos | mumps | netbios | vines-echo | vines-ip | xns-idp] [coscos]
```

Syntax Description

any	Denies any source or destination MAC address.
host <i>src-MAC-addr</i> <i>src-MAC-addr mask</i>	Specifies a host MAC address and optional subnet mask. If the source address for a packet matches the defined address, non-IP traffic from that address is denied.
host <i>dst-MAC-addr</i> <i>dst-MAC-addr mask</i>	Specifies a destination MAC address and optional subnet mask. If the destination address for a packet matches the defined address, non-IP traffic to that address is denied.
<i>type mask</i>	(Optional) Specifies the EtherType number of a packet with Ethernet II or SNAP encapsulation to identify the protocol of the packet. <ul style="list-style-type: none"> <i>type</i> is 0 to 65535, specified in hexadecimal. <i>mask</i> is a mask of don't care bits applied to the EtherType before testing for a match.
aarp	(Optional) Specifies EtherType AppleTalk Address Resolution Protocol that maps a data-link address to a network address.
amber	(Optional) Specifies EtherType DEC-Amber.
appletalk	(Optional) Specifies EtherType AppleTalk/EtherTalk.
dec-spanning	(Optional) Specifies EtherType Digital Equipment Corporation (DEC) spanning tree.
decnet-iv	(Optional) Specifies EtherType DECnet Phase IV protocol.
diagnostic	(Optional) Specifies EtherType DEC-Diagnostic.

dsm	(Optional) Specifies EtherType DEC-DSM.
etype-6000	(Optional) Specifies EtherType 0x6000.
etype-8042	(Optional) Specifies EtherType 0x8042.
lat	(Optional) Specifies EtherType DEC-LAT.
lavr-sca	(Optional) Specifies EtherType DEC-LAVC-SCA.
lsap <i>lsap-number mask</i>	(Optional) Specifies the LSAP number (0 to 65535) of a packet with 802.2 encapsulation to identify the protocol of the packet. The <i>mask</i> is a mask of don't care bits applied to the LSAP number before testing for a match.
mop-console	(Optional) Specifies EtherType DEC-MOP Remote Console.
mop-dump	(Optional) Specifies EtherType DEC-MOP Dump.
msdos	(Optional) Specifies EtherType DEC-MSDOS.
mumps	(Optional) Specifies EtherType DEC-MUMPS.
netbios	(Optional) Specifies EtherType DEC- Network Basic Input/Output System (NetBIOS).
vines-echo	(Optional) Specifies EtherType Virtual Integrated Network Service (VINES) Echo from Banyan Systems.
vines-ip	(Optional) Specifies EtherType VINES IP.
xns-idp	(Optional) Specifies EtherType Xerox Network Systems (XNS) protocol suite.
cos <i>cos</i>	(Optional) Specifies an arbitrary class of service (CoS) number from 0 to 7 to set priority. Filtering on CoS can be performed only in hardware. A warning message appears if the cos option is configured.

Command Default This command has no defaults. However, the default action for a MAC-named ACL is to deny.

Command Modes Mac-access list configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines Though visible in the command-line help strings, **appletalk** is not supported as a matching condition.

You enter MAC access-list configuration mode by using the **mac access-list extended** global configuration command.

If you use the **host** keyword, you cannot enter an address mask; if you do not use the **any** or **host** keywords, you must enter an address mask.

After an access control entry (ACE) is added to an access control list, an implied **deny-any-any** condition exists at the end of the list. That is, if there are no matches, the packets are denied. However, before the first ACE is added, the list permits all packets.

To filter IPX traffic, you use the *type mask* or **lsap lsap mask** keywords, depending on the type of IPX encapsulation being used. Filter criteria for IPX encapsulation types as specified in Novell terminology and Cisco IOS terminology are listed in the following table.

Table 3: IPX Filtering Criteria

IPX Encapsulation Type		Filter Criterion
Cisco IOS Name	Novell Name	
arpa	Ethernet II	EtherType 0x8137
snap	Ethernet-snap	EtherType 0x8137
sap	Ethernet 802.2	LSAP 0xE0E0
novell-ether	Ethernet 802.3	LSAP 0xFFFF

This example shows how to define the MAC-named extended access list to allow NetBIOS traffic from any source to MAC address 00c0.00a0.03fa. Traffic matching this list is allowed.

```
Device(config-ext-macl)# permit any host 00c0.00a0.03fa netbios
```

This example shows how to remove the permit condition from the MAC-named extended access list:

```
Device(config-ext-macl)# no permit any 00c0.00a0.03fa 0000.0000.0000 netbios
```

This example permits all packets with EtherType 0x4321:

```
Device(config-ext-macl)# permit any any 0x4321 0
```

You can verify your settings by entering the **show access-lists** privileged EXEC command.

Related Commands

Command	Description
deny	Denies from the MAC access-list configuration. Denies non-IP traffic to be forwarded if conditions are matched.
mac access-list extended	Creates an access list based on MAC addresses for non-IP traffic.

Command	Description
show access-lists	Displays access control lists configured on a switch.

protocol (IPv6 snooping)

To specify that addresses should be gleaned with Dynamic Host Configuration Protocol (DHCP) or Neighbor Discovery Protocol (NDP), or to associate the protocol with an IPv6 prefix list, use the **protocol** command. To disable address gleaning with DHCP or NDP, use the **no** form of the command.

```
protocol {dhcp | ndp}
no protocol {dhcp | ndp}
```

Syntax Description	dhcp Specifies that addresses should be gleaned in Dynamic Host Configuration Protocol (DHCP) packets.				
	ndp Specifies that addresses should be gleaned in Neighbor Discovery Protocol (NDP) packets.				
Command Default	Snooping and recovery are attempted using both DHCP and NDP.				
Command Modes	IPv6 snooping configuration mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.3SE	This command was introduced.				
Usage Guidelines	<p>If an address does not match the prefix list associated with DHCP or NDP, then control packets will be dropped and recovery of the binding table entry will not be attempted with that protocol.</p> <ul style="list-style-type: none"> • Using the no protocol {dhcp ndp} command indicates that a protocol will not be used for snooping or gleaning. • If the no protocol dhcp command is used, DHCP can still be used for binding table recovery. • Data glean can recover with DHCP and NDP, though destination guard will only recovery through DHCP. <p>This example shows how to define an IPv6 snooping policy name as policy1, place the switch in IPv6 snooping policy configuration mode, and configure the port to use DHCP to glean addresses:</p> <pre>Device(config)# ipv6 snooping policy policy1 Device(config-ipv6-snooping)# protocol dhcp</pre>				

radius server



Note Starting from Cisco IOS 15.2(5)E release, the **radius server** command replaces the **radius-server host** command, being used in releases prior to Cisco IOS Release 15.2(5)E. The old command has been deprecated.

Use the **radius server** configuration sub-mode command on the switch stack or on a standalone switch to configure the RADIUS server parameters, including the RADIUS accounting and authentication. Use the **no** form of this command to return to the default settings.

```
radius server name
address {ipv4 | ipv6} ip{address / hostname} auth-port udp-port acct-port udp-port
key string
automate tester name | retransmit value | timeout seconds
no radius server name
```

Syntax Description

address { ipv4 ipv6 }	Specify the IP address of the RADIUS server.
<i>ip{address / hostname}</i>	
auth-port <i>udp-port</i>	(Optional) Specify the UDP port for the RADIUS authentication server. The range is from 0 to 65536.
acct-port <i>udp-port</i>	(Optional) Specify the UDP port for the RADIUS accounting server. The range is from 0 to 65536.
key <i>string</i>	(Optional) Specify the authentication and encryption key for all RADIUS communication between the switch and the RADIUS daemon.
	<p>Note The key is a text string that must match the encryption key used on the RADIUS server. Always configure the key as the last item in this command. Leading spaces are ignored, but spaces within and at the end of the key are used. If there are spaces in your key, do not enclose the key in quotation marks unless the quotation marks are part of the key.</p>
automate tester <i>name</i>	(Optional) Enable automatic server testing of the RADIUS server status, and specify the username to be used.
retransmit <i>value</i>	(Optional) Specifies the number of times a RADIUS request is resent when the server is not responding or responding slowly. The range is 1 to 100. This setting overrides the radius-server retransmit global configuration command setting.
timeout <i>seconds</i>	(Optional) Specifies the time interval that the Switch waits for the RADIUS server to reply before sending a request again. The range is 1 to 1000. This setting overrides the radius-server timeout global configuration command setting.
no radius server <i>name</i>	Returns to the default settings

Command Default

- The UDP port for the RADIUS accounting server is 1646.
- The UDP port for the RADIUS authentication server is 1645.
- Automatic server testing is disabled.
- The timeout is 60 minutes (1 hour).
- When the automatic testing is enabled, testing occurs on the accounting and authentication UDP ports.
- The authentication and encryption key (string) is not configured.

Command Modes

Radius server sub-mode configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced to replace the radius-server host command.

Usage Guidelines

- We recommend that you configure the UDP port for the RADIUS accounting server and the UDP port for the RADIUS authentication server to non-default values.
- You can configure the authentication and encryption key by using the **key string** sub-mode configuration command. Always configure the key as the last item in this command.
- Use the **automate-tester name** keywords to enable automatic server testing of the RADIUS server status and to specify the username to be used.

This example shows how to configure 1645 as the UDP port for the authentication server and 1646 as the UDP port for the accounting server, and configure a key string:

```
Device(config)# radius server ISE
Device(config-radius-server)# address ipv4 10.1.1 auth-port 1645 acct-port 1646
Device(config-radius-server)# key cisco123
```

sap mode-list (cts manual)

To select the Security Association Protocol (SAP) authentication and encryption modes (prioritized from highest to lowest) used to negotiate link encryption between two interfaces, use the **sap mode-list** command in Cisco TrustSec dot1x interface configuration mode. To remove a mode-list and revert to the default, use the **no** form of this command.

Use the **sap mode-list** command to manually specify the PMK and the Security Association Protocol (SAP) authentication and encryption modes to negotiate MACsec link encryption between two interfaces. Use the **no** form of the command to disable the configuration.

sap pmk mode-list {gcm-encrypt | gmac | no-encap | null} [gcm-encrypt | gmac | no-encap | null]

no sap pmk mode-list {gcm-encrypt | gmac | no-encap | null} [gcm-encrypt | gmac | no-encap | null]

Syntax Description

pmk <i>hex_value</i>	Specifies the Hex-data PMK (without leading 0x; enter even number of hex characters, or else the last character is prefixed with 0.).
mode-list	Specifies the list of advertised modes (prioritized from highest to lowest).
gcm-encrypt	Specifies GMAC authentication, GCM encryption.
gmac	Specifies GMAC authentication only, no encryption.
no-encap	Specifies no encapsulation.
null	Specifies encapsulation present, no authentication, no encryption.

Command Default

The default encryption is **sap pmk mode-list gcm-encrypt null**. When the peer interface does not support 802.1AE MACsec or 802.REV layer-2 link encryption, the default encryption is **null**.

Command Modes

CTS manual interface configuration (config-if-cts-manual)

Command History

Release	Modification
Cisco IOS XE Denali 16.3.1	This command was introduced.

Usage Guidelines

Use the **sap pmk mode-list** command to specify the authentication and encryption method.

The Security Association Protocol (SAP) is an encryption key derivation and exchange protocol based on a draft version of the 802.11i IEEE protocol. SAP is used to establish and maintain the 802.1AE link-to-link encryption (MACsec) between interfaces that support MACsec.

SAP and PMK can be manually configured between two interfaces with the **sap pmk mode-list** command. When using 802.1X authentication, both sides (supplicant and authenticator) receive the PMK and the MAC address of the peer's port from the Cisco Secure Access Control Server.

If a device is running Cisco TrustSec-aware software but the hardware is not Cisco TrustSec-capable, disallow encapsulation with the **sap mode-list no-encap** command.

Examples

The following example shows how to configure SAP on a Gigabit Ethernet interface:

```
Switch# configure terminal
Switch(config)# interface gigabitethernet 2/1
Switch(config-if)# cts manual
Switch(config-if-cts-manual)# sap pmk FFEED mode-list gcm-encrypt
```

Related Commands

Command	Description
cts manual	Enables an interface for Cisco TrustSec.
propagate sgt (cts manual)	Enables SGT propagation at Layer 2 on Cisco TrustSec Security interfaces.
show cts interface	Displays Cisco TrustSec interface configuration statistics.

security level (IPv6 snooping)

To specify the level of security enforced, use the **security-level** command in IPv6 snooping policy configuration mode.

security level { **glean** | **guard** | **inspect** }

Syntax Description	glean	Extracts addresses from the messages and installs them into the binding table without performing any verification.
	guard	Performs both glean and inspect. Additionally, RA and DHCP server messages are rejected unless they are received on a trusted port or another policy authorizes them.
	inspect	Validates messages for consistency and conformance; in particular, address ownership is enforced. Invalid messages are dropped.
Command Default	The default security level is guard.	
Command Modes	IPv6 snooping configuration	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This example shows how to define an IPv6 snooping policy name as policy1, place the device in IPv6 snooping configuration mode, and configure the security level as inspect:

```
Device(config)# ipv6 snooping policy policy1
Device(config-ipv6-snooping)# security-level inspect
```

server-private (RADIUS)

To configure the IP address of the private RADIUS server for the group server, use the **server-private** command in RADIUS server-group configuration mode. To remove the associated private server from the authentication, authorization, and accounting (AAA) group server, use the **no** form of this command.

server-private *ip-address* [{**auth-port** *port-number* | **acct-port** *port-number*}] [**non-standard**] [**timeout** *seconds*] [**retransmit** *retries*] [**key** *string*]

no server-private *ip-address* [{**auth-port** *port-number* | **acct-port** *port-number*}] [**non-standard**] [**timeout** *seconds*] [**retransmit** *retries*] [**key** *string*]

Syntax Description

<i>ip-address</i>	IP address of the private RADIUS server host.
auth-port <i>port-number</i>	(Optional) User Datagram Protocol (UDP) destination port for authentication requests. The default value is 1645.
acct-port <i>port-number</i>	(Optional) UDP destination port for accounting requests. The default value is 1646.
non-standard	(Optional) RADIUS server is using vendor-proprietary RADIUS attributes.
timeout <i>seconds</i>	(Optional) Time interval (in seconds) that the router waits for the RADIUS server to reply before retransmitting. This setting overrides the global value of the radius-server timeout command. If no timeout value is specified, the global value is used.
retransmit <i>retries</i>	(Optional) Number of times a RADIUS request is resent to a server, if that server is not responding or responding slowly. This setting overrides the global setting of the radius-server retransmit command.
key <i>string</i>	(Optional) Authentication and encryption key used between the router and the RADIUS daemon running on the RADIUS server. This key overrides the global setting of the radius-server key command. If no key string is specified, the global value is used. The <i>string</i> can be 0 (specifies that an unencrypted key follows), 6 (specifies that an advanced encryption scheme [AES] encrypted key follows), 7 (specifies that a hidden key follows), or a line specifying the unencrypted (clear-text) server key.

Command Default

If server-private parameters are not specified, global configurations will be used; if global configurations are not specified, default values will be used.

Command Modes

RADIUS server-group configuration (config-sg-radius)

Command History

Release	Modification
Cisco IOS XE Denali 16.1.1	This command was introduced.

Usage Guidelines

Use the **server-private** command to associate a particular private server with a defined server group. To prevent possible overlapping of private addresses between virtual route forwarding (VRF) instances, private servers (servers with private addresses) can be defined within the server group and remain hidden from other groups, while the servers in the global pool (default "radius" server group) can still be referred to by IP addresses and port numbers. Thus, the list of servers in server groups includes references to the hosts in the global configuration and the definitions of private servers.

**Note**

- If the **radius-server directed-request** command is configured, then a private RADIUS server cannot be used as the group server by configuring the **server-private (RADIUS)** command.
- Creating or updating AAA server statistics record for private RADIUS servers are not supported. If private RADIUS servers are used, then error messages and tracebacks will be encountered, but these error messages or tracebacks do not have any impact on the AAA RADIUS functionality. To avoid these error messages and tracebacks, configure public RADIUS server instead of private RADIUS server.

Use the **password encryption aes** command to configure type 6 AES encrypted keys.

Examples

The following example shows how to define the sg_water RADIUS group server and associate private servers with it:

```
Device> enable
Device# configure terminal
Device(config)# aaa new-model
Device(config)# aaa group server radius sg_water
Device(config-sg-radius)# server-private 10.1.1.1 timeout 5 retransmit 3 key xyz
Device(config-sg-radius)# server-private 10.2.2.2 timeout 5 retransmit 3 key xyz
```

Related Commands

Command	Description
aaa group server	Groups different server hosts into distinct lists and distinct methods.
aaa new-model	Enables the AAA access control model.
password encryption aes	Enables a type 6 encrypted preshared key.
radius-server host	Specifies a RADIUS server host.
radius-server directed-request	Allows users to log in to a Cisco NAS and select a RADIUS server for authentication.

show aaa clients

To show AAA client statistics, use the **show aaa clients** command.

show aaa clients [**detailed**]

Syntax Description	detailed (Optional) Shows detailed AAA client statistics.
---------------------------	--

Command Modes	User EXEC
----------------------	-----------

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

This is an example of output from the **show aaa clients** command:

```
Device# show aaa clients
Dropped request packets: 0
```

show aaa command handler

To show AAA command handler statistics, use the **show aaa command handler** command.

show aaa command handler

Syntax Description This command has no arguments or keywords.

Command Modes User EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

This is an example of output from the **show aaa command handler** command:

```
Device# show aaa command handler

AAA Command Handler Statistics:
  account-logon: 0, account-logout: 0
  account-query: 0, pod: 0
  service-logon: 0, service-logout: 0
  user-profile-push: 0, session-state-log: 0
  reauthenticate: 0, bounce-host-port: 0
  disable-host-port: 0, update-rbacl: 0
  update-sgt: 0, update-cts-policies: 0
  invalid commands: 0
  async message not sent: 0
```

show aaa local

To show AAA local method options, use the **show aaa local** command.

show aaa local {**netuser** {*name* | **all**} | **statistics** | **user lockout**}

Syntax Description

netuser	Specifies the AAA local network or guest user database.
<i>name</i>	Network user name.
all	Specifies the network and guest user information.
statistics	Displays statistics for local authentication.
user lockout	Specifies the AAA local locked-out user.

Command Modes

User EXEC

Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

This is an example of output from the **show aaa local statistics** command:

```
Device# show aaa local statistics

Local EAP statistics

EAP Method          Success      Fail
-----
Unknown              0            0
EAP-MD5              0            0
EAP-GTC              0            0
LEAP                 0            0
PEAP                 0            0
EAP-TLS              0            0
EAP-MSCHAPV2        0            0
EAP-FAST             0            0

Requests received from AAA:          0
Responses returned from EAP:        0
Requests dropped (no EAP AVP):       0
Requests dropped (other reasons):    0
Authentication timeouts from EAP:    0

Credential request statistics
Requests sent to backend:            0
Requests failed (unable to send):    0
Authorization results received

Success:                             0
Fail:                                0
```

show aaa servers

To show all AAA servers as seen by the AAA server MIB, use the **show aaa servers** command.

show aaa servers [**private** | **public** | [**detailed**]]

Syntax Description		
	detailed	(Optional) Displays private AAA servers as seen by the AAA Server MIB.
	public	(Optional) Displays public AAA servers as seen by the AAA Server MIB.
	detailed	(Optional) Displays detailed AAA server statistics.
Command Modes	User EXEC	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This is an example of output from the **show aaa servers** command:

```
Device# show aaa servers
RADIUS: id 1, priority 1, host 172.20.128.2, auth-port 1645, acct-port 1646
State: current UP, duration 9s, previous duration 0s
Dead: total time 0s, count 0
Quarantined: No
Authen: request 0, timeouts 0, failover 0, retransmission 0
Response: accept 0, reject 0, challenge 0
Response: unexpected 0, server error 0, incorrect 0, time 0ms
Transaction: success 0, failure 0
Throttled: transaction 0, timeout 0, failure 0
Author: request 0, timeouts 0, failover 0, retransmission 0
Response: accept 0, reject 0, challenge 0
Response: unexpected 0, server error 0, incorrect 0, time 0ms
Transaction: success 0, failure 0
Throttled: transaction 0, timeout 0, failure 0
Account: request 0, timeouts 0, failover 0, retransmission 0
Request: start 0, interim 0, stop 0
Response: start 0, interim 0, stop 0
Response: unexpected 0, server error 0, incorrect 0, time 0ms
Transaction: success 0, failure 0
Throttled: transaction 0, timeout 0, failure 0
Elapsed time since counters last cleared: 0m
Estimated Outstanding Access Transactions: 0
Estimated Outstanding Accounting Transactions: 0
Estimated Throttled Access Transactions: 0
Estimated Throttled Accounting Transactions: 0
Maximum Throttled Transactions: access 0, accounting 0
```

show aaa sessions

To show AAA sessions as seen by the AAA Session MIB, use the **show aaa sessions** command.

show aaa sessions

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Modes	User EXEC
----------------------	-----------

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This is an example of output from the **show aaa sessions** command:

```
Device# show aaa sessions
Total sessions since last reload: 7
Session Id: 4007
  Unique Id: 4025
  User Name: *not available*
  IP Address: 0.0.0.0
  Idle Time: 0
  CT Call Handle: 0
```

show authentication brief

To display brief information about authentication sessions for a given interface, use the **show authentication brief** command in either user EXEC or privileged EXEC mode.

```
show authentication brief [switch {switch-number | active | standby} {R0}]
```

Syntax Description		
	<i>switch-number</i>	Valid values for the <i>switch-number</i> variable are from 1 to 9.
	R0	Displays information about the Route Processor (RP) slot 0.
	active	Specifies the active instance.
	standby	Specifies the standby instance.
Command Modes	Privileged EXEC (#) User EXEC (>)	
Command History	Release	Modification
	Cisco IOS XE Fuji 16.9.1	This command was introduced in a release prior to 16.9.1

The following is a sample output from the **show authentication brief** command:

```
Device# show authentication brief
```

Interface	MAC Address	AuthC	AuthZ	Fg	Uptime
Gi2/0/14	0002.0002.0001	m:NA d:OK	AZ: SA-	X	281s
Gi2/0/14	0002.0002.0002	m:NA d:OK	AZ: SA-	X	280s
Gi2/0/14	0002.0002.0003	m:NA d:OK	AZ: SA-	X	279s
Gi2/0/14	0002.0002.0004	m:NA d:OK	AZ: SA-	X	278s
Gi2/0/14	0002.0002.0005	m:NA d:OK	AZ: SA-	X	278s
Gi2/0/14	0002.0002.0006	m:NA d:OK	AZ: SA-	X	277s
Gi2/0/14	0002.0002.0007	m:NA d:OK	AZ: SA-	X	276s
Gi2/0/14	0002.0002.0008	m:NA d:OK	AZ: SA-	X	276s
Gi2/0/14	0002.0002.0009	m:NA d:OK	AZ: SA-	X	275s
Gi2/0/14	0002.0002.000a	m:NA d:OK	AZ: SA-	X	275s
Gi2/0/14	0002.0002.000b	m:NA d:OK	AZ: SA-	X	274s
Gi2/0/14	0002.0002.000c	m:NA d:OK	AZ: SA-	X	274s
Gi2/0/14	0002.0002.000d	m:NA d:OK	AZ: SA-	X	273s
Gi2/0/14	0002.0002.000e	m:NA d:OK	AZ: SA-	X	273s
Gi2/0/14	0002.0002.000f	m:NA d:OK	AZ: SA-	X	272s
Gi2/0/14	0002.0002.0010	m:NA d:OK	AZ: SA-	X	272s
Gi2/0/14	0002.0002.0011	m:NA d:OK	AZ: SA-	X	271s
Gi2/0/14	0002.0002.0012	m:NA d:OK	AZ: SA-	X	271s
Gi2/0/14	0002.0002.0013	m:NA d:OK	AZ: SA-	X	270s
Gi2/0/14	0002.0002.0014	m:NA d:OK	AZ: SA-	X	270s
Gi2/0/14	0002.0002.0015	m:NA d:OK	AZ: SA-	X	269s

The following is a sample output from the **show authentication brief** command for active instances:

```
Device# show authentication brief switch active R0
```

Interface	MAC Address	AuthC	AuthZ	Eg	Uptime
Gi2/0/14	0002.0002.0001	m:NA d:OK	AZ: SA-	X	1s
Gi2/0/14	0002.0002.0002	m:NA d:OK	AZ: SA-	X	0s
Gi2/0/14	0002.0002.0003	m:NA d:OK	AZ: SA-	X	299s
Gi2/0/14	0002.0002.0004	m:NA d:OK	AZ: SA-	X	298s
Gi2/0/14	0002.0002.0005	m:NA d:OK	AZ: SA-	X	298s
Gi2/0/14	0002.0002.0006	m:NA d:OK	AZ: SA-	X	297s
Gi2/0/14	0002.0002.0007	m:NA d:OK	AZ: SA-	X	296s
Gi2/0/14	0002.0002.0008	m:NA d:OK	AZ: SA-	X	296s
Gi2/0/14	0002.0002.0009	m:NA d:OK	AZ: SA-	X	295s
Gi2/0/14	0002.0002.000a	m:NA d:OK	AZ: SA-	X	295s
Gi2/0/14	0002.0002.000b	m:NA d:OK	AZ: SA-	X	294s
Gi2/0/14	0002.0002.000c	m:NA d:OK	AZ: SA-	X	294s
Gi2/0/14	0002.0002.000d	m:NA d:OK	AZ: SA-	X	293s
Gi2/0/14	0002.0002.000e	m:NA d:OK	AZ: SA-	X	293s
Gi2/0/14	0002.0002.000f	m:NA d:OK	AZ: SA-	X	292s
Gi2/0/14	0002.0002.0010	m:NA d:OK	AZ: SA-	X	292s
Gi2/0/14	0002.0002.0011	m:NA d:OK	AZ: SA-	X	291s
Gi2/0/14	0002.0002.0012	m:NA d:OK	AZ: SA-	X	291s
Gi2/0/14	0002.0002.0013	m:NA d:OK	AZ: SA-	X	290s
Gi2/0/14	0002.0002.0014	m:NA d:OK	AZ: SA-	X	290s
Gi2/0/14	0002.0002.0015	m:NA d:OK	AZ: SA-	X	289s
Gi2/0/14	0002.0002.0016	m:NA d:OK	AZ: SA-	X	289s

The following is a sample output from the **show authentication brief** command for standby instances:

```
Device# show authentication brief switch standby R0
```

```
No sessions currently exist
```

The table below describes the significant fields shown in the displays.

Table 4: show authentication brief Field Descriptions

Field	Description
Interface	The type and number of the authentication interface.
MAC Address	The MAC address of the client.
AuthC	Indicates authentication status.
AuthZ	Indicates authorization status.

Field	Description
Fg	Flag indicates the current status. The valid values are: <ul style="list-style-type: none">• A—Applying policy (multi-line status for details)• D—Awaiting removal• F—Final removal in progress• I—Awaiting IIF ID allocation• P—Pushed session• R—Removing user profile (multi-line status for details)• U—Applying user profile (multi-line status for details)• X—Unknown blocker
Uptime	Indicates the duration since which the session came up

show authentication sessions

To display information about current Auth Manager sessions, use the **show authentication sessions** command.

```
show authentication sessions [database] [handle handle-id [details]] [interface type number
[details] [mac mac-address [interface type number] [method method-name [interface type number
[details] [session-id session-id [details]]]
```

Syntax Description

database	(Optional) Shows only data stored in session database.
handle <i>handle-id</i>	(Optional) Specifies the particular handle for which Auth Manager information is to be displayed.
details	(Optional) Shows detailed information.
interface <i>type number</i>	(Optional) Specifies a particular interface type and number for which Auth Manager information is to be displayed.
mac <i>mac-address</i>	(Optional) Specifies the particular MAC address for which you want to display information.
method <i>method-name</i>	(Optional) Specifies the particular authentication method for which Auth Manager information is to be displayed. If you specify a method (dot1x , mab , or webauth), you may also specify an interface.
session-id <i>session-id</i>	(Optional) Specifies the particular session for which Auth Manager information is to be displayed.

Command Modes

User EXEC

Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

Use the **show authentication sessions** command to display information about all current Auth Manager sessions. To display information about specific Auth Manager sessions, use one or more of the keywords.

This table shows the possible operating states for the reported authentication sessions.

Table 5: Authentication Method States

State	Description
Not run	The method has not run for this session.
Running	The method is running for this session.
Failed over	The method has failed and the next method is expected to provide a result.

State	Description
Success	The method has provided a successful authentication result for the session.
Authc Failed	The method has provided a failed authentication result for the session.

This table shows the possible authentication methods.

Table 6: Authentication Method States

State	Description
dot1x	802.1X
mab	MAC authentication bypass
webauth	web authentication

The following example shows how to display all authentication sessions on the switch:

```
Device# show authentication sessions
Interface  MAC Address  Method  Domain  Status  Session ID
Gi1/0/48   0015.63b0.f676  dot1x   DATA   Authz Success  0A3462B1000000102983C05C
Gi1/0/5    000f.23c4.a401  mab     DATA   Authz Success  0A3462B10000000D24F80B58
Gi1/0/5    0014.bf5d.d26d  dot1x   DATA   Authz Success  0A3462B10000000E29811B94
```

The following example shows how to display all authentication sessions on an interface:

```
Device# show authentication sessions interface gigabitethernet2/0/47
      Interface: GigabitEthernet2/0/47
      MAC Address: Unknown
      IP Address: Unknown
      Status: Authz Success
      Domain: DATA
      Oper host mode: multi-host
      Oper control dir: both
      Authorized By: Guest Vlan
      Vlan Policy: 20
      Session timeout: N/A
      Idle timeout: N/A
      Common Session ID: 0A3462C80000000000002763C
      Acct Session ID: 0x00000002
      Handle: 0x25000000
Runnable methods list:
  Method  State
  mab     Failed over
  dot1x   Failed over
-----
      Interface: GigabitEthernet2/0/47
      MAC Address: 0005.5e7c.da05
      IP Address: Unknown
      User-Name: 00055e7cda05
      Status: Authz Success
      Domain: VOICE
      Oper host mode: multi-domain
```

```
Oper control dir: both
  Authorized By: Authentication Server
  Session timeout: N/A
  Idle timeout: N/A
Common Session ID: 0A3462C8000000010002A238
  Acct Session ID: 0x00000003
  Handle: 0x91000001
Runnable methods list:
  Method      State
  mab         Authc Success
  dot1x       Not run
```

show cisp

To display CISP information for a specified interface, use the **show cisp** command in privileged EXEC mode.

show cisp {[**clients** | **interface** *interface-id*] | **registrations** | **summary**}

Syntax Description		
clients		(Optional) Display CISP client details.
interface <i>interface-id</i>		(Optional) Display CISP information about the specified interface. Valid interfaces include physical ports and port channels.
registrations		Displays CISP registrations.
summary		(Optional) Displays CISP summary.

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
	Cisco IOS XE Denali 16.3.1	This command was reintroduced. This command was not supported in Cisco IOS XE Denali 16.1.x and Cisco IOS XE Denali 16.2.x

This example shows output from the **show cisp interface** command:

```
Device# show cisp interface fast 0
CISP not enabled on specified interface
```

This example shows output from the **show cisp registration** command:

```
Device# show cisp registrations
Interface(s) with CISP registered user(s):
-----
Fa1/0/13
Auth Mgr (Authenticator)
Gi2/0/1
Auth Mgr (Authenticator)
Gi2/0/2
Auth Mgr (Authenticator)
Gi2/0/3
Auth Mgr (Authenticator)
Gi2/0/5
Auth Mgr (Authenticator)
Gi2/0/9
Auth Mgr (Authenticator)
Gi2/0/11
Auth Mgr (Authenticator)
```

```
Gi2/0/13
Auth Mgr (Authenticator)
Gi3/0/3
Gi3/0/5
Gi3/0/23
```

Related Commands

Command	Description
cisp enable	Enable Client Information Signalling Protocol (CISP)
dot1x credentials <i>profile</i>	Configure a profile on a supplicant switch

show dot1x

To display IEEE 802.1x statistics, administrative status, and operational status for the switch or for the specified port, use the **show dot1x** command in user EXEC mode.

show dot1x [**all** [**count** | **details** | **statistics** | **summary**]] [**interface type number** [**details** | **statistics**]] [**statistics**]

Syntax Description		
all	(Optional) Displays the IEEE 802.1x information for all interfaces.	
count	(Optional) Displays total number of authorized and unauthorized clients.	
details	(Optional) Displays the IEEE 802.1x interface details.	
statistics	(Optional) Displays the IEEE 802.1x statistics for all interfaces.	
summary	(Optional) Displays the IEEE 802.1x summary for all interfaces.	
interface type number	(Optional) Displays the IEEE 802.1x status for the specified port.	

Command Modes User EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This is an example of output from the **show dot1x all** command:

```
Device# show dot1x all
Sysauthcontrol           Enabled
Dot1x Protocol Version   3
```

This is an example of output from the **show dot1x all count** command:

```
Device# show dot1x all count
Number of Dot1x sessions
-----
Authorized Clients       = 0
UnAuthorized Clients     = 0
Total No of Client      = 0
```

This is an example of output from the **show dot1x all statistics** command:

```
Device# show dot1x statistics
Dot1x Global Statistics for
-----
RxStart = 0      RxLogoff = 0      RxResp = 0      RxRespID = 0
RxReq = 0        RxInvalid = 0    RxLenErr = 0
RxTotal = 0
```

```
TxStart = 0      TxLogoff = 0      TxResp = 0
TxReq = 0        ReTxReq = 0        ReTxReqFail = 0
TxReqID = 0     ReTxReqID = 0     ReTxReqIDFail = 0
TxTotal = 0
```

show eap pac peer

To display stored Protected Access Credentials (PAC) for Extensible Authentication Protocol (EAP) Flexible Authentication via Secure Tunneling (FAST) peers, use the **show eap pac peer** command in privileged EXEC mode.

show eap pac peer

Syntax Description

This command has no arguments or keywords.

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This is an example of output from the **show eap pac peers** privileged EXEC command:

```
Device> show eap pac peers
No PACs stored
```

Related Commands

Command	Description
clear eap sessions	Clears EAP session information for the switch or for the specified port.

show ip dhcp snooping statistics

To display DHCP snooping statistics in summary or detail form, use the **show ip dhcp snooping statistics** command in user EXEC mode.

show ip dhcp snooping statistics [**detail**]

Syntax Description	detail (Optional) Displays detailed statistics information.	
Command Modes	User EXEC	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
Usage Guidelines	In a switch stack, all statistics are generated on the stack primary. If a new active switch is elected, the statistics counters reset.	

This is an example of output from the **show ip dhcp snooping statistics** command:

```
Device> show ip dhcp snooping statistics

Packets Forwarded                = 0
Packets Dropped                   = 0
Packets Dropped From untrusted ports = 0
```

This is an example of output from the **show ip dhcp snooping statistics detail** command:

```
Device> show ip dhcp snooping statistics detail

Packets Processed by DHCP Snooping = 0
Packets Dropped Because
  IDB not known                     = 0
  Queue full                         = 0
  Interface is in errdisabled        = 0
  Rate limit exceeded                = 0
  Received on untrusted ports        = 0
  Nonzero giaddr                     = 0
  Source mac not equal to chaddr     = 0
  Binding mismatch                   = 0
  Insertion of opt82 fail            = 0
  Interface Down                     = 0
  Unknown output interface           = 0
  Reply output port equal to input port = 0
  Packet denied by platform          = 0
```

This table shows the DHCP snooping statistics and their descriptions:

Table 7: DHCP Snooping Statistics

DHCP Snooping Statistic	Description
Packets Processed by DHCP Snooping	Total number of packets handled by DHCP snooping, including forwarded and dropped packets.
Packets Dropped Because IDB not known	Number of errors when the input interface of the packet cannot be determined.
Queue full	Number of errors when an internal queue used to process the packets is full. This might happen if DHCP packets are received at an excessively high rate and rate limiting is not enabled on the ingress ports.
Interface is in errdisabled	Number of times a packet was received on a port that has been marked as error disabled. This might happen if packets are in the processing queue when a port is put into the error-disabled state and those packets are subsequently processed.
Rate limit exceeded	Number of times the rate limit configured on the port was exceeded and the interface was put into the error-disabled state.
Received on untrusted ports	Number of times a DHCP server packet (OFFER, ACK, NAK, or LEASEQUERY) was received on an untrusted port and was dropped.
Nonzero giaddr	Number of times the relay agent address field (giaddr) in the DHCP packet received on an untrusted port was not zero, or the no ip dhcp snooping information option allow-untrusted global configuration command is not configured and a packet received on an untrusted port contained option-82 data.
Source mac not equal to chaddr	Number of times the client MAC address field of the DHCP packet (chaddr) does not match the packet source MAC address and the ip dhcp snooping verify mac-address global configuration command is configured.
Binding mismatch	Number of times a RELEASE or DECLINE packet was received on a port that is different than the port in the binding for that MAC address-VLAN pair. This indicates someone might be trying to spoof the real client, or it could mean that the client has moved to another port on the switch and issued a RELEASE or DECLINE. The MAC address is taken from the chaddr field of the DHCP packet, not the source MAC address in the Ethernet header.
Insertion of opt82 fail	Number of times the option-82 insertion into a packet failed. The insertion might fail if the packet with the option-82 data exceeds the size of a single physical packet on the internet.

DHCP Snooping Statistic	Description
Interface Down	Number of times the packet is a reply to the DHCP relay agent, but the SVI interface for the relay agent is down. This is an unlikely error that occurs if the SVI goes down between sending the client request to the DHCP server and receiving the response.
Unknown output interface	Number of times the output interface for a DHCP reply packet cannot be determined by either option-82 data or a lookup in the MAC address table. The packet is dropped. This can happen if option 82 is not used and the client MAC address has aged out. If IPSG is enabled with the port-security option and option 82 is not enabled, the MAC address of the client is not learned, and the reply packets will be dropped.
Reply output port equal to input port	Number of times the output port for a DHCP reply packet is the same as the input port, causing a possible loop. Indicates a possible network misconfiguration or misuse of trust settings on ports.
Packet denied by platform	Number of times the packet has been denied by a platform-specific registry.

show macsec

To display 802.1ae Media Access Control Security (MACsec) information, use the **show macsec** command in privileged EXEC mode.

show macsec {**interface***interface-id* | **summary**}

Syntax Description	interface <i>interface-id</i>	Displays MACsec interface details.
	summary	Displays MACsec summary information.
Command Modes	Privileged EXEC	
Command History	Release	Modification
	Cisco IOS XE Denali 16.3.1	This command was introduced.

Examples

This is sample output of the **show macsec interface** command when there is no MACsec session established on the interface:

```
Switch# show macsec interface gigabitethernet 1/0/1
MACsec is enabled
  Replay protect : enabled
  Replay window : 0
  Include SCI : yes
  Cipher : GCM-AES-128
  Confidentiality Offset : 0
Capabilities
  Max. Rx SA : 16
  Max. Tx SA : 16
  Validate Frames : strict
  PN threshold notification support : Yes
  Ciphers supported : GCM-AES-128
  No Transmit Secure Channels
  No Receive Secure Channels
```

This is sample output of the **show macsec interface** command after the session is established:

```
Switch# show macsec interface gigabitethernet 1/0/1
MACsec is enabled
  Replay protect : enabled
  Replay window : 0
  Include SCI : yes
  Cipher : GCM-AES-128
  Confidentiality Offset : 0
Capabilities
  Max. Rx SA : 16
  Max. Tx SA : 16
  Validate Frames : strict
  PN threshold notification support : Yes
  Ciphers supported : GCM-AES-128
```

```

Transmit Secure Channels
SCI : 0022BDCF9A010002
Elapsed time : 00:00:00
Current AN: 0 Previous AN: -1
SC Statistics
Auth-only (0 / 0)
Encrypt (1910 / 0)
Receive Secure Channels
SCI : 001B2140EC4C0000
Elapsed time : 00:00:00
Current AN: 0 Previous AN: -1
SC Statistics
Notvalid pkts 0 Invalid pkts 0
Valid pkts 1 Late pkts 0
Uncheck pkts 0 Delay pkts 0
Port Statistics
Ingress untag pkts 0 Ingress notag pkts 1583
Ingress badtag pkts 0 Ingress unknownSCI pkts 0
Ingress noSCI pkts 0 Unused pkts 0
Notusing pkts 0 Decrypt bytes 80914
Ingress miss pkts 1492

```

This is sample output of the **show macsec summary** command to see all established MACsec sessions:

```

Switch# show macsec summary
Interface          Transmit SC      Receive SC
GigabitEthernet1/0/18      0                0
GigabitEthernet1/0/20      1                1
GigabitEthernet1/0/21      0                0
GigabitEthernet1/0/22      1                1
GigabitEthernet4/0/19      0                0
GigabitEthernet4/0/20      1                1
GigabitEthernet4/0/22      0                0

```

Related Commands

Command	Description
macsec	Enables MACsec on an interface

show mka policy

To display a summary of all defined MACsec Key Agreement (MKA) protocol policies, including the MKA default policy, or to display a summary of a specified policy, use the **show mka policy** command in privileged EXEC mode.

show mka policy [*policy-name*] [**detail**] [**sessions**]

Syntax Description		
	<i>policy-name</i>	(Optional) Specifies the name for the policy.
	detail	(Optional) Displays detailed configuration information for the specified MKA policy, including the names of the physical interfaces to which the policy is applied. The output shows the default values for each configuration option. When entered after the session keyword, displays detailed status information about all active MKA sessions with the specified policy name.
	sessions	(Optional) Displays a summary of all active MKA sessions with the specified policy name.
Command Modes	Privileged EXEC	
Command History	Release	Modification
	Cisco IOS XE Denali 16.3.1	This command was introduced.

Examples

This is sample output of the **show mka policy** command:

```
Switch# show mka policy
MKA Policy Summary...
Policy      KS      Delay  Replay  Window  Conf  Interfaces
Name       Priority Protect Protect Size   Offset Applied
=====
*DEFAULT POLICY* 0      NO     YES     0       0     Gi1/0/1
MkaPolicy-1  0      NO     YES     1000    0     Gi1/0/2  Gi1/0/3
MkaPolicy-2  0      NO     YES     0       50    Gi1/0/4  Gi1/0/5
MkaPolicy-3  0      YES    YES     64      30    Gi1/0/4  Gi1/0/5
                                     Gi1/0/6
my_policy    0      NO     YES     4294967295 0
test-policy  0      NO     YES     10000   0
```

Table 8: Table 0-5 show mka policy Output Fields

Field	Description
Policy Name	The string identifier of the policy.
KS Priority	The set value of the priority for becoming the key server (KS). The range is 0 to 255, with 0 as the highest priority and 255 as the lowest priority. A value of 0 means that the switch should always try to act as the key server, while a value of 255 means that it should never try to act as the server. This value is not configurable.
Delay Protect	The set value of delay protection being provided. This value is not configurable.
Replay Protect	The configured value of replay protection being provided. (This is configurable by entering the replay-protection window-size command.)
Window Size	The configured size of the replay protection window in number of frames per packet. If replay protection is off, the value is 0. If replay protection is on and the value is 0, a strict in-order verification of MACsec frames occurs. (This is configurable by entering the replay-protection window-size command.)
Conf Offset	The configured value of the confidentiality offset in the number of bytes to offset protection or encryption into each frame in MACsec. Configurable values are 0 (no offset), 30, or 50 bytes.
Interfaces Applied	The short name of each interface on which this policy is applied. The string is empty if it is not applied to any interfaces.

This is sample output of the **show mka policy detail** command:

```
Switch# show mka policy MkaPolicy detail
MKA Policy Configuration ("MkaPolicy-3")
=====
MKA Policy Name..... MkaPolicy-3
Key Server Priority.... 0
Delay Protection..... NO
Replay Protection..... YES
Replay Window Size.... 64
Confidentiality Offset. 30
Applied Interfaces...
  GigabitEthernet1/0/4   GigabitEthernet1/0/5
  GigabitEthernet1/0/6
```

This is sample output of the **show mka policy sessions** command:

```

Switch# show mka policy replay-policy sessions
Summary of All Active MKA Sessions with MKA Policy "replay-policy"...
Interface Peer-RxSCI          Policy-Name      Audit-Session-ID
Port-ID   Local-TxSCI       Key-Svr Status   CKN
=====
Gi1/0/25  001b.2140.ec3c/0000 replay-policy    0A05783B0000001700448BA8
2         001e.bdfe.6d99/0002 YES      Secured        3808F996026DFB8A2FCEC9A88BBD0680

```

Related Commands

Command	Description
mka policy (global configuration)	Creates an MKA policy and enters MKA policy configuration mode.
mka policy (interface configuration)	Applies an MKA policy to the interface.

show mka session

To display a summary of active MACsec Key Agreement (MKA) Protocol sessions, use the **show mka session** command in privileged EXEC mode.

show mka session [**interface** *interface-id*] [**port-id** *port-id*] [**local-sci** *sci*] [**detail**]

Syntax Description	interface <i>interface-id</i>	(Optional) Displays status information for active MKA sessions on an interface.
	port-id <i>port-id</i>	(Optional) Displays a summary of active MKA sessions running on the interface with the specified port ID. To see the port ID, enter the show mka session interface interface-id command. Port identifier values begin at 2 and monotonically increase for each new session that uses a virtual port on the same physical interface.
	local-sci <i>sci</i>	(Optional) Displays status information for the MKA session identified by the Local TX-SCI. To determine the Local TX-SCI for a specific session, enter the show mka session command without any keywords. The SCI must be 8 octets (16 hexadecimal digits) long.
	detail	(Optional) Displays detailed status information about all active MKA sessions, all sessions on the specified interface, or on the specified interface with the specified port ID.
Command Modes	Privileged EXEC	
Command History	Release	Modification
	Cisco IOS XE Denali 16.3.1	This command was introduced.

Examples

This is sample output of the **show mka session** command:

```
Switch# show mka session
Total MKA Sessions..... 1
    Secured Sessions... 1
    Pending Sessions... 0
=====
Interface Peer-RxSCI          Policy-Name      Audit-Session-ID
Port-ID   Local-TxSCI          Key-Svr Status    CKN
=====
Gi1/0/1  001b.213d.28ed/0000 *DEFAULT POLICY* 020202020000000000EAA6
2         001e.bdfe.8402/0002 YES      Secured  3A06ECB1183E42BB4D7817EB2B949D0E
```

```

Gi1/0/1  001a.323a.38ef/0000 *DEFAULT POLICY* 02020314000000000000EAB9
3        001e.bdfc.8402/0003 YES      Pending  CFB1E3B513344AB3417E17FBCB449D3A
Gi1/0/2  001c.113f.2d3a/0000 MkaPolicy-1 02020533000000000000EC81
2        001e.bdfc.8402/0002 YES      Secured  F103EABB133F4AB3497312EF2A949A03

```

Table 9: Table 0-6 show mka session Output Fields

Field	Description
Interface	The short name of the physical interface on which the MKA session is active.
Peer-RxSCI	The MAC address of the interface of the peer concatenated with the peer 16-bit Port-ID.
Policy-name	The name of the policy used at session start to set initial configuration values.
Audit session ID	Session ID.
Port-ID	The Port-ID used in the Local-TX-SCI.
Local-TxSCI	The MAC address of the physical interface concatenated with the 16-bit Port-ID.
Key Server Status	The key server: has value 'Y' for YES if the MKA session is the key server, otherwise, 'N' for NO.
CKN	Connectivity association key (CAK) name

This is sample output of the **show mka session detail** command:

```

Switch# show mka session detail
MKA Detailed Status for MKA Session
=====
Status: SECURED - Secured MKA Session with MACsec
Local Tx-SCI..... 0022.bdcf.9a01/0002
Interface MAC Address.... 0022.bdcf.9a01
MKA Port Identifier..... 2
Interface Name..... GigabitEthernet1/0/1
Audit Session ID..... 0B0B0B3D0000034F050FA69B
CAK Name (CKN)..... 46EFE9FE85199FE404FB7AFA3FD0732E
Member Identifier (MI)... D7B00EDA353242704CC6B0DB
Message Number (MN)..... 7
Authenticator..... YES
Key Server..... YES
Latest SAK Status..... Rx & Tx
Latest SAK AN..... 0
Latest SAK KI (KN)..... D7B00EDA353242704CC6B0DB00000001 (1)
Old SAK Status..... FIRST-SAK
Old SAK AN..... 0
Old SAK KI (KN)..... FIRST-SAK (0)
SAK Transmit Wait Time... 0s (Not waiting for any peers to respond)
SAK Retire Time..... 0s (No Old SAK to retire)
MKA Policy Name..... *DEFAULT POLICY*
Key Server Priority..... 0
Delay Protection..... NO
Replay Protection..... YES

```

```

Replay Window Size..... 0
Confidentiality Offset... 0
Algorithm Agility..... 80C201
Cipher Suite..... 0080020001000001 (GCM-AES-128)
MACsec Capability..... 3 (MACsec Integrity, Confidentiality, & Offset)
MACsec Desired..... YES
# of MACsec Capable Live Peers..... 1
# of MACsec Capable Live Peers Responded.. 1
Live Peers List:
  MI                      MN                      Rx-SCI (Peer)
  -----
  DA296D3E62E0961234BF39A6 7                      001b.2140.ec4c/0000
Potential Peers List:
  MI                      MN                      Rx-SCI (Peer)
  -----

```

This is sample output of the **show mka session interface** command:

```

Switch# show mka session interface gigabitethernet1/0/25
Summary of All Currently Active MKA Sessions on Interface GigabitEthernet1/0/25.
Interface Peer-RxSCI          Policy-Name      Audit-Session-ID
Port-ID   Local-TxSCI          Key-Svr Status   CKN
=====
Gi1/0/25 001b.2140.ec3c/0000 replay-policy    0A05783B0000001700448BA8
2         001e.bdfe.6d99/0002 YES      Secured        3808F996026DFB8A2FCEC9A88BBD0680

```

Related Commands

Command	Description
clear mka sessions	Clears all MKA sessions or clear MKA sessions on a port-ID, interface, or Local TX-SCI.
macsec	Enables MACsec on an interface.

show mka statistics

To display global MACsec Key Agreement (MKA) Protocol statistics and error counters, use the **show mka statistics** command in privileged EXEC mode.

show mka statistics [**interface***interface-id***port-id***port-id*] | [**local-sci***sci*]

Syntax Description		
interface <i>interface-id</i>	(Optional) Displays statistics for an MKA session on an interface. Only physical interfaces are valid.	
port-id <i>port-id</i>	Displays a summary of active MKA sessions running on the interface with the specified port ID. To see the port ID, enter the show mka session or show mka session interface <i>interface-id</i> command. Port identifier values begin at 2 and monotonically increase for each new active session using a virtual port on the same physical interface.	
local-sci <i>sci</i>	(Optional) Shows statistics for an MKA session identified by its Local TX-SCI. To determine the Local TX-SCI for a session, enter the show mka session detail command. The SCI must be 8 octets (16 hexadecimal digits) long.	
Command Modes	Privileged EXEC	
Command History	Release	Modification
	Cisco IOS XE Denali 16.3.1	This command was introduced.

Examples

This is an example of the **show mka statistics** command output:

```
Switch# show mka statistics
MKA Global Statistics
=====
MKA Session Totals
  Secured..... 32
  Reauthentication Attempts.. 31
  Deleted (Secured)..... 1
  Keepalive Timeouts..... 0
CA Statistics
  Pairwise CAKs Derived..... 32
  Pairwise CAK Rekeys..... 31
  Group CAKs Generated..... 0
  Group CAKs Received..... 0
SA Statistics
  SAKs Generated..... 32
  SAKs Rekeyed..... 31
  SAKs Received..... 0
  SAK Responses Received..... 32
```

```

MKPDU Statistics
  MKPDUs Validated & Rx..... 580
    "Distributed SAK"..... 0
    "Distributed CAK"..... 0
  MKPDUs Transmitted..... 597
    "Distributed SAK"..... 32
    "Distributed CAK"..... 0
MKA Error Counter Totals
=====
Bring-up Failures..... 0
Reauthentication Failures..... 0
SAK Failures
  SAK Generation..... 0
  Hash Key Generation..... 0
  SAK Encryption/Wrap..... 0
  SAK Decryption/Unwrap..... 0
CA Failures
  Group CAK Generation..... 0
  Group CAK Encryption/Wrap..... 0
  Group CAK Decryption/Unwrap..... 0
  Pairwise CAK Derivation..... 0
  CKN Derivation..... 0
  ICK Derivation..... 0
  KEK Derivation..... 0
  Invalid Peer MACsec Capability.. 2
MACsec Failures
  Rx SC Creation..... 0
  Tx SC Creation..... 0
  Rx SA Installation..... 0
  Tx SA Installation..... 0
MKPDU Failures
  MKPDU Tx..... 0
  MKPDU Rx Validation..... 0
  MKPDU Rx Bad Peer MN..... 0
  MKPDU Rx Non-recent Peerlist MN.. 0

```

Table 10: Table 0-7 show mka Global Statistics Output Fields (continued)

Field	Description
Reauthentications	Reauthentications from 802.1x.
Pairwise CAKs Derived	Pairwise secure connectivity association keys (CAKs) derived through EAP authentication.
Pairwise CAK Rekeys	Pairwise CAK rekeys after reauthentication.
Group CAKs Generated	Generated group CAKs while acting as a key server in a group CA.
Group CAKs Received	Received group CAKs while acting as a nonkey server member in a group CA.
SAK Rekeys	Secure association key (SAK) rekeys that have been initiated as key servers or received as nonkey server members.
SAKs Generated	Generated SAKs while acting as a key server in any CA.

Field	Description
SAKs Received	Received SAKs while acting as a nonkey server member in any CA.
MPDUs Validated & Rx	MACsec Key Agreement Protocol Data Units (MPDUs) received and validated.
MPDUs Transmitted	Transmitted MPDUs.

Related Commands

Command	Description
clear mka statistics	Clears all MKA statistics or those on a specified interface port-ID or Local TX-SCI.

show mka summary

To display a summary of MACsec Key Agreement (MKA) sessions and global statistics, use the **show mka summary** command in privileged EXEC mode.

show mka summary

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Denali 16.3.1	This command was introduced.

Examples

This is an example of the **show mka summary** command output:

```
Switch# show mka summary
Summary of All Currently Active MKA Sessions...
=====
Total MKA Sessions..... 1
  Initializing (Waiting for Peer)..... 0
  Pending (Waiting for Peer MACsec Reply).... 0
  Secured (Secured MKA Session with MACsec).. 1
  Reauthenticating MKA Sessions..... 0
Interface Peer-RxSCI Policy-Name Audit-Session-ID
Port-ID Local-TxSCI Key-Svr Status CKN
=====
Gi1/0/25 001b.2140.ec3c/0000 replay-policy 0A05783B0000001700448BA8
2 001e.bdfc.6d99/0002 YES Secured 3808F996026DFB8A2FCEC9A88BBD0680
MKA Global Statistics
=====
MKA Session Totals
Secured..... 36
Reauthentications..... 23
Deleted (Secured)..... 0
Keepalive Timeouts..... 4
MACsec SAK-Use Timeouts.. 0
CA Statistics
Pairwise CAKs Derived.... 33
Pairwise CAK Rekeys..... 23
Group CAKs Generated..... 0
Group CAKs Received..... 0
SA Statistics
SAKs Generated..... 61
SAKs Rekeyed..... 54
SAKs Received..... 0
SAK Responses Received... 59
MKPDU Statistics
MKPDUs Validated & Rx.... 75774
"Distributed SAK"..... 0
"Distributed CAK"..... 0
MKPDUs Transmitted..... 75049
"Distributed SAK"..... 96
```

```

"Distributed CAK"..... 0
MKA Error Counter Totals
=====
Internal Failures..... 0
Session Failures
Failed while Initializing..... 6
Failed while Pending MACsec... 2
Reauthentication Failure..... 0
SAK Failures
SAK Generation..... 0
Hash Key Generation..... 0
SAK Encryption/Wrap..... 0
SAK Decryption/Unwrap..... 0
CA Failures
Group CAK Generation..... 0
Group CAK Encryption/Wrap..... 0
Group CAK Decryption/Unwrap... 0
Pairwise CAK Derivation..... 0
CKN Derivation..... 0
ICK Derivation..... 0
KEK Derivation..... 0
MACsec Failures
Rx SC Creation..... 2
Tx SC Creation..... 2
Rx SA Installation..... 2
Tx SA Installation..... 0
MKPDU Failures
MKPDU Tx..... 0
MKPDU Rx Validation..... 13
Bad Peer MN (anti-replay).. 0
Non-recent Peerlist MN..... 0
MKA Policy Summary...
Policy KS Delay Replay Window Conf Interfaces
Name Priority Protect Protect Size Offset Applied
=====
*DEFAULT POLICY* 0 NO YES 0 0 Gi1/0/26 Gi1/0/29
replay-policy 0 NO YES 300 0 Gi1/0/25
Incredible-59#sh mka policy replay-policy
MKA Policy Summary...
Policy KS Delay Replay Window Conf Interfaces
Name Priority Protect Protect Size Offset Applied
=====
replay-policy 0 NO YES 300 0 Gi1/0/25

```

Table 11: Table 0-8 show mka summary Output Fields

Field	Description
Reauthentications	Reauthentications from 802.1x.
Pairwise CAKs Derived	Pairwise secure connectivity association keys (CAKs) derived through EAP authentication.
Pairwise CAK Rekeys	Pairwise CAK rekeys after reauthentication.
Group CAKs Generated	Generated group CAKs while acting as a key server in a group CA.
Group CAKs Received	Received group CAKs while acting as a nonkey server member in a group CA.

Field	Description
SAK Rekeys	Secure association key (SAK) rekeys that have been initiated as key servers or received as a non-key server members.
SAKs Generated	Generated SAKs while acting as a key server in any CA.
SAKs Received	Received SAKs while acting as a nonkey server member in any CA.
MPDUs Validated & Rx	MACsec Key Agreement Protocol Data Units (MPDUs) received and validated.
MPDUs Transmitted	Transmitted MPDUs.

Related Commands

Command	Description
show mka policy	Displays information about defined MKA protocol policies.
show mka session	Displays a summary of active MKA sessions.
show mka statistics	Displays global MKA statistics.

show radius server-group

To display properties for the RADIUS server group, use the **show radius server-group** command.

show radius server-group { *name* | **all** }

Syntax Description

name Name of the server group. The character string used to name the group of servers must be defined using the **aaa group server radius** command.

all Displays properties for all of the server groups.

Command Modes

User EXEC

Privileged EXEC

Command History

Release

Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE

Modification

This command was introduced.

Usage Guidelines

Use the **show radius server-group** command to display the server groups that you defined by using the **aaa group server radius** command.

This is an example of output from the **show radius server-group all** command:

```
Device# show radius server-group all
Server group radius
  Sharecount = 1  sg_unconfigured = FALSE
  Type = standard Memlocks = 1
```

This table describes the significant fields shown in the display.

Table 12: show radius server-group command Field Descriptions

Field	Description
Server group	Name of the server group.
Sharecount	Number of method lists that are sharing this server group. For example, if one method list uses a particular server group, the sharecount would be 1. If two method lists use the same server group, the sharecount would be 2.
sg_unconfigured	Server group has been unconfigured.
Type	The type can be either standard or nonstandard. The type indicates whether the servers in the group accept nonstandard attributes. If all servers within the group are configured with the nonstandard option, the type will be shown as "nonstandard".

Field	Description
Memlocks	An internal reference count for the server-group structure that is in memory. The number represents how many internal data structure packets or transactions are holding references to this server group. Memlocks is used internally for memory management purposes.

show storm-control

To display broadcast, multicast, or unicast storm control settings on the switch or on the specified interface or to display storm-control history, use the **show storm-control** command in user EXEC mode.

show storm-control [*interface-id*] [**broadcast** | **multicast** | **unicast**]

Syntax Description

interface-id (Optional) Interface ID for the physical port (including type, stack member for stacking-capable switches, module, and port number).

broadcast (Optional) Displays broadcast storm threshold setting.

multicast (Optional) Displays multicast storm threshold setting.

unicast (Optional) Displays unicast storm threshold setting.

Command Modes

User EXEC

Command History

Release

Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE

Modification

This command was introduced.

Usage Guidelines

When you enter an interface ID, the storm control thresholds appear for the specified interface.

If you do not enter an interface ID, settings appear for one traffic type for all ports on the switch.

If you do not enter a traffic type, settings appear for broadcast storm control.

This is an example of a partial output from the **show storm-control** command when no keywords are entered. Because no traffic-type keyword was entered, the broadcast storm control settings appear.

```
Device> show storm-control
Interface Filter State Upper Lower Current
-----
Gi1/0/1 Forwarding 20 pps 10 pps 5 pps
Gi1/0/2 Forwarding 50.00% 40.00% 0.00%
<output truncated>
```

This is an example of output from the **show storm-control** command for a specified interface. Because no traffic-type keyword was entered, the broadcast storm control settings appear.

```
Device> show storm-control gigabitethernet 1/0/1
Interface Filter State Upper Lower Current
-----
Gi1/0/1 Forwarding 20 pps 10 pps 5 pps
```

The following table describes the fields in the show storm-control display:

Table 13: show storm-control Field Descriptions

Field	Description
Interface	Displays the ID of the interface.

Field	Description
Filter State	Displays the status of the filter: <ul style="list-style-type: none">• Blocking—Storm control is enabled, and a storm has occurred.• Forwarding—Storm control is enabled, and no storms have occurred.• Inactive—Storm control is disabled.
Upper	Displays the rising suppression level as a percentage of total available bandwidth in packets per second or in bits per second.
Lower	Displays the falling suppression level as a percentage of total available bandwidth in packets per second or in bits per second.
Current	Displays the bandwidth usage of broadcast traffic or the specified traffic type (broadcast, multicast, or unicast) as a percentage of total available bandwidth. This field is only valid when storm control is enabled.

show tech-support acl

To display access control list (ACL)-related information for technical support, use the **show tech-support acl** command in privileged EXEC mode.

show tech-support acl

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.11.1	This command was introduced.

Usage Guidelines The output of the **show tech-support acl** command is very long. To better manage this output, you can redirect the output to an external file (for example, **show tech-support acl | redirect flash:show_tech_acl.txt**) in the local writable storage file system or remote file system.

The output of this command displays the following commands:



Note On stackable platforms, these commands are executed on every switch in the stack. On modular platforms, like Catalyst 9400 Series Switches, these commands are run only on the active switch.



Note The following list of commands is a sample of the commands available in the output; these may differ based on the platform.

- **show clock**
- **show version**
- **show running-config**
- **show module**
- **show interface**
- **show access-lists**
- **show logging**
- **show platform software fed switch *switch-number* acl counters hardware**
- **show platform software fed switch *switch-number* ifm mapping**
- **show platform hardware fed switch *switch-number* fwd-asic drops exceptions**
- **show platform software fed switch *switch-number* acl info**
- **show platform software fed switch *switch-number* acl**

- **show platform software fed switch *switch-number* acl usage**
- **show platform software fed switch *switch-number* acl policy intftype all cam**
- **show platform software fed switch *switch-number* acl cam brief**
- **show platform software fed switch *switch-number* acl policy intftype all vcu**
- **show platform hardware fed switch *switch-number* acl resource usage**
- **show platform hardware fed switch *switch-number* fwd-asic resource team table acl**
- **show platform hardware fed switch *switch-number* fwd-asic resource team utilization**
- **show platform software fed switch *switch-number* acl counters hardware**
- **show platform software classification switch *switch-number* all F0 class-group-manager class-group**
- **show platform software process database forwarding-manager switch *switch-number* R0 summary**
- **show platform software process database forwarding-manager switch *switch-number* F0 summary**
- **show platform software object-manager switch *switch-number* F0 pending-ack-update**
- **show platform software object-manager switch *switch-number* F0 pending-issue-update**
- **show platform software object-manager switch *switch-number* F0 error-object**
- **show platform software peer forwarding-manager switch *switch-number* F0**
- **show platform software access-list switch *switch-number* f0 statistics**
- **show platform software access-list switch *switch-number* r0 statistics**
- **show platform software trace message fed switch *switch-number***
- **show platform software trace message forwarding-manager switch *switch-number* F0**
- **show platform software trace message forwarding-manager switch R0 *switch-number* R0**

Examples

The following is sample output from the **show tech-support acl** command:

```
Device# show tech-support acl
.
.
.
----- show platform software fed switch 1 acl cam brief -----
Printing entries for region ACL_CONTROL (143) type 6 asic 0
=====
TAQ-4 Index-0 (A:0,C:0) Valid StartF-1 StartA-1 SkipF-0 SkipA-0
Output IPv4 VACL

VCU Result: Not In-Use

L3 Length: 0000, L3 Protocol: 17 (UDP), L3 Tos: 00

Source Address/Mask
0.0.0.0/0.0.0.0
Destination Address/Mask
0.0.0.0/0.0.0.0
```

Router MAC: Disabled, Not First Fragment: Disabled, Small Offset: Disabled

L4 Source Port/Mask L4 Destination Port/Mask
0x0044 (68)/0xffff 0x0043 (67)/0xffff

TCP Flags: 0x00 (NOT SET)

ACTIONS: Forward L3, Forward L2, Logging Disabled
ACL Priority: 2 (15 is Highest Priority)

TAQ-4 Index-1 (A:0,C:0) Valid StartF-0 StartA-0 SkipF-0 SkipA-0
Output IPv4 VACL

VCU Result: Not In-Use

L3 Length: 0000, L3 Protocol: 17 (UDP), L3 Tos: 00

Source Address/Mask
0.0.0.0/0.0.0.0
Destination Address/Mask
0.0.0.0/0.0.0.0

Router MAC: Disabled, Not First Fragment: Disabled, Small Offset: Disabled

L4 Source Port/Mask L4 Destination Port/Mask
0x0043 (67)/0xffff 0x0044 (68)/0xffff

TCP Flags: 0x00 (NOT SET)

ACTIONS: Forward L3, Forward L2, Logging Disabled
ACL Priority: 2 (15 is Highest Priority)

TAQ-4 Index-2 (A:0,C:0) Valid StartF-0 StartA-0 SkipF-0 SkipA-0
Output IPv4 VACL

VCU Result: Not In-Use

L3 Length: 0000, L3 Protocol: 17 (UDP), L3 Tos: 00

Source Address/Mask
0.0.0.0/0.0.0.0
Destination Address/Mask
0.0.0.0/0.0.0.0

Router MAC: Disabled, Not First Fragment: Disabled, Small Offset: Disabled

L4 Source Port/Mask L4 Destination Port/Mask
0x0043 (67)/0xffff 0x0043 (67)/0xffff

TCP Flags: 0x00 (NOT SET)

ACTIONS: Forward L3, Forward L2, Logging Disabled
ACL Priority: 2 (15 is Highest Priority)

TAQ-4 Index-3 (A:0,C:0) Valid StartF-0 StartA-0 SkipF-0 SkipA-0
Input IPv4 PACL

VCU Result: Not In-Use

L3 Length: 0000, L3 Protocol: 00 (HOPOPT), L3 Tos: 00


```

Source Address/Mask
0.0.0.0/0.0.0.0
Destination Address/Mask
0.0.0.0/0.0.0.0

Router MAC: Disabled, Not First Fragment: Disabled, Small Offset: Disabled

L4 Source Port/Mask    L4 Destination Port/Mask
0x0000 (0)/0x0000     0x0000 (0)/0x0000

TCP Flags: 0x00 ( NOT SET )

ACTIONS: Drop L3, Drop L2, Logging Disabled
ACL Priority: 2 (15 is Highest Priority)

-----
TAQ-4 Index-4 (A:0,C:0) Valid StartF-0 StartA-0 SkipF-0 SkipA-0
Output IPv4 PAACL

VCU Result: Not In-Use

L3 Length: 0000, L3 Protocol: 00 (HOPOPT), L3 Tos: 00

Source Address/Mask
0.0.0.0/0.0.0.0
Destination Address/Mask
0.0.0.0/0.0.0.0

Router MAC: Disabled, Not First Fragment: Disabled, Small Offset: Disabled

L4 Source Port/Mask    L4 Destination Port/Mask
0x0000 (0)/0x0000     0x0000 (0)/0x0000

TCP Flags: 0x00 ( NOT SET )

ACTIONS: Drop L3, Drop L2, Logging Disabled
ACL Priority: 2 (15 is Highest Priority)

-----
TAQ-4 Index-5 (A:0,C:0) Valid StartF-0 StartA-0 SkipF-0 SkipA-0
Output MAC PAACL

VLAN ID/MASK : 0x000 (000)/0x000

Source MAC/Mask : 0000.0000.0000/0000.0000.0000

Destination MAC/Mask : 0000.0000.0000/0000.0000.0000

isSnap: Disabled, isLLC: Disabled

ACTIONS: Drop L3, Drop L2, Logging Disabled
ACL Priority: 2 (15 is Highest Priority)

.
.
.

```

Output fields are self-explanatory.

show tech-support identity

To display identity/802.1x-related information for technical support, use the **show tech-support identity** command in privileged EXEC mode.

show tech-support identity mac *mac-address* **interface** *interface-name*

Syntax Description		
	mac <i>mac-address</i>	Displays information about the client MAC address.
	interface <i>interface-name</i>	Displays information about the client interface.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.11.1	This command was introduced.

Usage Guidelines The output of the **show tech-support platform** command is very long. To better manage this output, you can redirect the output to an external file (for example, **show tech-support identity mac** *mac-address* **interface** *interface-name* | **redirect flash:filename**) in the local writable storage file system or remote file system.

The output of this command displays the following commands:

- **show clock**
- **show module**
- **show version**
- **show switch**
- **show redundancy**
- **show dot1x statistics**
- **show ip access-lists**
- **show interface**
- **show ip interface brief**
- **show vlan brief**
- **show running-config**
- **show logging**
- **show interface controller**
- **show platform authentication sbinfo interface**
- **show platform host-access-table**

- **show platform pm port-data**
- **show spanning-tree interface**
- **show access-session mac detail**
- **show platform authentication session mac**
- **show device-tracking database mac details**
- **show mac address-table address**
- **show access-session event-logging mac**
- **show authentication sessions mac details R0**
- **show ip admission cache R0**
- **show platform software wired-client R0**
- **show platform software wired-client F0**
- **show platform software process database forwarding-manager R0 summary**
- **show platform software process database forwarding-manager F0 summary**
- **show platform software object-manager F0 pending-ack-update**
- **show platform software object-manager F0 pending-issue-update**
- **show platform software object-manager F0 error-object**
- **show platform software peer forwarding-manager R0**
- **show platform software peer forwarding-manager F0**
- **show platform software VP R0 summary**
- **show platform software VP F0 summary**
- **show platform software fed punt cpuq**
- **show platform software fed punt cause summary**
- **show platform software fed inject cause summary**
- **show platform hardware fed fwd-asic drops exceptions**
- **show platform hardware fed fwd-asic resource tcam table acl**
- **show platform software fed acl counter hardware**
- **show platform software fed matm macTable**
- **show platform software fed ifm mappings**
- **show platform software trace message fed reverse**
- **show platform software trace message forwarding-manager R0 reverse**
- **show platform software trace message forwarding-manager F0 reverse**
- **show platform software trace message smd R0 reverse**

- show authentication sessions mac details
- show platform software wired-client
- show platform software process database forwarding-manager summary
- show platform software object-manager pending-ack-update
- show platform software object-manager pending-issue-update
- show platform software object-manager error-object
- show platform software peer forwarding-manager
- show platform software VP summary
- show platform software trace message forwarding-manager reverse
- show ip admission cache
- show platform software trace message smd reverse
- show platform software fed punt cpuq
- show platform software fed punt cause summary
- show platform software fed inject cause summary
- show platform hardware fed fwd-asic drops exceptions
- show platform hardware fed fwd-asic resource tcam table acl
- show platform software fed acl counter hardware
- show platform software fed matm macTable
- show platform software fed ifm mappings
- show platform software trace message fed reverse

Examples

The following is sample output from the **show tech-support identity** command:

```
Device# show tech-support identity mac 0000.0001.0003 interface gigabitethernet1/0/1
```

```
.
.
.
```

```
----- show platform software peer forwarding-manager R0 -----
```

```
IOSD Connection Information:
```

```
MQIPC (reader) Connection State: Connected, Read-selected
Connections: 1, Failures: 22
3897 packet received (0 dropped), 466929 bytes
Read attempts: 2352, Yields: 0
BIPC Connection state: Connected, Ready
Accepted: 1, Rejected: 0, Closed: 0, Backpressures: 0
36 packets sent, 2808 bytes
```

```
SMD Connection Information:
```

```
MQIPC (reader) Connection State: Connected, Read-selected
```

```
Connections: 1, Failures: 30
0 packet received (0 dropped), 0 bytes
Read attempts: 1, Yields: 0
MQIPC (writer) Connection State: Connected, Ready
Connections: 1, Failures: 0, Backpressures: 0
0 packet sent, 0 bytes
```

FP Peers Information:

```
Slot: 0
Peer state: connected
OM ID: 0, Download attempts: 638
Complete: 638, Yields: 0, Spurious: 0
IPC Back-Pressure: 0, IPC-Log Back-Pressure: 0
Back-Pressure asserted for IPC: 0, IPC-Log: 1
Number of FP FMAN peer connection expected: 7
Number of FP FMAN online msg received: 1
IPC state: unknown

Config IPC Context:
State: Connected, Read-selected
BIPC Handle: 0xdf3d48e8, BIPC FD: 36, Peer Context: 0xdf3e7158
Tx Packets: 688, Messages: 2392, ACKs: 36
Rx Packets: 37, Bytes: 2068

IPC Log:
Peer name: fman-log-bay0-peer0
Flags: Recovery-Complete
Send Seq: 36, Recv Seq: 36, Msgs Sent: 0, Msgs Recovered: 0

Upstream FMRP IPC Context:
State: Connected, Read-selected
BIPC Handle: 0xdf3e7308, BIPC FD: 37, Peer Context: 0xdf3e7158
TX Packets: 0, Bytes: 0, Drops: 0
Rx Packets: 0, Bytes: 0

Upstream FMRP-IOSd IPC Context:
State: Connected, Read-selected
BIPC Handle: 0xdf3f9c38, BIPC FD: 38, Peer Context: 0xdf3e7158
TX Packets: 0, Bytes: 0, Drops: 0
Rx Packets: 37, Bytes: 2864
Rx ACK Requests: 1, Tx ACK Responses: 1

Upstream FMRP-SMD IPC Context:
State: Connected, Read-selected
BIPC Handle: 0xdf40c568, BIPC FD: 39, Peer Context: 0xdf3e7158
TX Packets: 0, Bytes: 0, Drops: 0
Rx Packets: 0, Bytes: 0
Rx ACK Requests: 0, Tx ACK Responses: 0

Upstream FMRP-WNCD_0 IPC Context:
State: Connected
BIPC Handle: 0xdf4317c8, BIPC FD: 41, Peer Context: 0xdf3e7158
TX Packets: 0, Bytes: 0, Drops: 0
Rx Packets: 0, Bytes: 0
Rx ACK Requests: 0, Tx ACK Responses: 0

Upstream FMRP-WNCMGRD IPC Context:
State: Connected
BIPC Handle: 0xdf41ee98, BIPC FD: 40, Peer Context: 0xdf3e7158
TX Packets: 0, Bytes: 0, Drops: 0
Rx Packets: 0, Bytes: 0
Rx ACK Requests: 0, Tx ACK Responses: 0
```

```
Upstream FMRP-MOBILITYD IPC Context:
  State: Connected
  BIPC Handle: 0xdf4440f8, BIPC FD: 42, Peer Context: 0xdf3e7158
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0
```

```
Slot: 1
Peer state: connected
  OM ID: 1, Download attempts: 1
  Complete: 1, Yields: 0, Spurious: 0
  IPC Back-Pressure: 0, IPC-Log Back-Pressure: 0
  Back-Pressure asserted for IPC: 0, IPC-Log: 0
  Number of FP FMAN peer connection expected: 7
  Number of FP FMAN online msg received: 1
  IPC state: unknown
```

```
Config IPC Context:
  State: Connected, Read-selected
  BIPC Handle: 0xdf45e4d8, BIPC FD: 48, Peer Context: 0xdf470e18
  Tx Packets: 20, Messages: 704, ACKs: 1
  Rx Packets: 2, Bytes: 108
```

```
IPC Log:
  Peer name: fman-log-bay0-peer1
  Flags: Recovery-Complete
  Send Seq: 1, Recv Seq: 1, Msgs Sent: 0, Msgs Recovered: 0
```

```
Upstream FMRP IPC Context:
  State: Connected, Read-selected
  BIPC Handle: 0xdf470fc8, BIPC FD: 49, Peer Context: 0xdf470e18
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
```

```
Upstream FMRP-IOSd IPC Context:
  State: Connected, Read-selected
  BIPC Handle: 0xdf4838f8, BIPC FD: 50, Peer Context: 0xdf470e18
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0
```

```
Upstream FMRP-SMD IPC Context:
  State: Connected, Read-selected
  BIPC Handle: 0xdf496228, BIPC FD: 51, Peer Context: 0xdf470e18
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0
```

```
Upstream FMRP-WNCD_0 IPC Context:
  State: Connected
  BIPC Handle: 0xdf4bb488, BIPC FD: 53, Peer Context: 0xdf470e18
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0
```

```
Upstream FMRP-WNCMGRD IPC Context:
  State: Connected
  BIPC Handle: 0xdf4a8b58, BIPC FD: 52, Peer Context: 0xdf470e18
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0
```

```
Upstream FMRP-MOBILITYD IPC Context:
  State: Connected
```

```

BIPC Handle: 0xdf4cddb8, BIPC FD: 54, Peer Context: 0xdf470e18
TX Packets: 0, Bytes: 0, Drops: 0
Rx Packets: 0, Bytes: 0
Rx ACK Requests: 0, Tx ACK Responses: 0

```

```

----- show platform software peer forwarding-manager R0 -----

```

IOSD Connection Information:

```

MQIPC (reader) Connection State: Connected, Read-selected
Connections: 1, Failures: 22
3897 packet received (0 dropped), 466929 bytes
Read attempts: 2352, Yields: 0
BIPC Connection state: Connected, Ready
Accepted: 1, Rejected: 0, Closed: 0, Backpressures: 0
36 packets sent, 2808 bytes

```

SMD Connection Information:

```

MQIPC (reader) Connection State: Connected, Read-selected
Connections: 1, Failures: 30
0 packet received (0 dropped), 0 bytes
Read attempts: 1, Yields: 0
MQIPC (writer) Connection State: Connected, Ready
Connections: 1, Failures: 0, Backpressures: 0
0 packet sent, 0 bytes

```

FP Peers Information:

```

Slot: 0
Peer state: connected
OM ID: 0, Download attempts: 638
Complete: 638, Yields: 0, Spurious: 0
IPC Back-Pressure: 0, IPC-Log Back-Pressure: 0
Back-Pressure asserted for IPC: 0, IPC-Log: 1
Number of FP FMAN peer connection expected: 7
Number of FP FMAN online msg received: 1
IPC state: unknown

Config IPC Context:
State: Connected, Read-selected
BIPC Handle: 0xdf3d48e8, BIPC FD: 36, Peer Context: 0xdf3e7158
Tx Packets: 688, Messages: 2392, ACKs: 36
Rx Packets: 37, Bytes: 2068

IPC Log:
Peer name: fman-log-bay0-peer0
Flags: Recovery-Complete
Send Seq: 36, Recv Seq: 36, Msgs Sent: 0, Msgs Recovered: 0

```

Upstream FMRP IPC Context:

```

State: Connected, Read-selected
BIPC Handle: 0xdf3e7308, BIPC FD: 37, Peer Context: 0xdf3e7158
TX Packets: 0, Bytes: 0, Drops: 0
Rx Packets: 0, Bytes: 0

```

Upstream FMRP-IOSd IPC Context:

```

State: Connected, Read-selected
BIPC Handle: 0xdf3f9c38, BIPC FD: 38, Peer Context: 0xdf3e7158
TX Packets: 0, Bytes: 0, Drops: 0
Rx Packets: 37, Bytes: 2864

```

```

Rx ACK Requests: 1, Tx ACK Responses: 1

Upstream FMRP-SMD IPC Context:
  State: Connected, Read-selected
  BIPC Handle: 0xdf40c568, BIPC FD: 39, Peer Context: 0xdf3e7158
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0

Upstream FMRP-WNCD_0 IPC Context:
  State: Connected
  BIPC Handle: 0xdf4317c8, BIPC FD: 41, Peer Context: 0xdf3e7158
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0

Upstream FMRP-WNCMGRD IPC Context:
  State: Connected
  BIPC Handle: 0xdf41ee98, BIPC FD: 40, Peer Context: 0xdf3e7158
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0

Upstream FMRP-MOBILITYD IPC Context:
  State: Connected
  BIPC Handle: 0xdf4440f8, BIPC FD: 42, Peer Context: 0xdf3e7158
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0

Slot: 1
Peer state: connected
OM ID: 1, Download attempts: 1
  Complete: 1, Yields: 0, Spurious: 0
  IPC Back-Pressure: 0, IPC-Log Back-Pressure: 0
Back-Pressure asserted for IPC: 0, IPC-Log: 0
Number of FP FMAN peer connection expected: 7
Number of FP FMAN online msg received: 1
IPC state: unknown

Config IPC Context:
  State: Connected, Read-selected
  BIPC Handle: 0xdf45e4d8, BIPC FD: 48, Peer Context: 0xdf470e18
  Tx Packets: 20, Messages: 704, ACKs: 1
  Rx Packets: 2, Bytes: 108

IPC Log:
  Peer name: fman-log-bay0-peer1
  Flags: Recovery-Complete
  Send Seq: 1, Recv Seq: 1, Msgs Sent: 0, Msgs Recovered: 0

Upstream FMRP IPC Context:
  State: Connected, Read-selected
  BIPC Handle: 0xdf470fc8, BIPC FD: 49, Peer Context: 0xdf470e18
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0

Upstream FMRP-IOSd IPC Context:
  State: Connected, Read-selected
  BIPC Handle: 0xdf4838f8, BIPC FD: 50, Peer Context: 0xdf470e18
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0

```



```

Upstream FMRP-SMD IPC Context:
  State: Connected, Read-selected
  BIPC Handle: 0xdf496228, BIPC FD: 51, Peer Context: 0xdf470e18
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0

Upstream FMRP-WNCD_0 IPC Context:
  State: Connected
  BIPC Handle: 0xdf4bb488, BIPC FD: 53, Peer Context: 0xdf470e18
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0

Upstream FMRP-WNCMGRD IPC Context:
  State: Connected
  BIPC Handle: 0xdf4a8b58, BIPC FD: 52, Peer Context: 0xdf470e18
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0

Upstream FMRP-MOBILITYD IPC Context:
  State: Connected
  BIPC Handle: 0xdf4cddb8, BIPC FD: 54, Peer Context: 0xdf470e18
  TX Packets: 0, Bytes: 0, Drops: 0
  Rx Packets: 0, Bytes: 0
  Rx ACK Requests: 0, Tx ACK Responses: 0

```

----- show platform software VP R0 summary -----

Forwarding Manager Vlan Port Information

Vlan	Intf-ID	Stp-state
1	7	Forwarding
1	9	Forwarding
1	17	Forwarding
1	27	Forwarding
1	28	Forwarding
1	29	Forwarding
1	30	Forwarding
1	31	Forwarding
1	40	Forwarding
1	41	Forwarding

Forwarding Manager Vlan Port Information

Vlan	Intf-ID	Stp-state
1	49	Forwarding
1	51	Forwarding
1	63	Forwarding
1	72	Forwarding
1	73	Forwarding
1	74	Forwarding

----- show platform software VP R0 summary -----

Forwarding Manager Vlan Port Information

Vlan	Intf-ID	Stp-state
1	7	Forwarding
1	9	Forwarding
1	17	Forwarding
1	27	Forwarding
1	28	Forwarding
1	29	Forwarding
1	30	Forwarding
1	31	Forwarding
1	40	Forwarding
1	41	Forwarding

Forwarding Manager Vlan Port Information

Vlan	Intf-ID	Stp-state
1	49	Forwarding
1	51	Forwarding
1	63	Forwarding
1	72	Forwarding
1	73	Forwarding
1	74	Forwarding
.		
.		
.		

show vlan access-map

To display information about a particular VLAN access map or for all VLAN access maps, use the **show vlan access-map** command in privileged EXEC mode.

```
show vlan access-map [map-name]
```

Syntax Description	<i>map-name</i> (Optional) Name of a specific VLAN access map.	
Command Default	None	
Command Modes	Privileged EXEC	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This is an example of output from the **show vlan access-map** command:

```
Device# show vlan access-map
Vlan access-map "vmap4" 10
  Match clauses:
    ip address: a12
  Action:
    forward
Vlan access-map "vmap4" 20
  Match clauses:
    ip address: a12
  Action:
    forward
```

show vlan filter

To display information about all VLAN filters or about a particular VLAN or VLAN access map, use the **show vlan filter** command in privileged EXEC mode.

```
show vlan filter {access-map name | vlan vlan-id}
```

Syntax Description	access-map <i>name</i> (Optional) Displays filtering information for the specified VLAN access map.	
	vlan <i>vlan-id</i> (Optional) Displays filtering information for the specified VLAN. The range is 1 to 4094.	
Command Default	None	
Command Modes	Privileged EXEC	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

This is an example of output from the **show vlan filter** command:

```
Device# show vlan filter
VLAN Map map_1 is filtering VLANs:
 20-22
```

show vlan group

To display the VLANs that are mapped to VLAN groups, use the **show vlan group** command in privileged EXEC mode.

```
show vlan group [{group-name vlan-group-name [user_count]}]
```

Syntax Description	group-name <i>vlan-group-name</i> (Optional) Displays the VLANs mapped to the specified VLAN group.	
	user_count (Optional) Displays the number of users in each VLAN mapped to a specified VLAN group.	
Command Default	None	
Command Modes	Privileged EXEC	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines The **show vlan group** command displays the existing VLAN groups and lists the VLANs and VLAN ranges that are members of each VLAN group. If you enter the **group-name** keyword, only the members of the specified VLAN group are displayed.

This example shows how to display the members of a specified VLAN group:

```
Device# show vlan group group-name group2
vlan group group1 :40-45
```

This example shows how to display number of users in each of the VLANs in a group:

```
Device# show vlan group group-name group2 user_count
VLAN      : Count
-----
40         : 5
41         : 8
42         : 12
43         : 2
44         : 9
45         : 0
```

storm-control

To enable broadcast, multicast, or unicast storm control and to set threshold levels on an interface, use the **storm-control** command in interface configuration mode. To return to the default setting, use the **no** form of this command.

```
storm-control {action {shutdown | trap} | {broadcast | multicast | unicast} level {level [level-low] |
bps bps [bps-low] | pps pps [pps-low]}}
no storm-control {action {shutdown | trap} | {broadcast | multicast | unicast} level}
```

Syntax Description

action	Specifies the action taken when a storm occurs on a port. The default action is to filter traffic and to not send an Simple Network Management Protocol (SNMP) trap.
shutdown	Disables the port during a storm.
trap	Sends an SNMP trap when a storm occurs.
broadcast	Enables broadcast storm control on the interface.
multicast	Enables multicast storm control on the interface.
unicast	Enables unicast storm control on the interface.
level	Specifies the rising and falling suppression levels as a percentage of total bandwidth of the port.
<i>level</i>	Rising suppression level, up to two decimal places. The range is 0.00 to 100.00. Block the flooding of storm packets when the value specified for level is reached.
<i>level-low</i>	(Optional) Falling suppression level, up to two decimal places. The range is 0.00 to 100.00. This value must be less than or equal to the rising suppression value. If you do not configure a falling suppression level, it is set to the rising suppression level.
level bps	Specifies the rising and falling suppression levels as a rate in bits per second at which traffic is received on the port.
<i>bps</i>	Rising suppression level, up to 1 decimal place. The range is 0.0 to 10000000000.0. Block the flooding of storm packets when the value specified for bps is reached. You can use metric suffixes such as k, m, and g for large number thresholds.
<i>bps-low</i>	(Optional) Falling suppression level, up to 1 decimal place. The range is 0.0 to 10000000000.0. This value must be equal to or less than the rising suppression value. You can use metric suffixes such as k, m, and g for large number thresholds.
level pps	Specifies the rising and falling suppression levels as a rate in packets per second at which traffic is received on the port.
<i>pps</i>	Rising suppression level, up to 1 decimal place. The range is 0.0 to 10000000000.0. Block the flooding of storm packets when the value specified for pps is reached. You can use metric suffixes such as k, m, and g for large number thresholds.

pps-low (Optional) Falling suppression level, up to 1 decimal place. The range is 0.0 to 1000000000.0. This value must be equal to or less than the rising suppression value.

You can use metric suffixes such as k, m, and g for large number thresholds.

Command Default

Broadcast, multicast, and unicast storm control are disabled.

The default action is to filter traffic and to not send an SNMP trap.

Command Modes

Interface configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE
	This command was introduced.

Usage Guidelines

The storm-control suppression level can be entered as a percentage of total bandwidth of the port, as a rate in packets per second at which traffic is received, or as a rate in bits per second at which traffic is received.

When specified as a percentage of total bandwidth, a suppression value of 100 percent means that no limit is placed on the specified traffic type. A value of **level 0 0** means that all broadcast, multicast, or unicast traffic on that port is blocked. Storm control is enabled only when the rising suppression level is less than 100 percent. If no other storm-control configuration is specified, the default action is to filter the traffic causing the storm and to send no SNMP traps.



Note When the storm control threshold for multicast traffic is reached, all multicast traffic except control traffic, such as bridge protocol data unit (BDPU) and Cisco Discovery Protocol (CDP) frames, are blocked. However, the switch does not differentiate between routing updates, such as Open Shortest Path First (OSPF) and regular multicast data traffic, so both types of traffic are blocked.

The **trap** and **shutdown** options are independent of each other.

If you configure the action to be taken as shutdown (the port is error-disabled during a storm) when a packet storm is detected, you must use the **no shutdown** interface configuration command to bring the interface out of this state. If you do not specify the **shutdown** action, specify the action as **trap** (the switch generates a trap when a storm is detected).

When a storm occurs and the action is to filter traffic, if the falling suppression level is not specified, the switch blocks all traffic until the traffic rate drops below the rising suppression level. If the falling suppression level is specified, the switch blocks traffic until the traffic rate drops below this level.



Note Storm control is supported on physical interfaces. You can also configure storm control on an EtherChannel. When storm control is configured on an EtherChannel, the storm control settings propagate to the EtherChannel physical interfaces.

When a broadcast storm occurs and the action is to filter traffic, the switch blocks only broadcast traffic.

For more information, see the software configuration guide for this release.

This example shows how to enable broadcast storm control with a 75.5-percent rising suppression level:

```
Device(config-if)# storm-control broadcast level 75.5
```

This example shows how to enable unicast storm control on a port with a 87-percent rising suppression level and a 65-percent falling suppression level:

```
Device(config-if)# storm-control unicast level 87 65
```

This example shows how to enable multicast storm control on a port with a 2000-packets-per-second rising suppression level and a 1000-packets-per-second falling suppression level:

```
Device(config-if)# storm-control multicast level pps 2k 1k
```

This example shows how to enable the **shutdown** action on a port:

```
Device(config-if)# storm-control action shutdown
```

You can verify your settings by entering the **show storm-control** privileged EXEC command.

switchport port-security aging

To set the aging time and type for secure address entries or to change the aging behavior for secure addresses on a particular port, use the **switchport port-security aging** command in interface configuration mode. To disable port security aging or to set the parameters to their default states, use the **no** form of this command.

```
switchport port-security aging {static | time time | type {absolute | inactivity}}
no switchport port-security aging {static | time | type}
```

Syntax Description	
static	Enables aging for statically configured secure addresses on this port.
time <i>time</i>	Specifies the aging time for this port. The range is 0 to 1440 minutes. If the time is 0, aging is disabled for this port.
type	Sets the aging type.
absolute	Sets absolute aging type. All the secure addresses on this port age out exactly after the time (minutes) specified and are removed from the secure address list.
inactivity	Sets the inactivity aging type. The secure addresses on this port age out only if there is no data traffic from the secure source address for the specified time period.

Command Default

The port security aging feature is disabled. The default time is 0 minutes.

The default aging type is absolute.

The default static aging behavior is disabled.

Command Modes Interface configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

To enable secure address aging for a particular port, set the aging time to a value other than 0 for that port.

To allow limited time access to particular secure addresses, set the aging type as **absolute**. When the aging time lapses, the secure addresses are deleted.

To allow continuous access to a limited number of secure addresses, set the aging type as **inactivity**. This removes the secure address when it become inactive, and other addresses can become secure.

To allow unlimited access to a secure address, configure it as a secure address, and disable aging for the statically configured secure address by using the **no switchport port-security aging static** interface configuration command.

This example sets the aging time as 2 hours for absolute aging for all the secure addresses on the port:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# switchport port-security aging time 120
```

This example sets the aging time as 2 minutes for inactivity aging type with aging enabled for configured secure addresses on the port:

```
Device(config)# interface gigabitethernet1/0/2
Device(config-if)# switchport port-security aging time 2
Device(config-if)# switchport port-security aging type inactivity
Device(config-if)# switchport port-security aging static
```

This example shows how to disable aging for configured secure addresses:

```
Device(config)# interface gigabitethernet1/0/2
Device(config-if)# no switchport port-security aging static
```

switchport port-security mac-address

To configure secure MAC addresses or sticky MAC address learning, use the **switchport port-security mac-address** interface configuration command. To return to the default setting, use the **no** form of this command.

```
switchport port-security mac-address {mac-address [{vlan {vlan-id {access | voice}}]} | sticky
[{mac-address | vlan {vlan-id {access | voice}}]}]
no switchport port-security mac-address {mac-address [{vlan {vlan-id {access | voice}}]} | sticky
[{mac-address | vlan {vlan-id {access | voice}}]}]
```

Syntax Description

mac-address	A secure MAC address for the interface by entering a 48-bit MAC address. You can add additional secure MAC addresses up to the maximum value configured.
vlan vlan-id	(Optional) On a trunk port only, specifies the VLAN ID and the MAC address. If no VLAN ID is specified, the native VLAN is used.
vlan access	(Optional) On an access port only, specifies the VLAN as an access VLAN.
vlan voice	(Optional) On an access port only, specifies the VLAN as a voice VLAN.
Note	The voice keyword is available only if voice VLAN is configured on a port and if that port is not the access VLAN.
sticky	Enables the interface for sticky learning. When sticky learning is enabled, the interface adds all secure MAC addresses that are dynamically learned to the running configuration and converts these addresses to sticky secure MAC addresses.
mac-address	(Optional) A MAC address to specify a sticky secure MAC address.

Command Default

No secure MAC addresses are configured.
Sticky learning is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

A secure port has the following limitations:

- A secure port can be an access port or a trunk port; it cannot be a dynamic access port.
- A secure port cannot be a routed port.
- A secure port cannot be a protected port.
- A secure port cannot be a destination port for Switched Port Analyzer (SPAN).
- A secure port cannot belong to a Gigabit or 10-Gigabit EtherChannel port group.

- You cannot configure static secure or sticky secure MAC addresses in the voice VLAN.
- When you enable port security on an interface that is also configured with a voice VLAN, set the maximum allowed secure addresses on the port to two. When the port is connected to a Cisco IP phone, the IP phone requires one MAC address. The Cisco IP phone address is learned on the voice VLAN, but is not learned on the access VLAN. If you connect a single PC to the Cisco IP phone, no additional MAC addresses are required. If you connect more than one PC to the Cisco IP phone, you must configure enough secure addresses to allow one for each PC and one for the Cisco IP phone.
- Voice VLAN is supported only on access ports and not on trunk ports.

Sticky secure MAC addresses have these characteristics:

- When you enable sticky learning on an interface by using the **switchport port-security mac-address sticky** interface configuration command, the interface converts all the dynamic secure MAC addresses, including those that were dynamically learned before sticky learning was enabled, to sticky secure MAC addresses and adds all sticky secure MAC addresses to the running configuration.
- If you disable sticky learning by using the **no switchport port-security mac-address sticky** interface configuration command or the running configuration is removed, the sticky secure MAC addresses remain part of the running configuration but are removed from the address table. The addresses that were removed can be dynamically reconfigured and added to the address table as dynamic addresses.
- When you configure sticky secure MAC addresses by using the **switchport port-security mac-address sticky mac-address** interface configuration command, these addresses are added to the address table and the running configuration. If port security is disabled, the sticky secure MAC addresses remain in the running configuration.
- If you save the sticky secure MAC addresses in the configuration file, when the switch restarts or the interface shuts down, the interface does not need to relearn these addresses. If you do not save the sticky secure addresses, they are lost. If sticky learning is disabled, the sticky secure MAC addresses are converted to dynamic secure addresses and are removed from the running configuration.
- If you disable sticky learning and enter the **switchport port-security mac-address sticky mac-address** interface configuration command, an error message appears, and the sticky secure MAC address is not added to the running configuration.

You can verify your settings by using the **show port-security** privileged EXEC command.

This example shows how to configure a secure MAC address and a VLAN ID on a port:

```
Device(config)# interface gigabitethernet 2/0/2
Device(config-if)# switchport mode trunk
Device(config-if)# switchport port-security
Device(config-if)# switchport port-security mac-address 1000.2000.3000 vlan 3
```

This example shows how to enable sticky learning and to enter two sticky secure MAC addresses on a port:

```
Device(config)# interface gigabitethernet 2/0/2
Device(config-if)# switchport port-security mac-address sticky
Device(config-if)# switchport port-security mac-address sticky 0000.0000.4141
Device(config-if)# switchport port-security mac-address sticky 0000.0000.000f
```

switchport port-security maximum

To configure the maximum number of secure MAC addresses, use the **switchport port-security maximum** command in interface configuration mode. To return to the default settings, use the **no** form of this command.

```
switchport port-security maximum value [vlan [{vlan-list} | [{access | voice}]]]
no switchport port-security maximum value [vlan [{vlan-list} | [{access | voice}]]]
```

Syntax Description

value Sets the maximum number of secure MAC addresses for the interface.
The default setting is 1.

vlan (Optional) For trunk ports, sets the maximum number of secure MAC addresses on a VLAN or range of VLANs. If the **vlan** keyword is not entered, the default value is used.

vlan-list (Optional) Range of VLANs separated by a hyphen or a series of VLANs separated by commas. For nonspecified VLANs, the per-VLAN maximum value is used.

access (Optional) On an access port only, specifies the VLAN as an access VLAN.

voice (Optional) On an access port only, specifies the VLAN as a voice VLAN.

Note The **voice** keyword is available only if voice VLAN is configured on a port and if that port is not the access VLAN.

Command Default

When port security is enabled and no keywords are entered, the default maximum number of secure MAC addresses is 1.

Command Modes

Interface configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

The maximum number of secure MAC addresses that you can configure on a switch or switch stack is set by the maximum number of available MAC addresses allowed in the system. This number is determined by the active Switch Database Management (SDM) template. See the **sdm prefer** command. This number represents the total of available MAC addresses, including those used for other Layer 2 functions and any other secure MAC addresses configured on interfaces.

A secure port has the following limitations:

- A secure port can be an access port or a trunk port; it cannot be a dynamic access port.
- A secure port cannot be a routed port.
- A secure port cannot be a protected port.
- A secure port cannot be a destination port for Switched Port Analyzer (SPAN).
- A secure port cannot belong to a Gigabit or 10-Gigabit EtherChannel port group.

- When you enable port security on an interface that is also configured with a voice VLAN, set the maximum allowed secure addresses on the port to two. When the port is connected to a Cisco IP phone, the IP phone requires one MAC address. The Cisco IP phone address is learned on the voice VLAN, but is not learned on the access VLAN. If you connect a single PC to the Cisco IP phone, no additional MAC addresses are required. If you connect more than one PC to the Cisco IP phone, you must configure enough secure addresses to allow one for each PC and one for the Cisco IP phone.

Voice VLAN is supported only on access ports and not on trunk ports.

- When you enter a maximum secure address value for an interface, if the new value is greater than the previous value, the new value overrides the previously configured value. If the new value is less than the previous value and the number of configured secure addresses on the interface exceeds the new value, the command is rejected.

Setting a maximum number of addresses to one and configuring the MAC address of an attached device ensures that the device has the full bandwidth of the port.

When you enter a maximum secure address value for an interface, this occurs:

- If the new value is greater than the previous value, the new value overrides the previously configured value.
- If the new value is less than the previous value and the number of configured secure addresses on the interface exceeds the new value, the command is rejected.

You can verify your settings by using the **show port-security** privileged EXEC command.

This example shows how to enable port security on a port and to set the maximum number of secure addresses to 5. The violation mode is the default, and no secure MAC addresses are configured.

```
Device(config)# interface gigabitethernet 2/0/2
Device(config-if)# switchport mode access
Device(config-if)# switchport port-security
Device(config-if)# switchport port-security maximum 5
```

switchport port-security violation

To configure secure MAC address violation mode or the action to be taken if port security is violated, use the **switchport port-security violation** command in interface configuration mode. To return to the default settings, use the **no** form of this command.

```
switchport port-security violation {protect | restrict | shutdown | shutdown vlan}
no switchport port-security violation {protect | restrict | shutdown | shutdown vlan}
```

Syntax Description		
protect	Sets the security violation protect mode.	
restrict	Sets the security violation restrict mode.	
shutdown	Sets the security violation shutdown mode.	
shutdown vlan	Sets the security violation mode to per-VLAN shutdown.	

Command Default The default violation mode is **shutdown**.

Command Modes Interface configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines In the security violation protect mode, when the number of port secure MAC addresses reaches the maximum limit allowed on the port, packets with unknown source addresses are dropped until you remove a sufficient number of secure MAC addresses to drop below the maximum value or increase the number of maximum allowable addresses. You are not notified that a security violation has occurred.



Note We do not recommend configuring the protect mode on a trunk port. The protect mode disables learning when any VLAN reaches its maximum limit, even if the port has not reached its maximum limit.

In the security violation restrict mode, when the number of secure MAC addresses reaches the limit allowed on the port, packets with unknown source addresses are dropped until you remove a sufficient number of secure MAC addresses or increase the number of maximum allowable addresses. An SNMP trap is sent, a syslog message is logged, and the violation counter increments.

In the security violation shutdown mode, the interface is error-disabled when a violation occurs and the port LED turns off. An SNMP trap is sent, a syslog message is logged, and the violation counter increments. When a secure port is in the error-disabled state, you can bring it out of this state by entering the **errdisable recovery cause psecure-violation** global configuration command, or you can manually re-enable it by entering the **shutdown** and **no shutdown** interface configuration commands.

When the security violation mode is set to per-VLAN shutdown, only the VLAN on which the violation occurred is error-disabled.

A secure port has the following limitations:

- A secure port can be an access port or a trunk port; it cannot be a dynamic access port.
- A secure port cannot be a routed port.
- A secure port cannot be a protected port.
- A secure port cannot be a destination port for Switched Port Analyzer (SPAN).
- A secure port cannot belong to a Gigabit or 10-Gigabit EtherChannel port group.

A security violation occurs when the maximum number of secure MAC addresses are in the address table and a station whose MAC address is not in the address table attempts to access the interface or when a station whose MAC address is configured as a secure MAC address on another secure port attempts to access the interface.

When a secure port is in the error-disabled state, you can bring it out of this state by entering the **errdisable recovery cause psecure-violation** global configuration command. You can manually re-enable the port by entering the **shutdown** and **no shutdown** interface configuration commands or by using the **clear errdisable interface** privileged EXEC command.

You can verify your settings by using the **show port-security** privileged EXEC command.

This example show how to configure a port to shut down only the VLAN if a MAC security violation occurs:

```
Device(config)# interface gigabitethernet2/0/2
Device(config)# switchport port-security violation shutdown vlan
```


tacacs server

To configure the TACACS+ server for IPv6 or IPv4 and enter TACACS+ server configuration mode, use the **tacacs server** command in global configuration mode. To remove the configuration, use the **no** form of this command.

```
tacacs server name
no tacacs server
```

Syntax Description	
name	Name of the private TACACS+ server host.

Command Default No TACACS+ server is configured.

Command Modes Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines The **tacacs server** command configures the TACACS server using the *name* argument and enters TACACS+ server configuration mode. The configuration is applied once you have finished configuration and exited TACACS+ server configuration mode.

Examples The following example shows how to configure the TACACS server using the name `server1` and enter TACACS+ server configuration mode to perform further configuration:

```
Device(config)# tacacs server server1
Device(config-server-tacacs)#
```

Related Commands	Command	Description
	address ipv6 (TACACS+)	Configures the IPv6 address of the TACACS+ server.
	key (TACACS+)	Configures the per-server encryption key on the TACACS+ server.
	port (TACACS+)	Specifies the TCP port to be used for TACACS+ connections.
	send-nat-address (TACACS+)	Sends a client's post-NAT address to the TACACS+ server.
	single-connection (TACACS+)	Enables all TACACS packets to be sent to the same server using a single TCP connection.
	timeout (TACACS+)	Configures the time to wait for a reply from the specified TACACS server.

tracking (IPv6 snooping)

To override the default tracking policy on a port, use the **tracking** command in IPv6 snooping policy configuration mode.

tracking {**enable** [**reachable-lifetime** {*value* | **infinite**}] | **disable** [**stale-lifetime** {*value* | **infinite**}]}

Syntax Description		
enable		Enables tracking.
reachable-lifetime		(Optional) Specifies the maximum amount of time a reachable entry is considered to be directly or indirectly reachable without proof of reachability. <ul style="list-style-type: none"> The reachable-lifetime keyword can be used only with the enable keyword. Use of the reachable-lifetime keyword overrides the global reachable lifetime configured by the ipv6 neighbor binding reachable-lifetime command.
<i>value</i>		Lifetime value, in seconds. The range is from 1 to 86400, and the default is 300.
infinite		Keeps an entry in a reachable or stale state for an infinite amount of time.
disable		Disables tracking.
stale-lifetime		(Optional) Keeps the time entry in a stale state, which overwrites the global stale-lifetime configuration. <ul style="list-style-type: none"> The stale lifetime is 86,400 seconds. The stale-lifetime keyword can be used only with the disable keyword. Use of the stale-lifetime keyword overrides the global stale lifetime configured by the ipv6 neighbor binding stale-lifetime command.
Command Default	The time entry is kept in a reachable state.	
Command Modes	IPv6 snooping configuration	
Command History	Release	Modification
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
Usage Guidelines	The tracking command overrides the default tracking policy set by the ipv6 neighbor tracking command on the port on which this policy applies. This function is useful on trusted ports where, for example, you may not want to track entries but want an entry to stay in the binding table to prevent it from being stolen.	

The **reachable-lifetime** keyword is the maximum time an entry will be considered reachable without proof of reachability, either directly through tracking or indirectly through IPv6 snooping. After the **reachable-lifetime** value is reached, the entry is moved to stale. Use of the **reachable-lifetime** keyword with the tracking command overrides the global reachable lifetime configured by the **ipv6 neighbor binding reachable-lifetime** command.

The **stale-lifetime** keyword is the maximum time an entry is kept in the table before it is deleted or the entry is proven to be reachable, either directly or indirectly. Use of the **reachable-lifetime** keyword with the **tracking** command overrides the global stale lifetime configured by the **ipv6 neighbor binding stale-lifetime** command.

This example shows how to define an IPv6 snooping policy name as policy1, place the switch in IPv6 snooping policy configuration mode, and configure an entry to stay in the binding table for an infinite length of time on a trusted port:

```
Device(config)# ipv6 snooping policy policy1
Device(config-ipv6-snooping)# tracking disable stale-lifetime infinite
```

trusted-port

To configure a port to become a trusted port, use the **trusted-port** command in IPv6 snooping policy mode or ND inspection policy configuration mode. To disable this function, use the **no** form of this command.

trusted-port
no trusted-port

Syntax Description This command has no arguments or keywords.

Command Default No ports are trusted.

Command Modes ND inspection policy configuration
 IPv6 snooping configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines When the **trusted-port** command is enabled, limited or no verification is performed when messages are received on ports that have this policy. However, to protect against address spoofing, messages are analyzed so that the binding information that they carry can be used to maintain the binding table. Bindings discovered from these ports will be considered more trustworthy than bindings received from ports that are not configured to be trusted.

This example shows how to define an NDP policy name as policy1, place the switch in NDP inspection policy configuration mode, and configure the port to be trusted:

```
Device(config)# ipv6 nd inspection policy1
Device(config-nd-inspection)# trusted-port
```

This example shows how to define an IPv6 snooping policy name as policy1, place the switch in IPv6 snooping policy configuration mode, and configure the port to be trusted:

```
Device(config)# ipv6 snooping policy policy1
Device(config-ipv6-snooping)# trusted-port
```

username

To establish a username-based authentication system, use the **username** command in global configuration mode. To remove an established username-based authentication, use the **no** form of this command.

```

username name [aaa attribute list aaa-list-name]
username name [access-class access-list-number]
username name [algorithm-type {md5 | scrypt | sha256 }]
username name [autocommand command]
username name [callback-dialstring telephone-number]
username name [callback-line [tty] line-number [ending-line-number]]
username name [callback-rotary rotary-group-number]
username name [common-criteria-policy policy-name]
username name [dnis]
username name [mac]
username name [nocallback-verify]
username name [noescape]
username name [nohangup]
username name [{nopassword | password password | password encryption-type
encrypted-password}]
username name [one-time {password {0 | 6 | 7 | password} | secret {0 | 5 | 8 | 9 | password}}]
username name [password secret]
username name [privilege level]
username name [secret {0 | 5 | password}]
username name [serial-number]
username name [user-maxlinks number]
username name [view view-name]
no username name

```

Syntax Description

<i>name</i>	Hostname, server name, user ID, or command name. The <i>name</i> argument can be only one word. Blank spaces and quotation marks are not allowed.
aaa attribute list <i>aaa-list-name</i>	(Optional) Uses the specified authentication, authorization, and accounting (AAA) method list.
access-class <i>access-list-number</i>	(Optional) Specifies an outgoing access list that overrides the access list specified in the access-class command available in line configuration mode. It is used for the duration of the user's session.
algorithm-type	(Optional) Specifies the algorithm to use for hashing the plaintext secret for the user. <ul style="list-style-type: none"> • md5—Encodes the password using the MD5 algorithm. • scrypt—Encodes the password using the SCRYPT hashing algorithm. • sha256—Encodes the password using the PBKDF2 hashing algorithm.

autocommand <i>command</i>	(Optional) Causes the specified command to be issued automatically after the user logs in. When the command is complete, the session is terminated. Because the command can be any length and can contain embedded spaces, commands using the autocommand keyword must be the last option on the line.
callback-dialstring <i>telephone-number</i>	(Optional) For asynchronous callback only: permits you to specify a telephone number to pass to the DCE device.
callback-line <i>line-number</i>	(Optional) For asynchronous callback only: relative number of the terminal line (or the first line in a contiguous group) on which you enable a specific username for callback. Numbering begins with zero.
<i>ending-line-number</i>	(Optional) Relative number of the last line in a contiguous group on which you want to enable a specific username for callback. If you omit the keyword (such as tty), then <i>line-number</i> and <i>ending-line-number</i> are absolute rather than relative line numbers.
tty	(Optional) For asynchronous callback only: standard asynchronous line.
callback-rotary <i>rotary-group-number</i>	(Optional) For asynchronous callback only: permits you to specify a rotary group number on which you want to enable a specific username for callback. The next available line in the rotary group is selected. Range: 1 to 100.
common-criteria-policy	(Optional) Specifies the name of the common-criteria policy.
dnis	(Optional) Does not require a password when obtained via Dialed Number Identification Service (DNIS).
mac	(Optional) Allows a MAC address to be used as the username for MAC filtering done locally.
nocallback-verify	(Optional) Specifies that the authentication is not required for EXEC callback on the specified line.
noescape	(Optional) Prevents a user from using an escape character on the host to which that user is connected.
nohangup	(Optional) Prevents Cisco IOS software from disconnecting the user after an automatic command (set up with the autocommand keyword) has completed. Instead, the user gets another EXEC prompt.
nopassword	(Optional) No password is required for this user to log in. This is usually the most useful keyword to use in combination with the autocommand keyword.
password	(Optional) Specifies the password to access the <i>name</i> argument. A password must be from 1 to 25 characters, can contain embedded spaces, and must be the last option specified in the username command.
<i>password</i>	Password that a user enters.

<i>encryption-type</i>	Single-digit number that defines whether the text immediately following is encrypted and if so, what type of encryption is used. Defined encryption types are 0, which means that the text immediately following is not encrypted, 6 and 7, which means that the text is encrypted using a Cisco-defined encryption algorithm.
<i>encrypted-password</i>	Encrypted password that a user enters.
one-time	(Optional) Specifies that the username and password is valid for only one time. This configuration is used to prevent default credentials from remaining in user configurations. <ul style="list-style-type: none"> • 0—Specifies that an unencrypted password or secret (depending on the configuration) follows. • 6—Specifies an encrypt password follows. • 7—Specifies that a hidden password follows. • 5—Specifies that a MD5 HASHED secret follows. • 8—Specifies a PBKDF2 HASHED secret follows. • 9—Specifies a SCRYPT HASHED secret follows.
secret	(Optional) Specifies a secret for the user.
<i>secret</i>	For Challenge Handshake Authentication Protocol (CHAP) authentication: specifies the secret for the local device or the remote device. The secret is encrypted when it is stored on the local device. The secret can consist of any string of up to 11 ASCII characters. There is no limit to the number of username and password combinations that can be specified, allowing any number of remote devices to be authenticated.
privilege <i>privilege-level</i>	(Optional) Sets the privilege level for the user. Range: 1 to 15.
serial-number	(Optional) Specifies the serial number.
user-maxlinks <i>number</i>	(Optional) Maximum number of inbound links allowed for a user.
view <i>view-name</i>	(Optional) For CLI view only: associates a CLI view name, which is specified with the parser view command, with the local AAA database.

Command Default

No username-based authentication system is established.

Command Modes

Global configuration (config)

Command History

Release	Modification
Cisco IOS XE Gibraltar 16.11.1	This command was introduced.

Usage Guidelines

The **username** command provides username or password authentication, or both, for login purposes only.

Multiple **username** commands can be used to specify options for a single user.

Add a username entry for each remote system with which the local device communicates and from which it requires authentication. The remote device must have a username entry for the local device. This entry must have the same password as the local device's entry for that remote device.

This command can be useful for defining usernames that get special treatment. For example, you can use this command to define an "info" username that does not require a password but connects the user to a general purpose information service.

The **username** command is required as part of the configuration for CHAP. Add a username entry for each remote system from which the local device requires authentication.



Note To enable the local device to respond to remote CHAP challenges, one **username name** entry must be the same as the **hostname** entry that has already been assigned to the other device.

- To avoid the situation of a privilege level 1 user entering into a higher privilege level, configure a per-user privilege level other than 1 (for example, 0 or 2 through 15).
- Per-user privilege levels override virtual terminal privilege levels.

CLI and Lawful Intercept Views

Both CLI views and lawful intercept views restrict access to specified commands and configuration information. A lawful intercept view allows a user to secure access to lawful intercept commands that are held within the TAP-MIB, which is a special set of Simple Network Management Protocol (SNMP) commands that stores information about calls and users.

Users who are specified via the **lawful-intercept** keyword are placed in the lawful-intercept view, by default, if no other privilege level or view name has been explicitly specified.

If no value is specified for the *secret* argument and the **debug serial-interface** command is enabled, an error is displayed when a link is established and the CHAP challenge is not implemented. The CHAP debugging information is available using the **debug ppp negotiation**, **debug serial-interface**, and **debug serial-packet** commands.

Examples

The following example shows how to implement a service similar to the UNIX **who** command, which can be entered at the login prompt and lists the current users of the device:

```
Device(config)# username who nopassword nohangup autocommand show users
```

The following example shows how to implement an information service that does not require a password to be used. The command takes the following form:

```
Device(config)# username info nopassword noescape autocommand telnet nic.ddn.mil
```

The following example shows how to implement an ID that works even if all the TACACS+ servers break. The command takes the following form:

```
Device(config)# username superuser password superpassword
```

The following example shows how to enable CHAP on interface serial 0 of "server_1." It also defines a password for a remote server named "server_r."


```
hostname server_1
username server_r password theirsystem
interface serial 0
  encapsulation ppp
  ppp authentication chap
```

The following is output from the **show running-config** command displaying the passwords that are encrypted:

```
hostname server_1
username server_r password 7 121F0A18
interface serial 0
  encapsulation ppp
  ppp authentication chap
```

In the following example, a privilege level 1 user is denied access to privilege levels higher than 1:

```
Device(config)# username user privilege 0 password 0 cisco
Device(config)# username user2 privilege 2 password 0 cisco
```

The following example shows how to remove the username-based authentication for user2:

```
Device(config)# no username user2
```

Related Commands

Command	Description
debug ppp negotiation	Displays PPP packets sent during PPP startup, where PPP options are negotiated.
debug serial-interface	Displays information about a serial connection failure.
debug serial-packet	Displays more detailed serial interface debugging information than you can obtain using debug serial interface command.

vlan access-map

To create or modify a VLAN map entry for VLAN packet filtering, and change the mode to the VLAN access-map configuration, use the **vlan access-map** command in global configuration mode on the switch stack or on a standalone switch. To delete a VLAN map entry, use the **no** form of this command.

```
vlan access-map name [number]
no vlan access-map name [number]
```



Note

This command is not supported on switches running the LAN Base feature set.

Syntax Description

name Name of the VLAN map.

number (Optional) The sequence number of the map entry that you want to create or modify (0 to 65535). If you are creating a VLAN map and the sequence number is not specified, it is automatically assigned in increments of 10, starting from 10. This number is the sequence to insert to, or delete from, a VLAN access-map entry.

Command Default

There are no VLAN map entries and no VLAN maps applied to a VLAN.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

In global configuration mode, use this command to create or modify a VLAN map. This entry changes the mode to VLAN access-map configuration, where you can use the **match** access-map configuration command to specify the access lists for IP or non-IP traffic to match and use the **action** command to set whether a match causes the packet to be forwarded or dropped.

In VLAN access-map configuration mode, these commands are available:

- **action**—Sets the action to be taken (forward or drop).
- **default**—Sets a command to its defaults.
- **exit**—Exits from VLAN access-map configuration mode.
- **match**—Sets the values to match (IP address or MAC address).
- **no**—Negates a command or set its defaults.

When you do not specify an entry number (sequence number), it is added to the end of the map.

There can be only one VLAN map per VLAN and it is applied as packets are received by a VLAN.

You can use the **no vlan access-map** *name* [*number*] command with a sequence number to delete a single entry.

Use the **vlan filter** interface configuration command to apply a VLAN map to one or more VLANs. For more information about VLAN map entries, see the software configuration guide for this release.

This example shows how to create a VLAN map named vac1 and apply matching conditions and actions to it. If no other entries already exist in the map, this will be entry 10.

```
Device(config)# vlan access-map vac1  
Device(config-access-map)# match ip address acl1  
Device(config-access-map)# action forward
```

This example shows how to delete VLAN map vac1:

```
Device(config)# no vlan access-map vac1
```

vlan filter

To apply a VLAN map to one or more VLANs, use the **vlan filter** command in global configuration mode on the switch stack or on a standalone switch. To remove the map, use the **no** form of this command.

```
vlan filter mapname vlan-list {list | all}
no vlan filter mapname vlan-list {list | all}
```



Note This command is not supported on switches running the LAN Base feature set.

Syntax Description

mapname Name of the VLAN map entry.

vlan-list Specifies which VLANs to apply the map to.

list The list of one or more VLANs in the form *tt*, *uu-vv*, *xx*, *yy-zz*, where spaces around commas and dashes are optional. The range is 1 to 4094.

all Adds the map to all VLANs.

Command Default

There are no VLAN filters.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

Usage Guidelines

To avoid accidentally dropping too many packets and disabling connectivity in the middle of the configuration process, we recommend that you completely define the VLAN access map before applying it to a VLAN.

For more information about VLAN map entries, see the software configuration guide for this release.

This example applies VLAN map entry *map1* to VLANs 20 and 30:

```
Device(config)# vlan filter map1 vlan-list 20, 30
```

This example shows how to delete VLAN map entry *map1* from VLAN 20:

```
Device(config)# no vlan filter map1 vlan-list 20
```

You can verify your settings by entering the **show vlan filter** privileged EXEC command.

vlan group

To create or modify a VLAN group, use the **vlan group** command in global configuration mode. To remove a VLAN list from the VLAN group, use the **no** form of this command.

```
vlan group group-name vlan-list vlan-list
no vlan group group-name vlan-list vlan-list
```

Syntax Description	<i>group-name</i>	Name of the VLAN group. The group name may contain up to 32 characters and must begin with a letter.
	vlan-list <i>vlan-list</i>	Specifies one or more VLANs to be added to the VLAN group. The <i>vlan-list</i> argument can be a single VLAN ID, a list of VLAN IDs, or VLAN ID range. Multiple entries are separated by a hyphen (-) or a comma (,).
Command Default	None	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE 3.3SE	Cisco IOS XE 3.3SE This command was introduced.

Usage Guidelines

If the named VLAN group does not exist, the **vlan group** command creates the group and maps the specified VLAN list to the group. If the named VLAN group exists, the specified VLAN list is mapped to the group.

The **no** form of the **vlan group** command removes the specified VLAN list from the VLAN group. When you remove the last VLAN from the VLAN group, the VLAN group is deleted.

A maximum of 100 VLAN groups can be configured, and a maximum of 4094 VLANs can be mapped to a VLAN group.

This example shows how to map VLANs 7 through 9 and 11 to a VLAN group:

```
Device(config)# vlan group group1 vlan-list 7-9,11
```

This example shows how to remove VLAN 7 from the VLAN group:

```
Device(config)# no vlan group group1 vlan-list 7
```

