



A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-567](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-152](#)
 MAC, displaying [2-398](#)
access list, IPv6 [2-218](#)
access map configuration mode [2-274](#)
access mode [2-509](#)
access ports [2-509](#)
ACEs [2-91, 2-343](#)
ACLs
 deny [2-89](#)
 displaying [2-272](#)
 for non-IP protocols [2-254](#)
 IP [2-152](#)
 matching [2-274](#)
 on Layer 2 interfaces [2-152](#)
 permit [2-341](#)
action command [2-6](#)
address aliasing [2-323](#)
aggregate-port learner [2-329](#)
allowed VLANs [2-529](#)
apply command [2-567](#)
archive copy-sw command [2-8](#)

archive download-sw command [2-11](#)
archive tar command [2-15](#)
archive upload-sw command [2-18](#)
arp access-list command [2-20](#)
audience [xix](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-125](#)
autonegotiation of duplex mode [2-134](#)
auto qos voip command [2-22](#)

B

BackboneFast, for STP [2-435](#)
backup interfaces
 configuring [2-504](#)
 displaying [2-340](#)
boot (boot loader) command [A-2](#)
boot auto-copy-sw command [2-27](#)
boot auto-download-sw command [2-28](#)
boot boothlpr command [2-30](#)
boot config-file command [2-31](#)
boot enable-break command [2-32](#)
boot helper command [2-33](#)
boot helper-config file command [2-34](#)

booting

- Cisco IOS image [2-37](#)
- displaying environment variables [2-281](#)
- interrupting [2-28, 2-32](#)
- manually [2-35](#)

boot loader

- accessing [A-1](#)
- booting
 - Cisco IOS image [A-2](#)
 - helper image [2-33](#)
- directories
 - creating [A-16](#)
 - displaying a list of [A-7](#)
 - removing [A-20](#)
- displaying
 - available commands [A-12](#)
 - memory heap utilization [A-14](#)
 - version [A-27](#)
- environment variables
 - described [A-21](#)
 - displaying settings [A-21](#)
 - location of [A-22](#)
 - setting [A-21](#)
 - unsetting [A-25](#)
- files
 - copying [A-5](#)
 - deleting [A-6](#)
 - displaying a list of [A-7](#)
 - displaying the contents of [A-4, A-17, A-24](#)
 - renaming [A-18](#)
- file system
 - formatting [A-10](#)
 - initializing flash [A-9](#)
 - running a consistency check [A-11](#)
- loading helper images [A-13](#)
- prompt [A-1](#)
- resetting the system [A-19](#)

boot manual command [2-35](#)

boot private-config-file command [2-36](#)

boot system command [2-37](#)

BPDU filtering, for spanning tree [2-436, 2-471](#)

BPDU guard, for spanning tree [2-438, 2-471](#)

broadcast storm control [2-492](#)

C

candidate switches

- See clusters

cat (boot loader) command [A-4](#)

Catalyst 3750G Integrated Wireless LAN Controller Switch [2-263](#)

caution, description [xx](#)

CDP, enabling protocol tunneling for [2-237](#)

channel-group command [2-39](#)

channel-protocol command [2-43](#)

Cisco Network Assistant

- See Network Assistant [xx](#)

Cisco SoftPhone

- auto-QoS configuration [2-22](#)
- trusting packets sent from [2-314](#)

class command [2-44](#)

class-map command [2-46](#)

class maps

- creating [2-46](#)
- defining the match criteria [2-276](#)
- displaying [2-286](#)

class of service

- See CoS

clear dot1x command [2-48](#)

clear eap sessions command [2-49](#)

clear ip arp inspection log command [2-50](#)

clear ip arp inspection statistics command [2-51](#)

clear ipc command [2-53](#)

clear ip dhcp snooping database command [2-52](#)

clear l2protocol-tunnel counters command [2-54](#)

clear lacp command [2-55](#)

clear mac address-table command [2-56, 2-58](#)

clear pagp command [2-59](#)

- clear port-security command [2-60](#)
 - clear spanning-tree counters command [2-62](#)
 - clear spanning-tree detected-protocols command [2-63](#)
 - clear vmps statistics command [2-64](#)
 - clear vtp counters command [2-65](#)
 - cluster commander-address command [2-66](#)
 - cluster discovery hop-count command [2-68](#)
 - cluster enable command [2-69](#)
 - cluster holdtime command [2-70](#)
 - cluster member command [2-71](#)
 - cluster outside-interface command [2-73](#)
 - cluster requirements [xx](#)
 - cluster run command [2-74](#)
 - clusters
 - adding candidates [2-71](#)
 - binding to HSRP group [2-75](#)
 - building manually [2-71](#)
 - communicating with
 - devices outside the cluster [2-73](#)
 - members by using Telnet [2-370](#)
 - debug messages, display [B-5](#)
 - displaying
 - candidate switches [2-289](#)
 - debug messages [B-5](#)
 - member switches [2-291](#)
 - status [2-287](#)
 - hop-count limit for extended discovery [2-68](#)
 - HSRP standby groups [2-75](#)
 - redundancy [2-75](#)
 - SNMP trap [2-425](#)
 - cluster standby-group command [2-75](#)
 - cluster timer command [2-77](#)
 - command modes defined [1-2](#)
 - commands changed in Cisco IOS Release 12.2(18)SE [1-6](#)
 - command switch
 - See clusters
 - configuration, initial
 - See getting started guide and hardware installation guide
 - configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-31, 2-36](#)
 - configuring multiple interfaces [2-147](#)
 - config-vlan mode
 - commands [2-553](#)
 - description [1-4](#)
 - entering [2-552](#)
 - summary [1-3](#)
 - controller, wireless [2-263](#)
 - conventions
 - command [xx](#)
 - for examples [xx](#)
 - publication [xx](#)
 - text [xx](#)
 - copy (boot loader) command [A-5](#)
 - CoS
 - assigning default value to incoming packets [2-284](#)
 - assigning to Layer 2 protocol packets [2-240](#)
 - overriding the incoming value [2-284](#)
 - CoS-to-DSCP map [2-288](#)
 - CPU ASIC statistics, displaying [2-293](#)
 - crashinfo files [2-140](#)
-
- ## D
- debug auto qos command [B-2](#)
 - debug backup command [B-4](#)
 - debug cluster command [B-5](#)
 - debug dot1x command [B-7](#)
 - debug dtp command [B-9](#)
 - debug eap command [B-10](#)
 - debug etherchannel command [B-12](#)
 - debug ilpower command [B-14](#)
 - debug interface command [B-17](#)
 - debug ip dhcp snooping command [B-15](#)
 - debug ip igmp filter command [B-19](#)
 - debug ip igmp max-groups command [B-20](#)
 - debug ip igmp snooping command [B-21](#)

- debug ip verify source packet command [B-16](#)
- debug lacp command [B-22](#)
- debug mac-notification command [B-23](#)
- debug matm command [B-24](#)
- debug matm move update command [B-25](#)
- debug monitor command [B-26](#)
- debug mvrdbg command [B-28](#)
- debug nvram command [B-29](#)
- debug pagp command [B-30](#)
- debug platform acl command [B-31](#)
- debug platform backup interface command [B-32](#)
- debug platform cli-redirect main command [B-33](#)
- debug platform configuration command [B-34](#), [B-42](#)
- debug platform cpu-queues command [B-35](#)
- debug platform device-manager command [B-37](#)
- debug platform dot1x command [B-38](#)
- debug platform etherchannel command [B-39](#)
- debug platform fallback-bridging command [B-40](#)
- debug platform forw-tcam command [B-41](#)
- debug platform ip arp inspection command [B-44](#)
- debug platform ipc command [B-52](#)
- debug platform ip dhcp command [B-45](#)
- debug platform ip igmp snooping command [B-46](#)
- debug platform ip multicast command [B-48](#)
- debug platform ip unicast command [B-50](#)
- debug platform led command [B-53](#)
- debug platform matm command [B-54](#)
- debug platform messaging application command [B-56](#)
- debug platform phy command [B-58](#)
- debug platform pm command [B-60](#)
- debug platform port-asic command [B-62](#)
- debug platform port-security command [B-63](#)
- debug platform qos-acl-tcam command [B-64](#)
- debug platform remote-commands command [B-65](#)
- debug platform resource-manager command [B-66](#)
- debug platform snmp command [B-67](#)
- debug platform span command [B-68](#)
- debug platform stack-manager command [B-69](#)
- debug platform supervisor-asic command [B-70](#)
- debug platform sw-bridge command [B-71](#)
- debug platform tcam command [B-72](#)
- debug platform udd command [B-75](#)
- debug platform vlan command [B-76](#)
- debug platform wireless-controller [B-102](#)
- debug pm command [B-77](#)
- debug port-security command [B-79](#)
- debug qos-manager command [B-80](#)
- debug spanning-tree backbonefast command [B-83](#)
- debug spanning-tree bpdu command [B-84](#)
- debug spanning-tree bpdu-opt command [B-85](#)
- debug spanning-tree command [B-81](#)
- debug spanning-tree mstp command [B-86](#)
- debug spanning-tree switch command [B-88](#)
- debug spanning-tree uplinkfast command [B-90](#)
- debug sw-vlan command [B-91](#)
- debug sw-vlan ifs command [B-93](#)
- debug sw-vlan notification command [B-95](#)
- debug sw-vlan vtp command [B-97](#)
- debug udd command [B-99](#)
- debug vqpc command [B-101](#)
- define interface-range command [2-79](#)
- delete (boot loader) command [A-6](#)
- delete command [2-81](#)
- deny (ARP access-list configuration) command [2-82](#)
- deny (IPv6) command [2-84](#)
- deny command [2-89](#)
- detect mechanism, causes [2-135](#)
- device manager requirements [xx](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-180](#)
 - enabling
 - on a VLAN [2-187](#)
 - option 82 [2-178](#), [2-180](#)
 - trust on an interface [2-185](#)
 - error recovery timer [2-137](#)
 - rate limiting [2-184](#)

- DHCP snooping binding database
 - binding file, configuring [2-176](#)
 - bindings
 - adding [2-174](#)
 - deleting [2-174](#)
 - displaying [2-357](#)
 - clearing database agent statistics [2-52](#)
 - database agent, configuring [2-176](#)
 - displaying
 - binding entries [2-357](#)
 - database agent status [2-359](#)
 - renewing [2-377](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-81](#)
- documentation, related [xx](#)
- document conventions [xx](#)
- domain name, VTP [2-578, 2-582](#)
- dot1x auth-fail max-attempts [2-101](#)
- dot1x auth-fail vlan [2-103](#)
- dot1x command [2-99](#)
- dot1x control-direction command [2-105](#)
- dot1x critical global configuration command [2-107](#)
- dot1x critical interface configuration command [2-109](#)
- dot1x default command [2-111](#)
- dot1x fallback command [2-112](#)
- dot1x guest-vlan command [2-113](#)
- dot1x host-mode command [2-116](#)
- dot1x initialize command [2-118](#)
- dot1x mac-auth-bypass command [2-119](#)
- dot1x max-reauth-req command [2-121](#)
- dot1x max-req command [2-122](#)
- dot1x multiple-hosts command [2-123](#)
- dot1x pae command [2-124](#)
- dot1x port-control command [2-125](#)
- dot1x re-authenticate command [2-127](#)
- dot1x re-authentication command [2-128](#)
- dot1x reauthentication command [2-129](#)
- dot1x timeout command [2-130](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-237](#)
- DSCP-to-CoS map [2-288](#)
- DSCP-to-DSCP-mutation map [2-288](#)
- DTP [2-510](#)
- DTP flap
 - error detection for [2-135](#)
 - error recovery timer [2-137](#)
- DTP negotiation [2-514](#)
- dual IPv4 and IPv6 templates [2-335](#)
- duplex command [2-133](#)
- dynamic-access ports
 - configuring [2-502](#)
 - restrictions [2-503](#)
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [2-160](#)
 - define [2-20](#)
 - deny packets [2-82](#)
 - display [2-276](#)
 - permit packets [2-333](#)
 - clear
 - log buffer [2-50](#)
 - statistics [2-51](#)
 - display
 - ARP ACLs [2-276](#)
 - configuration and operating state [2-353](#)
 - log buffer [2-353](#)
 - statistics [2-353](#)
 - trust state and rate limit [2-353](#)
 - enable per VLAN [2-170](#)
 - error detection for [2-135](#)
 - error recovery timer [2-137](#)
 - log buffer
 - clear [2-50](#)
 - configure [2-164](#)
 - display [2-353](#)
 - rate-limit incoming ARP packets [2-162](#)

dynamic ARP inspection (continued)

- statistics
 - clear [2-51](#)
 - display [2-353](#)
- trusted interface state [2-166](#)
- type of packet logged [2-171](#)
- validation checks [2-168](#)
- dynamic auto VLAN membership mode [2-509](#)
- dynamic desirable VLAN membership mode [2-509](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-122](#)
 - response time before retransmitting [2-130](#)
- encapsulation methods [2-529](#)
- environment variables, displaying [2-281](#)
- errdisable detect cause command [2-135](#)
- errdisable recovery command [2-137](#)
- error conditions, displaying [2-328](#)
- error disable detection [2-135](#)
- error-disabled interfaces, displaying [2-340](#)
- EtherChannel
 - assigning Ethernet interface to channel group [2-39](#)
 - creating port-channel logical interface [2-145](#)
 - debug EtherChannel/PAgP, display [B-12](#)
 - debug platform-specific events, display [B-39](#)
 - displaying [2-332](#)
 - enabling Layer 2 protocol tunneling for
 - LACP [2-238](#)
 - PAgP [2-238](#)
 - UDLD [2-238](#)
 - interface information, displaying [2-340](#)

EtherChannel (continued)

- LACP
 - clearing channel-group information [2-55](#)
 - debug messages, display [B-22](#)
 - displaying [2-392](#)
 - modes [2-39](#)
 - port priority for hot-standby ports [2-241](#)
 - restricting a protocol [2-43](#)
 - system priority [2-243](#)
- load-distribution methods [2-351](#)
- PAgP
 - aggregate-port learner [2-329](#)
 - clearing channel-group information [2-59](#)
 - debug messages, display [B-30](#)
 - displaying [2-442](#)
 - error detection for [2-135](#)
 - error recovery timer [2-137](#)
 - learn method [2-329](#)
 - modes [2-39](#)
 - physical-port learner [2-329](#)
 - priority of interface for transmitted traffic [2-331](#)
- Ethernet controller, internal register display [2-295](#)
- Ethernet statistics, collecting [2-253](#)
- examples, conventions for [xx](#)
- exception crashinfo command [2-140](#)
- exit command [2-567](#)
- extended discovery of candidate switches [2-68](#)
- extended-range VLANs
 - and allowed VLAN list [2-529](#)
 - and pruning-eligible list [2-529](#)
 - configuring [2-552](#)
- extended system ID for STP [2-444](#)

F

- fallback profile command [2-141](#)
- fan information, displaying [2-323](#)
- file name, VTP [2-578](#)
- files, deleting [2-81](#)

flash_init (boot loader) command [A-9](#)

Flex Links

configuring [2-504](#)

displaying [2-340](#)

flowcontrol command [2-143](#)

format (boot loader) command [A-10](#)

forwarding packets, with ACL matches [2-6](#)

forwarding results, display [C-6](#)

frame forwarding information, displaying [C-6](#)

front-end controller

counter and status information [C-8](#)

fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-4](#)

H

hardware ACL statistics [2-272](#)

health monitoring diagnostic tests

configuring [2-92](#)

help (boot loader) command [A-12](#)

hierarchical policy maps [2-349](#)

hop-count limit for clusters [2-68](#)

host connection, port configuration [2-508](#)

host ports, private VLANs [2-512](#)

Hot Standby Router Protocol

See HSRP

HSRP

binding HSRP group to cluster [2-75](#)

standby group [2-75](#)

IEEE 802.1Q trunk ports and native VLANs [2-569](#)

IEEE 802.1Q tunnel ports

configuring [2-509](#)

displaying [2-312](#)

limitations [2-510](#)

IEEE 802.1x

and switchport modes [2-510](#)

violation error recovery [2-137](#)

See also port-based authentication

IEEE 802.1X Port Based Authentication

enabling guest VLAN supplicant [2-102, 2-112, 2-142](#)

IGMP filters

applying [2-190](#)

debug messages, display [B-19](#)

IGMP groups, setting maximum [2-191](#)

IGMP maximum groups, debugging [B-20](#)

IGMP profiles

creating [2-193](#)

displaying [2-361](#)

IGMP snooping

adding ports as a static member of a group [2-210](#)

displaying [2-362, 2-367, 2-369](#)

enabling [2-195](#)

enabling the configurable-leave timer [2-197](#)

enabling the Immediate-Leave feature [2-206](#)

flooding query count [2-203](#)

interface topology change notification behavior [2-205](#)

multicast table [1-6, 2-365](#)

querier [2-199](#)

query solicitation [2-203](#)

report suppression [2-201](#)

switch topology change notification behavior [2-203](#)

images

See software images

- Immediate-Leave feature, MVR [2-325](#)
- Immediate-Leave processing
 - IPv6 [2-233](#)
- immediate-leave processing [2-206](#)
- initial configuration
 - See getting started guide and hardware installation guide
- interface configuration mode [1-2, 1-4](#)
- interface port-channel command [2-145](#)
- interface range command [2-147](#)
- interface-range macros [2-79](#)
- interfaces
 - assigning Ethernet interface to channel group [2-39](#)
 - configuring [2-133](#)
 - configuring multiple [2-147](#)
 - creating port-channel logical [2-145](#)
 - debug messages, display [B-17](#)
 - disabling [2-423](#)
 - displaying the MAC address table [2-410](#)
 - restarting [2-423](#)
- interface speed, configuring [2-481](#)
- interface vlan command [2-150](#)
- internal registers, displaying [2-295, 2-305](#)
- Internet Group Management Protocol
 - See IGMP
- invalid GBIC
 - error detection for [2-135](#)
 - error recovery timer [2-137](#)
- ip access-group command [2-152](#)
- ip address command [2-155](#)
- IP addresses, setting [2-155](#)
- IP address matching [2-274](#)
- ip admission command [2-157](#)
- ip admission name proxy http command [2-158](#)
- ip arp inspection filter vlan command [2-160](#)
- ip arp inspection limit command [2-162](#)
- ip arp inspection log-buffer command [2-164](#)
- ip arp inspection trust command [2-166](#)
- ip arp inspection validate command [2-168](#)
- ip arp inspection vlan command [2-170](#)
- ip arp inspection vlan logging command [2-171](#)
- IP DHCP snooping
 - See DHCP snooping
- ip dhcp snooping binding command [2-174](#)
- ip dhcp snooping command [2-173](#)
- ip dhcp snooping database command [2-176](#)
- ip dhcp snooping information option allow-untrusted command [2-180](#)
- ip dhcp snooping information option command [2-178](#)
- ip dhcp snooping information option format remote-id command [2-182](#)
- ip dhcp snooping limit rate command [2-184](#)
- ip dhcp snooping trust command [2-185](#)
- ip dhcp snooping verify command [2-186](#)
- ip dhcp snooping vlan command [2-187](#)
- ip dhcp snooping vlan information option format-type circuit-id string command [2-188](#)
- ip igmp filter command [2-190](#)
- ip igmp max-groups command [2-191](#)
- ip igmp profile command [2-193](#)
- ip igmp snooping command [2-195](#)
- ip igmp snooping last-member-query-interval command [2-197](#)
- ip igmp snooping querier command [2-199](#)
- ip igmp snooping report-suppression command [2-201](#)
- ip igmp snooping tcn command [2-203](#)
- ip igmp snooping tcn flood command [2-205](#)
- ip igmp snooping vlan immediate-leave command [2-206](#)
- ip igmp snooping vlan mrouter command [2-208](#)
- ip igmp snooping vlan static command [2-210](#)
- IP multicast addresses [2-322](#)
- IP phones
 - auto-QoS configuration [2-22](#)
 - trusting packets sent from [2-314](#)
- IP-precedence-to-DSCP map [2-288](#)
- ip snap forwarding command [2-212](#)
- ip source binding command [2-213](#)

- IP source guard
 - disabling [2-217](#)
 - displaying
 - binding entries [2-371](#)
 - configuration [2-373](#)
 - dynamic binding entries only [2-357](#)
 - enabling [2-217](#)
 - static IP source bindings [2-213](#)
 - ip ssh command [2-215](#)
 - IPv6 access list
 - deny conditions [2-84](#)
 - ipv6 access-list command [2-218](#)
 - ipv6 mld snooping command [2-221](#)
 - ipv6 mld snooping last-listener-query count command [2-223](#)
 - ipv6 mld snooping last-listener-query-interval command [2-225](#)
 - ipv6 mld snooping listener-message-suppression command [2-227](#)
 - ipv6 mld snooping robustness-variable command [2-229](#)
 - ipv6 mld snooping tcn command [2-231](#)
 - ipv6 mld snooping vlan command [2-233](#)
 - IPv6 SDM template [2-254](#)
 - ipv6 traffic-filter command [2-235](#)
 - ip verify source command [2-217](#)
-
- J**
- jumbo frames
 - See MTU
-
- L**
- l2protocol-tunnel command [2-237](#)
 - l2protocol-tunnel cos command [2-240](#)
 - LACP
 - See EtherChannel
 - lacp port-priority command [2-241](#)
 - lacp system-priority command [2-243](#)
 - Layer 2 mode, enabling [2-500](#)
 - Layer 2 protocol ports, displaying [2-389](#)
 - Layer 2 protocol-tunnel
 - error detection for [2-135](#)
 - error recovery timer [2-137](#)
 - Layer 2 protocol tunnel counters [2-54](#)
 - Layer 2 protocol tunneling error recovery [2-238](#)
 - Layer 2 traceroute
 - IP addresses [2-543](#)
 - MAC addresses [2-540](#)
 - Layer 3 mode, enabling [2-500](#)
 - line configuration mode [1-3, 1-5](#)
 - Link Aggregation Control Protocol
 - See EtherChannel
 - link flap
 - error detection for [2-135](#)
 - error recovery timer [2-137](#)
 - link state group command [2-245](#)
 - link state track command [2-247](#)
 - load_helper (boot loader) command [A-13](#)
 - load-distribution methods for EtherChannel [2-351](#)
 - logging event command [2-248](#)
 - logging event power-inline-status command [2-249](#)
 - logging file command [2-250](#)
 - logical interface [2-145](#)
 - loopback error
 - detection for [2-135](#)
 - recovery timer [2-137](#)
 - loop guard, for spanning tree [2-446, 2-450](#)
-
- M**
- mac access-group command [2-252](#)
 - MAC access-groups, displaying [2-398](#)
 - MAC access list configuration mode [2-254](#)
 - mac access-list extended command [2-254](#)
 - MAC access lists [2-89](#)

MAC addresses

- displaying
 - aging time [2-404](#)
 - all [2-402](#)
 - dynamic [2-408](#)
 - MAC address-table move updates [2-412](#)
 - notification settings [2-414](#)
 - number of addresses in a VLAN [2-406](#)
 - per interface [2-410](#)
 - per VLAN [2-418](#)
 - static [2-416](#)
 - static and dynamic entries [2-400](#)
- dynamic
 - aging time [2-256](#)
 - deleting [2-56](#)
 - displaying [2-408](#)
- enabling MAC address notification [2-259](#)
- enabling MAC address-table move update [2-257](#)
- matching [2-274](#)
- persistent stack [2-489](#)
- static
 - adding and removing [2-261](#)
 - displaying [2-416](#)
 - dropping on an interface [2-262](#)
- tables [2-402](#)
- MAC address notification, debugging [B-23](#)
- mac address-table aging-time [2-252, 2-274](#)
- mac address-table aging-time command [2-256](#)
- mac address-table move update command [2-257](#)
- mac address-table notification command [2-259](#)
- mac address-table static command [2-261](#)
- mac address-table static drop command [2-262](#)
- macro apply command [2-264](#)
- macro description command [2-267](#)
- macro global command [2-268](#)
- macro global description command [2-271](#)
- macro name command [2-272](#)

macros

- adding a description [2-267](#)
- adding a global description [2-271](#)
- applying [2-268](#)
- creating [2-272](#)
- displaying [2-444](#)
- interface range [2-79, 2-147](#)
- specifying parameter values [2-268](#)
- tracing [2-268](#)

manual

- audience [xix](#)
- purpose of [xix](#)

maps

- QoS
 - defining [2-288](#)
 - displaying [2-428](#)

VLAN

- creating [2-564](#)
- defining [2-274](#)
- displaying [2-483](#)

match (access-map configuration) command [2-274](#)

match (class-map configuration) command [2-276](#)

maximum transmission unit

See MTU

mdix auto command [2-278](#)

MDL snooping

displaying [2-383](#)

member switches

See clusters

memory (boot loader) command [A-14](#)

mkdir (boot loader) command [A-16](#)

MLD snooping

configuring [2-227, 2-229](#)

configuring queries [2-223, 2-225](#)

configuring topology change notification [2-231](#)

displaying [2-381, 2-385, 2-387](#)

enabling [2-221](#)

MLD snooping on a VLAN

enabling [2-233](#)

- mls qos aggregate-policer command [2-282](#)
- mls qos command [2-280](#)
- mls qos cos command [2-284](#)
- mls qos dscp-mutation command [2-286](#)
- mls qos map command [2-288](#)
- mls qos queue-set output buffers command [2-292](#)
- mls qos queue-set output threshold command [2-294](#)
- mls qos rewrite ip dscp command [2-296](#)
- mls qos srr-queue input bandwidth command [2-298](#)
- mls qos srr-queue input buffers command [2-300](#)
- mls qos-srr-queue input cos-map command [2-302](#)
- mls qos srr-queue input dscp-map command [2-304](#)
- mls qos srr-queue input priority-queue command [2-306](#)
- mls qos srr-queue input threshold command [2-308](#)
- mls qos-srr-queue output cos-map command [2-310](#)
- mls qos srr-queue output dscp-map command [2-312](#)
- mls qos trust command [2-314](#)
- mls qos vlan-based command [2-316](#)
- mode, MVR [2-322](#)
- Mode button, and password recovery [2-258](#)
- modes, commands [1-2](#)
- monitor session command [2-317](#)
- more (boot loader) command [A-17](#)
- MSTP
 - displaying [2-460, 2-461, 2-462](#)
 - interoperability [2-63](#)
 - link type [2-448](#)
 - MST region
 - aborting changes [2-454](#)
 - applying changes [2-454](#)
 - configuration name [2-454](#)
 - configuration revision number [2-454](#)
 - current or pending display [2-454](#)
 - displaying [2-460, 2-461, 2-462](#)
 - MST configuration mode [2-454](#)
 - VLANs-to-instance mapping [2-454](#)
 - path cost [2-456](#)
 - protocol mode [2-452](#)
- MSTP (continued)
 - restart protocol migration process [2-63](#)
 - root port
 - loop guard [2-446](#)
 - preventing from becoming designated [2-446](#)
 - restricting which can be root [2-446](#)
 - root guard [2-446](#)
 - root switch
 - affects of extended system ID [2-444](#)
 - hello-time [2-459, 2-467](#)
 - interval between BPDU messages [2-460](#)
 - interval between hello BPDU messages [2-459, 2-467](#)
 - max-age [2-460](#)
 - maximum hop count before discarding BPDU [2-461](#)
 - port priority for selection of [2-463](#)
 - primary or secondary [2-467](#)
 - switch priority [2-466](#)
 - state changes
 - blocking to forwarding state [2-473](#)
 - enabling BPDU filtering [2-436, 2-471](#)
 - enabling BPDU guard [2-438, 2-471](#)
 - enabling Port Fast [2-471, 2-473](#)
 - forward-delay time [2-458](#)
 - length of listening and learning states [2-458](#)
 - rapid transition to forwarding [2-448](#)
 - shutting down Port Fast-enabled ports [2-471](#)
 - state information display [2-459](#)
- MTU
 - configuring size [2-537](#)
 - displaying global setting [2-472](#)
- Multicast Listener Discovery
 - See MLD
- multicast group address, MVR [2-325](#)
- multicast groups, MVR [2-323](#)
- Multicast Listener Discovery
 - See MLD
- multicast router learning method [2-208](#)
- multicast router ports
 - IPv6 [2-233](#)

multicast router ports, configuring [2-208](#)
 multicast storm control [2-492](#)
 multicast VLAN, MVR [2-322](#)
 multicast VLAN registration
 See MVR
 Multiple Spanning Tree Protocol
 See MSTP
 MVR
 and address aliasing [2-323](#)
 configuring [2-322](#)
 configuring interfaces [2-325](#)
 debug messages, display [B-28](#)
 displaying [2-436](#)
 displaying interface information [2-438](#)
 members, displaying [2-440](#)
 mvr (global configuration) command [2-322](#)
 mvr (interface configuration) command [2-325](#)
 mvr vlan group command [2-326](#)

N

native VLANs [2-529](#)
 native VLAN tagging [2-569](#)
 Network Assistant requirements [xx](#)
 nonegotiate
 DTP messaging [2-514](#)
 nonegotiate, speed [2-481](#)
 non-IP protocols
 denying [2-89](#)
 forwarding [2-341](#)
 non-IP traffic access lists [2-254](#)
 non-IP traffic forwarding
 denying [2-89](#)
 permitting [2-341](#)
 non-stop forwarding [2-328](#)
 normal-range VLANs [2-552, 2-558](#)
 note, description [xx](#)
 no vlan command [2-552, 2-562](#)
 nsf command [2-328](#)

O

online diagnostics
 configuring
 health monitoring diagnostic tests [2-92](#)
 displaying
 configured boot-up coverage level [2-309](#)
 current scheduled tasks [2-309](#)
 event logs [2-309](#)
 supported test suites [2-309](#)
 test ID [2-309](#)
 test results [2-309](#)
 test statistics [2-309](#)
 enabling
 scheduling [2-95](#)
 syslog messages [2-92](#)
 global configuration mode
 clearing health monitoring diagnostic test
 schedule [2-92](#)
 clearing test-based testing schedule [2-95](#)
 setting health monitoring diagnostic testing [2-92](#)
 setting test-based testing [2-95](#)
 setting up health monitoring diagnostic test
 schedule [2-92](#)
 setting up test-based testing [2-95](#)
 removing
 scheduling [2-95](#)
 scheduled switchover
 disabling [2-95](#)
 enabling [2-95](#)
 setting
 test interval [2-95](#)
 specifying
 health monitoring diagnostic tests [2-92](#)
 starting testing [2-97](#)

P

PAgP

See EtherChannel

pagp learn-method command [2-329](#)

pagp port-priority command [2-331](#)

password, VTP [2-578, 2-582](#)

password-recovery mechanism, enabling and disabling [2-258](#)

permit (ARP access-list configuration) command [2-333](#)

permit (IPv6) command [2-335](#)

permit (MAC access-list configuration) command [2-341](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-329](#)

PID, displaying [2-352](#)

PIM-DVMRP, as multicast router learning method [2-208](#)

PoE

configuring the power budget [2-356](#)

configuring the power management mode [2-353](#)

displaying controller register values [2-303](#)

displaying power management information [2-452](#)

logging of status [2-249](#)

police aggregate command [2-346](#)

police command [2-344](#)

policed-DSCP map [2-288](#)

policy-map command [2-348](#)

policy maps

applying to an interface [2-260, 2-267](#)

creating [2-348](#)

displaying [2-447](#)

hierarchical [2-349](#)

policers

displaying [2-421](#)

for a single class [2-344](#)

for multiple classes [2-282, 2-346](#)

policed-DSCP map [2-288](#)

policy maps (continued)

traffic classification

defining the class [2-44](#)

defining trust states [2-545](#)

setting DSCP or IP precedence values [2-265](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list [2-3](#)

debug messages, display [B-7](#)

enabling IEEE 802.1x

globally [2-99](#)

per interface [2-125](#)

guest VLAN [2-113](#)

host modes [2-116](#)

IEEE 802.1x AAA accounting methods [2-1](#)

initialize an interface [2-118](#)

MAC authentication bypass [2-119](#)

manual control of authorization state [2-125](#)

PAE as authenticator [2-124](#)

periodic re-authentication

enabling [2-129](#)

time between attempts [2-130](#)

quiet period between failed authentication exchanges [2-130](#)

re-authenticating IEEE 802.1x-enabled ports [2-127](#)

resetting configurable IEEE 802.1x parameters [2-111](#)

switch-to-authentication server retransmission time [2-130](#)

switch-to-client frame-retransmission number [2-121 to 2-122](#)

switch-to-client retransmission time [2-130](#)

port-channel load-balance command [2-351](#)

Port Fast, for spanning tree [2-473](#)

port ranges, defining [2-79](#)

ports, debugging [B-77](#)

ports, protected [2-527](#)

port security

- aging [2-521](#)
- debug messages, display [B-79](#)
- enabling [2-516](#)
- violation error recovery [2-137](#)

port trust states for QoS [2-314](#)

port types, MVR [2-325](#)

power information, displaying [2-323](#)

power inline command [2-353](#)

power inline consumption command [2-356](#)

Power over Ethernet

- See PoE

priority-queue command [2-358](#)

priority value, stack member [2-469, 2-495](#)

private-vlan command [2-360](#)

private-vlan mapping command [2-363](#)

private VLANs

- association [2-525](#)
- configuring [2-360](#)
- configuring ports [2-512](#)
- displaying [2-478](#)
- host ports [2-512](#)
- mapping
 - configuring [2-525](#)
 - displaying [2-340](#)
- promiscuous ports [2-512](#)

privileged EXEC mode [1-2, 1-3](#)

product identification information, displaying [2-352](#)

promiscuous ports, private VLANs [2-512](#)

protected ports, displaying [2-346](#)

pruning

- VLANs [2-529](#)
- VTP
 - displaying interface information [2-340](#)
 - enabling [2-578, 2-582](#)

pruning-eligible VLAN list [2-531](#)

PVST+

- See STP

Q

QoS

auto-QoS

- configuring [2-22](#)
- debug messages, display [1-6, B-2](#)
- displaying [2-277](#)

class maps

- creating [2-46](#)
- defining the match criteria [2-276](#)
- displaying [2-286](#)

defining the CoS value for an incoming packet [2-284](#)

displaying configuration information [2-277, 2-420](#)

DSCP transparency [2-296](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-286](#)
- defining DSCP-to-DSCP-mutation map [2-288](#)

egress queues

- allocating buffers [2-292](#)
- defining the CoS output queue threshold map [2-310](#)
- defining the DSCP output queue threshold map [2-312](#)
- displaying buffer allocations [2-424](#)
- displaying CoS output queue threshold map [2-428](#)
- displaying DSCP output queue threshold map [2-428](#)
- displaying queueing strategy [2-424](#)
- displaying queue-set settings [2-431](#)
- enabling bandwidth shaping and scheduling [2-485](#)
- enabling bandwidth sharing and scheduling [2-487](#)
- limiting the maximum output on a port [2-483](#)
- mapping a port to a queue-set [2-365](#)
- mapping CoS values to a queue and threshold [2-310](#)
- mapping DSCP values to a queue and threshold [2-312](#)
- setting maximum and reserved memory allocations [2-294](#)
- setting WTD thresholds [2-294](#)

enabling [2-280](#)

QoS (continued)

- ingress queues
 - allocating buffers [2-300](#)
 - assigning SRR scheduling weights [2-298](#)
 - defining the CoS input queue threshold map [2-302](#)
 - defining the DSCP input queue threshold map [2-304](#)
 - displaying buffer allocations [2-424](#)
 - displaying CoS input queue threshold map [2-428](#)
 - displaying DSCP input queue threshold map [2-428](#)
 - displaying queueing strategy [2-424](#)
 - displaying settings for [2-422](#)
 - enabling the priority queue [2-306](#)
 - mapping CoS values to a queue and threshold [2-302](#)
 - mapping DSCP values to a queue and threshold [2-304](#)
 - setting WTD thresholds [2-308](#)
- maps
 - defining [2-288](#), [2-302](#), [2-304](#), [2-310](#), [2-312](#)
 - displaying [2-428](#)
- policy maps
 - applying an aggregate policer [2-346](#)
 - applying to an interface [2-260](#), [2-267](#)
 - creating [2-348](#)
 - defining policers [2-282](#), [2-344](#)
 - displaying policers [2-421](#)
 - displaying policy maps [2-447](#)
 - hierarchical [2-349](#)
 - policed-DSCP map [2-288](#)
 - setting DSCP or IP precedence values [2-265](#)
 - traffic classifications [2-44](#)
 - trust states [2-545](#)
- port trust states [2-314](#)
- queues, enabling the expedite [2-358](#)
- statistics
 - in-profile and out-of-profile packets [2-424](#)
 - packets enqueued or dropped [2-424](#)
 - sent and received CoS values [2-424](#)
 - sent and received DSCP values [2-424](#)
- trusted boundary for IP phones [2-314](#)
- VLAN-based [2-316](#)

- quality of service
 - See QoS
- querytime, MVR [2-322](#)
- queue-set command [2-365](#)

R

- radius-server dead-criteria command [2-366](#)
- radius-server host command [2-368](#)
- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- rcommand command [2-370](#)
- re-authenticating IEEE 802.1x-enabled ports [2-127](#)
- re-authentication
 - periodic [2-129](#)
 - time between attempts [2-130](#)
- receiver ports, MVR [2-325](#)
- receiving flow-control packets [2-143](#)
- recovery mechanism
 - causes [2-137](#)
 - display [2-283](#), [2-326](#), [2-330](#)
 - timer interval [2-138](#)
- redundancy for cluster switches [2-75](#)
- reload command [2-372](#)
- remote command [2-374](#)
- remote-span command [2-375](#)
- Remote Switched Port Analyzer
 - See RSPAN
- rename (boot loader) command [A-18](#)
- renew ip dhcp snooping database command [2-377](#)
- requirements
 - cluster **xx**
 - device manager **xx**
 - Network Assistant **xx**
- reset (boot loader) command [A-19](#)
- reset command [2-567](#)
- resource templates, displaying [2-455](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-20](#)

rmon collection stats command [2-253](#)

root guard, for spanning tree [2-446](#)

routed ports

IP addresses on [2-156](#)

number supported [2-156](#)

RSPAN

configuring [2-317](#)

displaying [2-434](#)

filter RSPAN traffic [2-317](#)

remote-span command [2-375](#)

sessions

add interfaces to [2-317](#)

displaying [2-434](#)

start new [2-317](#)

S

scheduled switchover

disabling [2-95](#)

enabling [2-95](#)

SDM mismatch mode [2-255, 2-470](#)

sdm prefer command [2-254](#)

SDM templates

allowed resources [2-256](#)

and stacking [2-255](#)

displaying [2-455](#)

dual IPv4 and IPv6 [2-254](#)

secure ports, limitations [2-518](#)

sending flow-control packets [2-143](#)

service password-recovery command [2-258](#)

service-policy command [2-260](#)

session command [2-263](#)

set (boot loader) command [A-21](#)

set command [2-265](#)

setup command [2-267](#)

setup express command [2-270](#)

show access-lists command [2-272](#)

show archive status command [2-275](#)

show arp access-list command [2-276](#)

show auto qos command [2-277](#)

show boot command [2-281](#)

show cable-diagnostics tdr command [2-283](#)

show changes command [2-567](#)

show class-map command [2-286](#)

show cluster candidates command [2-289](#)

show cluster command [2-287](#)

show cluster members command [2-291](#)

show controllers cpu-interface command [2-293](#)

show controllers ethernet-controller command [2-295](#)

show controllers power inline command [2-303](#)

show controllers team command [2-305](#)

show controller utilization command [2-307](#)

show current command [2-567](#)

show dot1q-tunnel command [2-312](#)

show dot1x command [2-313](#)

show dtp [2-318](#)

show eap command [2-320](#)

show env command [2-323](#)

show errdisable detect command [2-326](#)

show errdisable flap-values command [2-328](#)

show errdisable recovery command [2-330](#)

show etherchannel command [2-332](#)

show flowcontrol command [2-335](#)

show idprom command [2-337](#)

show interfaces command [2-340](#)

show interfaces counters command [2-349](#)

show inventory command [2-352](#)

show ip arp inspection command [2-353](#)

show ipc command [2-375](#)

show ip dhcp snooping binding command [2-357](#)

show ip dhcp snooping command [2-356](#)

show ip dhcp snooping database command [2-359](#)

show ip igmp profile command [2-361](#)

show ip igmp snooping address command [2-383](#)

show ip igmp snooping command [2-362, 2-381](#)

- show ip igmp snooping groups command [2-365](#)
- show ip igmp snooping mrouter command [2-367, 2-385](#)
- show ip igmp snooping querier command [2-369, 2-387](#)
- show ip source binding command [2-371](#)
- show ipv6 access-list command [2-379](#)
- show ip verify source command [2-373](#)
- show l2protocol-tunnel command [2-389](#)
- show lacp command [2-392](#)
- show link state group command [2-396](#)
- show mac access-group command [2-398](#)
- show mac address-table address command [2-402](#)
- show mac address-table aging time command [2-404](#)
- show mac address-table command [2-400](#)
- show mac address-table count command [2-406](#)
- show mac address-table dynamic command [2-408](#)
- show mac address-table interface command [2-410](#)
- show mac address-table move update command [2-412](#)
- show mac address-table notification command [2-58, 2-414, B-25](#)
- show mac address-table static command [2-416](#)
- show mac address-table vlan command [2-418](#)
- show mls qos aggregate-policer command [2-421](#)
- show mls qos command [2-420](#)
- show mls qos input-queue command [2-422](#)
- show mls qos interface command [2-424](#)
- show mls qos maps command [2-428](#)
- show mls qos queue-set command [2-431](#)
- show mls qos vlan command [2-433](#)
- show monitor command [2-434](#)
- show mvr command [2-436](#)
- show mvr interface command [2-438](#)
- show mvr members command [2-440](#)
- show pagp command [2-442](#)
- show parser macro command [2-444](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform frontend-controller command [C-8](#)
- show platform igmp snooping command [C-9](#)
- show platform ipc trace command [C-16](#)
- show platform ip multicast command [C-11](#)
- show platform ip unicast command [C-12](#)
- show platform ipv6 unicast command [C-17](#)
- show platform layer4op command [C-19](#)
- show platform mac-address-table command [C-20](#)
- show platform messaging command [C-21](#)
- show platform monitor command [C-22](#)
- show platform mvr table command [C-23](#)
- show platform pm command [C-24](#)
- show platform port-asic command [C-25](#)
- show platform port-security command [C-30](#)
- show platform qos command [C-31](#)
- show platform resource-manager command [C-32](#)
- show platform snmp counters command [C-34](#)
- show platform spanning-tree command [C-35](#)
- show platform stack-manager command [C-37](#)
- show platform stp-instance command [C-36](#)
- show platform tb command [C-39](#)
- show platform team command [C-41](#)
- show platform vlan command [C-44](#)
- show policy-map command [2-447](#)
- show port security command [2-449](#)
- show power inline command [2-452](#)
- show proposed command [2-567](#)
- show sdm prefer command [2-455](#)
- show setup express command [2-458](#)
- show spanning-tree command [2-459](#)
- show storm-control command [2-467](#)
- show switch command [2-469](#)
- show system mtu command [2-472](#)
- show trust command [2-545](#)
- show uddl command [2-473](#)
- show version command [2-476](#)
- show vlan access-map command [2-483](#)
- show vlan command [2-478](#)
- show vlan command, fields [2-480](#)

- show vlan filter command [2-484](#)
- show vmps command [2-485](#)
- show vtp command [2-488](#)
- shutdown command [2-423](#)
- shutdown threshold, Layer 2 protocol tunneling [2-237](#)
- shutdown vlan command [2-424](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-429](#)
- SNMP informs, enabling the sending of [2-425](#)
- snmp-server enable traps command [2-425](#)
- snmp-server host command [2-429](#)
- snmp trap mac-notification command [2-433](#)
- SNMP traps
 - enabling MAC address notification trap [2-433](#)
 - enabling the MAC address notification feature [2-259](#)
 - enabling the sending of [2-425](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - copying [2-8](#)
 - deleting [2-81](#)
 - downloading [2-11](#)
 - upgrading [2-8, 2-11](#)
 - uploading [2-18](#)
- software version, displaying [2-476](#)
- source ports, MVR [2-325](#)
- SPAN
 - configuring [2-317](#)
 - debug messages, display [B-26](#)
 - displaying [2-434](#)
 - filter SPAN traffic [2-317](#)
 - sessions
 - add interfaces to [2-317](#)
 - displaying [2-434](#)
 - start new [2-317](#)
- spanning
 - spanning-tree backbonefast command [2-435](#)
 - spanning-tree bpdupfilter command [2-436](#)
 - spanning-tree bpduguard command [2-438](#)
 - spanning-tree cost command [2-440](#)
 - spanning-tree etherchannel command [2-442](#)
 - spanning-tree extend system-id command [2-444](#)
 - spanning-tree guard command [2-446](#)
 - spanning-tree link-type command [2-448](#)
 - spanning-tree loopguard default command [2-450](#)
 - spanning-tree mode command [2-452](#)
 - spanning-tree mst configuration command [2-454](#)
 - spanning-tree mst cost command [2-456](#)
 - spanning-tree mst forward-time command [2-458](#)
 - spanning-tree mst hello-time command [2-459](#)
 - spanning-tree mst max-age command [2-460](#)
 - spanning-tree mst max-hops command [2-461](#)
 - spanning-tree mst port-priority command [2-463](#)
 - spanning-tree mst pre-standard command [2-465](#)
 - spanning-tree mst priority command [2-466](#)
 - spanning-tree mst root command [2-467](#)
 - spanning-tree portfast (global configuration) command [2-471](#)
 - spanning-tree portfast (interface configuration) command [2-473](#)
 - spanning-tree port-priority command [2-469](#)
 - Spanning Tree Protocol
 - See STP
 - spanning-tree transmit hold-count command [2-475](#)
 - spanning-tree uplinkfast command [2-476](#)
 - spanning-tree vlan command [2-478](#)
 - speed command [2-481](#)
 - srr-queue bandwidth limit command [2-483](#)
 - srr-queue bandwidth shape command [2-485](#)
 - srr-queue bandwidth share command [2-487](#)
 - SSH, configuring version [2-215](#)
 - stack-mac persistent timer command [2-489](#)

- stack member
 - access [2-263](#)
 - number [2-469, 2-498](#)
 - priority value [2-495](#)
 - provisioning [2-496](#)
 - reloading [2-372](#)
- stacks, switch
 - MAC address [2-489](#)
 - provisioning a new member [2-496](#)
 - reloading [2-372](#)
 - stack member access [2-263](#)
 - stack member number [2-469, 2-498](#)
 - stack member priority value [2-469, 2-495](#)
- static-access ports, configuring [2-502](#)
- statistics, Ethernet group [2-253](#)
- sticky learning, enabling [2-516](#)
- storm-control command [2-492](#)
- STP
 - BackboneFast [2-435](#)
 - counters, clearing [2-62](#)
 - debug messages, display
 - BackboneFast events [B-83](#)
 - MSTP [B-86](#)
 - optimized BPDUs handling [B-85](#)
 - spanning-tree activity [B-81](#)
 - switch shim [B-88](#)
 - transmitted and received BPDUs [B-84](#)
 - UplinkFast [B-90](#)
 - detection of indirect link failures [2-435](#)
 - enabling protocol tunneling for [2-237](#)
 - EtherChannel misconfiguration [2-442](#)
 - extended system ID [2-444](#)
 - path cost [2-440](#)
 - protocol modes [2-452](#)
- STP (continued)
 - root port
 - accelerating choice of new [2-476](#)
 - loop guard [2-446](#)
 - preventing from becoming designated [2-446](#)
 - restricting which can be root [2-446](#)
 - root guard [2-446](#)
 - UplinkFast [2-476](#)
 - root switch
 - affects of extended system ID [2-444, 2-479](#)
 - hello-time [2-478](#)
 - interval between BPDU messages [2-478](#)
 - interval between hello BPDU messages [2-478](#)
 - max-age [2-478](#)
 - port priority for selection of [2-469](#)
 - primary or secondary [2-478](#)
 - switch priority [2-478](#)
 - state changes
 - blocking to forwarding state [2-473](#)
 - enabling BPDU filtering [2-436, 2-471](#)
 - enabling BPDU guard [2-438, 2-471](#)
 - enabling Port Fast [2-471, 2-473](#)
 - enabling timer to recover from error state [2-137](#)
 - forward-delay time [2-478](#)
 - length of listening and learning states [2-478](#)
 - shutting down Port Fast-enabled ports [2-471](#)
 - state information display [2-459](#)
 - VLAN options [2-466, 2-478](#)
- SVIs, creating [2-150](#)
- Switched Port Analyzer
 - See SPAN
- switching characteristics
 - modifying [2-500](#)
 - returning to interfaces [2-500](#)

switchport access command [2-502](#)
 switchport backup interface command [2-504](#)
 switchport block command [2-507](#)
 switchport command [2-500](#)
 switchport host command [2-508](#)
 switchport mode command [2-509](#)
 switchport mode private-vlan command [2-512](#)
 switchport nonegotiate command [2-514](#)
 switchport port-security aging command [2-521](#)
 switchport port-security command [2-516](#)
 switchport priority extend command [2-523](#)
 switchport private-vlan command [2-525](#)
 switchport protected command [2-527](#)
 switchports, displaying [2-340](#)
 switchport trunk command [2-529](#)
 switchport voice vlan command [2-533](#)
 switch priority command [2-495](#)
 switch provision command [2-496](#)
 switch renumber command [2-498](#)
 system env temperature threshold yellow command [2-535](#)
 system message logging [2-249](#)
 system message logging, save message to flash [2-250](#)
 system mtu command [2-537](#)
 system resource templates [2-254](#)

T

tar files, creating, listing, and extracting [2-15](#)
 TDR, running [2-539](#)
 Telnet, using to communicate to cluster switches [2-370](#)
 temperature information, displaying [2-323](#)
 templates, system resources [2-254](#)
 test cable-diagnostics tdr command [2-539](#)
 traceroute mac command [2-540](#)
 traceroute mac ip command [2-543](#)
 trunking, VLAN mode [2-509](#)
 trunk mode [2-509](#)
 trunk ports [2-509](#)
 trunks, to non-DTP device [2-510](#)

trusted boundary for QoS [2-314](#)
 trusted port states for QoS [2-314](#)
 tunnel ports, Layer 2 protocol, displaying [2-389](#)
 type (boot loader) command [A-24](#)

U

UDLD

aggressive mode [2-547, 2-549](#)
 debug messages, display [B-99](#)
 enable globally [2-547](#)
 enable per interface [2-549](#)
 error recovery timer [2-137](#)
 message timer [2-547](#)
 normal mode [2-547, 2-549](#)
 reset a shutdown interface [2-551](#)
 status [2-473](#)
 udd command [2-547](#)
 udd port command [2-549](#)
 udd reset command [2-551](#)
 unicast storm control [2-492](#)
 UniDirectional Link Detection
 See UDLD
 unknown multicast traffic, preventing [2-507](#)
 unknown unicast traffic, preventing [2-507](#)
 unset (boot loader) command [A-25](#)
 upgrading
 software images [2-8, 2-11](#)
 monitoring status of [2-275](#)
 upgrading information
 See release notes
 UplinkFast, for STP [2-476](#)
 user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-27](#)
 version mismatch mode [2-470](#)

- vlan (global configuration) command [2-552](#)
- vlan (VLAN configuration) command [2-558](#)
- vlan access-map command [2-564](#)
- VLAN access map configuration mode [2-564](#)
- VLAN access maps
 - actions [2-6](#)
 - displaying [2-483](#)
- VLAN-based QoS [2-316](#)
- VLAN configuration
 - rules [2-555, 2-560](#)
 - saving [2-552, 2-562](#)
- VLAN configuration mode
 - commands
 - VLAN [2-558](#)
 - VTP [2-582](#)
 - description [1-5](#)
 - entering [2-566](#)
 - summary [1-3](#)
- vlan database command [2-566](#)
- vlan dot1q tag native command [2-569](#)
- vlan filter command [2-571](#)
- VLAN filters, displaying [2-484](#)
- VLAN ID range [2-552, 2-558](#)
- VLAN maps
 - applying [2-571](#)
 - creating [2-564](#)
 - defining [2-274](#)
 - displaying [2-483](#)
- VLAN Query Protocol
 - See VQP
- VLANs
 - adding [2-552](#)
 - configuring [2-552, 2-558](#)
 - debug messages, display
 - ISL [B-95](#)
 - VLAN IOS file system error tests [B-93](#)
 - VLAN manager activity [B-91](#)
 - VTP [B-97](#)
- VLANs (continued)**
 - displaying configurations [2-478](#)
 - enabling guest VLAN supplicant [2-102, 2-112, 2-142](#)
 - extended-range [2-552](#)
 - MAC addresses
 - displaying [2-418](#)
 - number of [2-406](#)
 - media types [2-555, 2-560](#)
 - normal-range [2-552, 2-558](#)
 - private [2-512](#)
 - configuring [2-360](#)
 - displaying [2-478](#)
 - See also private VLANs
 - restarting [2-424](#)
 - saving the configuration [2-552](#)
 - shutting down [2-424](#)
 - SNMP traps for VTP [2-427, 2-430](#)
 - suspending [2-424](#)
 - variables [2-558](#)
- VLAN Trunking Protocol
 - See VTP
- VM mode [2-470](#)
- VMPS
 - configuring servers [2-576](#)
 - displaying [2-485](#)
 - error recovery timer [2-138](#)
 - reconfirming dynamic VLAN assignments [2-573](#)
 - vmmps reconfirm (global configuration) command [2-574](#)
 - vmmps reconfirm (privileged EXEC) command [2-573](#)
 - vmmps retry command [2-575](#)
 - vmmps server command [2-576](#)
- voice VLAN
 - configuring [2-533](#)
 - setting port priority [2-523](#)

VQP

- and dynamic-access ports [2-503](#)
- clearing client statistics [2-64](#)
- displaying information [2-485](#)
- per-server retry count [2-575](#)
- reconfirmation interval [2-574](#)
- reconfirming dynamic VLAN assignments [2-573](#)

VTP

- changing characteristics [2-578](#)
 - clearing pruning counters [2-65](#)
 - configuring
 - domain name [2-578, 2-582](#)
 - file name [2-578](#)
 - mode [2-578, 2-582](#)
 - password [2-578, 2-582](#)
 - counters display fields [2-489](#)
 - displaying information [2-488](#)
 - enabling
 - pruning [2-578, 2-582](#)
 - tunneling for [2-237](#)
 - Version 2 [2-578, 2-582](#)
 - mode [2-578, 2-582](#)
 - pruning [2-578, 2-582](#)
 - saving the configuration [2-552, 2-562](#)
 - statistics [2-488](#)
 - status [2-488](#)
 - status display fields [2-490](#)
- vtp (global configuration) command [2-578](#)
- vtp (VLAN configuration) command [2-582](#)

W

- wireless controller, accessing [2-263](#)
- wireless controller switch. [B-102](#)

X

- XENPAK module serial EEPROM information [2-299, 2-337](#)