



CONTENTS

OL-25303-01 i

Preface 1

Audience 1

Purpose 1

Conventions 2

Related Publications 2

Obtaining Documentation and Submitting a Service Request 3

CHAPTER 1

Overview 1-1

Features 1-1

Deployment Features 1-2

Performance Features 1-4

Management Options 1-6

Manageability Features 1-7

Availability and Redundancy Features 1-9

VLAN Features 1-10

Security Features 1-10

QoS and CoS Features 1-14

Layer 3 Features 1-15

Power over Ethernet Features 1-17

Monitoring Features 1-17

Default Settings After Initial Switch Configuration 1-19

Network Configuration Examples 1-22

Design Concepts for Using the Switch 1-22

Small to Medium-Sized Network Using Catalyst 3750-X and 3560-X Switches 1-29

Large Network Using Catalyst 3750-X and 3560-X Switches 1-31

Multidwelling Network Using Catalyst 3750-X Switches 1-34

Long-Distance, High-Bandwidth Transport Configuration 1-35

Where to Go Next 1-36

CHAPTER 1

Using the Command-Line Interface 1-1

Understanding Command Modes 1-1

Understanding the Help System 1-3

Understanding Abbreviated Commands	1-3
Understanding no and default Forms of Commands	1-4
Understanding CLI Error Messages	1-4
Using Configuration Logging	1-4
Using Command History	1-5
Changing the Command History Buffer Size	1-5
Recalling Commands	1-6
Disabling the Command History Feature	1-6
Using Editing Features	1-6
Enabling and Disabling Editing Features	1-6
Editing Commands through Keystrokes	1-7
Editing Command Lines that Wrap	1-8
Searching and Filtering Output of show and more Commands	1-9
Accessing the CLI	1-9
Accessing the CLI through a Console Connection or through Telnet	1-10

CHAPTER 1

Configuring Cisco IOS Configuration Engine 1-1

Understanding Cisco Configuration Engine Software	1-1
Configuration Service	1-2
Event Service	1-3
What You Should Know About the CNS IDs and Device Hostnames	1-3
Understanding Cisco IOS Agents	1-5
Initial Configuration	1-5
Incremental (Partial) Configuration	1-6
Synchronized Configuration	1-6
Configuring Cisco IOS Agents	1-6
Enabling Automated CNS Configuration	1-6
Enabling the CNS Event Agent	1-8
Enabling the Cisco IOS CNS Agent	1-9
Displaying CNS Configuration	1-14

CHAPTER 1

Assigning the Switch IP Address and Default Gateway 1-1

Understanding the Boot Process	1-1
Assigning Switch Information	1-2
Default Switch Information	1-3
Understanding DHCP-Based Autoconfiguration	1-3
Understanding DHCP-based Autoconfiguration and Image Update	1-5
Configuring DHCP-Based Autoconfiguration	1-6

Configuring the DHCP Auto Configuration and Image Update Features	1-11
Manually Assigning IP Information	1-15
Checking and Saving the Running Configuration	1-16
Configuring the NVRAM Buffer Size	1-17
Modifying the Startup Configuration	1-18
Default Boot Configuration	1-18
Automatically Downloading a Configuration File	1-18
Specifying the Filename to Read and Write the System Configuration	1-19
Booting Manually	1-19
Booting a Specific Software Image	1-20
Controlling Environment Variables	1-21
Scheduling a Reload of the Software Image	1-24
Configuring a Scheduled Reload	1-24
Displaying Scheduled Reload Information	1-25

CHAPTER 1

Managing Switch Stacks 1-1

Understanding Switch Stacks	1-2
Switch Stack Membership	1-4
Stack Master Election and Re-Election	1-6
Switch Stack Bridge ID and Router MAC Address	1-7
Stack Member Numbers	1-7
Stack Member Priority Values	1-8
Switch Stack Offline Configuration	1-8
Hardware Compatibility and SDM Mismatch Mode in Switch Stacks	1-11
Switch Stack Software Compatibility Recommendations	1-11
Stack Protocol Version Compatibility	1-12
Major Version Number Incompatibility Among Switches	1-12
Minor Version Number Incompatibility Among Switches	1-12
Incompatible Software and Stack Member Image Upgrades	1-15
Switch Stack Configuration Files	1-16
Additional Considerations for System-Wide Configuration on Switch Stacks	1-16
Switch Stack Management Connectivity	1-17
Switch Stack Configuration Scenarios	1-19
Rolling Stack Upgrade	1-21
Configuring the Switch Stack	1-24
Default Switch Stack Configuration	1-24
Enabling Persistent MAC Address	1-24
Assigning Stack Member Information	1-26
Running a Rolling Stack Update	1-28

Accessing the CLI of a Specific Stack Member	1-30
Displaying Switch Stack Information	1-30
Troubleshooting Stacks	1-31
Manually Disabling a Stack Port	1-31
Re-Enabling a Stack Port While Another Member Starts	1-32
Understanding the show switch stack-ports summary Output	1-32
Identifying Loopback Problems	1-33
Finding a Disconnected Stack Cable	1-38
Fixing a Bad Connection Between Stack Ports	1-39

CHAPTER 1**Clustering Switches 1-1**

Understanding Switch Clusters	1-2
Cluster Command Switch Characteristics	1-3
Standby Cluster Command Switch Characteristics	1-3
Candidate Switch and Cluster Member Switch Characteristics	1-4
Planning a Switch Cluster	1-4
Automatic Discovery of Cluster Candidates and Members	1-5
HSRP and Standby Cluster Command Switches	1-10
IP Addresses	1-13
Hostnames	1-13
Passwords	1-14
SNMP Community Strings	1-14
Switch Clusters and Switch Stacks	1-14
TACACS+ and RADIUS	1-16
LRE Profiles	1-16
Using the CLI to Manage Switch Clusters	1-16
Catalyst 1900 and Catalyst 2820 CLI Considerations	1-17
Using SNMP to Manage Switch Clusters	1-17

CHAPTER 1**Administering the Switch 1-1**

Managing the System Time and Date	1-1
Understanding the System Clock	1-2
Understanding Network Time Protocol	1-2
NTP Version 4	1-4
Configuring Time and Date Manually	1-4
Configuring a System Name and Prompt	1-7
Default System Name and Prompt Configuration	1-8
Configuring a System Name	1-8
Understanding DNS	1-8

Creating a Banner	1-10
Default Banner Configuration	1-10
Configuring a Message-of-the-Day Login Banner	1-11
Configuring a Login Banner	1-12
Managing the MAC Address Table	1-12
Building the Address Table	1-13
MAC Addresses and VLANs	1-13
MAC Addresses and Switch Stacks	1-14
Default MAC Address Table Configuration	1-14
Changing the Address Aging Time	1-14
Removing Dynamic Address Entries	1-15
Configuring MAC Address Change Notification Traps	1-15
Configuring MAC Address Move Notification Traps	1-17
Configuring MAC Threshold Notification Traps	1-18
Adding and Removing Static Address Entries	1-20
Configuring Unicast MAC Address Filtering	1-21
Disabling MAC Address Learning on a VLAN	1-22
Displaying Address Table Entries	1-23
Managing the ARP Table	1-24

CHAPTER 1
Configuring SDM Templates 1-1

Understanding the SDM Templates	1-1
Dual IPv4 and IPv6 SDM Templates	1-2
SDM Templates and Switch Stacks	1-4
Configuring the Switch SDM Template	1-5
Default SDM Template	1-5
SDM Template Configuration Guidelines	1-5
Setting the SDM Template	1-6
Displaying the SDM Templates	1-7

CHAPTER 1
Configuring Catalyst 3750-X StackPower 1-1

Understanding Cisco StackPower	1-2
StackPower Modes	1-2
Power Priority	1-3
Load Shedding	1-4
Configuring Cisco StackPower	1-6
Configuring Power Stack Parameters	1-7
Configuring Power Stack Switch Power Parameters	1-8
Configuring PoE Port Priority	1-9

CHAPTER 1**Configuring Switch-Based Authentication 1-1**

- Preventing Unauthorized Access to Your Switch 1-1
- Protecting Access to Privileged EXEC Commands 1-2
 - Default Password and Privilege Level Configuration 1-2
 - Setting or Changing a Static Enable Password 1-3
 - Protecting Enable and Enable Secret Passwords with Encryption 1-3
 - Disabling Password Recovery 1-5
 - Setting a Telnet Password for a Terminal Line 1-6
 - Configuring Username and Password Pairs 1-6
 - Configuring Multiple Privilege Levels 1-7
- Controlling Switch Access with TACACS+ 1-10
 - Understanding TACACS+ 1-10
 - TACACS+ Operation 1-12
 - Configuring TACACS+ 1-12
 - Displaying the TACACS+ Configuration 1-17
- Controlling Switch Access with RADIUS 1-17
 - Understanding RADIUS 1-18
 - RADIUS Operation 1-19
 - RADIUS Change of Authorization 1-20
 - Configuring RADIUS 1-26
 - Displaying the RADIUS Configuration 1-39
- Controlling Switch Access with Kerberos 1-39
 - Understanding Kerberos 1-39
 - Kerberos Operation 1-41
 - Configuring Kerberos 1-42
- Configuring the Switch for Local Authentication and Authorization 1-43
- Configuring the Switch for Secure Shell 1-44
 - Understanding SSH 1-44
 - Configuring SSH 1-45
 - Displaying the SSH Configuration and Status 1-48
- Configuring the Switch for Secure Socket Layer HTTP 1-48
 - Understanding Secure HTTP Servers and Clients 1-48
 - Configuring Secure HTTP Servers and Clients 1-50
 - Displaying Secure HTTP Server and Client Status 1-54
- Configuring the Switch for Secure Copy Protocol 1-54

CHAPTER 1**Configuring IEEE 802.1x Port-Based Authentication 1-1**

- Understanding IEEE 802.1x Port-Based Authentication 1-1

Device Roles	1-3
Authentication Process	1-4
Authentication Initiation and Message Exchange	1-6
Authentication Manager	1-7
Ports in Authorized and Unauthorized States	1-10
802.1x Authentication and Switch Stacks	1-11
802.1x Host Mode	1-12
802.1x Multiple Authentication Mode	1-12
MAC Move	1-13
MAC Replace	1-14
802.1x Accounting	1-14
802.1x Accounting Attribute-Value Pairs	1-14
802.1x Readiness Check	1-15
802.1x Authentication with VLAN Assignment	1-16
802.1x Authentication with Per-User ACLs	1-17
802.1x Authentication with Downloadable ACLs and Redirect URLs	1-18
VLAN ID-based MAC Authentication	1-20
802.1x Authentication with Guest VLAN	1-21
802.1x Authentication with Restricted VLAN	1-22
802.1x Authentication with Inaccessible Authentication Bypass	1-23
802.1x Critical Voice VLAN Configuration	1-24
802.1x User Distribution	1-27
IEEE 802.1x Authentication with Voice VLAN Ports	1-28
IEEE 802.1x Authentication with Port Security	1-28
IEEE 802.1x Authentication with Wake-on-LAN	1-28
IEEE 802.1x Authentication with MAC Authentication Bypass	1-29
Network Admission Control Layer 2 IEEE 802.1x Validation	1-30
Flexible Authentication Ordering	1-31
Open1x Authentication	1-31
Multidomain Authentication	1-31
802.1x Supplicant and Authenticator Switches with Network Edge Access Topology (NEAT)	1-33
Voice Aware 802.1x Security	1-34
Common Session ID	1-35
Device Sensor	1-35
Configuring 802.1x Authentication	1-36
Default 802.1x Authentication Configuration	1-37
802.1x Authentication Configuration Guidelines	1-38
Configuring 802.1x Readiness Check	1-40
Configuring Voice Aware 802.1x Security	1-41
Configuring 802.1x Violation Modes	1-42

Configuring 802.1x Authentication	1-43
Configuring the Switch-to-RADIUS-Server Communication	1-45
Configuring the Host Mode	1-46
Configuring Periodic Re-Authentication	1-47
Manually Re-Authenticating a Client Connected to a Port	1-48
Changing the Quiet Period	1-48
Changing the Switch-to-Client Retransmission Time	1-49
Setting the Switch-to-Client Frame-Retransmission Number	1-49
Setting the Re-Authentication Number	1-50
Enabling MAC Move	1-51
Enabling MAC Replace	1-51
Configuring 802.1x Accounting	1-52
Configuring a Guest VLAN	1-53
Configuring a Restricted VLAN	1-54
Configuring Inaccessible Authentication Bypass and Critical Voice VLAN	1-55
Configuring 802.1x Authentication with VoL	1-58
Configuring MAC Authentication Bypass	1-58
Configuring 802.1x User Distribution	1-59
Configuring NAC Layer 2 802.1x Validation	1-60
Configuring an Authenticator and a Supplicant Switch with NEAT	1-61
Configuring 802.1x Authentication with Downloadable ACLs and Redirect URLs	1-63
Configuring VLAN ID-based MAC Authentication	1-65
Configuring Flexible Authentication Ordering	1-66
Configuring Open1x	1-66
Configuring a Web Authentication Local Banner	1-67
Disabling 802.1x Authentication on the Port	1-67
Resetting the 802.1x Authentication Configuration to the Default Values	1-68
Displaying 802.1x Statistics and Status	1-68

CHAPTER 1**Configuring MACsec Encryption 1-1**

Understanding Media Access Control Security and MACsec Key Agreement	1-2
MKA Policies	1-2
Virtual Ports	1-3
MACsec and Stacking	1-3
MACsec, MKA and 802.1x Host Modes	1-4
Configuring MKA and MACsec	1-6
Default MACsec MKA Configuration	1-6
Configuring an MKA Policy	1-6
Configuring MACsec on an Interface	1-7
Understanding Cisco TrustSec MACsec	1-8

Configuring Cisco TrustSec MACsec	1-10
Configuring Cisco TrustSec Credentials on the Switch	1-10
Configuring Cisco TrustSec Switch-to-Switch Link Security in 802.1x Mode	1-11
Configuring Cisco TrustSec Switch-to-Switch Link Security in Manual Mode	1-12
Cisco TrustSec Switch-to-Switch Link Security Configuration Example	1-14

CHAPTER 1**Configuring Web-Based Authentication 1-1**

Understanding Web-Based Authentication	1-1
Device Roles	1-2
Host Detection	1-2
Session Creation	1-3
Authentication Process	1-3
Local Web Authentication Banner	1-4
Web Authentication Customizable Web Pages	1-6
Web-based Authentication Interactions with Other Features	1-7
Configuring Web-Based Authentication	1-9
Default Web-Based Authentication Configuration	1-9
Web-Based Authentication Configuration Guidelines and Restrictions	1-9
Web-Based Authentication Configuration Task List	1-10
Configuring the Authentication Rule and Interfaces	1-10
Configuring AAA Authentication	1-11
Configuring Switch-to-RADIUS-Server Communication	1-11
Configuring the HTTP Server	1-13
Configuring the Web-Based Authentication Parameters	1-15
Configuring a Web Authentication Local Banner	1-16
Removing Web-Based Authentication Cache Entries	1-16
Displaying Web-Based Authentication Status	1-17

CHAPTER 1**Configuring Interface Characteristics 1-1**

Interface Types	1-1
Port-Based VLANs	1-2
Switch Ports	1-3
Routed Ports	1-4
Switch Virtual Interfaces	1-5
EtherChannel Port Groups	1-6
10-Gigabit Ethernet Interfaces	1-7
Power over Ethernet Ports	1-7
Network Module Interfaces	1-13
Connecting Interfaces	1-13

Using the Switch USB Ports	1-14
USB Mini-Type B Console Port	1-14
USB Type A Port	1-17
Using Interface Configuration Mode	1-18
Procedures for Configuring Interfaces	1-20
Configuring a Range of Interfaces	1-20
Configuring and Using Interface Range Macros	1-22
Using the Ethernet Management Port	1-24
Understanding the Ethernet Management Port	1-24
Supported Features on the Ethernet Management Port	1-26
Configuring the Ethernet Management Port	1-27
TFTP and the Ethernet Management Port	1-27
Configuring Ethernet Interfaces	1-28
Default Ethernet Interface Configuration	1-28
Configuring Interface Speed and Duplex Mode	1-29
Configuring IEEE 802.3x Flow Control	1-31
Configuring Auto-MDIX on an Interface	1-32
Configuring a Power Management Mode on a PoE Port	1-33
Budgeting Power for Devices Connected to a PoE Port	1-35
Configuring Power Policing	1-36
Adding a Description for an Interface	1-37
Configuring Layer 3 Interfaces	1-38
Configuring SVI Autostate Exclude	1-40
Configuring the System MTU	1-41
Configuring the Power Supplies	1-44
Configuring the Cisco RPS 2300 in a Mixed Stack	1-44
Configuring the Cisco eXpandable Power System (XPS) 2200	1-46
Configuring the System Names	1-47
Configuring XPS Ports	1-48
Configuring XPS Power Supplies	1-49
Monitoring and Maintaining the Interfaces	1-49
Monitoring Interface Status	1-50
Clearing and Resetting Interfaces and Counters	1-51
Shutting Down and Restarting the Interface	1-51

CHAPTER 1**Configuring VLANs 1-1**

Understanding VLANs	1-1
Supported VLANs	1-2

VLAN Port Membership Modes	1-3
Configuring Normal-Range VLANs	1-4
Token Ring VLANs	1-5
Normal-Range VLAN Configuration Guidelines	1-5
Configuring Normal-Range VLANs	1-6
Saving VLAN Configuration	1-6
Default Ethernet VLAN Configuration	1-7
Creating or Modifying an Ethernet VLAN	1-8
Deleting a VLAN	1-9
Assigning Static-Access Ports to a VLAN	1-9
Configuring Extended-Range VLANs	1-10
Default VLAN Configuration	1-10
Extended-Range VLAN Configuration Guidelines	1-11
Creating an Extended-Range VLAN	1-12
Creating an Extended-Range VLAN with an Internal VLAN ID	1-13
Displaying VLANs	1-14
Configuring VLAN Trunks	1-14
Trunking Overview	1-14
Default Layer 2 Ethernet Interface VLAN Configuration	1-17
Configuring an Ethernet Interface as a Trunk Port	1-17
Configuring Trunk Ports for Load Sharing	1-22
Configuring VMPS	1-25
Understanding VMPS	1-26
Default VMPS Client Configuration	1-27
VMPS Configuration Guidelines	1-27
Configuring the VMPS Client	1-28
Monitoring the VMPS	1-30
Troubleshooting Dynamic-Access Port VLAN Membership	1-31
VMPS Configuration Example	1-31

CHAPTER 1

Configuring VTP 1-1

Understanding VTP	1-1
The VTP Domain	1-2
VTP Modes	1-3
VTP Advertisements	1-4
VTP Version 2	1-5
VTP Version 3	1-5
VTP Pruning	1-6
VTP and Switch Stacks	1-8

Configuring VTP	1-8
Default VTP Configuration	1-9
VTP Configuration Guidelines	1-9
Configuring VTP Mode	1-11
Enabling the VTP Version	1-15
Enabling VTP Pruning	1-16
Configuring VTP on a Per-Port Basis	1-16
Adding a VTP Client Switch to a VTP Domain	1-17
Monitoring VTP	1-18

CHAPTER 1

Configuring Voice VLAN 1-1

Understanding Voice VLAN	1-1
Cisco IP Phone Voice Traffic	1-2
Cisco IP Phone Data Traffic	1-2
Configuring Voice VLAN	1-3
Default Voice VLAN Configuration	1-3
Voice VLAN Configuration Guidelines	1-3
Configuring a Port Connected to a Cisco 7960 IP Phone	1-4
Displaying Voice VLAN	1-7

CHAPTER 1

Configuring Private VLANs 1-1

Understanding Private VLANs	1-1
IP Addressing Scheme with Private VLANs	1-3
Private VLANs across Multiple Switches	1-4
Private-VLAN Interaction with Other Features	1-4
Configuring Private VLANs	1-6
Tasks for Configuring Private VLANs	1-6
Default Private-VLAN Configuration	1-6
Private-VLAN Configuration Guidelines	1-7
Configuring and Associating VLANs in a Private VLAN	1-10
Configuring a Layer 2 Interface as a Private-VLAN Host Port	1-11
Configuring a Layer 2 Interface as a Private-VLAN Promiscuous Port	1-13
Mapping Secondary VLANs to a Primary VLAN Layer 3 VLAN Interface	1-13
Monitoring Private VLANs	1-15

CHAPTER 1

Configuring IEEE 802.1Q and Layer 2 Protocol Tunneling 1-1

Understanding IEEE 802.1Q Tunneling	1-1
Configuring IEEE 802.1Q Tunneling	1-4

Default IEEE 802.1Q Tunneling Configuration	1-4
IEEE 802.1Q Tunneling Configuration Guidelines	1-4
IEEE 802.1Q Tunneling and Other Features	1-6
Configuring an IEEE 802.1Q Tunneling Port	1-7
Understanding Layer 2 Protocol Tunneling	1-8
Configuring Layer 2 Protocol Tunneling	1-10
Default Layer 2 Protocol Tunneling Configuration	1-11
Layer 2 Protocol Tunneling Configuration Guidelines	1-12
Configuring Layer 2 Protocol Tunneling	1-13
Configuring Layer 2 Tunneling for EtherChannels	1-14
Monitoring and Maintaining Tunneling Status	1-18

CHAPTER 1

Configuring STP 1-1

Understanding Spanning-Tree Features	1-1
STP Overview	1-2
Spanning-Tree Topology and BPDUs	1-3
Bridge ID, Switch Priority, and Extended System ID	1-4
Spanning-Tree Interface States	1-5
How a Switch or Port Becomes the Root Switch or Root Port	1-8
Spanning Tree and Redundant Connectivity	1-8
Spanning-Tree Address Management	1-8
Accelerated Aging to Retain Connectivity	1-9
Spanning-Tree Modes and Protocols	1-9
Supported Spanning-Tree Instances	1-10
Spanning-Tree Interoperability and Backward Compatibility	1-10
STP and IEEE 802.1Q Trunks	1-10
VLAN-Bridge Spanning Tree	1-11
Spanning Tree and Switch Stacks	1-11
Configuring Spanning-Tree Features	1-12
Default Spanning-Tree Configuration	1-12
Spanning-Tree Configuration Guidelines	1-13
Changing the Spanning-Tree Mode.	1-14
Disabling Spanning Tree	1-15
Configuring the Root Switch	1-15
Configuring a Secondary Root Switch	1-17
Configuring Port Priority	1-18
Configuring Path Cost	1-20
Configuring the Switch Priority of a VLAN	1-21
Configuring Spanning-Tree Timers	1-22

Displaying the Spanning-Tree Status 1-24

CHAPTER 1

Configuring MSTP 1-1

Understanding MSTP 1-2

Multiple Spanning-Tree Regions 1-2

IST, CIST, and CST 1-2

Hop Count 1-5

Boundary Ports 1-6

IEEE 802.1s Implementation 1-6

MSTP and Switch Stacks 1-8

Interoperability with IEEE 802.1D STP 1-8

Understanding RSTP 1-9

Port Roles and the Active Topology 1-9

Rapid Convergence 1-10

Synchronization of Port Roles 1-11

Bridge Protocol Data Unit Format and Processing 1-12

Topology Changes 1-13

Configuring MSTP Features 1-14

Default MSTP Configuration 1-14

MSTP Configuration Guidelines 1-15

Specifying the MST Region Configuration and Enabling MSTP 1-16

Configuring the Root Switch 1-18

Configuring a Secondary Root Switch 1-19

Configuring Port Priority 1-20

Configuring Path Cost 1-21

Configuring the Switch Priority 1-22

Configuring the Hello Time 1-23

Configuring the Forwarding-Delay Time 1-24

Configuring the Maximum-Aging Time 1-24

Configuring the Maximum-Hop Count 1-25

Specifying the Link Type to Ensure Rapid Transitions 1-25

Designating the Neighbor Type 1-26

Restarting the Protocol Migration Process 1-26

Displaying the MST Configuration and Status 1-27

CHAPTER 1

Configuring Optional Spanning-Tree Features 1-1

Understanding Optional Spanning-Tree Features 1-1

Understanding Port Fast 1-2

Understanding BPDU Guard 1-2

Understanding BPDU Filtering	1-3
Understanding UplinkFast	1-3
Understanding Cross-Stack UplinkFast	1-5
Understanding BackboneFast	1-7
Understanding EtherChannel Guard	1-10
Understanding Root Guard	1-10
Understanding Loop Guard	1-11
Configuring Optional Spanning-Tree Features	1-11
Default Optional Spanning-Tree Configuration	1-12
Optional Spanning-Tree Configuration Guidelines	1-12
Enabling Port Fast	1-12
Enabling BPDU Guard	1-13
Enabling BPDU Filtering	1-14
Enabling UplinkFast for Use with Redundant Links	1-15
Enabling Cross-Stack UplinkFast	1-16
Enabling BackboneFast	1-16
Enabling EtherChannel Guard	1-17
Enabling Root Guard	1-18
Enabling Loop Guard	1-18
Displaying the Spanning-Tree Status	1-19

CHAPTER 1
Configuring Flex Links and the MAC Address-Table Move Update Feature 1-1

Understanding Flex Links and the MAC Address-Table Move Update	1-1
Flex Links	1-1
VLAN Flex Link Load Balancing and Support	1-2
Flex Link Multicast Fast Convergence	1-3
MAC Address-Table Move Update	1-6
Configuring Flex Links and MAC Address-Table Move Update	1-7
Configuration Guidelines	1-7
Default Configuration	1-8
Configuring Flex Links	1-8
Configuring VLAN Load Balancing on Flex Links	1-10
Configuring the MAC Address-Table Move Update Feature	1-12
Monitoring Flex Links and the MAC Address-Table Move Update	1-14

CHAPTER 1
Configuring DHCP Features and IP Source Guard 1-1

Understanding DHCP Features	1-1
DHCP Server	1-2
DHCP Relay Agent	1-2

DHCP Snooping	1-2
Option-82 Data Insertion	1-3
Cisco IOS DHCP Server Database	1-6
DHCP Snooping Binding Database	1-6
DHCP Snooping and Switch Stacks	1-7
Configuring DHCP Features	1-8
Default DHCP Configuration	1-8
DHCP Snooping Configuration Guidelines	1-9
Configuring the DHCP Server	1-10
DHCP Server and Switch Stacks	1-10
Configuring the DHCP Relay Agent	1-11
Specifying the Packet Forwarding Address	1-11
Enabling DHCP Snooping and Option 82	1-12
Enabling DHCP Snooping on Private VLANs	1-14
Enabling the Cisco IOS DHCP Server Database	1-14
Enabling the DHCP Snooping Binding Database Agent	1-15
Displaying DHCP Snooping Information	1-16
Understanding IP Source Guard	1-16
Source IP Address Filtering	1-17
Source IP and MAC Address Filtering	1-17
IP Source Guard for Static Hosts	1-17
Configuring IP Source Guard	1-18
Default IP Source Guard Configuration	1-18
IP Source Guard Configuration Guidelines	1-18
Enabling IP Source Guard	1-19
Configuring IP Source Guard for Static Hosts	1-20
Displaying IP Source Guard Information	1-26
Understanding DHCP Server Port-Based Address Allocation	1-26
Configuring DHCP Server Port-Based Address Allocation	1-27
Default Port-Based Address Allocation Configuration	1-27
Port-Based Address Allocation Configuration Guidelines	1-27
Enabling DHCP Server Port-Based Address Allocation	1-27
Displaying DHCP Server Port-Based Address Allocation	1-29

CHAPTER 1**Configuring Dynamic ARP Inspection 1-1**

Understanding Dynamic ARP Inspection	1-1
Interface Trust States and Network Security	1-3
Rate Limiting of ARP Packets	1-4
Relative Priority of ARP ACLs and DHCP Snooping Entries	1-4

Logging of Dropped Packets	1-5
Configuring Dynamic ARP Inspection	1-5
Default Dynamic ARP Inspection Configuration	1-5
Dynamic ARP Inspection Configuration Guidelines	1-6
Configuring Dynamic ARP Inspection in DHCP Environments	1-7
Configuring ARP ACLs for Non-DHCP Environments	1-9
Limiting the Rate of Incoming ARP Packets	1-10
Performing Validation Checks	1-12
Configuring the Log Buffer	1-13
Displaying Dynamic ARP Inspection Information	1-14

CHAPTER 1

Configuring IGMP Snooping and MVR 1-1

Understanding IGMP Snooping	1-2
IGMP Versions	1-3
Joining a Multicast Group	1-3
Leaving a Multicast Group	1-5
Immediate Leave	1-6
IGMP Configurable-Leave Timer	1-6
IGMP Report Suppression	1-6
IGMP Snooping and Switch Stacks	1-7
Configuring IGMP Snooping	1-7
Default IGMP Snooping Configuration	1-7
Enabling or Disabling IGMP Snooping	1-8
Setting the Snooping Method	1-8
Configuring a Multicast Router Port	1-9
Configuring a Host Statically to Join a Group	1-10
Enabling IGMP Immediate Leave	1-11
Configuring the IGMP Leave Timer	1-11
Configuring TCN-Related Commands	1-12
Configuring the IGMP Snooping Querier	1-14
Disabling IGMP Report Suppression	1-15
Displaying IGMP Snooping Information	1-16
Understanding Multicast VLAN Registration	1-17
Using MVR in a Multicast Television Application	1-18
Configuring MVR	1-20
Default MVR Configuration	1-20
MVR Configuration Guidelines and Limitations	1-20
Configuring MVR Global Parameters	1-21
Configuring MVR Interfaces	1-22

Displaying MVR Information	1-23
Configuring IGMP Filtering and Throttling	1-24
Default IGMP Filtering and Throttling Configuration	1-24
Configuring IGMP Profiles	1-25
Applying IGMP Profiles	1-26
Setting the Maximum Number of IGMP Groups	1-27
Configuring the IGMP Throttling Action	1-27
Displaying IGMP Filtering and Throttling Configuration	1-29

CHAPTER 1

Configuring IPv6 MLD Snooping	1-1
Understanding MLD Snooping	1-1
MLD Messages	1-3
MLD Queries	1-3
Multicast Client Aging Robustness	1-3
Multicast Router Discovery	1-4
MLD Reports	1-4
MLD Done Messages and Immediate-Leave	1-4
Topology Change Notification Processing	1-5
MLD Snooping in Switch Stacks	1-5
Configuring IPv6 MLD Snooping	1-5
Default MLD Snooping Configuration	1-6
MLD Snooping Configuration Guidelines	1-6
Enabling or Disabling MLD Snooping	1-7
Configuring a Static Multicast Group	1-8
Configuring a Multicast Router Port	1-8
Enabling MLD Immediate Leave	1-9
Configuring MLD Snooping Queries	1-10
Disabling MLD Listener Message Suppression	1-11
Displaying MLD Snooping Information	1-12

CHAPTER 1

Configuring CDP	1-1
Understanding CDP	1-1
CDP and Switch Stacks	1-2
Configuring CDP	1-2
Default CDP Configuration	1-2
Configuring the CDP Characteristics	1-2
Disabling and Enabling CDP	1-3
Disabling and Enabling CDP on an Interface	1-4
Monitoring and Maintaining CDP	1-5

CHAPTER 1

Configuring Port-Based Traffic Control	1-1
Configuring Storm Control	1-1
Understanding Storm Control	1-1
Default Storm Control Configuration	1-3
Configuring Storm Control and Threshold Levels	1-3
Configuring Small-Frame Arrival Rate	1-5
Configuring Protected Ports	1-6
Default Protected Port Configuration	1-6
Protected Port Configuration Guidelines	1-7
Configuring a Protected Port	1-7
Configuring Port Blocking	1-7
Default Port Blocking Configuration	1-8
Blocking Flooded Traffic on an Interface	1-8
Configuring Port Security	1-8
Understanding Port Security	1-9
Default Port Security Configuration	1-11
Port Security Configuration Guidelines	1-11
Enabling and Configuring Port Security	1-13
Enabling and Configuring Port Security Aging	1-17
Port Security and Switch Stacks	1-18
Port Security and Private VLANs	1-18
Configuring Protocol Storm Protection	1-19
Understanding Protocol Storm Protection	1-19
Default Protocol Storm Protection Configuration	1-20
Enabling Protocol Storm Protection	1-20
Displaying Port-Based Traffic Control Settings	1-21

CHAPTER 1

Configuring LLDP, LLDP-MED, and Wired Location Service	1-1
Understanding LLDP, LLDP-MED, and Wired Location Service	1-1
LLDP	1-1
LLDP-MED	1-2
Wired Location Service	1-3
Configuring LLDP, LLDP-MED, and Wired Location Service	1-5
Default LLDP Configuration	1-5
Configuration Guidelines	1-5
Enabling LLDP	1-6
Configuring LLDP Characteristics	1-6
Configuring LLDP-MED TLVs	1-7
Configuring Network-Policy TLV	1-8

Configuring Location TLV and Wired Location Service	1-10
Monitoring and Maintaining LLDP, LLDP-MED, and Wired Location Service	1-11

CHAPTER 1

Configuring UDLD	1-1
Understanding UDLD	1-1
Modes of Operation	1-1
Methods to Detect Unidirectional Links	1-2
Configuring UDLD	1-4
Default UDLD Configuration	1-4
Configuration Guidelines	1-4
Enabling UDLD Globally	1-5
Enabling UDLD on an Interface	1-6
Resetting an Interface Disabled by UDLD	1-6
Displaying UDLD Status	1-7

CHAPTER 1

Configuring SPAN and RSPAN	1-1
Understanding SPAN and RSPAN	1-1
Local SPAN	1-2
Remote SPAN	1-3
SPAN and RSPAN Concepts and Terminology	1-4
SPAN and RSPAN Interaction with Other Features	1-9
SPAN and RSPAN and Switch Stacks	1-10
Understanding Flow-Based SPAN	1-11
Configuring SPAN and RSPAN	1-12
Default SPAN and RSPAN Configuration	1-12
Configuring Local SPAN	1-12
Configuring RSPAN	1-17
Configuring FSPAN and FRSPAN	1-24
FSPAN and FRSPAN Configuration Guidelines	1-24
Configuring an FSPAN Session	1-25
Configuring an FRSPAN Session	1-26
Displaying SPAN, RSPAN, FSPAN, and FRSPAN Status	1-28

CHAPTER 1

Configuring RMON	1-1
Understanding RMON	1-1
Configuring RMON	1-2
Default RMON Configuration	1-3
Configuring RMON Alarms and Events	1-3

Collecting Group History Statistics on an Interface	1-5
Collecting Group Ethernet Statistics on an Interface	1-5
Displaying RMON Status	1-6

CHAPTER 1
Configuring System Message Logging and Smart Logging 1-1

Understanding System Message Logging	1-1
Configuring System Message Logging	1-2
System Log Message Format	1-2
Default System Message Logging Configuration	1-4
Disabling Message Logging	1-4
Setting the Message Display Destination Device	1-5
Synchronizing Log Messages	1-6
Enabling and Disabling Time Stamps on Log Messages	1-8
Enabling and Disabling Sequence Numbers in Log Messages	1-8
Defining the Message Severity Level	1-9
Limiting Syslog Messages Sent to the History Table and to SNMP	1-10
Enabling the Configuration-Change Logger	1-11
Configuring UNIX Syslog Servers	1-12
Configuring Smart Logging	1-14
Enabling Smart Logging	1-15
Enabling Smart Logging for DHCP Snooping Violations	1-15
Enabling Smart Logging for Dynamic ARP Inspection Violations	1-16
Enabling Smart Logging for IP Source Guard Violations	1-16
Enabling Smart Logging for Port ACL Deny or Permit Actions	1-17
Displaying the Logging Configuration	1-17

CHAPTER 1
Configuring SNMP 1-1

Understanding SNMP	1-1
SNMP Versions	1-2
SNMP Manager Functions	1-3
SNMP Agent Functions	1-4
SNMP Community Strings	1-4
Using SNMP to Access MIB Variables	1-4
SNMP Notifications	1-5
SNMP ifIndex MIB Object Values	1-5
Configuring SNMP	1-6
Default SNMP Configuration	1-6
SNMP Configuration Guidelines	1-7
Disabling the SNMP Agent	1-7

Configuring Community Strings	1-8
Configuring SNMP Groups and Users	1-9
Configuring SNMP Notifications	1-12
Setting the CPU Threshold Notification Types and Values	1-16
Setting the Agent Contact and Location Information	1-16
Limiting TFTP Servers Used Through SNMP	1-17
SNMP Examples	1-17
Displaying SNMP Status	1-19

CHAPTER 1

Configuring Embedded Event Manager 1-1

Understanding Embedded Event Manager	1-1
Event Detectors	1-3
Embedded Event Manager Actions	1-4
Embedded Event Manager Policies	1-4
Embedded Event Manager Environment Variables	1-5
EEM 3.2	1-5
Configuring Embedded Event Manager	1-6
Registering and Defining an Embedded Event Manager Applet	1-6
Registering and Defining an Embedded Event Manager TCL Script	1-7
Displaying Embedded Event Manager Information	1-8

CHAPTER 1

Configuring Network Security with ACLs 1-1

Understanding ACLs	1-2
Supported ACLs	1-2
Handling Fragmented and Unfragmented Traffic	1-6
ACLs and Switch Stacks	1-7
Configuring IPv4 ACLs	1-7
Creating Standard and Extended IPv4 ACLs	1-8
Applying an IPv4 ACL to a Terminal Line	1-20
Applying an IPv4 ACL to an Interface	1-21
Hardware and Software Treatment of IP ACLs	1-23
Troubleshooting ACLs	1-23
IPv4 ACL Configuration Examples	1-24
Creating Named MAC Extended ACLs	1-29
Applying a MAC ACL to a Layer 2 Interface	1-31
Configuring VLAN Maps	1-32
VLAN Map Configuration Guidelines	1-33
Creating a VLAN Map	1-34
Applying a VLAN Map to a VLAN	1-36

Using VLAN Maps in Your Network	1-36
Configuring VACL Logging	1-39
Using VLAN Maps with Router ACLs	1-40
VLAN Maps and Router ACL Configuration Guidelines	1-40
Examples of Router ACLs and VLAN Maps Applied to VLANs	1-41
Displaying IPv4 ACL Configuration	1-44

CHAPTER 1
Configuring QoS 1-1

Understanding QoS	1-2
Basic QoS Model	1-4
Classification	1-5
Policing and Marking	1-9
Mapping Tables	1-13
Queueing and Scheduling Overview	1-14
Packet Modification	1-22
Configuring Auto-QoS	1-23
Generated Auto-QoS Configuration	1-24
Effects of Auto-QoS on the Configuration	1-33
Auto-QoS Configuration Guidelines	1-33
Enabling Auto-QoS	1-34
Troubleshooting Auto QoS Commands	1-35
Displaying Auto-QoS Information	1-36
Configuring Standard QoS	1-36
Default Standard QoS Configuration	1-37
Standard QoS Configuration Guidelines	1-39
Enabling QoS Globally	1-42
Enabling VLAN-Based QoS on Physical Ports	1-42
Configuring Classification Using Port Trust States	1-43
Configuring a QoS Policy	1-49
Configuring DSCP Maps	1-73
Configuring Ingress Queue Characteristics	1-79
Configuring Egress Queue Characteristics	1-83
Displaying Standard QoS Information	1-91

CHAPTER 1
Configuring IPv6 ACLs 1-1

Understanding IPv6 ACLs	1-2
Supported ACL Features	1-2
IPv6 ACL Limitations	1-3
IPv6 ACLs and Switch Stacks	1-3

Configuring IPv6 ACLs	1-4
Default IPv6 ACL Configuration	1-4
Interaction with Other Features and Switches	1-4
Creating IPv6 ACLs	1-5
Applying an IPv6 ACL to an Interface	1-7
Displaying IPv6 ACLs	1-8

CHAPTER 1

Configuring EtherChannels and Link-State Tracking 1-1

Understanding EtherChannels	1-1
EtherChannel Overview	1-2
Port-Channel Interfaces	1-4
Port Aggregation Protocol	1-5
Link Aggregation Control Protocol	1-7
EtherChannel On Mode	1-8
Load-Balancing and Forwarding Methods	1-8
EtherChannel and Switch Stacks	1-10
Configuring EtherChannels	1-11
Default EtherChannel Configuration	1-11
EtherChannel Configuration Guidelines	1-12
Configuring Layer 2 EtherChannels	1-13
Configuring Layer 3 EtherChannels	1-15
Configuring EtherChannel Load-Balancing	1-18
Configuring the PAGP Learn Method and Priority	1-19
Configuring LACP Hot-Standby Ports	1-20
Displaying EtherChannel, PAGP, and LACP Status	1-22
Understanding Link-State Tracking	1-23
Configuring Link-State Tracking	1-25
Default Link-State Tracking Configuration	1-26
Link-State Tracking Configuration Guidelines	1-26
Configuring Link-State Tracking	1-26
Displaying Link-State Tracking Status	1-27

CHAPTER 1

Configuring TelePresence E911 IP Phone Support 1-1

Understanding TelePresence E911 IP Phone Support	1-1
Configuring TelePresence E911 IP Phone Support	1-2
Configuration Guidelines	1-2
Enabling TelePresence E911 IP Phone Support	1-3
Example	1-3

CHAPTER 1

Configuring IP Unicast Routing	1-1
Understanding IP Routing	1-2
Types of Routing	1-3
IP Routing and Switch Stacks	1-3
Steps for Configuring Routing	1-5
Configuring IP Addressing	1-6
Default Addressing Configuration	1-6
Assigning IP Addresses to Network Interfaces	1-7
Configuring Address Resolution Methods	1-10
Routing Assistance When IP Routing is Disabled	1-12
Configuring Broadcast Packet Handling	1-15
Monitoring and Maintaining IP Addressing	1-19
Enabling IP Unicast Routing	1-20
Configuring RIP	1-20
Default RIP Configuration	1-21
Configuring Basic RIP Parameters	1-22
Configuring RIP Authentication	1-23
Configuring Summary Addresses and Split Horizon	1-24
Configuring Split Horizon	1-25
Configuring OSPF	1-27
Default OSPF Configuration	1-28
Configuring Basic OSPF Parameters	1-31
Configuring OSPF Interfaces	1-32
Configuring OSPF Area Parameters	1-33
Configuring Other OSPF Parameters	1-34
Changing LSA Group Pacing	1-36
Configuring a Loopback Interface	1-36
Monitoring OSPF	1-37
Configuring EIGRP	1-37
Default EIGRP Configuration	1-39
Configuring Basic EIGRP Parameters	1-41
Configuring EIGRP Interfaces	1-42
Configuring EIGRP Route Authentication	1-43
EIGRP Stub Routing	1-44
Monitoring and Maintaining EIGRP	1-45
Configuring BGP	1-45
Default BGP Configuration	1-47
Enabling BGP Routing	1-50
Managing Routing Policy Changes	1-52

Configuring BGP Decision Attributes	1-54
Configuring BGP Filtering with Route Maps	1-56
Configuring BGP Filtering by Neighbor	1-56
Configuring Prefix Lists for BGP Filtering	1-58
Configuring BGP Community Filtering	1-59
Configuring BGP Neighbors and Peer Groups	1-60
Configuring Aggregate Addresses	1-62
Configuring Routing Domain Confederations	1-63
Configuring BGP Route Reflectors	1-63
Configuring Route Dampening	1-64
Monitoring and Maintaining BGP	1-65
Configuring ISO CLNS Routing	1-66
Configuring IS-IS Dynamic Routing	1-67
Monitoring and Maintaining ISO IGRP and IS-IS	1-75
Configuring Multi-VRF CE	1-76
Understanding Multi-VRF CE	1-77
Default Multi-VRF CE Configuration	1-79
Multi-VRF CE Configuration Guidelines	1-79
Configuring VRFs	1-80
Configuring VRF-Aware Services	1-81
Configuring Multicast VRFs	1-85
Configuring a VPN Routing Session	1-85
Configuring BGP PE to CE Routing Sessions	1-86
Multi-VRF CE Configuration Example	1-87
Displaying Multi-VRF CE Status	1-90
Configuring Unicast Reverse Path Forwarding	1-91
Configuring Protocol-Independent Features	1-91
Configuring Distributed Cisco Express Forwarding	1-91
Configuring the Number of Equal-Cost Routing Paths	1-93
Configuring Static Unicast Routes	1-94
Specifying Default Routes and Networks	1-95
Using Route Maps to Redistribute Routing Information	1-96
Configuring Policy-Based Routing	1-99
Filtering Routing Information	1-103
Managing Authentication Keys	1-105
Monitoring and Maintaining the IP Network	1-106

CHAPTER 1**Configuring IPv6 Unicast Routing 1-1**

Understanding IPv6	1-1
--------------------	-----

IPv6 Addresses	1-2
Supported IPv6 Unicast Routing Features	1-3
Unsupported IPv6 Unicast Routing Features	1-9
Limitations	1-9
IPv6 and Switch Stacks	1-10
Configuring IPv6	1-11
Default IPv6 Configuration	1-12
Configuring IPv6 Addressing and Enabling IPv6 Routing	1-12
Configuring Default Router Preference	1-14
Configuring IPv4 and IPv6 Protocol Stacks	1-15
Configuring DHCP for IPv6 Address Assignment	1-16
Configuring IPv6 ICMP Rate Limiting	1-20
Configuring CEF and dCEF for IPv6	1-20
Configuring Static Routing for IPv6	1-21
Configuring RIP for IPv6	1-22
Configuring OSPF for IPv6	1-23
Configuring EIGRP for IPv6	1-25
Configuring HSRP for IPv6	1-25
Displaying IPv6	1-28

CHAPTER 1

Configuring HSRP and VRRP 1-1

Understanding HSRP	1-1
HSRP Versions	1-3
Multiple HSRP	1-4
HSRP and Switch Stacks	1-5
Configuring HSRP	1-5
Default HSRP Configuration	1-5
HSRP Configuration Guidelines	1-6
Enabling HSRP	1-6
Configuring HSRP Priority	1-8
Configuring MHSRP	1-10
Configuring HSRP Authentication and Timers	1-10
Enabling HSRP Support for ICMP Redirect Messages	1-12
Configuring HSRP Groups and Clustering	1-12
Troubleshooting HSRP for Mixed Stacks of Catalyst 3750-X, 3750-E and 3750 Switches	1-12
Displaying HSRP Configurations	1-13
Configuring VRRP	1-13
VRRP Limitations	1-13

CHAPTER 1

Configuring Cisco IOS IP SLAs Operations 1-1

- Understanding Cisco IOS IP SLAs 1-2
 - Using Cisco IOS IP SLAs to Measure Network Performance 1-3
 - IP SLAs Responder and IP SLAs Control Protocol 1-4
 - Response Time Computation for IP SLAs 1-4
 - IP SLAs Operation Scheduling 1-5
 - IP SLAs Operation Threshold Monitoring 1-5
- Configuring IP SLAs Operations 1-6
 - Default Configuration 1-6
 - Configuration Guidelines 1-6
 - Configuring the IP SLAs Responder 1-7
 - Analyzing IP Service Levels by Using the UDP Jitter Operation 1-8
 - Analyzing IP Service Levels by Using the ICMP Echo Operation 1-11
- Monitoring IP SLAs Operations 1-13

CHAPTER 1

Configuring Flexible NetFlow 1-1

- Understanding Flexible NetFlow 1-1
- Configuring Flexible NetFlow 1-2
 - Configuring a Customized Flow Record 1-2
 - Configuring the Flow Exporter 1-5
 - Configuring a Customized Flow Monitor 1-6
 - Applying a Flow Monitor to an Interface 1-7
 - Configuring and Enabling Flow Sampling 1-9

CHAPTER 1

Configuring Enhanced Object Tracking 1-1

- Understanding Enhanced Object Tracking 1-1
- Configuring Enhanced Object Tracking Features 1-2
 - Default Configuration 1-2
 - Tracking Interface Line-Protocol or IP Routing State 1-2
 - Configuring a Tracked List 1-3
 - Configuring HSRP Object Tracking 1-7
 - Configuring Other Tracking Characteristics 1-8
 - Configuring IP SLAs Object Tracking 1-8
 - Configuring Static Routing Support 1-10
- Monitoring Enhanced Object Tracking 1-12

CHAPTER 1

Configuring Cache Services By Using WCCP 1-1

- Understanding WCCP 1-2

WCCP Message Exchange	1-2
WCCP Negotiation	1-3
MD5 Security	1-3
Packet Redirection and Service Groups	1-3
WCCP and Switch Stacks	1-4
Unsupported WCCP Features	1-5
Configuring WCCP	1-5
Default WCCP Configuration	1-5
WCCP Configuration Guidelines	1-5
Enabling the Cache Service	1-6
Monitoring and Maintaining WCCP	1-10

CHAPTER 1

Configuring IP Multicast Routing 1-1

Understanding Cisco's Implementation of IP Multicast Routing	1-2
Understanding IGMP	1-3
Understanding PIM	1-4
Understanding DVMRP	1-9
Understanding CGMP	1-9
Multicast Routing and Switch Stacks	1-10
Configuring IP Multicast Routing	1-10
Default Multicast Routing Configuration	1-11
Multicast Routing Configuration Guidelines	1-11
Configuring Basic Multicast Routing	1-12
Configuring Source-Specific Multicast	1-14
Configuring Source Specific Multicast Mapping	1-17
Configuring PIM Stub Routing	1-22
Configuring a Rendezvous Point	1-24
Using Auto-RP and a BSR	1-34
Monitoring the RP Mapping Information	1-35
Troubleshooting PIMv1 and PIMv2 Interoperability Problems	1-35
Configuring Advanced PIM Features	1-35
Understanding PIM Shared Tree and Source Tree	1-35
Delaying the Use of PIM Shortest-Path Tree	1-37
Modifying the PIM Router-Query Message Interval	1-38
Configuring Optional IGMP Features	1-38
Default IGMP Configuration	1-39
Configuring the Switch as a Member of a Group	1-39
Controlling Access to IP Multicast Groups	1-40
Changing the IGMP Version	1-41

Modifying the IGMP Host-Query Message Interval	1-42
Changing the IGMP Query Timeout for IGMPv2	1-42
Changing the Maximum Query Response Time for IGMPv2	1-43
Configuring the Switch as a Statically Connected Member	1-44
Configuring Optional Multicast Routing Features	1-44
Enabling CGMP Server Support	1-45
Configuring sdr Listener Support	1-46
Configuring an IP Multicast Boundary	1-47
Configuring Basic DVMRP Interoperability Features	1-49
Configuring DVMRP Interoperability	1-49
Configuring a DVMRP Tunnel	1-51
Advertising Network 0.0.0.0 to DVMRP Neighbors	1-53
Responding to mriinfo Requests	1-54
Configuring Advanced DVMRP Interoperability Features	1-54
Enabling DVMRP Unicast Routing	1-54
Rejecting a DVMRP Nonpruning Neighbor	1-55
Controlling Route Exchanges	1-58
Monitoring and Maintaining IP Multicast Routing	1-63
Clearing Caches, Tables, and Databases	1-63
Displaying System and Network Statistics	1-63
Monitoring IP Multicast Routing	1-64

CHAPTER 1

Configuring MSDP 1-1

Understanding MSDP	1-1
MSDP Operation	1-2
MSDP Benefits	1-3
Configuring MSDP	1-3
Default MSDP Configuration	1-4
Configuring a Default MSDP Peer	1-4
Caching Source-Active State	1-6
Requesting Source Information from an MSDP Peer	1-8
Controlling Source Information that Your Switch Originates	1-8
Controlling Source Information that Your Switch Forwards	1-12
Controlling Source Information that Your Switch Receives	1-14
Configuring an MSDP Mesh Group	1-16
Shutting Down an MSDP Peer	1-16
Including a Bordering PIM Dense-Mode Region in MSDP	1-17
Configuring an Originating Address other than the RP Address	1-18
Monitoring and Maintaining MSDP	1-19

CHAPTER 1**Configuring Fallback Bridging 1-1**

- Understanding Fallback Bridging 1-1
 - Fallback Bridging Overview 1-1
 - Fallback Bridging and Switch Stacks 1-3
- Configuring Fallback Bridging 1-3
 - Default Fallback Bridging Configuration 1-3
 - Fallback Bridging Configuration Guidelines 1-4
 - Creating a Bridge Group 1-4
 - Adjusting Spanning-Tree Parameters 1-5
- Monitoring and Maintaining Fallback Bridging 1-10

CHAPTER 1**Troubleshooting 1-1**

- Recovering from a Software Failure 1-2
- Recovering from a Lost or Forgotten Password 1-3
 - Procedure with Password Recovery Enabled 1-5
 - Procedure with Password Recovery Disabled 1-6
- Preventing Switch Stack Problems 1-8
- Recovering from a Command Switch Failure 1-9
 - Replacing a Failed Command Switch with a Cluster Member 1-9
 - Replacing a Failed Command Switch with Another Switch 1-11
- Recovering from Lost Cluster Member Connectivity 1-12
- Preventing Autonegotiation Mismatches 1-13
- Troubleshooting Power over Ethernet Switch Ports 1-13
 - Disabled Port Caused by Power Loss 1-13
 - Disabled Port Caused by False Link Up 1-14
- SFP Module Security and Identification 1-14
- Monitoring SFP Module Status 1-14
- Monitoring Temperature 1-15
- Using Ping 1-15
 - Understanding Ping 1-15
 - Executing Ping 1-15
- Using Layer 2 Traceroute 1-16
 - Understanding Layer 2 Traceroute 1-16
 - Usage Guidelines 1-17
 - Displaying the Physical Path 1-17
- Using IP Traceroute 1-18
 - Understanding IP Traceroute 1-18

Executing IP Traceroute	1-18
Using TDR	1-19
Understanding TDR	1-19
Running TDR and Displaying the Results	1-20
Using Debug Commands	1-20
Enabling Debugging on a Specific Feature	1-21
Enabling All-System Diagnostics	1-21
Redirecting Debug and Error Message Output	1-22
Using the show platform forward Command	1-22
Using the crashinfo Files	1-24
Basic crashinfo Files	1-25
Extended crashinfo Files	1-25
Using Memory Consistency Check Routines	1-26
Using On-Board Failure Logging	1-26
Understanding OBFL	1-27
Configuring OBFL	1-27
Displaying OBFL Information	1-28
Troubleshooting Tables	1-29
Troubleshooting CPU Utilization	1-29
Troubleshooting Power over Ethernet (PoE)	1-31
Troubleshooting Stackwise (Catalyst 3750-X Switches Only)	1-34

CHAPTER 1

Configuring Online Diagnostics	1-1
Understanding Online Diagnostics	1-1
Configuring Online Diagnostics	1-1
Scheduling Online Diagnostics	1-2
Configuring Health-Monitoring Diagnostics	1-2
Running Online Diagnostic Tests	1-4
Starting Online Diagnostic Tests	1-5
Displaying Online Diagnostic Tests and Test Results	1-5

APPENDIX 1

Working with the Cisco IOS File System, Configuration Files, and Software Images	1-1
Working with the Flash File System	1-1
Displaying Available File Systems	1-2
Setting the Default File System	1-3
Displaying Information about Files on a File System	1-3
Changing Directories and Displaying the Working Directory	1-4
Creating and Removing Directories	1-5

Copying Files	1-5
Deleting Files	1-6
Creating, Displaying, and Extracting Files	1-6
Working with Configuration Files	1-9
Guidelines for Creating and Using Configuration Files	1-10
Configuration File Types and Location	1-10
Creating a Configuration File By Using a Text Editor	1-11
Copying Configuration Files By Using TFTP	1-11
Copying Configuration Files By Using FTP	1-13
Copying Configuration Files By Using RCP	1-17
Clearing Configuration Information	1-20
Replacing and Rolling Back Configurations	1-20
Working with Software Images	1-25
Image Location on the Switch	1-26
File Format of Images on a Server or Cisco.com	1-26
Copying Image Files By Using TFTP	1-27
Copying Image Files By Using FTP	1-31
Copying Image Files By Using RCP	1-35
Copying an Image File from One Stack Member to Another	1-39
Software for the Network Services Module Software	1-40

APPENDIX 1
Unsupported Commands in Cisco IOS Release 15.0(1)SE and Later 1-1

Access Control Lists	1-1
Unsupported Privileged EXEC Commands	1-1
Unsupported Global Configuration Commands	1-1
Unsupported Route-Map Configuration Commands	1-2
Archive Commands	1-2
Unsupported Privileged EXEC Commands	1-2
ARP Commands	1-2
Unsupported Global Configuration Commands	1-2
Unsupported Interface Configuration Commands	1-2
Boot Loader Commands	1-2
Unsupported User EXEC Commands	1-2
Unsupported Global Configuration Commands	1-2
Debug Commands	1-3
Unsupported Privileged EXEC Commands	1-3
Embedded Event Manager	1-3
Unsupported Privileged EXEC Commands	1-3
Unsupported Global Configuration Commands	1-3

Unsupported Commands in Applet Configuration Mode	1-3
Unsupported Commands in Event Trigger Configuration Mode	1-4
Embedded Syslog Manager	1-4
Unsupported Global Configuration Commands	1-4
Unsupported Privileged EXEC Commands	1-4
Fallback Bridging	1-4
Unsupported Privileged EXEC Commands	1-4
Unsupported Global Configuration Commands	1-4
Unsupported Interface Configuration Commands	1-5
HSRP	1-6
Unsupported Global Configuration Commands	1-6
Unsupported Interface Configuration Commands	1-6
IGMP Snooping Commands	1-6
Unsupported Global Configuration Commands	1-6
Interface Commands	1-6
Unsupported Privileged EXEC Commands	1-6
Unsupported Global Configuration Commands	1-6
Unsupported Interface Configuration Commands	1-7
IP Multicast Routing	1-8
Unsupported Privileged EXEC Commands	1-8
Unsupported Global Configuration Commands	1-8
Unsupported Interface Configuration Commands	1-8
IP Unicast Routing	1-9
Unsupported Privileged EXEC or User EXEC Commands	1-9
Unsupported Global Configuration Commands	1-9
Unsupported Interface Configuration Commands	1-10
Unsupported BGP Router Configuration Commands	1-10
Unsupported VPN Configuration Commands	1-10
Unsupported Route Map Commands	1-10
MAC Address Commands	1-11
Unsupported Privileged EXEC Commands	1-11
Unsupported Global Configuration Commands	1-11
Miscellaneous	1-11
Unsupported User EXEC Commands	1-11
Unsupported Privileged EXEC Commands	1-12
Unsupported Global Configuration Commands	1-12
MSDP	1-12
Unsupported Privileged EXEC Commands	1-12
Unsupported Global Configuration Commands	1-12

Multicast	1-13
Unsupported BiDirectional PIM Commands	1-13
Unsupported Multicast Routing Manager Commands	1-13
Unsupported IP Multicast Rate Limiting Commands	1-13
Unsupported UDLR Commands	1-13
Unsupported Multicast Over GRE Commands	1-13
NetFlow Commands	1-13
Unsupported Global Configuration Commands	1-13
Network Address Translation (NAT) Commands	1-13
Unsupported Privileged EXEC Commands	1-13
QoS	1-14
Unsupported Global Configuration Command	1-14
Unsupported Interface Configuration Commands	1-14
Unsupported Policy-Map Configuration Command	1-14
RADIUS	1-14
Unsupported Global Configuration Commands	1-14
SNMP	1-14
Unsupported Global Configuration Commands	1-14
Spanning Tree	1-15
Unsupported Global Configuration Command	1-15
Unsupported Interface Configuration Command	1-15
VLAN	1-15
Unsupported Global Configuration Command	1-15
Unsupported User EXEC Commands	1-15
VTP	1-15
Unsupported Privileged EXEC Command	1-15

