

Preface

Purpose

This guide describes the Catalyst 3750-X, 3750-E, 3560-X, or 3560-E switch or the Catalyst 3750-X or 3750-E switch stack-specific system messages that you might encounter. For a complete list of Cisco IOS system error messages, see the *Cisco IOS Software System Error Messages, Cisco IOS Release 12.2* available from the Cisco.com home page by choosing **Technical Support & Documentation > Documentation > Cisco IOS Software**.

This guide does not describe how to install your switch or how to configure software features on your switch. It also does not provide detailed information about commands that have been created or changed for use by the switch. For hardware installation information, see the hardware installation guide that shipped with your switch. For software information, see the software configuration guide and the command reference for this release.

For documentation updates, see the release notes for this release.

Conventions

This publication uses these conventions to convey instructions and information:

Command descriptions use these conventions:

- Commands and keywords are in **boldface** text.
- Arguments for which you supply values are in *italic*.
- Square brackets ([]) mean optional elements.
- Braces ({ }) group required choices, and vertical bars (|) separate the alternative elements.
- Braces and vertical bars within square brackets ([{ | }]) mean a required choice within an optional element.

Interactive examples use these conventions:

- Terminal sessions and system displays are in screen font.
- Information you enter is in boldface screen font.
- Nonprinting characters, such as passwords or tabs, are in angle brackets (< >).

Notes use this convention and symbol:



Means reader take note. Notes contain helpful suggestions or references to materials not contained in this manual.

Related Publications

- Catalyst 3750-X switch: http://www.cisco.com/en/US/products/ps10745/tsd_products_support_series_home.html
- Catalyst 3750-E switch: http://www.cisco.com/en/US/products/ps7077/tsd_products_support_series_home.html
- Catalyst 3560-X switch: http://www.cisco.com/en/US/products/ps10744/tsd_products_support_series_home.html
- Catalyst 3560-E switch: http://www.cisco.com/en/US/products/ps7078/tsd_products_support_series_home.html



- For initial configuration information, see the "Using Express Setup" chapter in the getting started guide or the "Configuring the Switch with the CLI-Based Setup Program" appendix in the hardware installation guide.
- For device manager requirements, see the "System Requirements" section in the release notes.
- For Network Assistant requirements, see the Getting Started with Cisco Network Assistant.
- For cluster requirements, see the Release Notes for Cisco Network Assistant.
- For upgrade information, see the "Downloading Software" section in the release notes.

Catalyst 3750-X and 3560-X switches:

- Release Notes for the Catalyst 3750-X and 3560-X Switches
- Catalyst 3750-X and 3560-X Switch Getting Started Guide
- Catalyst 3750-X and 3560-X Switch Hardware Installation Guide
- Installation Notes for the Catalyst 3750-X and 3560-X Power Supply Modules
- Installation Notes for the Catalyst 3750-X and 3560-X Fan Module
- Installation Notes for the Catalyst 3750-X and 3560-X Network Modules
- Regulatory Compliance and Safety Information for the Catalyst 3750-X and 3560-X Switches
- Catalyst 3750-X and 3560-X Switch Software Configuration Guide
- Catalyst 3750-X and 3560-X Switch Command Reference
- Catalyst 3750-X, 3750-E, 3560-X and 3560-E Switch System Message Guide
- Cisco Software Installation Document

Catalyst 3750-E and Catalyst 3560-E switches:

- Release Notes for the Catalyst 3750-E and 3560-E Switches
- Catalyst 3750-E and 3560-E Switch Hardware Installation Guide
- Regulatory Compliance and Safety Information for the Catalyst 3750-E and 3560-E Switches
- Installation Note for the Catalyst 3750-E and Catalyst 3560-E Switches, and RPS 2300 Power Supply Modules
- Installation Note for the Catalyst 3750-E and 3560-E Switch Fan Modules
- Catalyst 3750-E and 3560-E Switch Software Configuration Guide
- Getting Started Guide for the Catalyst 3750-E Switch
- Getting Started Guide for the Catalyst 3560-E Switch
- Catalyst 3750-E and 3560-E Switch Command Reference
- Cisco Software Activation and Compatibility Document
- Cisco Redundant Power System 2300 Hardware Installation Guide
- Installation Note for the Cisco TwinGig Converter Module

See these documents for other information about the switches:

- Getting Started with Cisco Network Assistant
- Release Notes for Cisco Network Assistant
- For information about the Network Admission Control (NAC) features, see the *Network Admission Control Software Configuration Guide*
- Information about Cisco SFP, SFP+, and GBIC modules is available from this Cisco.com site: http://www.cisco.com/en/US/products/hw/modules/ps5455/prod_installation_guides_list.html

SFP compatibility matrix documents are available from this Cisco.com site: http://www.cisco.com/en/US/products/hw/modules/ps5455/products_device_support_tables_list.ht ml

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation:

http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.