



Configuring Internal Power Supplies

- [Information About Internal Power Supplies](#) , on page 1
- [How to Configure Internal Power Supplies](#), on page 1
- [Monitoring Internal Power Supplies](#), on page 2
- [Configuration Examples for Internal Power Supplies](#), on page 2
- [Additional References](#), on page 3
- [Feature History and Information for Internal Power Supplies](#), on page 4

Information About Internal Power Supplies

See the switch installation guide for information about the power supplies.

How to Configure Internal Power Supplies

Configuring an Internal Power Supply

You can use the **power supply** EXEC command to configure and manage the internal power supply on the switch. The switch does not support the **no power supply** EXEC command.

Procedure

	Command or Action	Purpose
Step 1	<p>power supply <i>switch_number</i> slot{A B} { off on }</p> <p>Example:</p> <p>Device# power supply 1 slot A on</p>	<p>Sets the specified power supply to off or on by using one of these keywords:</p> <ul style="list-style-type: none">• A —Selects the power supply in slot A.• B —Selects power supply in slot B. <p>Note Power supply slot B is the closest to the outer edge of the switch.</p> <ul style="list-style-type: none">• off —Set the power supply off.

	Command or Action	Purpose
		<ul style="list-style-type: none"> • on —Set the power supply on. <p>By default, the switch power supply is on.</p>
Step 2	show environment power Example: Device# show environment power	Verifies your settings.

Monitoring Internal Power Supplies

Table 1: Show Commands for Power Supplies

Command	Purpose
show environment power [all switch <i>switch_number</i>]	(Optional) Displays the status of the internal power supplies for each switch in the stack or for the specified switch. The range is 1 to 9, depending on the switch member numbers in the stack. The switch keywords are available only on stacking-capable switches.

Configuration Examples for Internal Power Supplies

This example shows how to set the power supply in slot A to off:

```
Device# power supply 1 slot A off
Disabling Power supply A may result in a power loss to PoE devices and/or switches ...
Continue? (yes/[no]): yes
Device#
Jun 10 04:52:54.389: %PLATFORM_ENV-6-FRU_PS_OIR: FRU Power Supply 1 powered off
Jun 10 04:52:56.717: %PLATFORM_ENV-1-FAN_NOT_PRESENT: Fan is not present
Device#
```

This example shows how to set the power supply in slot A to on:

```
Device# power supply 1 slot A on
Jun 10 04:54:39.600: %PLATFORM_ENV-6-FRU_PS_OIR: FRU Power Supply 1 powered on
```

This example shows the output of the **show env power** command:

```
Device# show env power
```

SW	PID	Serial#	Status	Sys Pwr	PoE Pwr	Watts
1A	PWR-C1-715WAC	LIT161010UE	OK	Good	Good	715
1B	Not Present					

Device#

Table 2: show env power Status Descriptions

Field	Description
OK	The power supply is present and power is good.
Not Present	No power supply is installed.
No Input Power	The power supply is present but there is no input power.
Disabled	The power supply and input power are present, but power supply is switched off by CLI.
Not Responding	The power supply is not recognizable or is faulty.
Failure-Fan	The power supply fan is faulty.

Additional References

Error Message Decoder

Description	Link
To help you research and resolve system error messages in this release, use the Error Message Decoder tool.	https://www.cisco.com/cgi-bin/Support/Errordecoder/index.cgi

MIBs

MIB	MIBs Link
All supported MIBs for this release.	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	http://www.cisco.com/support

Feature History and Information for Internal Power Supplies

Release	Modification
Cisco IOS XE 3.2SE	This feature was introduced.
Cisco IOS XE 3.3SE	The slot keyword replaced the frufep keyword.