

Configuring Platform Event Filters

This chapter includes the following sections:

- Platform Event Filters, on page 1
- Configuring Platform Event Filters, on page 1
- Resetting Event Platform Filters, on page 2

Platform Event Filters

A platform event filter (PEF) can trigger an action. For each PEF, you can choose the action to be taken (or take no action) when a platform event occurs.

Configuring Platform Event Filters

You can configure actions and alerts for the following platform event filters:

ID	Platform Event Filter
1	Temperature Critical Assert Filter
2	Voltage Critical Assert Filter
3	Current Assert Filter
4	Fan Critical Assert Filter
5	Processor Assert Filter
6	Power Supply Critical Assert Filter
7	Memory Critical Assert Filter

Procedure

	Command or Action	Purpose
Step 1	Server# scope fault	Enters the fault command mode.

	Command or Action	Purpose
Step 2	Server /fault # scope pef id	Enters the platform event filter command mode for the specified event.
		See the Platform Event Filter table for event ID numbers.
Step 3	Server /fault/pef # set action {none reboot power-cycle power-off}	Selects the desired system action when this event occurs. The action can be one of the following:
		• none —No system action is taken.
		• reboot —The server is rebooted.
		• power-cycle —The server is power cycled.
		• power-off —The server is powered off.
Step 4	Server /fault/pef # commit	Commits the transaction to the system configuration.

Example

This example configures the platform event alert for an event:

Resetting Event Platform Filters

Procedure

	Command or Action	Purpose
Step 1	Server# scope fault	Enters the fault command mode.
Step 2	Server /fault # set platform-event-enabled yes	Enables platform event alerts.
Step 3	Server /fault # commit	Commits the transaction to the system configuration.
Step 4	Server /fault # reset-event-filters	Resets the platform event filters.

	Command or Action	Purpose
Step 5	Server /fault # show pef	Displays the latest platform event filters.

Example

The following example enables platform event alerts:

```
Server# scope fault
Server /fault # set platform-event-enabled yes
Server /fault *# commit
Server /fault # show
Platform Event Enabled
Server /fault # reset-event-filters
Server /fault # show pef
Platform Event Filter Event
                                                      Action
                   Temperature Critical Assert Filter none
2
                    Voltage Critical Assert Filter none
                    Current Assert Filter
                                                      none
                    Fan Critical Assert Filter
                                                      none
                    Processor Assert Filter
5
                                                      none
6
                    Power Supply Critical Assert Filter none
                    Memory Critical Assert Filter none
Server /fault #
```

Resetting Event Platform Filters