



Viewing Server Properties

This chapter includes the following sections:

- [Viewing CPU Properties, page 1](#)
- [Viewing Memory Properties, page 2](#)
- [Viewing Power Supply Properties, page 2](#)
- [Viewing Storage Properties, page 3](#)

Viewing CPU Properties

Procedure

- Step 1** In the **Navigation** pane, click the **Server** tab.
- Step 2** On the **Server** tab, click **Inventory**.
- Step 3** In the **Inventory** pane, click the **CPUs** tab.
- Step 4** Review the following information for each CPU:

Name	Description
Socket Name field	The socket in which the CPU is installed.
Serial Number field	The serial number for the CPU.
Vendor field	The vendor for the CPU.
Version field	The CPU version.
Number of Cores field	The number of cores in the CPU.
Signature field	The CPU signature.
Max Speed field	The maximum CPU speed supported by the socket.

Name	Description
Number of Threads field	The maximum number of threads that the CPU can process concurrently.

Viewing Memory Properties

Procedure

Step 1 In the **Navigation** pane, click the **Server** tab.

Step 2 On the **Server** tab, click **Inventory**.

Step 3 In the **Inventory** pane, click the **Memory** tab.

Step 4 Review the following information about memory:

Tip Click a column header to sort the table rows, according to the entries in that column.

Name	Description
Name column	The name of the DIMM slot in which the memory module is installed.
Capacity column	The size of the DIMM, in megabytes.
Speed column	The clock speed of the memory module, in megahertz.
Type column	The memory type.

Viewing Power Supply Properties

Procedure

Step 1 In the **Navigation** pane, click the **Server** tab.

Step 2 On the **Server** tab, click **Inventory**.

Step 3 In the **Inventory** pane, click the **Power Supplies** tab.

Step 4 Review the following information for each power supply:

Tip Click a column header to sort the table rows, according to the entries in that column.

Name	Description
Device ID column	The identifier for the power supply unit.

Name	Description
Input column	The input into the power supply, in watts.
Max Output column	The maximum output from the power supply, in watts.
FW Version column	The firmware version for the power supply.

Viewing Storage Properties

Procedure

Step 1 In the **Navigation** pane, click the **Server** tab.

Step 2 On the **Server** tab, click **Inventory**.

Step 3 In the **Inventory** pane, click the **Storage** tab.

Step 4 Review the following information about storage:

Tip Click a column header to sort the table rows, according to the entries in that column.

Name	Description
Name column	The name of the storage device.
Status column	The status of the storage device. This can be: <ul style="list-style-type: none">• absent• present

