



Configuring NVMe on RoCEv2 with ESXi

- Guidelines for using RoCEv2 Protocol in the Native ENIC driver on ESXi, on page 1
- [ESXi nENIC RDMA Requirements](#), on page 1
- [Installing NENIC Driver](#), on page 2
- [Configuring and Enabling RoCEv2 on Cisco IMC](#), on page 3
- [ESXi NVMe RDMA Host Side Configuration](#), on page 4

Guidelines for using RoCEv2 Protocol in the Native ENIC driver on ESXi

General Guidelines and Limitations:

- Cisco IMC release 4.2(3b) supports RoCEv2 only on ESXi 7.0 U3.
- Cisco recommends you check [UCS Hardware and Software Compatibility](#) specific to your Cisco IMC release to determine support for ESXi. RoCEv2 on ESXi is supported on UCS M6 C-Series servers with Cisco UCS VIC 15000 Series adapters.
- RoCEv2 on ESXi is not supported on UCS VIC 1400 Series adapters.
- RDMA on ESXi nENIC currently supports only ESXi NVME that is part of the ESXi kernel. The current implementation does not support the ESXi user space RDMA application.
- Multiple mac addresses and multiple VLANs are supported only on VIC 15000 Series adapters.
- RoCEv2 supports maximum two RoCEv2 enabled interfaces per adapter.
- Pvrdma, VSAN over RDMA, and iSER are not supported.

Downgrade Limitations:

- Cisco recommends you remove the RoCEv2 configuration before downgrading to any non-supported RoCEv2 release.

ESXi nENIC RDMA Requirements

Configuration and use of RoCEv2 in ESXi requires the following:

- VMWare ESXi version 7.0 U3.
- Cisco IMC release 4.2.3 or later
- RoCEv2 is supported on Cisco UCS M6 C-Series servers with Cisco UCS VIC 15xxx adapters.
- `nenic-2.0.4.0-1OEM.700.1.0.15843807.x86_64.vib` provides both standard eNIC and RDMA support.
- A storage array that supports NVMeoF connection. Currently, tested and supported on Pure Storage with Cisco Nexus 9300 Series switches.

Downgrade Limitations:

- Cisco recommends you remove the RoCEv2 configuration before downgrading to any non-supported RoCEv2 release.

Installing NENIC Driver

The enic drivers, which contain the rdma driver, are available as a combined package. Download and use the enic driver on cisco.com.

These steps assume this is a new installation.



-
- Note** While this example uses the /tmp location, you can place the file anywhere that is accessible to the ESX console shell.
-

Step 1

Copy the enic VIB or offline bundle to the ESX server. The example below uses the Linux `scp` utility to copy the file from a local system to an ESX server located at 10.10.10.10: and uses the location /tmp.

```
scp nenic-2.0.4.0-1OEM.700.1.0.15843807.x86_64.vib root@10.10.10.10:/tmp
```

Step 2

Specifying the full path, issue the command shown below.

```
esxcli software vib install -v {VIBFILE}
```

or

```
esxcli software vib install -d {OFFLINE_BUNDLE}
```

Here is an example:

```
esxcli software vib install -v /tmp/nenic-2.0.4.0-1OEM.700.1.0.15843807.x86_64.vib
```

- Note** Depending on the certificate used to sign the VIB, you may need to change the host acceptance level. To do this, use the command: `esxcli software acceptance set --level=<level>`

Depending on the type of VIB being installed, you may need to put ESX into maintenance mode. This can be done through the VI Client, or by adding the `--maintenance-mode` option to the above `esxcli` command.

Upgrading NENIC Driver

- To upgrade NENIC driver, enter the command:

```
esxcli software vib update -v {VIBFILE}
```

or

```
esxcli software vib update -d {OFFLINE_BUNDLE}
```

- b. Copy the enic VIB or offline bundle to the ESX server using Step 1 given above.
-

Configuring and Enabling RoCEv2 on Cisco IMC

Creating and Configuring the ESXi Adapter Policy in Cisco IMC

This procedure applies to configuring the ESXi adapter policy for RoCEv2.

Before you begin

Download and install the enic-nvme driver which supports RoCEv2.

Step 1 In the **Navigation** pane, click the **Networking** menu.

Step 2 Expand **Networking** and click on the adapter to configure RoCEv2 vNIC.

Step 3 Select the **vNICs** tab.

Step 4 Perform one the following:

- Click **Add vNIC** to create a new vNIC and modify the properties as mentioned in next step.
- From the left pane, select an existing vNIC and modify the properties as mentioned in next step.

Step 5 Expand **General** pane.

- a) On the **MAC address** dropdown, select the **Auto** checkbox or enter the desired address.
- b) Select which VLAN you want use from the drop-down list.
- c) Click **OK**.

Step 6 Expand **RoCE Properties**.

Step 7 Select **RoCE** checkbox.

Step 8 Modify the following vNIC properties:

Property	Field	Value
Ethernet Interrupt	Interrupt count field	256
	Coalescing Time field	125
	Interrupt Mode field	MSIx
	Coalescing Type field	MIN
Ethernet Receive Queue	Count field	1
	Ring Size field	512

Property	Field	Value
Ethernet Transmit Queue	Count field	1
	Ring Size field	256
Completion Queue	Count field	2
RoCE Properties	Queue Pairs field	1024
	Memory Regions field	131072
	Resource Groups field	8
	Class of Service drop-down list	5

Step 9 Click **Save Changes**.

Step 10 Select **Reboot**.

ESXi NVMe RDMA Host Side Configuration

NENIC RDMA Functionality

One major difference between the use case for RDMA on Linux and ESXi is in ESXi terminology. The physical interface (vmnic) MAC is not used for RoCEv2 traffic. Instead, the VMkernel port (vmk) MAC is used.

The outgoing RoCe packets uses vmk MAC in ethernet source mac field and incoming RoCE packets use the vmk MAC in the ethernet destination mac field. The vmk MAC address is a VMware mac address assigned to the vmk interface when it is created.

Linux implementation used the physical interface MAC in source MAC address field in the ROCE packets. This Linux MAC is usually a Cisco MAC address configured to the VNIC.

If you ssh into the host and use the **esxcli network ip interface list** command, you can see the MAC address.

```
vmk0
  Name: vmk0
  MAC Address: 2c:f8:9b:a1:4c:e7
  Enabled: true
  Portset: vSwitch0
  Portgroup: Management Network
  Netstack Instance: defaultTcipipStack
  VDS Name: N/A
  VDS UUID: N/A
  VDS Port: N/A
  VDS Connection: -1
  Opaque Network ID: N/A
  Opaque Network Type: N/A
  External ID: N/A
  MTU: 1500
  TSO MSS: 65535
  RXDispQueue Size: 2
  Port ID: 67108881
```

You must create a vSphere Standard Switch to provide network connectivity for hosts, virtual machines, and to handle VMkernel traffic. Depending on the connection type that you want to create, you can create a new vSphere Standard Switch with a VMkernel adapter, only connect physical network adapters to the new switch, or create the switch with a virtual machine port group.

Create Network Connectivity Switches

Use these steps to create a vSphere Standard Switch to provide network connectivity for hosts, virtual machines, and to handle VMkernel traffic.

Before you begin

Download the enic and enic-rdma drivers.

Step 1 In the vSphere Client, navigate to the host.

Step 2 On the **Configure** tab, expand **Networking** and select **Virtual Switches**.

Step 3 Click on **Add Networking**.

The available network adapter connection types are:

- **Vmkernel Network Adapter**

Creates a new VMkernel adapter to handle host management traffic

- **Physical Network Adapter**

Adds physical network adapters to a new or existing standard switch.

- **Virtual Machine Port Group for a Standard Switch**

Creates a new port group for virtual machine networking.

Create Network Connectivity Switches

Step 4 Select connection type **Vmkernel Network Adapter**.

Step 5 Select **New Standard Switch** and click **Next**.

Step 6 Add physical adapters to the new standard switch.

- a) Under **Assigned Adapters**, select **New Adapters**.
- b) Select one or more adapters from the list and click **OK**. To promote higher throughput and create redundancy, add two or more physical network adapters to the Active list.
- c) (Optional) Use the up and down arrow keys to change the position of the adapter in the Assigned Adapters list.
- d) Click **Next**.

Step 7 For the new standard switch you just created for the VMadapter or a port group, enter the connection settings for the adapter or port group.

- a) Enter a label that represents the traffic type for the VMkernel adapter.
- b) Set a VLAN ID to identify the VLAN the VMkernel uses for routing network traffic.
- c) Select IPV4 or IPV6 or both.
- d) Select an MTU size from the drop-down menu. Select Custom if you wish to enter a specific MTU size. The maximum MTU size is 9000 bytes.

Note You can enable Jumbo Frames by setting an MTU greater than 1500.

- e) Select a TCP/IP stack. After setting the TCP/IP stack for the VMkernel adapter. To use the default TCP/IP stack, select it from the available services.

Note Be aware that the TCP/IP stack for the VMkernel adapter cannot be changed later.

- f) Configure IPV4 and/or IPV6 settings.

Step 8 On the **Ready to Complete** page, click **Finish**.

Step 9 Check the VMkernel ports for the VM Adapters or port groups with NVMe RDMA in the vSphere client, as shown in the Results below.

The VMkernel ports for the VM Adapters or port groups with NVMe RDMA are shown below.

Example

	Device	Network Label	Switch	IP Address	TCP/IP Stack	Enabled Services
⋮	vmk0	Management Network	vSwitch0	10.193.176.52	Default	Management
⋮	vmk1	vmk284	vSwitch1	50.284.210	Default	--
⋮	vmk2	vmk283	vSwitch2	50.2.83.210	Default	--

The VRDMA Port groups created with NVMeRDMA supported vmnic appear as below.

What to do next

Create vmhba ports on top of vmrdma ports.

Creating VMHBA Ports in ESXi

Use the following steps for creating vmhba ports on top of the vmrdma adapter ports.

Before you begin


Create the adapter ports for network connectivity.

Step 1 Go to vCenter where your ESXi host is connected.

Step 2 Click on **Host>Configure>Storage adapters**.

Step 3 Click **+Add Software Adapter**. The following dialog box is displayed.

Creating VMHBA Ports in ESXi

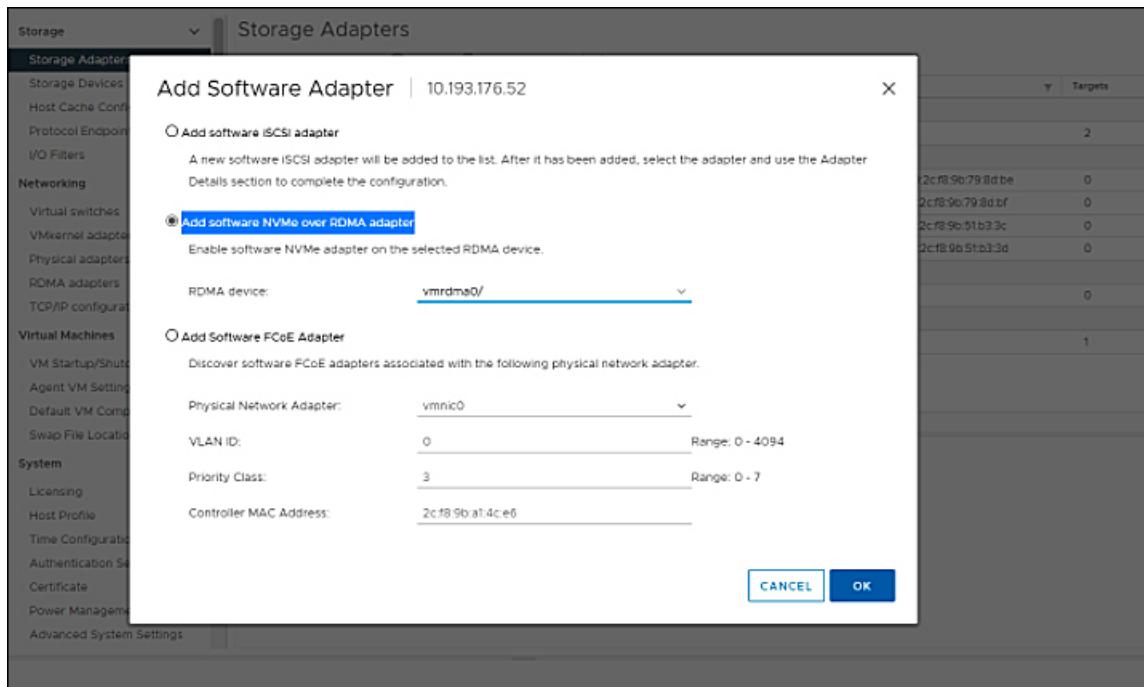

Step 4

Select **Add software NVMe over RDMA adapter** and the vmrdma port you want to use.

Step 5

Click **OK**.

The vmhba ports for the VMware NVMe over RDMA storage adapter is displayed as shown as in the example below.

Adapter	Type	Status	Identifier	Targets	Devices	Paths
vmhba6	SAS	Unknown	--	2	2	2
vmhba0	Fibre Channel	Offline	10:00:2c:f8:9b:79:8d:b6 20:00:2c:f8:9b:79:8d:b6	0	0	0
vmhba2	Fibre Channel	Offline	10:00:2c:f8:9b:79:8d:c0 20:00:2c:f8:9b:79:8d:b6	0	0	0
vmhba3	Fibre Channel	Offline	10:00:2c:f8:9b:81:b3:3c 20:00:2c:f8:9b:81:b3:3c	0	0	0
vmhba4	Fibre Channel	Offline	10:00:2c:f8:9b:81:b3:3d 20:00:2c:f8:9b:81:b3:3d	0	0	0
vmhba5	Block SCSI	Unknown	--	0	0	0
vmhba64	RDMA	Unknown	--	0	0	0
vmhba65	RDMA	Unknown	--	1	1	1

What to do next

Configure NVME.

Displaying vmnic and vmrdma Interfaces

ESXi creates a vmnic interface for each enic VNIC configured to the host.

Before you begin

Create Network Adapters and VHBA ports.

Step 1 Ssh into the host system.

Step 2 Enter `esxcfg-nics -l` to list the vmnics on ESXi.

Name	PCI	Driver	Link	Speed	Duplex	MAC Address	MTU	Description
vmnic0	0000:3b:00.0	ixgben	Down	0Mbps	Half	2c:f8:9b:a1:4c:e6	1500	Intel(R) Ethernet Controller X550
vmnic1	0000:3b:00.1	ixgben	Up	1000Mbps	Full	2c:f8:9b:a1:4c:e7	1500	Intel(R) Ethernet Controller X550
vmnic2	0000:1d:00.0	nenic	Up	50000Mbps	Full	2c:f8:9b:79:8d:bc	1500	Cisco Systems Inc Cisco VIC Ethernet NIC
vmnic3	0000:1d:00.1	nenic	Up	50000Mbps	Full	2c:f8:9b:79:8d:bd	1500	Cisco Systems Inc Cisco VIC Ethernet NIC
vmnic4	0000:63:00.0	nenic	Down	0Mbps	Half	2c:f8:9b:51:b3:3a	1500	Cisco Systems Inc Cisco VIC Ethernet NIC
vmnic5	0000:63:00.1	nenic	Down	0Mbps	Half	2c:f8:9b:51:b3:3b	1500	Cisco Systems Inc Cisco VIC Ethernet NIC

`esxcli network nic list`

Name	PCI	Device	Driver	Admin Status	Link Status	Speed	Duplex	MAC Address	MTU	Description
vmnic0	0000:3b:00.0	ixgben	Up	Down		0	Half	2c:f8:9b:a1:4c:e6	1500	Intel(R) Ethernet Controller X550
vmnic1	0000:3b:00.1	ixgben	Up	Up		1000	Full	2c:f8:9b:a1:4c:e7	1500	Intel(R) Ethernet Controller X550
vmnic2	0000:1d:00.0	nenic	Up	Up		50000	Full	2c:f8:9b:79:8d:bc	1500	Cisco Systems Inc Cisco VIC Ethernet NIC
vmnic3	0000:1d:00.1	nenic	Up	Up		50000	Full	2c:f8:9b:79:8d:bd	1500	Cisco Systems Inc Cisco VIC Ethernet NIC
vmnic4	0000:63:00.0	nenic	Up	Down		0	Half	2c:f8:9b:51:b3:3a	1500	Cisco Systems Inc Cisco VIC Ethernet NIC
vmnic5	0000:63:00.1	nenic	Up	Down		0	Half	2c:f8:9b:51:b3:3b	1500	Cisco Systems Inc Cisco VIC Ethernet NIC

Step 3 When the enic driver registers with ESXi the RDMA device for a RDMA capable VNIC, ESXi creates a vmrdma device and links it to the corresponding vmnic. Enter `esxcli rdma device list` to list the vmrdma devices.

[root@StockholmRackServer:~] esxcli rdma device list						
Name	Driver	State	MTU	Speed	Paired Uplink	Description
vmrdma0	nenic	Active	4096	50 Gbps	vmnic1	Cisco UCS VIC 15XXX (A0)
vmrdma1	nenic	Active	4096	50 Gbps	vmnic2	Cisco UCS VIC 15XXX (A0)
[root@StockholmRackServer:~] esxcli rdma device vmknic list						
Device	Vmknic	NetStack				
vmrdma0	vmk1	defaultTcipStack				
vmrdma1	vmk2	defaultTcipStack				

Step 4 Use `esxcli rdma device list` to check the protocols supported by the vmrdma interface.

For enic, RoCE v2 will be the only protocol supported from this list. The output of this command should match the RoCEv2 configuration on the VNIC.

Step 5 Use `esxcli rdma device protocol list` to check the protocols supported by the vmrdma interface.

For enic, RoCE v2 will be the only protocol supported from this list. The output of this command should match the RoCEv2 configuration on the VNIC.

[root@ESXi7U3Bodega:~] esxcli rdma device protocol list				
Device	RoCE v1	RoCE v2	iWARP	
vmrdma0	false	true	false	
vmrdma1	false	true	false	

NVMe Fabrics and Namespace Discovery

Step 6

Use **esxcli nvme adapter list** to list the NVMe adapters and the vmrdma and vmnic interfaces it is configured on.

```
[root@ESXi7U3Bodega:~] esxcli nvme adapter list
Adapter Adapter Qualified Name Transport Type Driver Associated Devices
vmhba64 aqn:vmnderdma:2c:f8:9b:79:8d:bc RDMA nvmerdma vmrdma0, vmmic2
vmhba65 aqn:vmnderdma:2c:f8:9b:79:8d:bd RDMA nvmerdma vmrdma1, vmmic3
[root@ESXi7U3Bodega:~]
```

Step 7

All vmhbabs in the system can be listed using **esxcli storage core adapter list**.

```
[root@ESXi7U3Bodega:~] esxcli storage core adapter list
HBA Name Driver Link State UID Capabilities Description
-----
vmhba0 nfnic link-down fc.10002cf89b798dbe:20002cf89b798dbe Second Level Lun ID (0000:1d:00.2) Cisco Corporation Cisco UCS VIC Fnic Controller
vmhba1 vmw_ahci link-n/a sata_vmhba1 (0000:00:11.5) Intel Corporation Lewisburg SATA AHCI Controller
vmhba2 nfnic link-down fc.10002cf89b798dbf:20002cf89b798dbf Second Level Lun ID (0000:1d:00.3) Cisco Corporation Cisco UCS VIC Fnic Controller
vmhba3 nfnic link-down fc.10002cf89b5b1b33c:20002cf89b5b1b33c Second Level Lun ID (0000:63:00.2) Cisco Corporation Cisco UCS VIC Fnic Controller
vmhba4 nfnic link-down fc.10002cf89b5b1b33d:20002cf89b5b1b33d Second Level Lun ID (0000:63:00.3) Cisco Corporation Cisco UCS VIC Fnic Controller
vmhba5 lsi_mr3 link-n/a sas.Scc167e9732f9b00 (0000:3c:00.0) Broadcom Cisco 12G Modular Raid Controller with 2GB cache
vmhba64 nvmerdma link-n/a rdma_vmmic2:2c:f8:9b:79:8d:bc VMware NVMe over RDMA Storage Adapter on vmrdma0
vmhba65 nvmerdma link-n/a rdma_vmmic3:2c:f8:9b:79:8d:bd VMware NVMe over RDMA Storage Adapter on vmrdma1
[root@ESXi7U3Bodega:~]
```

What to do next

Configure NVME.

NVMe Fabrics and Namespace Discovery

This process is performed through the ESXi command line interface,

Before you begin

Create and configure the adapter policy.

Step 1

Check and enable NVME on the vmrdma device.

```
esxcli nvme fabrics enable -p RDMA -d vmrdma0
```

The system should return a message showing if NVME is enabled.

Step 2

Discover the nvme on the array by entering the following command:

```
esxcli nvme fabrics discover -a vmhba64 -l transport_address
```

figure with **esxcli nvme fabrics discover -a vmhba64 -l 50.2.84.100**

The output will list the following information: Transport Type, Address Family, Subsystem Type, Controller ID, Admin Queue, Max Size, Transport Address, Transport Service ID, and Subsystem NQN

You will see output on the NVMe controller.

Step 3

Perform NVMe fabric interconnect.

```
esxcli nvme fabrics discover -a vmhba64 -l transport_address p Transport Service ID -s Subsystem NQN
```

Step 4

The NVMe controller should show a list of the controllers connected to NVMe. The NVMe namespace list should show all the NVMe drives discovered.

```
esxcli nvme controller list RDMA -d vmrdma0
```

Name	Controller Number	Adapter	Transport Type	Is Online
nqn.2010-06.com.purestorage:flasharray.5ab274df5b161455#vhba64#50.2.84.100:4420	258	vhba64	RDMA	true
nqn.2010-06.com.purestorage:flasharray.5ab274df5b161455#vhba65#50.2.83.100:4420	259	vhba65	RDMA	true
Name	Controller Number	Namespace ID	Block Size	Capacity in MB
eui.00e6d65b65a0f34024a9374e00011745	258	71493	512	102400
eui.00e6d65b65a0f34024a9374e00011745	259	71493	512	102400

Example

The following example shows esxcli discovery commands executed on the server.

```
[root@ESXi1UCSA:~] esxcli nvme fabrics enable -p RDMA -d vmrdma0
NVMe already enabled on vmrdma0
[root@ESXi1UCSA:~] esxcli nvme fabrics discover -a vmhba64 -l 50.2.84.100
Transport Type Address Family Subsystem Type Controller ID Admin Queue Max Size Transport
Address Transport Service ID Subsystem NQN
-----
----- -----
RDMA          IPV4        NVM      65535      31           50.2.84.100
4420          nq.210-06.com.purestorage:flasharray:2dp1239anjk1484

[root@ESXi1UCSA:~] esxcli nvme fabrics discover -a vmhba64 -l 50.2.84.100 p 4420 -s
nq.210-06.com.purestorage:flasharray:2dp1239anjk1484
Controller already connected
```

Deleting the ESXi RoCEv2 Interface Using Cisco IMC

Use these steps to delete the ESXi RoCEv2 configuration for a specific port.

Step 1 In the **Navigation** pane, click **Networking**.

Step 2 Expand **Networking** and select the adapter from which you want to remove RoCEv2 configuration.

Step 3 Select **vNICs** tab.

Step 4 Select the vNIC from which you want to delete the ESXi RoCEv2 configuration.

Step 5 Expand **RoCE Properties** tab and uncheck the **RoCE** check box.

Step 6 Click **Save Changes**.

Step 7 Reboot the server for the above changes to take effect.

■ Deleting the ESXi RoCEv2 Interface Using Cisco IMC