



# Preface

---

This preface includes the following sections:

- [New and Changed Information, page i](#)
- [Audience, page ii](#)
- [Organization, page ii](#)
- [Conventions, page iii](#)
- [Related Documentation, page v](#)
- [Obtaining Documentation and Submitting a Service Request, page v](#)

## New and Changed Information

The following table provides an overview of the significant changes to this guide for the current release:

**Table 1: New Features and Significant Behavioral Changes in Cisco Integrated Management Controller Software, Release 3.1.1**

Feature	Description	Where Documented
Support UCS-E160S-M3/K9 servers	Support added to install the UCS-E160S-M3/K9 into the Cisco ISR 4000 series.	<a href="#">Overview</a>

**Table 2: New Features and Significant Behavioral Changes in Cisco Integrated Management Controller Software, Release 3.0.1**

Feature	Description	Where Documented
NIM E-Series Network Compute Engine Support	Support for the NIM E-Series Network Compute Engine (NIM E-Series NCE).	<a href="#">Overview</a>
Faults and Logs		<a href="#">Viewing Faults and Logs</a>

Feature	Description	Where Documented
Network Analysis Module (NAM) and Network Time Protocol (NTP) Settings	Support added to enable the NAM capability and NTP service.	<a href="#">Configuring Network-Related Settings</a>

## Audience

This guide is intended primarily for data center administrators with responsibilities and expertise in one or more of the following:

- Server administration
- Storage administration
- Network administration
- Network security

## Organization

This document includes the following chapters:

Chapter	Title	Description
Chapter 1	Overview	Provides an overview of the Cisco UCS E-Series Servers, the Cisco UCS E-Series Network Compute Engine, and the CIMC .
Chapter 2	Installing the Server Operating System	Describes how to configure an operating system (OS) on the server.
Chapter 3	Managing the Server	Describes how to configure the server boot device order, how to manage the server power, how to configure power policies, and how to configure BIOS settings.
Chapter 4	Managing Storage Using RAID	Describes how to configure and manage RAID. <b>Note</b> The RAID feature is applicable to E-Series Servers and the SM E-Series NCE. The RAID feature is not applicable to the EHWIC E-Series NCE and the NIM E-Series NCE.
Chapter 5	Viewing Server Properties	Describes how to view the CPU, memory, power supply, storage, PCI adapter, and LOM properties of the server.
Chapter 6	Viewing Server Sensors	Describes how to view the temperature, voltage, and storage sensors.
Chapter 7	Managing Remote Presence	Describes how to configure and manage the virtual KVM, virtual media, and the serial over LAN connection.

Chapter	Title	Description
Chapter 8	Managing User Accounts	Describes how to add or modify user accounts, how to configure Active Directory to authenticate users, and how to manage user sessions.
Chapter 9	Configuring Network-Related Settings	Describes how to configure network interfaces, network settings, network security, NAM, and NTP settings.
Chapter 10	Configuring Communication Services	Describes how to configure server management communication by HTTP, SSH, IPMI, and SNMP.
Chapter 11	Managing Certificates	Describes how to generate, upload, and manage server certificates.
Chapter 12	Configuring Platform Event Filters	Describes how to configure and manage platform event filters.
Chapter 13	Firmware Management	Describes how to obtain, install, and activate firmware images.
Chapter 14	Viewing Faults and Logs	Describes how to view fault information and how to view, export, and clear the CIMC log and system event log messages.
Chapter 15	Server Utilities	Describes how to export support data, how to export and import the server configuration, how to reset the server configuration to factory defaults, and how to reboot the management interface.
Chapter 16	Diagnostic Tests	Describes how to run diagnostic tests.

## Conventions

Text Type	Indication
GUI elements	GUI elements such as tab titles, area names, and field labels appear in <b>this font</b> . Main titles such as window, dialog box, and wizard titles appear in <b>this font</b> .
User input	Text the user should enter exactly as shown or keys that a user should press appear in this font.
Document titles	Document titles appear in <i>this font</i> .
System output	Terminal sessions and information that the system displays appear in <i>this font</i> .

Text Type	Indication
CLI commands	CLI command keywords appear in <b>this font</b> . Arguments in a CLI command appear in <i>this font</i> .
[ ]	Elements in square brackets are optional.
{x   y   z}	Required alternative keywords are grouped in braces and separated by vertical bars.
[x   y   z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
< >	Nonprinting characters such as passwords are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

**Note**

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the document.

**Tip**

Means *the following information will help you solve a problem*. The tips information might not be troubleshooting or even an action, but could be useful information, similar to a Timesaver.

**Caution**

Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.

**Timesaver**

Means *the described action saves time*. You can save time by performing the action described in the paragraph.

**Warning**

---

**IMPORTANT SAFETY INSTRUCTIONS**

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device.

SAVE THESE INSTRUCTIONS

---

## Related Documentation

The [Documentation Guide for Cisco UCS E-Series Servers and the Cisco UCS E-Series Network Compute Engine](#) provides links to all product documentation.

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly [What's New in Cisco Product Documentation](#), which also lists all new and revised Cisco technical documentation.

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

Follow [Cisco UCS Docs on Twitter](#) to receive document update notifications.

