

Configuring Chassis Related Settings

This chapter includes the following sections:

- Managing Server Power, on page 1
- Pinging a Hostname/IP Address from the Web UI, on page 1
- Selecting a Time Zone, on page 2

Managing Server Power

Before you begin

You must log in with user or admin privileges to perform this task.

Procedure

Step 1	In the Navigation pane, click the Chassis menu.
Step 2	In the Chassis menu, click Summary.
Step 3	In the toolbar above the work pane, click the Host Power link

Pinging a Hostname/IP Address from the Web UI

Before you begin

You must log in with user or admin privileges to perform this task.

Procedure

Step 1 In the toolbar above the work pane, click the **Ping** icon.

Step 2 In the **Ping Details** dialog box, update the following fields:

Actions	Description
*Hostname/IP Address field	Hostname or IP address you want to reach out to.
*Number of Retries field	The maximum number of retries allowed to ping the IP address. The default value is 3. The valid range is from 1 to 10.
*Timeout field	The maximum response time for a pinging activity. The default value is 10 seconds. The valid range is from 1 to 20 seconds.
Ping Status field	Displays results of the pinging activity.
Details button	Displays details of the pinging activity.
Ping button	Pings the IP address.
Cancel button	Closes the dialog box without pinging.

Step 3 Click Ping.

Selecting a Time Zone

Before you begin

You must log in with user or admin privileges to perform this task.

Procedure

Step 1	In the Navigation pane, click the Chassis menu.	
Step 2	In the Chassis menu, click Summary.	
Step 3	In the Cisco Integrated Management Controller (Cisco IMC) Information area, click Select Timezone.	
	Select Timezone screen appears.	
Step 4	In the Select Timezone pop-up screen, mouse over the map and click on the location to select your time zone or choose your time zone from the Timezone drop-down menu.	
Step 5	Click Save.	