



Managing the I/O Modules

This chapter includes the following sections:

- [I/O Module Management in Cisco UCS Manager GUI](#) , page 1
- [Resetting the I/O Module](#), page 1

I/O Module Management in Cisco UCS Manager GUI

You can manage and monitor all I/O modules in a Cisco UCS domain through Cisco UCS Manager GUI.

Resetting the I/O Module

Procedure

	Command or Action	Purpose
Step 1	UCS-A# scope chassis <i>chassis-num</i>	Enters chassis mode for the specified chassis.
Step 2	UCS-A /chassis # scope iom {a b}	Enters chassis IOM mode for the specified IOM.
Step 3	UCS-A /chassis/iom # reset	Resets the IOM.
Step 4	UCS-A /chassis/iom # commit-buffer	Commits the transaction to the system configuration.

The following example resets the IOM on fabric A and commits the transaction:

```
UCS-A# scope chassis 1
UCS-A /chassis # scope iom a
UCS-A /chassis/iom # reset
UCS-A /chassis/iom* # commit-buffer
UCS-A /chassis/iom #
```

