



Upgrading Cisco UCS Central Firmware

This chapter includes the following sections:

- [Cisco UCS Central Firmware Update, page 1](#)
- [Upgrading Cisco UCS Central Firmware, page 1](#)

Cisco UCS Central Firmware Update

You can update Cisco UCS Central firmware using the Cisco UCS Central CLI.

Upgrading Cisco UCS Central Firmware

Procedure

	Command or Action	Purpose
Step 1	UCSC# connect local-mgmt	Enters the local management mode.
Step 2	UCSC(local-mgmt)# update-repository-package <i>bundle name with version</i>	Upgrades the Cisco UCS Central firmware version to the specified level.

The following example shows how to upgrade Cisco UCS Central firmware:

```
UCSC#Connect local-mgmt  
UCSC(local-mgmt) #update-repository-package <ucs-central-bundle.1.0.1S2.bin>
```

