



## Managing Reports

---

This chapter contains the following sections:

- [About Managing Reports, page 1](#)
- [Viewing the HP Server Report, page 1](#)

### About Managing Reports

All discovered and managed components of HP iLO servers are displayed at the HP account level.

You can view the reports for each of the discovered/added components in the following categories:

- NIC
- Memory
- Processor
- Slots

### Viewing the HP Server Report

You can view the status of the HP server and details about the specific component in the HP server.

- 
- Step 1** On the menu bar, choose **Physical > Compute**.
  - Step 2** In the left pane, expand the site and then click a pod.  
Cisco UCS Director displays HP Overview and HP account details in the **Summary** tab.
  - Step 3** Expand the pod and then click the HP account.  
Cisco UCS Director displays the iLO servers available under the HP account.
  - Step 4** Click the row in the table for the server that you want to monitor.
  - Step 5** Click **View Details**.

Cisco UCS Director displays information about the current status of the selected component. Click the tabs in the window for more details about that component.

**Step 6** Click on one of the following tabs to view the status of the server or a specific component in the server:

Name	Description
Summary tab	Overview of the selected HP server details such as the IP address, MAC address, product name, product ID, serial number, and UUID.
Server NICs tab	List of the NICs with their details such as the MAC type, port, and MAC address.
Server Memory tab	List of the memory available in the server by size and speed.
Server Processor tab	List of the processors with their name, speed, execution technology, and memory technology.
Server Slots tab	List of the slots in the server with their name, type, and width.

**Step 7** To return to the main window, click **Back**.

---