



## **Cisco UCS Manager Network Management Guide, Release 4.3**

**First Published:** 2023-08-16

**Last Modified:** 2023-11-14

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2023 Cisco Systems, Inc. All rights reserved.



## CONTENTS

### Full Cisco Trademarks with Software License ?

---

#### PREFACE

<b>Preface</b>	<b>xv</b>
Audience	xv
Conventions	xv
Related Cisco UCS Documentation	xvii
Documentation Feedback	xvii

---

#### CHAPTER 1

<b>New and Changed Information</b>	<b>1</b>
New and Changed Information	1

---

#### CHAPTER 2

<b>Overview</b>	<b>5</b>
Overview	5
Cisco UCS Manager User Documentation	5

---

#### CHAPTER 3

<b>LAN Connectivity</b>	<b>7</b>
Fabric Interconnect Overview	7
Uplink Connectivity	7
Downlink Connectivity	8
Configuring the Fabric Interconnects	8
Fabric Interconnect Information Policy	8
Configuring the Information Policy on the Fabric Interconnect	9
Installing Secure FPGA	9
Viewing the LAN Neighbors of a Fabric Interconnect	9
Viewing the SAN Neighbors of a Fabric Interconnect	10
Viewing the LLDP Neighbors of a Fabric Interconnect	10

Fabric Evacuation	10
Configuring Fabric Evacuation	11
Displaying the Status of Fabric Evacuation on a Fabric Interconnect	12
Fabric Interconnect Switching Modes	12
Ethernet Switching Mode	12
Configuring Ethernet Switching Mode	13
Fibre Channel Switching Mode	14
Configuring Fibre Channel Switching Mode	15
Changing the Properties of the Fabric Interconnects	15
Determining the Primary Fabric Interconnect	16
Fabric Interconnect Port Types	17
vNICs	17
<hr/>	
<b>CHAPTER 4</b>	<b>LAN Ports and Port Channels 19</b>
Port Modes	20
Port Types	20
Default Open Ports	21
TCP and UDP Ports	22
Breakout Ethernet Ports	24
Port Breakout Functionality on Cisco UCS 6536 Fabric Interconnects	24
Configuring Ethernet Breakout Ports on UCS 6536 Fabric Interconnects	26
Configuring a 10/25G Port with QSA on Cisco UCS FI 6536	27
Port Breakout Functionality on Cisco UCS 64108 Fabric Interconnects	28
Configuring Ethernet Breakout Ports on UCS 64108 Fabric Interconnects	30
Configuring a 10/25G Port with QSA on Cisco UCS FI 64108	31
Port Breakout Functionality on Cisco UCS 6454 Fabric Interconnects	32
Configuring Ethernet Breakout Ports on UCS 6454 Fabric Interconnects	33
Configuring a 10/25G Port with QSA Adapter on Cisco UCS FI 6454	34
Port Breakout Functionality on Cisco UCS 6300 Series Fabric Interconnects	35
Configuring Ethernet Breakout Ports on UCS 6300 Fabric Interconnects	37
Configuring a 10G Port with QSA Adapter on Cisco UCS FI 6332 and 6332-16UP	39
Reconfiguring an Ethernet Breakout Port	40
Unconfiguring a Breakout Port	40
Unified Ports	41

Beacon LEDs for Unified Ports	41
Guidelines for Configuring Unified Ports	41
Cautions and Guidelines for Configuring Unified Uplink Ports and Unified Storage Ports	42
Configuring the Beacon LEDs for Unified Ports	43
Changing Port Modes	44
Effect of Port Mode Changes on Data Traffic	44
Configuring Port Modes for a 6536 Fabric Interconnect	45
Configuring Port Modes for a 64108 Fabric Interconnect	46
Configuring Port Modes for a 6454 Fabric Interconnect	47
Configuring Port Modes for a 6332-16UP Fabric Interconnect	48
Configuring Port Modes for a 6324 Fabric Interconnect	49
Reconfiguring a Port on a Fabric Interconnect	50
Enabling or Disabling a Port on a Fabric Interconnect	50
Unconfiguring a Port on a Fabric Interconnect	51
Server Ports	51
Automatic Configuration of Fabric Interconnect Server Ports	51
Automatically Configuring Server Ports	51
Configuring Server Ports	52
Modifying the Properties of a Server Port	53
Configuring a Server Port for Forward Error Correction	53
Uplink Ethernet Ports	54
Configuring Uplink Ethernet Ports	54
Changing the Properties of an Uplink Ethernet Port	55
Configuring an Ethernet Port for Forward Error Correction	56
Q-in-Q Forwarding	57
Configuring Q-in-Q Forwarding	57
Unconfiguring Q-in-Q Forwarding	57
Appliance Ports	58
Configuring an Appliance Port	58
Modifying the Properties of an Appliance Port	59
Configuring an Appliance Port for Forward Error Correction	60
Modifying an Appliance Breakout Port for Forward Error Correction	60
FCoE and Fibre Channel Storage Ports	61
Configuring an Ethernet Port as an FCoE Storage Port	61

Configuring a Fibre Channel Storage Port	62
Restoring an Uplink Fibre Channel Port	63
Converting FC Storage Port to FC Uplink Port	63
Configuring FCoE Uplink for Forward Error Correction	64
FCoE Uplink Ports	65
Configuring FCoE Uplink Ports	65
Unified Storage Ports	66
Configuring an Appliance Port as a Unified Storage Port	66
Unconfiguring a Unified Storage Port	67
Unified Uplink Ports	67
Configuring Unified Uplink Ports	68
Unconfiguring Unified Uplink Port	68
Uplink Ethernet Port Channels	69
Creating an Uplink Ethernet Port Channel	69
Enabling an Uplink Ethernet Port Channel	70
Disabling an Uplink Ethernet Port Channel	70
Adding Ports to and Removing Ports from an Uplink Ethernet Port Channel	70
Deleting an Uplink Ethernet Port Channel	71
Appliance Port Channels	71
Creating an Appliance Port Channel	71
Enabling an Appliance Port Channel	72
Disabling an Appliance Port Channel	72
Deleting an Appliance Port Channel	73
Adding Ports and Removing Ports within an Appliance Port Channel	73
Cisco UCS Mini Scalability Ports	73
Configuring Scalability Ports	74
Creating a Threshold Definition	74
Monitoring a Fabric Port	75
Policy-Based Port Error Handling	75
Configuring Error-Based Action	76
FCoE Port Channels	76
Creating an FCoE Port Channel	76
Deleting an FCoE Port Channel	77
Unified Uplink Port Channel	77

Adapter Port Channels	77
Viewing Adapter Port Channels	78
Fabric Port Channels	78
Load Balancing Over Ports	78
Configuring a Fabric Port Channel	79
Viewing Fabric Port Channels	80
Enabling or Disabling a Fabric Port Channel Member Port	80
Configuring Server Ports with the Internal Fabric Manager	80
Internal Fabric Manager	80
Launching the Internal Fabric Manager	81
Configuring a Server Port with the Internal Fabric Manager	81
Unconfiguring a Server Port with the Internal Fabric Manager	81
Enabling a Server Port with the Internal Fabric Manager	81
Disabling a Server Port with the Internal Fabric Manager	82
<hr/>	
<b>CHAPTER 5</b>	<b>LAN Uplinks Manager 83</b>
LAN Uplinks Manager	83
Launching the LAN Uplinks Manager	84
Changing the Ethernet Switching Mode with the LAN Uplinks Manager	84
Configuring a Port with the LAN Uplinks Manager	85
Configuring Server Ports	85
Enabling a Server Port with the LAN Uplinks Manager	85
Disabling a Server Port with the LAN Uplinks Manager	85
Configuring Uplink Ethernet Ports	86
Enabling an Uplink Ethernet Port with the LAN Uplinks Manager	86
Disabling an Uplink Ethernet Port with the LAN Uplinks Manager	86
Configuring Uplink Ethernet Port Channels	87
Creating a Port Channel with the LAN Uplinks Manager	87
Enabling a Port Channel with the LAN Uplinks Manager	87
Disabling a Port Channel with the LAN Uplinks Manager	87
Adding Ports to a Port Channel with the LAN Uplinks Manager	88
Removing Ports from a Port Channel with the LAN Uplinks Manager	88
Deleting a Port Channel with the LAN Uplinks Manager	88
Configuring LAN Pin Groups	89

Creating a Pin Group with the LAN Uplinks Manager	89
Deleting a Port Channel with the LAN Uplinks Manager	90
Configuring Named VLANs	90
Creating a Named VLAN with the LAN Uplinks Manager	90
Deleting a Named VLAN with the LAN Uplinks Manager	91
Configuring QoS System Classes with the LAN Uplinks Manager	92

---

**CHAPTER 6****VLANs 95**

About VLANs	95
Guidelines for Creating, Deleting, and Modifying VLANs	96
About the Native VLAN	96
About the Access and Trunk Ports	97
Named VLANs	97
Private VLANs	98
VLAN Port Limitations	100
Configuring Named VLANs	101
Creating a Named VLAN	101
Deleting a Named VLAN	102
Configuring Private VLANs	103
Creating a Primary VLAN for a Private VLAN	103
Creating a Secondary VLAN for a Private VLAN	104
Community VLANs	105
Creating a Community VLAN	105
Creating Promiscuous Access on Appliance Port	109
Creating a Promiscuous Trunk on Appliance Port	110
Viewing VLAN Optimization Sets	111
Viewing the VLAN Port Count	111
VLAN Port Count Optimization	112
Enabling Port VLAN Count Optimization	113
Disabling Port VLAN Count Optimization	113
Viewing VLAN Optimization Sets	114
VLAN Groups	114
Creating a VLAN Group	115
Editing the Members of a VLAN Group	116



Modifying the Organization Access Permissions for a VLAN Group	116
Deleting a VLAN Group	117
VLAN Permissions	117
Enabling VLAN Permissions	117
Disabling VLAN Permissions	118
Adding or Modifying VLAN Permissions	118
Modifying Reserved VLANs	119
VIC QinQ Tunneling	119
Enabling QinQ on a vNIC in a LAN Connectivity Policy	119
Enabling QinQ on a vNIC of a Service Profile	120
Viewing QinQ VLAN	121
VIC QinQ Tunneling - Supported Combinations and Limitations	121

---

**CHAPTER 7****MAC Pools 123**

MAC Pools	123
Creating a MAC Pool	123
Deleting a MAC Pool	124

---

**CHAPTER 8****Quality of Service 127**

Quality of Service	127
Configuring System Classes	128
System Classes	128
Configuring QoS System Classes	129
Enabling a QoS System Class	130
Disabling a QoS System Class	130
Configuring Quality of Service Policies	131
Quality of Service Policy	131
Creating a QoS Policy	131
Deleting a QoS Policy	132
Configuring Flow Control Policies	132
Flow Control Policy	132
Creating a Flow Control Policy	132
Deleting a Flow Control Policy	133
Configuring Slow Drain	133

QoS Slow Drain Device Detection and Mitigation	133
Configuring Slow Drain	134
Correcting a Slow Drain Condition	136
Configuring the Watchdog Timer	137
The Watchdog Timer	137
Configuring the Watchdog Timer	137

**CHAPTER 9****Upstream Disjoint Layer-2 Networks 139**

Upstream Disjoint Layer-2 Networks	139
Guidelines for Configuring Upstream Disjoint L2 Networks	140
Upstream Disjoint L2 Networks Pinning Considerations	141
Configuring Cisco UCS for Upstream Disjoint L2 Networks	143
Creating a VLAN for an Upstream Disjoint L2 Network	144
Assigning Ports and Port Channels to VLANs	144
Viewing Ports and Port Channels Assigned to VLANs	145
Removing Ports and Port Channels from VLANs	146

**CHAPTER 10****Network-Related Policies 149**

Configuring vNIC Templates	149
vNIC Template	149
Creating a vNIC Template	150
Creating vNIC Template Pairs	154
Undo vNIC Template Pairs	155
Binding a vNIC to a vNIC Template	156
Unbinding a vNIC from a vNIC Template	156
Deleting a vNIC Template	157
Configuring Adapter Policies	157
Ethernet and Fibre Channel Adapter Policies	157
Accelerated Receive Flow Steering	160
Interrupt Coalescing	161
Adaptive Interrupt Coalescing	161
PTP Adapter Policy	162
RDMA Over Converged Ethernet Overview	162

Guidelines for Using SMB Direct support on Windows using RDMA over converged Ethernet (RoCE) v2	163
Guidelines for using NVMe over Fabrics (NVMeoF) with RoCEv2 on Linux	164
Guidelines for using RoCEv2 Protocol in the Native ENIC driver on ESXi	165
GENEVE Offload	166
Creating an Ethernet Adapter Policy	167
Receive Side Scaling (RSS)	173
Receive Side Scaling Version 2 (RSSv2)	173
Configuring an Ethernet Adapter Policy to Enable RSS on Windows Operating Systems	174
Configuring an Ethernet Adapter Policy to Enable eNIC Support for RSS on VMware ESXi	180
Configuring an Ethernet Adapter Policy to Enable eNIC Support for MRQS on Linux Operating Systems	180
Configuring an Ethernet Adapter Policy to Enable Stateless Offloads with NVGRE	181
Configuring an Ethernet Adapter Policy to Enable Stateless Offloads with VXLAN	182
Deleting an Ethernet Adapter Policy	183
Configuring the Default vNIC Behavior Policy	184
Default vNIC Behavior Policy	184
Configuring a Default vNIC Behavior Policy	184
Configuring LAN Connectivity Policies	185
About the LAN and SAN Connectivity Policies	185
Privileges Required for LAN and SAN Connectivity Policies	185
Interactions between Service Profiles and Connectivity Policies	185
Creating a LAN Connectivity Policy	186
Deleting a LAN Connectivity Policy	188
Creating a vNIC for a LAN Connectivity Policy	188
Deleting a vNIC from a LAN Connectivity Policy	189
Creating an iSCSI vNIC for a LAN Connectivity Policy	189
Deleting a vNIC from a LAN Connectivity Policy	191
Configuring SRIOV HPN Connection Policies	191
Single Root I/O Virtualization HPN Connection Policy	191
Creating or Viewing SRIOV HPN Connection Policy Properties	192
Assigning SRIOV HPN Connection Policy to a vNIC	193
Deleting a SRIOV HPN Connection Policy	194
Configuring Network Control Policies	194

Network Control Policy	194
Configuring Link Layer Discovery Protocol for Fabric Interconnect vEthernet Interfaces	195
Creating a Network Control Policy	196
Deleting a Network Control Policy	197
Configuring Multicast Policies	197
Multicast Policy	197
Creating a Multicast Policy	198
Modifying a Multicast Policy	198
Deleting a Multicast Policy	199
Configuring LACP Policies	199
LACP Policy	199
Creating a LACP Policy	199
Modifying a LACP Policy	200
Configuring UDLD Link Policies	200
Understanding UDLD	200
UDLD Configuration Guidelines	202
Creating a Link Profile	202
Creating a UDLD Link Policy	202
Modifying the UDLD System Settings	203
Assigning a Link Profile to a Port Channel Ethernet Interface	203
Assigning a Link Profile to an Uplink Ethernet Interface	203
Assigning a Link Profile to a Port Channel FCoE Interface	204
Assigning a Link Profile to an Uplink FCoE Interface	204
Configuring VMQ and VMMQ Connection Policies	204
VMQ Connection Policy	204
Creating a VMQ Connection Policy	205
Assigning VMQ Setting to a vNIC	208
Enabling VMQ and NVGRE Offloading on the same vNIC	208
VMMQ Connection Policy	209
VMMQ Guidelines	210
Creating a VMMQ Connection Policy	210
Creating a QoS Policy for VMMQ	214
Assigning a VMMQ Setting to a vNIC	214
NetQueue	216

Information About NetQueue 216

Configuring NetQueue 216





## Preface

---

- [Audience, on page xv](#)
- [Conventions, on page xv](#)
- [Related Cisco UCS Documentation, on page xvii](#)
- [Documentation Feedback, on page xvii](#)

## Audience

This guide is intended primarily for data center administrators with responsibilities and expertise in one or more of the following:

- Server administration
- Storage administration
- Network administration
- Network security

## Conventions

Text Type	Indication
GUI elements	GUI elements such as tab titles, area names, and field labels appear in <b>this font</b> . Main titles such as window, dialog box, and wizard titles appear in <b>this font</b> .
Document titles	Document titles appear in <i>this font</i> .
TUI elements	In a Text-based User Interface, text the system displays appears in <code>this font</code> .
System output	Terminal sessions and information that the system displays appear in <code>this font</code> .
CLI commands	CLI command keywords appear in <b>this font</b> . Variables in a CLI command appear in <i>this font</i> .
[ ]	Elements in square brackets are optional.

Text Type	Indication
{x   y   z}	Required alternative keywords are grouped in braces and separated by vertical bars.
[x   y   z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<>	Nonprinting characters such as passwords are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.




---

**Note** Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the document.

---




---

**Tip** Means *the following information will help you solve a problem*. The tips information might not be troubleshooting or even an action, but could be useful information, similar to a Timesaver.

---




---

**Timesaver** Means *the described action saves time*. You can save time by performing the action described in the paragraph.

---




---

**Caution** Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.

---




---

**Warning** IMPORTANT SAFETY INSTRUCTIONS

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device.

SAVE THESE INSTRUCTIONS

---



## Related Cisco UCS Documentation

### Documentation Roadmaps

For a complete list of all B-Series documentation, see the *Cisco UCS B-Series Servers Documentation Roadmap* available at the following URL: [https://www.cisco.com/c/en/us/td/docs/unified\\_computing/ucs/overview/guide/UCS\\_roadmap.html](https://www.cisco.com/c/en/us/td/docs/unified_computing/ucs/overview/guide/UCS_roadmap.html)

For a complete list of all C-Series documentation, see the *Cisco UCS C-Series Servers Documentation Roadmap* available at the following URL: [https://www.cisco.com/c/en/us/td/docs/unified\\_computing/ucs/overview/guide/ucs\\_rack\\_roadmap.html](https://www.cisco.com/c/en/us/td/docs/unified_computing/ucs/overview/guide/ucs_rack_roadmap.html).

For information on supported firmware versions and supported UCS Manager versions for the rack servers that are integrated with the UCS Manager for management, refer to [Release Bundle Contents for Cisco UCS Software](#).

## Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to [ucs-docfeedback@external.cisco.com](mailto:ucs-docfeedback@external.cisco.com). We appreciate your feedback.





# CHAPTER 1

## New and Changed Information

- [New and Changed Information](#), on page 1

### New and Changed Information

This section provides information on new features and changed behavior in Cisco UCS Manager, Release 4.3.

**Table 1: New Features and Changed Behavior in Cisco UCS Manager, 4.3(2c)**

Feature	Description	Where Documented
Support Cisco UCS X-Series Server	Cisco UCS Manager supports Cisco UCS X410c M7 Compute Node.  Cisco UCS X-Series servers support Intelligent Fabric Modules (IFM), which function similarly to the Input/Output Module (IOM) in Cisco UCS B-Series servers.	—
Support for Cisco UCS VIC cards	Cisco UCS Manager supports the following Cisco UCS VIC cards: <ul style="list-style-type: none"><li>• Cisco UCS VIC 15427</li><li>• Cisco UCS VIC 15237 MLOM</li><li>• Cisco UCS VIC 15230</li></ul>	—

Table 2: New Features and Changed Behavior in Cisco UCS Manager, 4.3(2b)

Feature	Description	Where Documented
Support Cisco UCS C-Series M7 servers	Cisco UCS Manager supports the following C-Series M7 servers: <ul style="list-style-type: none"> <li>• Cisco UCS C220 M7 Server</li> <li>• Cisco UCS C240 M7 Server</li> </ul>	—
Support Cisco UCS X-Series chassis and servers	Cisco UCS Manager supports Cisco UCS X9508 server chassis with the following Cisco UCS X-Series servers: <ul style="list-style-type: none"> <li>• Cisco UCS X210c M6 Compute Node</li> <li>• Cisco UCS X210c M7 Compute Node</li> </ul> Cisco UCS X-Series servers support Intelligent Fabric Modules (IFM), which function similarly to the Input/Output Module (IOM) in Cisco UCS B-Series servers.	—
Support for Receive Side Scaling Version 2	Cisco UCS Manager introduces support for Receive Side Scaling Version 2	<ul style="list-style-type: none"> <li>• <a href="#">Receive Side Scaling Version 2 (RSSv2)</a>, on page 173</li> <li>• <a href="#">Configuring an Ethernet Adapter Policy to Enable RSS on Windows Operating Systems</a>, on page 174</li> </ul>

Feature	Description	Where Documented
Support for VIC QinQ Tunneling	Cisco UCS Manager introduces support for VIC QinQ Tunneling.	<ul style="list-style-type: none"> <li>• <a href="#">VIC QinQ Tunneling</a>, on page 119</li> <li>• <a href="#">Enabling QinQ on a vNIC in a LAN Connectivity Policy</a>, on page 119</li> <li>• <a href="#">Enabling QinQ on a vNIC of a Service Profile</a>, on page 120</li> <li>• <a href="#">Viewing QinQ VLAN</a>, on page 121</li> <li>• <a href="#">Creating a vNIC Template</a>, on page 150</li> <li>• <a href="#">VIC QinQ Tunneling - Supported Combinations and Limitations</a>, on page 121</li> </ul>
Support for SR-IOV	Cisco UCS Manager provides Single Root I/O Virtualization High Performance Networking (SRIOV-HPN) Connection Policy support.	<ul style="list-style-type: none"> <li>• <a href="#">Single Root I/O Virtualization HPN Connection Policy</a>, on page 191</li> <li>• <a href="#">Creating or Viewing SRIOV HPN Connection Policy Properties</a>, on page 192</li> <li>• <a href="#">Assigning SRIOV HPN Connection Policy to a vNIC</a>, on page 193</li> <li>• <a href="#">Deleting a SRIOV HPN Connection Policy</a>, on page 194</li> </ul>
Deprecated support for Cisco UCS B-Series and C-Series M4 servers.	Cisco UCS Manager deprecates support for Cisco UCS B-Series and C-Series M4 servers.	—
Deprecated support for Cisco UCS 6200 series Fabric Interconnect.	Cisco UCS Manager deprecates support for Cisco UCS 6200 series Fabric Interconnects.	—





## CHAPTER 2

# Overview

---

- [Overview, on page 5](#)
- [Cisco UCS Manager User Documentation, on page 5](#)

## Overview

This guide includes the following information:

- Configure/Enable Server Ports; Configure/Enable Uplink Ports; Configure/Enable FC Ports.
- Create LAN Pin Groups
- Create VLANs and VLAN groups
- Create Server Links
- Configure QoS System Class
- Configure Global Policies
- Monitor Network Health
- Traffic Monitoring

## Cisco UCS Manager User Documentation

Cisco UCS Manager offers you a new set of smaller, use-case based documentation described in the following table:

Guide	Description
<a href="#">Cisco UCS Manager Getting Started Guide</a>	Discusses Cisco UCS architecture and Day 0 operations, including Cisco UCS Manager initial configuration and configuration best practices.

Guide	Description
<a href="#">Cisco UCS Manager Administration Guide</a>	Discusses password management, role-based access configuration, remote authentication, communication services, CIMC session management, organizations, backup and restore, scheduling options, BIOS tokens, and deferred deployments.
<a href="#">Cisco UCS Manager Infrastructure Management Guide</a>	Discusses physical and virtual infrastructure components used and managed by Cisco UCS Manager.
<a href="#">Cisco UCS Manager Firmware Management Guide</a>	Discusses downloading and managing firmware, upgrading through Auto Install, upgrading through service profiles, directly upgrading at endpoints using firmware auto sync, managing the capability catalog, deployment scenarios, and troubleshooting.
<a href="#">Cisco UCS Manager Server Management Guide</a>	Discusses the new licenses, registering Cisco UCS domain with Cisco UCS Central, power capping, server boot, server profiles, and server-related policies.
<a href="#">Cisco UCS Manager Storage Management Guide</a>	Discusses all aspects of storage management, such as SAN and VSAN in Cisco UCS Manager.
<a href="#">Cisco UCS Manager Network Management Guide</a>	Discusses all aspects of network management, such as LAN and VLAN connectivity in Cisco UCS Manager.
<a href="#">Cisco UCS Manager System Monitoring Guide</a>	Discusses all aspects of system and health monitoring, including system statistics in Cisco UCS Manager.
<a href="#">Cisco UCS S3260 Server Integration with Cisco UCS Manager</a>	Discusses all aspects of management of UCS S-Series servers that are managed through Cisco UCS Manager.





## CHAPTER 3

# LAN Connectivity

---

- [Fabric Interconnect Overview, on page 7](#)
- [Uplink Connectivity, on page 7](#)
- [Downlink Connectivity, on page 8](#)
- [Configuring the Fabric Interconnects, on page 8](#)
- [Fabric Evacuation, on page 10](#)
- [Fabric Interconnect Switching Modes, on page 12](#)
- [Fabric Interconnect Port Types, on page 17](#)
- [vNICs, on page 17](#)

## Fabric Interconnect Overview

The fabric interconnect is the core component of Cisco UCS. The Cisco UCS Fabric Interconnects provide uplink access to LAN, SAN, and out-of-band management segment. Cisco UCS infrastructure management is through the embedded management software, Cisco UCS Manager, for both hardware and software management. The Cisco UCS Fabric Interconnects are Top-of-Rack devices, and provide unified access to the Cisco UCS domain.

The Cisco UCS FIs provide network connectivity and management for the connected servers. The Cisco UCS Fabric Interconnects run the Cisco UCS Manager control software and consist of expansion modules for the Cisco UCS Manager software.

For more information about Cisco UCS Fabric Interconnects, see the *Cisco UCS Manager Getting Started Guide*.

## Uplink Connectivity

Use fabric interconnect ports configured as uplink ports to connect to uplink upstream network switches. Connect these uplink ports to upstream switch ports as individual links, or as links configured as port channels. Port channel configurations provide bandwidth aggregation as well as link redundancy.

You can achieve northbound connectivity from the fabric interconnect through a standard uplink, a port channel, or a virtual port channel configuration. The port channel name and ID configured on fabric interconnect should match the name and ID configuration on the upstream Ethernet switch.

It is also possible to configure a port channel as a vPC, where port channel uplink ports from a fabric interconnect are connected to different upstream switches. After all uplink ports are configured, create a port channel for these ports.

## Downlink Connectivity

Beginning with release 4.3(2a), Cisco UCS Manager supports Cisco UCS X9508 server chassis with Cisco UCS X-Series servers. Cisco UCS X-Series servers support Intelligent Fabric Modules (IFM), which function similarly to the Input/Output Module (IOM) in Cisco UCS B-Series servers. This guide uses the term IOM to refer both IOM and IFM.

Each fabric interconnect is connected to IOMs in the UCS chassis, which provides connectivity to each blade server. Internal connectivity from blade servers to IOMs is transparently provided by Cisco UCS Manager using 10BASE-KR Ethernet standard for backplane implementations, and no additional configuration is required. You must configure the connectivity between the fabric interconnect server ports and IOMs. Each IOM, when connected with the fabric interconnect server port, behaves as a line card to fabric interconnect, hence IOMs should never be cross-connected to the fabric interconnect. Each IOM is connected directly to a single fabric interconnect.

The Fabric Extender (also referred to as the IOM, or FEX) logically extends the fabric interconnects to the blade server. The best analogy is to think of it as a remote line card that's embedded in the blade server chassis, allowing connectivity to the external world. IOM settings are pushed via Cisco UCS Manager and are not managed directly. The primary functions of this module are to facilitate blade server I/O connectivity (internal and external), multiplex all I/O traffic up to the fabric interconnects, and help monitor and manage the Cisco UCS infrastructure.

Configure Fabric interconnect ports that should be connected to downlink IOM cards as server ports. Make sure there is physical connectivity between the fabric interconnect and IOMs. You must also configure the IOM ports and the global chassis discovery policy.



---

**Note** For UCS 2200 I/O modules, you can also select the Port Channel option and all I/O module-connected server ports will be automatically added to a port channel.

---

## Configuring the Fabric Interconnects

### Fabric Interconnect Information Policy

Fabric Interconnect Information Policy enables you to display the uplink switches that are connected to fabric interconnect.



---

**Important** You must enable the information policy on the fabric interconnect to view the details of SAN, LAN, and LLDP neighbours of the fabric interconnect.

---

## Configuring the Information Policy on the Fabric Interconnect

### Procedure

---

- Step 1** Navigate to **Equipment** > **Policies** > **Global Policies**
- Step 2** In the **Info Policy** group, choose one of the following:
- **Disabled**: Click to disable the information policy on the fabric interconnect. This is the default option.
  - **Enabled**: Click to enable the information policy on the fabric interconnect.
- Step 3** Click **Save Changes**.
- 

## Installing Secure FPGA

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** In the **Actions** area of the **General** tab, click **Install Secure FPGA**.
- Step 5** In the dialog box, click **OK**.

**Warning** This procedure will upgrade the FPGA and automatically reboot the system after completion of the FPGA upgrade. Kindly refrain from reloading or power-cycling the system during the upgrade, as the manual reboot will result in failure of Fabric Interconnect.

Cisco UCS Manager restarts the fabric interconnect, logs you out, and disconnects Cisco UCS Manager GUI on choosing **Yes** in the warning message.

---

## Viewing the LAN Neighbors of a Fabric Interconnect

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** In the **Equipment** tab, expand **Equipment** > **Fabric Interconnects**.
- Step 3** Click the fabric interconnect for which you want to view the LAN neighbors.
- Step 4** In the **Work** pane, click the **Neighbors** tab.
- Step 5** Click the **LAN** subtab.

This subtab lists all the LAN neighbors of the specified Fabric Interconnect.

---

## Viewing the SAN Neighbors of a Fabric Interconnect

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** In the **Equipment** tab, expand **Equipment > Fabric Interconnects**.
- Step 3** Click the fabric interconnect for which you want to view the SAN neighbors.
- Step 4** In the **Work** pane, click the **Neighbors** tab.
- Step 5** Click the **SAN** subtab.

This subtab lists all the SAN neighbors of the specified Fabric Interconnect.

---

## Viewing the LLDP Neighbors of a Fabric Interconnect

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment > Fabric Interconnects**.
- Step 3** Click the fabric interconnect for which you want to view the LLDP neighbors.
- Step 4** In the **Work** pane, click the **Neighbors** tab.
- Step 5** Click the **LLDP** subtab.

This subtab lists all the LLDP neighbors of the specified Fabric Interconnect.

---

## Fabric Evacuation

Cisco UCS Manager introduces fabric evacuation, which is the ability to evacuate all traffic that flows through a fabric interconnect from all servers attached to it through an IOM or FEX while upgrading a system. Fabric evacuation is not supported on direct-attached rack servers.

Upgrading the secondary fabric interconnect in a system disrupts active traffic on the fabric interconnect. This traffic fails over to the primary fabric interconnect. You can use fabric evacuation during the upgrade process as follows:

1. Stop all the traffic that is active through a fabric interconnect.

2. For vNICs configured with failover, verify that the traffic has failed over by using Cisco UCS Manager, or tools such as vCenter.
3. Upgrade the secondary fabric interconnect.
4. Restart all the stopped traffic flows.
5. Change the cluster lead to the secondary fabric interconnect.
6. Repeat steps 1 to 4 and upgrade the primary fabric interconnect.

**Note**

- Fabric interconnect traffic evacuation is supported only in a cluster configuration.
- You can evacuate traffic only from the subordinate fabric interconnect.
- The IOM or FEX backplane ports of the fabric interconnect on which evacuation is configured will go down, and their state will appear as **Admin down**. During the manual upgrade process, to move these backplane ports back to the Up state and resume traffic flow, you must explicitly configure **Admin Evac Mode** as **Off**.
- Starting with Cisco UCS Manager Release 3.1(3), you can use fabric evacuation during Auto Install.
- If you use fabric evacuation outside of the upgrade process, you must re-acknowledge the FEX to get the VIFs back to the online state.

## Configuring Fabric Evacuation

### Procedure

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** In the **Actions** area of the **General** tab, click **Configure Evacuation**.  
The Configure Evacuation dialog box appears.
- Step 5** To configure fabric evacuation on the specified Fabric Interconnect, click one of the following radio buttons in the **Admin Evac Mode** field:
  - **On**—Stops all the traffic that is active through the specified Fabric Interconnect.
  - **Off**—Restarts traffic through the specified Fabric Interconnect.
- Step 6** (Optional) To evacuate a Fabric Interconnect irrespective of its current evacuation state, check the **Force** check box.
- Step 7** Click **Apply**.  
A warning dialog box appears.
 

```
Enabling fabric evacuation will stop all traffic through this Fabric Interconnect from
servers attached through IOM/FEX.
The traffic will fail over to the Primary Fabric Interconnect for fail over vnics.
Are you sure you want to continue?
```

**Step 8** Click **OK** to confirm fabric evacuation and continue.

---

## Displaying the Status of Fabric Evacuation on a Fabric Interconnect

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** The Status area displays
- 

## Fabric Interconnect Switching Modes

The Cisco UCS Fabric Interconnects operate in two main switching modes: Ethernet or Fibre Channel. These modes are independent of each other. They determine how the fabric interconnect behaves as a device between the server and network/server and storage device.

### Ethernet Switching Mode

The Ethernet switching mode determines how the fabric interconnect behaves as a switching device between the servers and the network. The fabric interconnect operates in either of the following Ethernet switching modes:

#### End-Host Mode

End-host mode allows the fabric interconnect to act as an end host to the network, representing all servers (hosts) connected to it through vNICs. This behavior is achieved by pinning (either dynamically pinning or hard pinning) vNICs to uplink ports, which provides redundancy to the network, and makes the uplink ports appear as server ports to the rest of the fabric.

In end-host mode, the fabric interconnect does not run the Spanning Tree Protocol (STP), but it avoids loops by denying uplink ports from forwarding traffic to each other and by denying egress server traffic on more than one uplink port at a time. End-host mode is the default Ethernet switching mode and should be used if either of the following is used upstream:

- Layer 2 switching for Layer 2 aggregation
- Virtual Switching System (VSS) aggregation layer



---

**Note** When you enable end-host mode, if a vNIC is hard pinned to an uplink port and this uplink port goes down, the system cannot repin the vNIC, and the vNIC remains down.

---

### Switch Mode

Switch mode is the traditional Ethernet switching mode. The fabric interconnect runs STP to avoid loops, and broadcast and multicast packets are handled in the traditional way. Use the switch mode only if the fabric interconnect is directly connected to a router, or if either of the following is used upstream:

- Layer 3 aggregation
- VLAN in a box



---

**Note** For both Ethernet switching modes, even when vNICs are hard-pinned to uplink ports, all server-to-server unicast traffic in the server array is sent only through the fabric interconnect and is never sent through uplink ports. Server-to-server multicast and broadcast traffic is sent through all uplink ports in the same VLAN.

---

### Cisco UCS Fabric Interconnect in Switch Mode with Cisco MDS 9000 Family Fibre Channel Switching Modules

While creating a port channel between a Cisco MDS 9000 family FC switching module and a Cisco UCS Fabric Interconnect in switch mode, use the following order:

1. Create the port channel on the MDS side.
2. Add the port channel member ports.
3. Create the port channel on the Fabric Interconnect side.
4. Add the port channel member ports.

If you create the port channel on the Fabric Interconnect side first, the ports will go into a suspended state.

When the Cisco UCS Fabric Interconnect is in switch mode, the port channel mode can only be in **ON** mode and not **Active**. However, to get the peer wwn information for the Fabric Interconnect, the port channel must be in **Active** mode.

## Configuring Ethernet Switching Mode



---

**Important** When you change the Ethernet switching mode, Cisco UCS Manager logs you out and restarts the fabric interconnect. For a cluster configuration, Cisco UCS Manager restarts both fabric interconnects. The subordinate fabric interconnect reboots first as a result of the change in switching mode. The primary fabric interconnect reboots only after you acknowledge it in **Pending Activities**. The primary fabric interconnect can take several minutes to complete the change in Ethernet switching mode and become system ready. The existing configuration is retained.

While the fabric interconnects are rebooting, all blade servers lose LAN and SAN connectivity, causing a complete outage of all services on the blades. This might cause the operating system to fail.

---

### Procedure

---

**Step 1** In the **Navigation** pane, click **Equipment**.

**Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.

**Step 3** In the **Work** pane, click the **General** tab.

**Step 4** In the **Actions** area of the **General** tab, click one of the following links:

- **Set Ethernet Switching Mode**
- **Set Ethernet End-Host Mode**

The link for the current mode is dimmed.

**Step 5** In the dialog box, click **Yes**.

Cisco UCS Manager restarts the fabric interconnect, logs you out, and disconnects Cisco UCS Manager GUI.

---

## Fibre Channel Switching Mode

The Fibre Channel switching mode determines how the fabric interconnect behaves as a switching device between the servers and storage devices. The fabric interconnect operates in either of the following Fibre Channel switching modes:

### End-Host Mode

End-host mode is synonymous with N Port Virtualization (NPV) mode. This mode is the default Fibre Channel Switching mode. End-host mode allows the fabric interconnect to act as an end host to the connected fibre channel networks, representing all servers (hosts) connected to it through virtual host bus adapters (vHBAs). This behavior is achieved by pinning (either dynamically pinning or hard-pinning) vHBAs to Fibre Channel uplink ports, which makes the Fibre Channel ports appear as server ports (N-ports) to the rest of the fabric. When in end-host mode, the fabric interconnect avoids loops by preventing uplink ports from receiving traffic from one another.



---

**Note** When you enable end-host mode, if a vHBA is hard-pinned to an uplink Fibre Channel port and this uplink port goes down, the system cannot repin the vHBA, and the vHBA remains down.

---

### Switch Mode

Switch mode is not the default Fibre Channel switching mode. Switch mode allows the fabric interconnect to connect directly to a storage device. Enabling Fibre Channel switch mode is useful in Pod models where there is no SAN (for example, a single Cisco UCS domain that is connected directly to storage), or where a SAN exists (with an upstream MDS). In Fibre Channel switch mode, SAN pin groups are irrelevant. Any existing SAN pin groups are ignored.



## Configuring Fibre Channel Switching Mode

**Important**

When you change the Fibre Channel switching mode, Cisco UCS Manager logs you out and restarts the fabric interconnect. For a cluster configuration, Cisco UCS Manager restarts both fabric interconnects simultaneously in Cisco UCS Manager Release 3.1(1) and earlier releases. In Cisco UCS Manager Release 3.1(2), when the Fibre Channel switching mode is changed, the UCS fabric interconnects reload sequentially. In Cisco UCS Manager Release 3.1(3), and later releases, the subordinate fabric interconnect reboots first as a result of the change in switching mode. The primary fabric interconnect reboots only after you acknowledge it in **Pending Activities**. The primary fabric interconnect can take several minutes to complete the change in Fibre Channel switching mode and become system ready.

**Note**

When the Fibre Channel switching mode is changed, both UCS fabric interconnects will reload simultaneously. Reloading of fabric interconnects will cause a system-wide downtime lasting approximately 10-15 minutes.

### Procedure

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** In the **Actions** area of the **General** tab, click one of the following links:
  - **Set Fibre Channel Switching Mode**
  - **Set Fibre Channel End-Host Mode**

The link for the current mode is dimmed.

- Step 5** In the dialog box, click **Yes**.  
Cisco UCS Manager restarts the fabric interconnect, logs you out, and disconnects Cisco UCS Manager GUI.

## Changing the Properties of the Fabric Interconnects

**Note**

To change the subnet or network prefix for a Cisco UCS domain, you must simultaneously change all subnets or prefixes, the virtual IPv4 or IPv6 address used to access Cisco UCS Manager, and the IPv4 or IPv6 addresses for both fabric interconnects.

Both fabric interconnects must maintain the same management address type, either IPv4 or IPv6. You cannot change the management address type for Fabric A without changing the management address type for Fabric B.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Admin**.
- Step 2** Expand **Admin > All**.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** In the **Actions** area, click **Management Interfaces** to open the **Management Interfaces** dialog box.
- Step 5** In the **Management Interfaces** dialog box, modify the values as necessary.
- Step 6** To change only the virtual IP address that you use to access Cisco UCS Manager, enter the desired IP address in either the **IPv4 Address** or the **IPv6 Address** field in the **Virtual IP** area.
- Step 7** To change only the name assigned to the Cisco UCS domain, enter the desired name in the **Name** field in the **Virtual IP** area.
- Step 8** To change the subnet and IPv4 address, or the network prefix and IPv6 address, and default gateway assigned to the fabric interconnects, update the following fields:
- In the **Virtual IP** area, change the IP address used to access Cisco UCS Manager in the **IPv4 Address** or **IPv6 Address** field.
  - In the **Fabric Interconnect** area for each fabric interconnect, click either the IPv4 or IPv6 tab.
  - On the IPv4 tab, update the IP address, subnet mask, and default gateway.
  - On the IPv6 tab, update the IP address, prefix, and default gateway.
- Step 9** Click **OK**.
- Step 10** Log out of Cisco UCS Manager GUI and log back in again to see your changes.
- 

## Determining the Primary Fabric Interconnect



**Important** If the admin password is lost, you can determine the primary and secondary roles of the fabric interconnects in a cluster by opening the Cisco UCS Manager GUI from the IP addresses of both fabric interconnects. The subordinate fabric interconnect fails with the following message:

```
UCSM GUI is not available on secondary node.
```

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment > Fabric Interconnects**.
- Step 3** Click the fabric interconnect for which you want to identify the role.
- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** In the **General** tab, click the down arrows on the **High Availability Details** bar to expand that area.
- Step 6** View the **Leadership** field to determine whether the fabric interconnect is primary or subordinate.
-

# Fabric Interconnect Port Types

By default, all fabric interconnect ports are unconfigured. For Ethernet LAN connectivity, fabric interconnect ports can be in the following states:

- **Unconfigured**—Port is not configured and cannot be used.
- **Server Port**—Port is configured for downlink connection to an IOM Fabric Extender (FEX) module in a blade chassis.
- **Uplink Port**—Port is configured for uplink connection to the upstream Ethernet switch. Uplink ports are always configured as trunk ports.
- **Disabled**—Port is configured either as an uplink or server port and is currently disabled by the administrator.

For 6300 series fabric interconnects, see the *UCS Manager Getting Started Guide*.

For Cisco UCS 6454 and 64108 Fabric Interconnects, ports 1 to 16 are unified ports. These ports can be configured as either Ethernet or FC ports. The *UCS Manager Getting Started Guide* has detailed information.

For Cisco UCS 6536 Fabric Interconnects, ports 33 to 36 are unified ports. These ports can be configured as either Ethernet or FC ports. The *UCS Manager Getting Started Guide* has detailed information.

## vNICs

Once the connectivity between upstream uplink switches and downstream IOMs is established, we can connect vNICs from blade servers configuring vNICs. We recommend that you create a vNIC template to provide ease of management.

vNICs can be created within server profiles or by using a vNIC template. Using a vNIC template is the recommended method for configuring the NIC settings once, for each template, and then quickly creating new vNICs with the desired configuration. The vNIC configuration settings can be optimized for various operating systems, storage devices, and hypervisors.

A vNIC template can be configured as either of the following:

- **Initiating template:** This vNIC template will provide one-time configuration for the vNICs created using this template. Any subsequent changes to the template are not propagated to abstracted vNICs.
- **Updating template:** This vNIC template will provide initial configuration for the vNICs created using this template. Any subsequent changes to the template will also be propagated to abstracted vNICs. We recommend that you to create an updating vNIC template for production environments.

vNIC MAC addresses can be assigned manually or by configuring a MAC address pool. It is possible to either use the burned-in MAC addresses or abstract MAC addresses from an identity pool with system-defined prefixes. Stateless computing is the salient feature of the Cisco UCS platform. Therefore we recommend to you abstract vNIC MAC addresses for server profiles, and consequently use server vNIC MAC addresses from MAC address identity pools instead of using burned-in NIC MAC addresses. The benefit of abstracting the MAC identity is that in case of physical server failure, the server profile can be easily associated with the replacement server. The new server will acquire all the identities associated with the old server including the vNIC MAC addresses. From the operating system perspective, there is no change at all.

We recommend that you create vNIC templates with different configurations and create individual vNICs from vNIC templates as required. Also, define MAC address pools and assign MAC addresses to individual vNICs using those MAC address pools.

A vNIC is typically abstracted from the physical mezzanine card. Older Emulex, QLogic, and Intel NIC cards have fixed ports. The Cisco mezzanine NIC card, also known as a Palo card or Virtual Interface Card (VIC), provides dynamic server interfaces. Cisco VIC cards provide up to 256 dynamic interfaces. vNICs can be created within server profiles or by using a vNIC template. Using a vNIC template is the recommended method for configuring the NIC settings, doing so once for each template and then quickly creating additional vNICs with the desired configurations. The vNIC configuration settings can be optimized for various operating systems, storage devices, and hypervisors.

The vNIC creation for servers is part of the server profile, or server profile template creation. Once **Create Service Profile Template** or **Service Profile (Expert)** is started for the blade servers, creating the vNIC is the second step in the configuration wizard.



## CHAPTER 4

# LAN Ports and Port Channels

---

- [Port Modes, on page 20](#)
- [Port Types, on page 20](#)
- [Default Open Ports, on page 21](#)
- [TCP and UDP Ports, on page 22](#)
- [Breakout Ethernet Ports, on page 24](#)
- [Unified Ports, on page 41](#)
- [Changing Port Modes, on page 44](#)
- [Server Ports, on page 51](#)
- [Modifying the Properties of a Server Port, on page 53](#)
- [Configuring a Server Port for Forward Error Correction, on page 53](#)
- [Uplink Ethernet Ports, on page 54](#)
- [Q-in-Q Forwarding, on page 57](#)
- [Configuring Q-in-Q Forwarding, on page 57](#)
- [Unconfiguring Q-in-Q Forwarding, on page 57](#)
- [Appliance Ports, on page 58](#)
- [FCoE and Fibre Channel Storage Ports, on page 61](#)
- [Converting FC Storage Port to FC Uplink Port, on page 63](#)
- [Configuring FCoE Uplink for Forward Error Correction, on page 64](#)
- [FCoE Uplink Ports, on page 65](#)
- [Unified Storage Ports, on page 66](#)
- [Unified Uplink Ports, on page 67](#)
- [Uplink Ethernet Port Channels, on page 69](#)
- [Appliance Port Channels, on page 71](#)
- [Cisco UCS Mini Scalability Ports, on page 73](#)
- [Creating a Threshold Definition, on page 74](#)
- [Policy-Based Port Error Handling, on page 75](#)
- [FCoE Port Channels, on page 76](#)
- [Unified Uplink Port Channel, on page 77](#)
- [Adapter Port Channels, on page 77](#)
- [Fabric Port Channels, on page 78](#)
- [Configuring Server Ports with the Internal Fabric Manager, on page 80](#)

## Port Modes

The port mode determines whether a unified port on the fabric interconnect is configured to carry Ethernet or Fibre Channel traffic. You configure the port mode in Cisco UCS Manager. However, the fabric interconnect does not automatically discover the port mode.

Changing the port mode deletes the existing port configuration and replaces it with a new logical port. Any objects associated with that port configuration, such as VLANs and VSANS, are also removed. There is no restriction on the number of times you can change the port mode for a unified port.

## Port Types

The port type defines the type of traffic carried over a unified port connection.

By default, unified ports changed to Ethernet port mode are set to the Ethernet uplink port type. Unified ports changed to Fibre Channel port mode are set to the Fibre Channel uplink port type. You cannot unconfigure Fibre Channel ports.

Changing the port type does not require a reboot.

### Ethernet Port Mode

When you set the port mode to Ethernet, you can configure the following port types:

- Server ports
- Ethernet uplink ports
- Ethernet port channel members
- FCoE ports
- Appliance ports
- Appliance port channel members
- SPAN destination ports
- SPAN source ports



---

**Note** For SPAN source ports, configure one of the port types and then configure the port as SPAN source.

---

### Fibre Channel Port Mode

When you set the port mode to Fibre Channel, you can configure the following port types:

- Fibre Channel uplink ports
- Fibre Channel port channel members
- Fibre Channel storage ports
- SPAN source ports



**Note** For SPAN source ports, configure one of the port types and then configure the port as SPAN source.

## Default Open Ports

The following table lists the default open ports used in Cisco UCS Manager.

Port	Interface	Protocol	Traffic Type	Fabric Interconnect	Usage
22	CLI	SSH	TCP	UCS 6300 Series UCS 6400 Series UCS 6500 Series	Cisco UCS Manager CLI access
80	XML	HTTP	TCP	UCS 6300 Series UCS 6400 Series UCS 6500 Series	Cisco UCS Manager GUI and third party management stations. Client download
443	XML	HTTP	TCP	UCS 6300 Series UCS 6400 Series UCS 6500 Series	Cisco UCS Manager login page access Cisco UCS Manager XML API access
743	KVM	HTTP	TCP	UCS 6300 Series UCS 6400 Series	CIMC Web Service / Direct KVM
7546	CFS	CFSD	TCP	UCS 6400 Series UCS 6500 Series	Cisco Fabric Service

# TCP and UDP Ports

The tables below list the incoming and outgoing TCP and UDP ports used in Cisco UCS for management access.

**Table 3: Incoming ports**

Port	Interface	Protocol	Traffic type	Usage
23	CLI	Telnet	TCP	Cisco UCS Manager CLI access
22	CLI	SSH	TCP	Cisco UCS Manager CLI access
443	Static HTML	HTTPS	TCP	Cisco UCS Manager login page access
80	Static HTML	HTTP	TCP	Client download
443	XML	HTTPS	TCP	Cisco UCS Manager XML API access
80	XML	HTTP	TCP	Ports used by Cisco UCS Manager GUI and third party management stations.
23	Serial-over-LAN	Telnet	TCP	COM1 port access on a specified server
22	Serial-over-LAN	SSH	TCP	COM1 port access on a specified server
161	SNMP	SNMP	UDP	SNMP MIBs exposed for monitoring
623	IPMI-over-LAN	RMCP	UDP	IPMI access to BMCs
2068	KVM	HTTPS	TCP	Data path for the BMCs
5988	CIMC XML	HTTP	TCP	Send CIMC messages over HTTP
743	KVM	HTTP	TCP	CIMC Web Service / Direct KVM
5661		HTTPD	TCP	Internal communication This port is applicable only to UCS 6400 Series Fabric Interconnects. It is disabled in Cisco UCS Manager Release 4.0(4f) and later releases.
7162		HTTPD	TCP	Internal communication This port is applicable only to UCS 6400 Series Fabric Interconnects. It is disabled in Cisco UCS Manager Release 4.0(4g) and later releases.



Port	Interface	Protocol	Traffic type	Usage
7546	CFS	CFSD	TCP	Cisco Fabric Service This port is applicable only to UCS 6400 Series Fabric Interconnects.

Table 4: Outgoing ports

Port	Service	Protocol	Traffic type	Usage
1812	AAA	RADIUS	UDP	AAA server authentication requests
1813	AAA	RADIUS	UDP	AAA server authentication requests
49	AAA	TACACS	TCP	AAA server authentication requests
389	AAA	LDAP	UDP	
123	Time Sync	NTP	UDP	Synchronize the time with global time servers
162	SNMP Traps	SNMP	UDP	Send traps to a remote network management system.
25	Call Home	SMTP	TCP	Email-based and web-based notifications for critical system events
514	Syslog	SYSLOG	UDP	Cisco UCS Manager generated Syslog messages
53	Name resolution	DNS	UDP	DNS queries
69	TFTP	TFTP	UDP	File transfers
115	SFTP	SFTP	TCP	File transfers
20-21	FTP	FTP	TCP	File transfers
21	SCP	SCP	TCP	File transfers

# Breakout Ethernet Ports

## Port Breakout Functionality on Cisco UCS 6536 Fabric Interconnects

The Cisco UCS 6536 36-Port Fabric Interconnect is a One-Rack-Unit (1RU) 1/10/25/40/100 Gigabit Ethernet, FCoE, and Fibre Channel switch offering up to 7.42 Tbps throughput and up to 36 ports.

Cisco UCS 6536 Fabric Interconnect supports splitting a single 40 Gigabit(G)/100G Quad Small Form-factor Pluggable (QSFP) port into four 10G/25G ports using a supported breakout cable. The switch has 32 40/100-Gbps Ethernet ports and four unified ports that can support 40/100-Gbps Ethernet ports or 16 Fiber Channel (FC) ports after breakout at 8/16/32-Gbps FC speeds. The 16 FC ports after breakout can operate as an FC Uplink or FC storage port. The switch also supports two ports (Port 9 and Port 10) at 1-Gbps speed using QSA, and all 36 ports can breakout for 10 or 25 Gbps Ethernet connectivity. All Ethernet ports can support FCoE.

Port breakout is supported for Ethernet ports (1-32) and Unified ports (33-36). These 40/100G ports are numbered in a 2-tuple naming convention. The process of changing the configuration from 40G to 10G, or from 100G to 25G is called breakout, and the process of changing the configuration from [4X]10G to 40G or from [4X]25G to 100G is called unconfigure.

When you break out a 40G port into 10G ports or a 100G port into 25G ports, the resulting ports are numbered using a 3-tuple naming convention. For example, the breakout ports of the second 40-Gigabit Ethernet port are numbered as 1/31/1, 1/31/2, 1/31/3, and 1/31/4.

FC breakout is supported on ports 36 through 33 when each port is configured with a four-port breakout cable. For example: Four FC breakout ports on the physical port 33 are numbered as 1/33/1, 1/33/2, 1/33/3, and 1/33/4.



**Note** Fibre Channel support is only available through the configuration of the Unified Ports (36-33) as Fibre Channel breakout port.


The following image shows the rear view of the Cisco UCS 6536 fabric interconnect:

**Figure 1: Cisco UCS 6536 Fabric Interconnect Rear View**



The following image shows the rear view of the Cisco UCS 6536 fabric interconnect that include Ports and LEDs:

Figure 2: Cisco UCS 6536 Fabric Interconnect Rear View

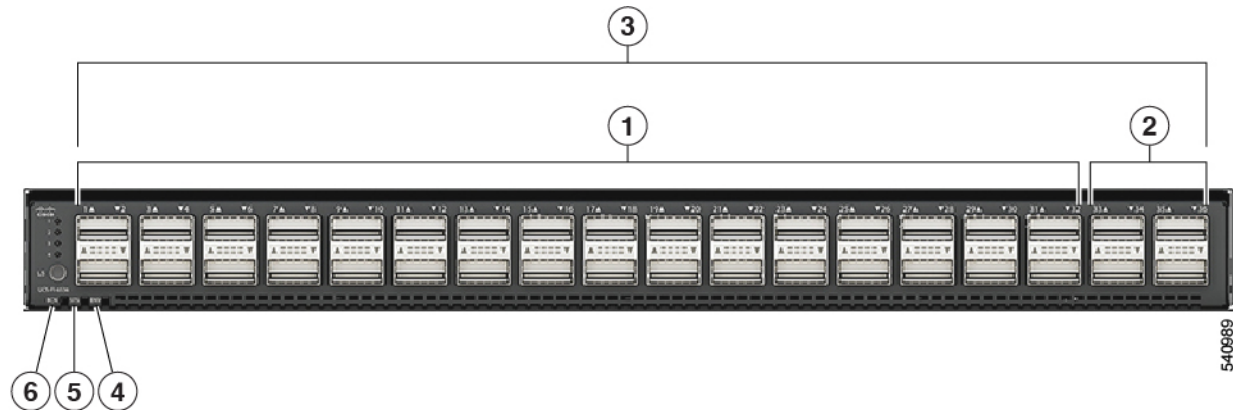

1	<p>Ports 1-32.</p> <p>Uplink ports are Ethernet port that can operate with the port speed of 10 Gbps/25 Gbps/40 Gbps/100 Gbps.</p> <p>When using a breakout cable, each of these ports can operate as: 4 x 10 Gbps/4x 25 Gbps/1 x 40 Gbps/1 x 100 Gbps Ethernet or FCoE ports.</p>	2	<p>Ports 33-36.</p> <p>Unified Ports can operate with port speed of 10 Gbps/25 Gbps/ 40 Gbps/100 Gbps Ethernet.</p> <p>or</p> <p>8 Gbps/16 Gbps/32 Gbps Fibre Channel (FC).</p> <p>When using a breakout cable, each of these ports can operate as 4 x 10 Gbps/4 x 25 Gbps Ethernet or 4x8Gbps/4x16Gbps/4x32Gbps FC ports.</p>
3	<p>Ports 1-36.</p> <p>Uplink ports and Unified ports that can be configured as Ethernet Breakout Port and can operate with the port speed of 10 Gbps/25 Gbps/40 Gbps/100 Gbps.</p> <p>When using a breakout cable, each of these ports can operate as: 4 x 10 Gbps/4x 25 Gbps/1 x 40 Gbps/1 x 100 Gbps Ethernet or FCoE ports.</p>	4	System environment (fan fault) LED
5	System status (STS) LED	6	Beacon (BCN) LED

### Breakout Port Guidelines

The following are the guidelines for breakout functionality for Cisco UCS 6536 Fabric Interconnects:

- The configurable breakout ports are from port 1-36.
- You can configure the speed for each breakout port. Each breakout port can be configured at the speed of 4 x 8 Gbps/ 4 x 16 Gbps/ 4 x 32 Gbps for Fibre Channel.

- For Fibre Channel breakout, each breakout port can be configured at the speed of 4 x 8 Gbps/ 4 x 16 Gbps/ 4 x 32 Gbps.
- For Ethernet breakout, each breakout port can be configured at the speed of 4 x 10 Gbps/4 x 25 Gbps.
- Fibre Channel breakout ports are supported, and Fiber Channel direct ports are not supported.
- FC breakout port can be configured from 1/36 through 1/33. FC breakout ports (36-33) cannot be configured unless the previous ports are FC breakout ports. Configuration of a single (individual) FC breakout port is also supported.
- If the breakout mode for any of the supported Fabric Interconnect ports (1-36) is an Ethernet breakout, the Fabric Interconnect does not lead to a reboot.
- If the breakout mode for any of the supported Fabric Interconnect ports (36-33) is a Fibre Channel uplink breakout, the Fabric Interconnect leads to a reboot.
- Breakout ports are supported as destinations for traffic monitoring.
- Ports 1-36 can be configured as Server Port, FCoE Uplink Port, Appliance Port, and Monitor Port.
- Port 36-33 can be configured also as FC Uplink Port or FC Storage Port when configured as unified port.

## Configuring Ethernet Breakout Ports on UCS 6536 Fabric Interconnects

### Procedure

- 
- Step 1** On the **Equipment** tab, expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.  
The Fabric Interconnect **General** tab appears, providing at-a-glance status, actions, physical display, properties, and firmware information for the selected fabric interconnect.
- Step 2** View the available port(s) to break out.  
Ensure that the port overall status is up and admin status is available. Do one of the following:
- In the **Work** pane, click the **Physical Ports** tab. The **Ethernet Ports** and **FC Ports** subtabs appear.
  - In the **Work** pane, click the **Physical Display** tab. The Physical Display shows a graphical representation of the base fabric interconnect with a legend to help you identify port admin status.
  - In the **Navigation** pane, expand *Fabric\_Interconnect\_Name* > **Fixed Module** > **Ethernet Ports**. this action displays ports in a tree view.
- Step 3** Select one or more ports that you can break out. On the UCS 6536 fabric interconnect, ports 1 to 36 support breakout. Do one of the following:
- On the **Physical Display**, click a port or Ctrl-click to select multiple ports.
  - On the **Ethernet Ports** tab, click a port or Ctrl-click to select multiple ports.
  - On the **Ethernet Ports** tree view, click a port or Ctrl-click to select multiple ports.
- Step 4** Configure the selected port(s) as breakout ports.
- On the **Ethernet Ports** tab, right-click the selected port(s) and choose **Configure 4x10G Breakout Port** or **Configure 4x25G Breakout Port** from the pop-up menu.

- On the **Ethernet Ports** tree view, right-click the selected port(s) and choose **Configure 4x10G Breakout Port** or **Configure 4x25G Breakout Port** from the pop-up menu. You can also select ports in the **Ethernet Ports** tree view and select **Configure Breakout Port** from the **Work** pane **Actions** Area. From the drop-down list, choose whether you want to configure the breakout port as a **4x10G port** or a **4x25G port**.

**Step 5** Click **OK**.

**Step 6** Configure the breakout ports according to your requirements.

Right-click one or more ports and select one of the following options. This table describes the actions that occur when you select the option. If a option is disabled, the port is already configured as such.

Configure Option	Action
<b>Configure as Server Port</b>	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .
<b>Configure as Uplink Port</b>	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .
<b>Configure as FCoE Uplink Port</b>	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .
<b>Configure as FCoE Storage Port</b>	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .
<b>Configure as Appliance Port</b>	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .

**Step 7** The confirmation dialog box displays. Click **Yes**.

**Note** Ethernet breakout port configuration will not lead to Fabric Interconnect reboot.

## Configuring a 10/25G Port with QSA on Cisco UCS FI 6536

When a port on UCS FI 6536 is operating at the default 40/100G port speed, Cisco UCS Manager does not let you choose port speeds of 1G, 10G, or 25G. To use a 40/100G port on UCS FI 6536 as a 10/25 G port with a QSFP+Adapter (QSA) transceiver on the other end, you must configure it in the breakout mode.



**Note** When you try to change port speeds to 10G or 25G, Cisco UCS Manager displays a prompt to configure the port in breakout mode. After you configure a breakout port, you can configure each 10/25G GB sub-port as an uplink, or FCoE uplink port as required.

When you break out the port, use a breakout cable to split a single port into four 10G or 25G ports, and configure the ports in breakout mode, you can use all lanes as 10 G or 25G ports. If you break out the port without a breakout cable, only the first lane becomes usable as a 10G or 25G interface.

## Procedure

---

- Step 1** Configure breakout feature on the port that you want to use as a 10/25G port on the Cisco UCS FI 64108. For more information about configuring the break out feature, see *Configuring Fabric Interconnect Ethernet Breakout Ports*.
- Step 2** In Cisco UCS Manager, the first tuple interface is enabled after the QSA transceiver is plugged into the FI port. You can configure this interface based on your requirements.
- The resulting ports after a break out of the 40/100G port are numbered using a 3-tuple naming convention. For example, the breakout ports of the second 40-Gigabit Ethernet port are numbered as 1/36/1, 1/36/2, 1/36/3, 1/36/4, and only the first port becomes usable as a 10 GB port.
- 

## Port Breakout Functionality on Cisco UCS 64108 Fabric Interconnects

### About Breakout Ports

Cisco UCS 64108 fabric interconnects support splitting a single 40/100G QSFP port into four 10/25G ports using a supported breakout cable. On the UCS 64108 fabric interconnect, by default, there are 12 ports in the 40/100G mode. These are ports 97 to 108. These 40/100G ports are numbered in a 2-tuple naming convention. For example, the second 40G port is numbered as 1/99. The process of changing the configuration from 40G to 10 G, or from 100G to 25G is called breakout, and the process of changing the configuration from [4X]10G to 40G or from [4X]25G to 100G is called unconfigure. These ports can be used as uplink port, appliance port, server port (using FEX), and FCoE storage port.

When you break out a 40G port into 10G ports or a 100G port into 25G ports, the resulting ports are numbered using a 3-tuple naming convention. For example, the breakout ports of the second 40-Gigabit Ethernet port are numbered as 1/99/1, 1/99/2, 1/99/3, 1/99/4.



---


**Note** Cisco UCS Manager does not support connection of FEX, chassis, blade, IOM, or adapters (other than VIC adapters) to the uplink ports of Fabric Interconnect.

---

Starting with Cisco UCS Manager Release 4.2(3b), configuring the Ethernet breakout ports will not lead to Fabric Interconnect reboot.

The following image shows the rear view of the Cisco UCS 64108 fabric interconnect, and includes the ports that support breakout port functionality:

Figure 3: Cisco UCS 64108 Fabric Interconnect Rear View

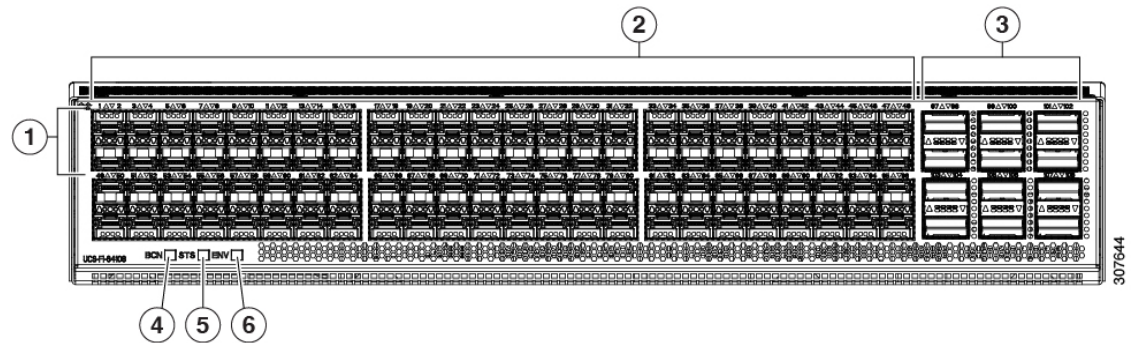

1	Ports 1-16. Unified Ports can operate as 10/25 Gbps Ethernet or 8/16/32 Gbps Fibre Channel. FC ports are converted in groups of four.  Unified ports: <ul style="list-style-type: none"> <li>• 10/25 Gbps Ethernet or FCoE</li> <li>• 8/16/32 Gbps Fibre Channel</li> </ul>	2	Ports 1-96. Each port can operate as either a 10 Gbps or 25 Gbps Ethernet or FCoE SFP28 port.
3	Uplink Ports 97-108. Each port can operate as either a 40 Gbps or 100 Gbps Ethernet or FCoE port. When using a breakout cable, each of these ports can operate as 4 x 10 Gbps or 4 x 25 Gbps Ethernet or FCoE ports.  Ports 97 - 108 can be used to connect to Ethernet or FCoE uplink ports, and not to UCS server ports.	4	Ports 89-96 <ul style="list-style-type: none"> <li>• 10/25 Gbps Ethernet or FCoE</li> <li>• 1 Gbps Ethernet</li> </ul>
5	System environment (fan fault) LED	6	System status LED
7	Beacon LED		

### Breakout Port Guidelines

The following are the guidelines for breakout functionality for Cisco UCS 64108 fabric interconnects:

- The breakout configurable ports are ports 97-108.
- You cannot configure the speed for each breakout port. Each breakout port is in auto mode.
- Breakout ports are not supported as destinations for traffic monitoring.
- Ports 97-108 at 40/100G can be configured as uplink, FCoE, or appliance port. Ports 97-108 after breakout to 10/25G can be configured as uplink, appliance, FCoE, or for direct-connect rack server connectivity.

## Configuring Ethernet Breakout Ports on UCS 64108 Fabric Interconnects

Beginning with Cisco UCS Manager Release 4.2(3i), Ethernet breakout port configuration will not lead to Fabric Interconnect reboot.

After you configure a breakout port, you can configure each 10/25G GB sub-port as an uplink, or FCoE uplink port as required.

### Procedure

- Step 1** On the **Equipment** tab, expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- The Fabric Interconnect **General** tab appears, providing at-a-glance status, actions, physical display, properties, and firmware information for the selected fabric interconnect.
- Step 2** View the available port(s) to break out.
- Ensure that the port overall status is up and admin status is available. Do one of the following:
- In the **Work** pane, click the **Physical Ports** tab. The **Ethernet Ports** and **FC Ports** subtabs appear.
  - In the **Work** pane, click the **Physical Display** tab. The Physical Display shows a graphical representation of the base fabric interconnect with a legend to help you identify port admin status.
  - In the **Navigation** pane, expand *Fabric\_Interconnect\_Name* > **Fixed Module** > **Ethernet Ports**. this action displays ports in a tree view.
- Step 3** Select one or more ports that you can break out. On the UCS 64108 fabric interconnect, ports 97 to 108 support breakout. Do one of the following:
- On the **Physical Display**, click a port or Ctrl-click to select multiple ports.
  - On the **Ethernet Ports** tab, click a port or Ctrl-click to select multiple ports.
  - On the **Ethernet Ports** tree view, click a port or Ctrl-click to select multiple ports.
- Step 4** Configure the selected ports as breakout ports.
- On the **Ethernet Ports** tab, right-click the selected port(s) and choose **Configure 4x10G Breakout Port** or **Configure 4x25G Breakout Port** from the pop-up menu. This command is disabled if the port does not support breakout.
  - On the **Ethernet Ports** tree view, right-click the selected port(s) and choose **Configure 4x10G Breakout Port** or **Configure 4x25G Breakout Port** from the pop-up menu. This command is disabled if the port does not support breakout. You can also select ports in the **Ethernet Ports** tree view and select **Configure Breakout Port** from the **Work** pane **Actions** Area. From the drop-down list, choose whether you want to configure the breakout port as a **4x10G port** or a **4x25G port**.
- Step 5** Click **OK**.
- Step 6** Configure the breakout ports according to your requirements.

Right-click one or more ports and select one of the following commands. This table describes the actions that occur when you select the command. If a command is disabled, the port is already configured as such.

Configure Command	Action
<b>Configure as Server Port</b>	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .



Configure Command	Action
Configure as Uplink Port	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .
Configure as FCoE Uplink Port	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .
Configure as FCoE Storage Port	Not supported on UCS 64108.
Configure as Appliance Port	Not supported on UCS 64108.

**Step 7** The confirmation dialog box displays. Click **Yes**.

## Configuring a 10/25G Port with QSA on Cisco UCS FI 64108

When a port on UCS FI 64108 is operating at the default 40/100G port speed, Cisco UCS Manager does not let you choose port speeds of 1G, 10G, or 25G. To use a 40/100G port on UCS FI 6454 as a 10/25 G port with a QSFP+Adapter (QSA) transceiver on the other end, you must configure it in the breakout mode.



**Note** When you try to change port speeds to 10G or 25G, Cisco UCS Manager displays a prompt to configure the port in breakout mode. After you configure a breakout port, you can configure each 10/25G GB sub-port as an uplink, or FCoE uplink port as required.

When you break out the port, use a breakout cable to split a single port into four 10G or 25G ports, and configure the ports in breakout mode, you can use all lanes as 10 G or 25G ports. If you break out the port without a breakout cable, only the first lane becomes usable as a 10G or 25G interface.

### Procedure

**Step 1** Configure breakout feature on the port that you want to use as a 10/25G port on the Cisco UCS FI 64108. For more information about configuring the break out feature, see *Configuring Fabric Interconnect Ethernet Breakout Ports*.

**Step 2** In Cisco UCS Manager, the first tuple interface is enabled after the QSA transceiver is plugged into the FI port. You can configure this interface based on your requirements.

The resulting ports after a break out of the 40/100G port are numbered using a 3-tuple naming convention. For example, the breakout ports of the second 40-Gigabit Ethernet port are numbered as 1/50/1, 1/50/2, 1/50/3, 1/50/4, and only the first port becomes usable as a 10 GB port.

# Port Breakout Functionality on Cisco UCS 6454 Fabric Interconnects

## About Breakout Ports

Cisco UCS 6454 fabric interconnects support splitting a single 40/100G QSFP port into four 10/25G ports using a supported breakout cable. These ports can be used only as uplink ports connecting to a 10/25G switch. On the UCS 6454 fabric interconnect, by default, there are 6 ports in the 40/100G mode. These are ports 49 to 54. These 40/100G ports are numbered in a 2-tuple naming convention. For example, the second 40G port is numbered as 1/50. The process of changing the configuration from 40G to 10 G, or from 100G to 25G is called breakout, and the process of changing the configuration from [4X]10G to 40G or from [4X]25G to 100G is called unconfigure.

When you break out a 40G port into 10G ports or a 100G port into 25G ports, the resulting ports are numbered using a 3-tuple naming convention. For example, the breakout ports of the second 40-Gigabit Ethernet port are numbered as 1/50/1, 1/50/2, 1/50/3, 1/50/4.

Starting with Cisco UCS Manager Release 4.2(3b), Ethernet breakout ports configuration will not lead to Fabric Interconnect reboot.


Starting with Cisco UCS Manager Release 4.1(3a), you can connect Cisco UCS Rack servers with VIC 1455 and 1457 adapters, to the uplink ports 49 to 54 (40/100 Gbps Ethernet or FCoE) in Cisco UCS 6454 Fabric Interconnects.



**Note** Cisco UCS Manager does not support connection of FEX, chassis, blade, IOM, or adapters (other than VIC 1455 and 1457 adapters) to the uplink ports of Fabric Interconnect.

The following image shows the rear view of the Cisco UCS 6454 fabric interconnect, and includes the ports that support breakout port functionality:

**Figure 4: Cisco UCS 6454 Fabric Interconnect Rear View**

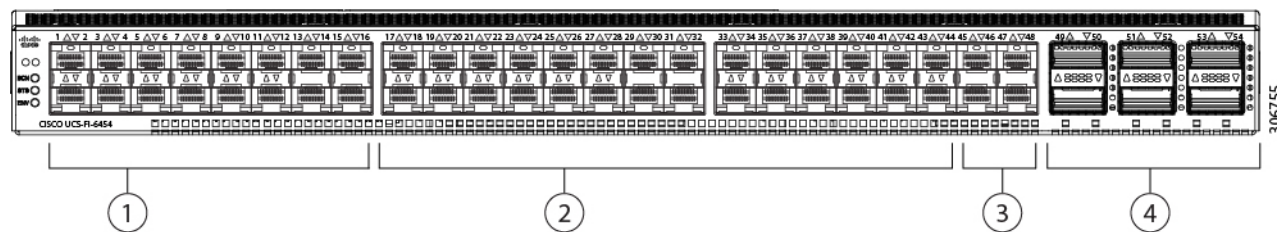

1	Ports 1-16 (Unified Ports 10/25 Gbps Ethernet or FCoE or 8/16/32 Gbps Fibre Channel)	2	Ports 17-44 (10/25 Gbps Ethernet or FCoE)
3	Ports 45-48 (1/10/25 Gbps Ethernet or FCoE)	4	Uplink Ports 49-54 (40/100 Gbps Ethernet or FCoE)

## Breakout Port Guidelines

The following are the guidelines for breakout functionality for Cisco UCS 6454 fabric interconnects:

- The breakout configurable ports are ports 49-54.

- You cannot configure the speed for each breakout port. Each breakout port is in auto mode.
- In Cisco UCS Manager Release 4.0(2), breakout ports are not supported as destinations for traffic monitoring.
- Ports 49-54 at 40/100G can be configured as uplink, FCoE, or appliance port. Ports 49-54 after breakout to 10/25G can be configured as uplink, appliance, FCoE, or for direct-connect rack server connectivity.

## Configuring Ethernet Breakout Ports on UCS 6454 Fabric Interconnects



**Caution** Beginning with Cisco UCS Manager Release 4.2(3i), Ethernet breakout ports configuration will not lead to Fabric Interconnect reboot.

### Procedure

- Step 1** On the **Equipment** tab, expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- The Fabric Interconnect **General** tab appears, providing at-a-glance status, actions, physical display, properties, and firmware information for the selected fabric interconnect.
- Step 2** View the available port(s) to break out.
- Ensure that the port overall status is up and admin status is available. Do one of the following:
- In the **Work** pane, click the **Physical Ports** tab. The **Ethernet Ports** and **FC Ports** subtabs appear.
  - In the **Work** pane, click the **Physical Display** tab. The Physical Display shows a graphical representation of the base fabric interconnect with a legend to help you identify port admin status.
  - In the **Navigation** pane, expand *Fabric\_Interconnect\_Name* > **Fixed Module** > **Ethernet Ports**. this action displays ports in a tree view.
- Step 3** Select one or more ports that you can break out. On the UCS 6454 fabric interconnect, ports 49 to 54 support breakout. Do one of the following:
- On the **Physical Display**, click a port or Ctrl-click to select multiple ports.
  - On the **Ethernet Ports** tab, click a port or Ctrl-click to select multiple ports.
  - On the **Ethernet Ports** tree view, click a port or Ctrl-click to select multiple ports.
- Step 4** Configure the selected port(s) as breakout ports.
- On the **Ethernet Ports** tab, right-click the selected port(s) and choose **Configure 4x10G Breakout Port** or **Configure 4x25G Breakout Port** from the pop-up menu. This command is disabled if the port does not support breakout.
  - On the **Ethernet Ports** tree view, right-click the selected port(s) and choose **Configure 4x10G Breakout Port** or **Configure 4x25G Breakout Port** from the pop-up menu. This command is disabled if the port does not support breakout. You can also select ports in the **Ethernet Ports** tree view and select **Configure Breakout Port** from the **Work** pane **Actions** Area. From the drop-down list, choose whether you want to configure the breakout port as a **4x10G port** or a **4x25G port**.
- Step 5** Click **OK**.
- Step 6** Configure the breakout ports according to your requirements.

Right-click one or more ports and select one of the following commands. This table describes the actions that occur when you select the command. If a command is disabled, the port is already configured as such.

Configure Command	Action
Configure as Server Port	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .
Configure as Uplink Port	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .
Configure as FCoE Uplink Port	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .
Configure as FCoE Storage Port	Not supported on Cisco UCS 6454.
Configure as Appliance Port	Not supported on Cisco UCS 6454.

**Step 7** The confirmation dialog box displays. Click **Yes**.

## Configuring a 10/25G Port with QSA Adapter on Cisco UCS FI 6454

When a port on UCS FI 6454 is operating at the default 40/100G port speed, Cisco UCS Manager does not let you choose port speeds of 1G, 10G, or 25G. To use a 40/100G port on UCS FI 6454 as a 10/25 G port with a QSFP+Adapter (QSA) transceiver on the other end, you must configure it in the breakout mode.



**Note** When you try to change port speeds to 10G or 25G, Cisco UCS Manager displays a prompt to configure the port in breakout mode. After you configure a breakout port, you can configure each 10/25G GB sub-port as an uplink, or FCoE uplink port as required.

When you break out the port, use a breakout cable to split a single port into four 10G or 25G ports, and configure the ports in breakout mode, you can use all lanes as 10 G or 25G ports. If you break out the port without a breakout cable, only the first lane becomes usable as a 10G or 25G interface.

### Procedure

**Step 1** Configure breakout feature on the port that you want to use as a 10/25G port on the Cisco UCS FI 6454. For more information about configuring the break out feature, see *Configuring Fabric Interconnect Ethernet Breakout Ports*.

**Step 2** In Cisco UCS Manager, the first tuple interface is enabled after the QSA transceiver is plugged into the FI port. You can configure this interface based on your requirements.

The resulting ports after a break out of the 40/100G port are numbered using a 3-tuple naming convention. For example, the breakout ports of the second 40-Gigabit Ethernet port are numbered as 1/50/1, 1/50/2, 1/50/3, 1/50/4, and only the first port becomes usable as a 10 GB port.

# Port Breakout Functionality on Cisco UCS 6300 Series Fabric Interconnects


## About Breakout Ports

Cisco UCS fabric interconnect 6300 series supports splitting a single QSFP port into four 10G ports using a supported breakout cable. By default, there are 32 ports in the 40G mode. These 40G ports are numbered in a 2-tuple naming convention. For example, the second 40G port is numbered as 1/2. The process of changing the configuration from 40G to 10G is called breakout and the process of changing the configuration from [4X]10G to 40G is called unconfigure.

When you break out a 40G port into 10G ports, the resulting ports are numbered using a 3-tuple naming convention. For example, the breakout ports of the second 40-Gigabit Ethernet port are numbered as 1/2/1, 1/2/2, 1/2/3, 1/2/4.

The following image shows the front view for the Cisco UCS 6332 series fabric interconnects, and includes the ports that may support breakout port functionality:


Figure 5: Cisco UCS 6332 Series Fabric Interconnects Front View

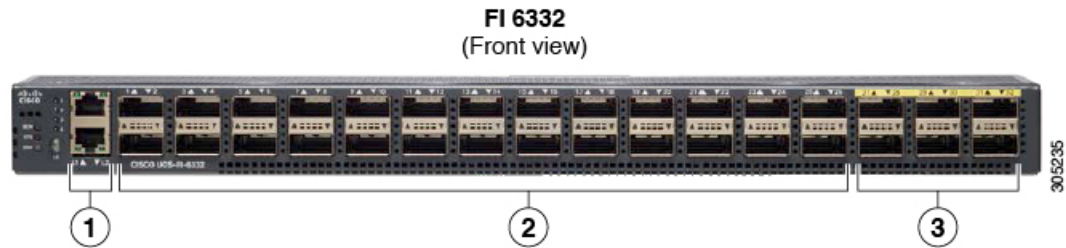

1	L1 and L2 high availability ports
2	28 X 40G QSFP ports ( 98 X 10G SFP ports) <b>Note</b> <ul style="list-style-type: none"> <li>• QSA module is required on ports 13–14</li> <li>• A QSFP to 4XSFP breakout cable is required for 10G support.</li> </ul>
3	6 X 40G QSFP ports

The following image shows the front view for the Cisco UCS 6332-16UP series fabric interconnects, and includes the ports that may support breakout port functionality:

Figure 6: Cisco UCS 6332-16UP Series Fabric Interconnects Front View

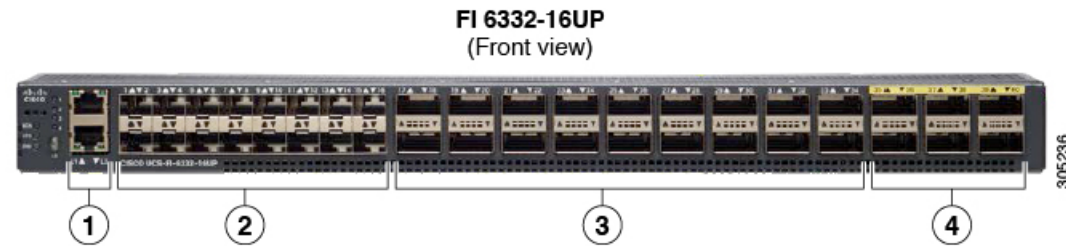


1	L1 and L2 high availability ports
2	16 X 1/10G SFP (16 X 4/8/16G FC ports)

3	18 X 40G QSFP(72 X 10G SFP+) <b>Note</b> • A QSFP to 4XSFP breakout cable is required for 10G support.
4	6 X 40G QSFP ports

The following image shows the rear view of the Cisco UCS 6300 series fabric interconnects.

**Figure 7: Cisco UCS 6300 Series Fabric Interconnects Rear View**

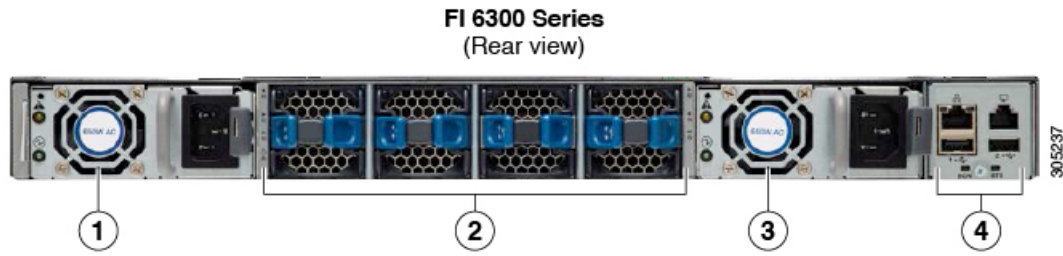

1	Power supply
2	Four fans
3	Power supply
4	Serial ports

### Breakout Port Constraints

The following table summarizes the constraints for breakout functionality for Cisco UCS 6300 series fabric interconnects:

Cisco UCS 6300 Series Fabric Interconnect Series	Breakout Configurable Ports	Ports without breakout functionality support
Cisco UCS 6332	1–12, 15–26	13–14, 27–32 <b>Note</b> • Auto-negotiate behavior is not supported on ports 27–32.
Cisco UCS 6332-16UP	17–34	1–16, 35–40 <b>Note</b> • Auto-negotiate behavior is not supported on ports 35–40



**Important** Up to four breakout ports are allowed if QoS jumbo frames are used.

## Configuring Ethernet Breakout Ports on UCS 6300 Fabric Interconnects

You can configure Cisco UCS 6300 Fabric Interconnects with 40 GB Ethernet ports as four breakout 10 GB ports, using a supported breakout cable. The configuration requires a Small Form-Factor Pluggable adapter (SFP) that has one 40GB QSFP+ on one end to connect to the Fabric Interconnect and four 10 GB ports to connect to different end points supporting 10 GB connectivity. .



**Caution** Configuring breakout ports requires rebooting the Fabric Interconnect. Any existing configuration on a port is erased. We recommend that you break out all required ports in a single transaction.

Once you configure a breakout port, you can configure each 10 GB sub-port as server, uplink, FCoE uplink, FCoE storage, or appliance as required.

The following table summarizes the constraints for breakout functionality for Cisco UCS 6300 series fabric interconnects:

Fabric Interconnect	Breakout Configurable Ports	Normal Ports with no Breakout Support
UCS-FI-6332	1-12,15-26	13-14,27-32 <b>Note</b> <ul style="list-style-type: none"> <li>• Auto-negotiate behavior is not supported on ports 27–32.</li> <li>• A maximum of four ports are allowed as breakout ports if using QoS jumbo frames.</li> </ul>
UCS-FI-6332-16UP	17-34	1-16,35-40 <b>Note</b> <ul style="list-style-type: none"> <li>• Auto-negotiate behavior is not supported on ports 35-40.</li> <li>• A maximum of four ports are allowed as breakout ports if using QoS jumbo frames.</li> </ul>

## Procedure

- Step 1** On the **Equipment** tab, expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.  
The Fabric Interconnect **General** tab appears, providing at-a-glance status, actions, physical display, properties, and firmware information for the selected fabric interconnect.
- Step 2** View the available port(s) to break out.  
Ensure that the port overall status is up and admin status is available. Do one of the following:
- In the **Work** pane, click the **Physical Ports** tab. The **Ethernet Ports** and **FC Ports** subtabs appear.
  - In the **Work** pane, click the **Physical Display** tab. The Physical Display shows a graphical representation of the base fabric interconnect with a legend to help you identify port admin status.
  - In the **Navigation** pane, expand *Fabric\_Interconnect\_Name* > **Fixed Module** > **Ethernet Ports**. this action displays ports in a tree view.
- Step 3** Select one or more ports that you can break out. Do one of the following:
- On the **Physical Display**, click a port or Ctrl-click to select multiple ports.
  - On the **Ethernet Ports** tab, click a port or Ctrl-click to select multiple ports.
  - On the **Ethernet Ports** tree view, click a port or Ctrl-click to select multiple ports.
- Step 4** Configure the selected port(s) as a breakout ports.  
Right-click the selected port(s) and choose **Configure Breakout Port** from the pop-up menu. This command is disabled if the port does not support breakout. You can also select ports in the **Ethernet Ports** tree view and select **Configure Breakout Port** from the **Work** pane **Actions** Area.
- Caution** Configuring breakout ports requires rebooting the fabric interconnect. Any existing configuration on a port is erased. We recommend that you break out all required ports in a single transaction.
- Step 5** Click **OK**.  
The reboot process takes several minutes.
- Step 6** When the fabric interconnect reboots, log in to Cisco UCS Manager and configure the breakout ports according to your requirements.

Right-click one or more ports and select one of the following commands. This table describes the actions that occur when you select the command. If a command is disabled, the port is already configured as such.

Configure Command	Action
Configure as Server Port	You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .
Configure as Uplink Port	
Configure as FCoE Uplink Port	
Configure as FCoE Storage Port	The system notifies you that FC Switching mode must be set to End Host Mode. Configuring a storage port in the current mode is unsuccessful. You confirm your action. Configuration takes place. The system displays a successful message. Click <b>Yes</b> .



Configure Command	Action
Configure as Appliance Port	Displays the <b>Configure as Appliance Port Dialog Box</b> from which you can configure settings, including the Ethernet Target Endpoint.

- Step 7** The confirmation dialog box displays. Click **Yes**.  
The fabric interconnect reboots and all traffic stops.

## Configuring a 10G Port with QSA Adapter on Cisco UCS FI 6332 and 6332-16UP

When a port on UCS FI 6332 or 6332-16UP is operating at the default 40G port speed, Cisco UCS Manager does not let you choose port speeds of 1GB or 10GB. To use a 40G port on UCS FI 6332 or 6332-16UP as a 10 GB port with a QSFP+Adapter (QSA) transceiver on the other end, you must configure it in the breakout mode.



- Note** When you try to change port speeds to 1GB or 10GB, Cisco UCS Manager displays a prompt to configure the port in breakout mode. Once you configure a breakout port, you can configure each 10GB sub-port as server, uplink, FCoE uplink, FCoE storage or appliance as required.

When you break out the port, only the first lane becomes usable as a 10G interface. If you use a breakout cable to split a single port into four 10G ports, and configure the ports in breakout mode, you can use all lanes as 10 GB ports.

### Procedure

- Step 1** Configure breakout feature on the port that you want to use as a 10GB port on the Cisco UCS FI 6332 or 6332-16UP. For more information about configuring the break out feature, see *Configuring Fabric Interconnect Ethernet Breakout Ports*.
- Caution** Configuring breakout ports requires rebooting the Fabric Interconnect. Any existing configuration on a port is erased. It is recommended to break out all required ports in a single transaction.
- Step 2** In Cisco UCS Manager, the first tuple interface is enabled after the QSA transceiver is plugged into the FI port. You can configure this interface based on your requirements.
- The resulting ports after a break out of the 40G port are numbered using a 3-tuple naming convention. For example, the supported breakout ports are numbered Br-Ethernet 1/25/1, Br-Ethernet 1/25/2, Br-Ethernet 1/25/3, and Br-Ethernet 1/25/4, and only the first port becomes usable as a 10 GB port.

## Reconfiguring an Ethernet Breakout Port

You can reconfigure an unconfigured breakout port in a particular role, such as Server, Uplink, or Appliance. Reconfiguring a Cisco UCS 6300, 6400, or 6500 Series Fabric Interconnect breakout port allows you to modify the existing port configuration to your current requirements.

An unconfigured Cisco UCS 6400 Series Fabric Interconnect breakout port can be reconfigured only as an Uplink or FCoE Uplink port.

### Procedure

- 
- Step 1** On the **Equipment** tab, expand **Equipment > Fabric Interconnects > Fabric\_Interconnect\_Name > Fixed Module**.
- Step 2** Select one or more ports that you have broken out. Do one of the following:
- On the **Physical Display**, click a port or Ctrl-click to select multiple ports.
  - On the **Ethernet Ports** tab, click a port or Ctrl-click to select multiple ports.
  - On the **Ethernet Ports** tree view, click a port or Ctrl-click to select multiple ports.
- Step 3** Reconfigure the port(s)
- On the **General Tab Actions** area, click **Reconfigure** from the pop-up menu.
- Step 4** The confirmation dialog box displays.
- Click **Yes**. The fabric interconnect reboots and all traffic stops.
- Step 5** The system displays a success message.
- Click **OK**.

**Note** Starting with Cisco UCS Manager Release 4.2(3b), configuring the Ethernet breakout ports will not lead to Fabric Interconnect reboot.

---

## Unconfiguring a Breakout Port

If you want to configure a Cisco UCS 6300 Series Fabric Interconnect breakout port back to a 40 GB Ethernet port, a Cisco UCS 6400, or a Cisco UCS 6500 Series Fabric Interconnect breakout port back to a 40/100 GB Ethernet port, you must first unconfigure it.

### Procedure

- 
- Step 1** On the **Equipment** tab, expand **Equipment > Fabric Interconnects > Fabric\_Interconnect\_Name > Fixed Module**.
- Step 2** On the **General Tab**, right-click a port in the physical display area and select **Unconfigure**.
- Step 3** Click **Yes** in the confirmation box.
- The fabric interconnect reboots and all traffic stops.

**Note** Starting with Cisco UCS Manager Release 4.2(3b), configuring the Ethernet breakout ports will not lead to Fabric Interconnect reboot.

---

## Unified Ports

### Beacon LEDs for Unified Ports

Each port fabric interconnect has a corresponding beacon LED. When the **Beacon LED** property is configured, the beacon LEDs illuminate, showing you which ports are configured in a given port mode.

You can configure the **Beacon LED** property to show you which ports are grouped in one port mode: either Ethernet or Fibre Channel. By default, the Beacon LED property is set to Off.



**Note** For unified ports on the expansion module, you can reset the **Beacon LED** property to the default value of **Off** during expansion module reboot.

---

### Guidelines for Configuring Unified Ports

Consider the following guidelines and restrictions when configuring unified ports:

#### Hardware and Software Requirements

Unified ports are supported on the following:

- Cisco UCS 6536 Fabric Interconnect with Cisco UCS Manager Release 4.2(3b) and later releases
- Cisco UCS 64108 Fabric Interconnect with Cisco UCS Manager Release 4.1 and later releases
- Cisco UCS 6454 Fabric Interconnect with Cisco UCS Manager Release 4.0 and later releases
- UCS 6300 Series Fabric Interconnects with Cisco UCS Manager Release 3.1 and later releases
- UCS 6324 Fabric Interconnects with Cisco UCS Manager Release 3.0 and later releases

Unified ports are not supported on 6100 series Fabric Interconnects, even if they are running Cisco UCS Manager, version 2.0.

#### Port Mode Placement

Because the Cisco UCS Manager GUI interface uses a slider to configure the port mode for unified ports on a fixed or expansion module, it automatically enforces the following restrictions which limits how port modes can be assigned to unified ports. When using the Cisco UCS Manager CLI interface, these restrictions are enforced when you commit the transaction to the system configuration. If the port mode configuration violates any of the following restrictions, the Cisco UCS Manager CLI displays an error:

- Ethernet ports must be grouped together in a block. For each module (fixed or expansion), the Ethernet port block must start with the first port and end with an even numbered port.

- Fibre Channel ports must be grouped together in a block. For each module (fixed or expansion), the first port in the Fibre Channel port block must follow the last Ethernet port and extend to include the rest of the ports in the module. For configurations that include only Fibre Channel ports, the Fibre Channel block must start with the first port on the fixed or expansion module.




---

**Note** On the Cisco UCS 6400 Series Fabric Interconnect, the Unified Port capability is restricted to first 16 ports. Only ports 1/1-1/16 can be configured as FC. The FC ports must be contiguous, followed by contiguous Ethernet ports.

---




---

**Note** On the Cisco UCS 6536 Fabric Interconnect, the Unified Port capability is restricted to the first 16 ports. Only ports 1/1-1/16 can be configured as FC. The FC ports must be contiguous, followed by contiguous Ethernet ports.

---

- On the Cisco UCS 6400 Series Fabric Interconnect connected to a Cisco UCS server, connecting more than 16 ports will result in an error.
- Alternating Ethernet and Fibre Channel ports is not supported on a single module.

**Example of a valid configuration**— Might include unified ports 1–16 on the fixed module configured in Ethernet port mode and ports 17–32 in Fibre Channel port mode. On the expansion module you could configure ports 1–4 in Ethernet port mode and then configure ports 5–16 in Fibre Channel mode. The rule about alternating Ethernet and Fibre Channel port types is not violated because this port arrangement complies with the rules on each individual module.

**Example of an invalid configuration**— Might include a block of Fibre Channel ports starting with port 16. Because each block of ports has to start with an odd-numbered port, you would have to start the block with port 17.




---

**Note** The total number of uplink Ethernet ports and uplink Ethernet port channel members that can be configured on each fabric interconnect is limited to 31. This limitation includes uplink Ethernet ports and uplink Ethernet port channel members configured on the expansion module.

---

## Cautions and Guidelines for Configuring Unified Uplink Ports and Unified Storage Ports

The following are cautions and guidelines to follow while working with unified uplink ports and unified storage ports:

- In an unified uplink port, if you enable one component as a SPAN source, the other component will automatically become a SPAN source.



---

**Note** If you create or delete a SPAN source under the Ethernet uplink port, Cisco UCS Manager automatically creates or deletes a SPAN source under the FCoE uplink port. The same happens when you create a SPAN source on the FCOE uplink port.

---

- You must configure a non default native VLAN on FCoE and unified uplink ports. This VLAN is not used for any traffic. Cisco UCS Manager will reuse an existing fcoe-storage-native-vlan for this purpose. This fcoe-storage-native-vlan will be used as a native VLAN on FCoE and unified uplinks.
- In an unified uplink port, if you do not specify a non default VLAN for the Ethernet uplink port the fcoe-storage-native-vlan will be assigned as the native VLAN on the unified uplink port. If the Ethernet port has a non default native VLAN specified as native VLAN, this will be assigned as the native VLAN for unified uplink port.
- When you create or delete a member port under an Ethernet port channel, Cisco UCS Manager automatically creates or deletes the member port under FCoE port channel. The same happens when you create or delete a member port in FCoE port channel.
- When you configure an Ethernet port as a standalone port, such as server port, Ethernet uplink, FCoE uplink or FCoE storage and make it as a member port for an Ethernet or FCOE port channel, Cisco UCS Manager automatically makes this port as a member of both Ethernet and FCoE port channels.
- When you remove the membership for a member port from being a member of server uplink, Ethernet uplink, FCoE uplink or FCoE storage, Cisco UCS Manager deletes the corresponding members ports from Ethernet port channel and FCoE port channel and creates a new standalone port.
- If you downgrade Cisco UCS Manager from release 2.1 to any of the prior releases, all unified uplink ports and port channels will be converted to Ethernet ports and Ethernet port channels when the downgrade is complete. Similarly, all the unified storage ports will be converted to appliance ports.
- For unified uplink ports and unified storage ports, when you create two interfaces, only one license is checked out. As long as either interface is enabled, the license remains checked out. The license will be released only if both the interfaces are disabled for a unified uplink port or a unified storage port.
- Cisco UCS 6100 series fabric interconnect switch can only support 1VF or 1VF-PO facing same downstream NPV switch.
- In Cisco UCS 6536 Fabric Interconnect to configure FC breakout port, you have to configure ports from the sequence from 1/36 through 1/33. FC breakout ports (36 - 33) cannot be configured unless the previous ports are FC breakout ports. Also, configuring a single (individual) FC breakout port is supported.  
Ports 33-36 can be configured only as FC Uplink Port or FC Storage Port when it is configured as unified port.

## Configuring the Beacon LEDs for Unified Ports

Complete the following task for each module for which you want to configure beacon LEDs.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Depending upon the location of the unified ports for which you want to configure the beacon LEDs, click on one of the following:
- **Fixed Module**
  - **Expansion Module**
- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** In the **Properties** area, click one of the following radio buttons in the **Beacon LED** field:
- **Off**—All physical LEDs are off.
  - **Eth**—The physical LEDs next to all Ethernet ports are on.
  - **Fc**—The physical LEDs next to all Fibre Channel ports are on.
- Step 6** Click **Save Changes**.
- 

## Changing Port Modes

### Effect of Port Mode Changes on Data Traffic

Port mode changes can cause an interruption to the data traffic for the Cisco UCS domain. The length of the interruption and the traffic that is affected depend upon the configuration of the Cisco UCS domain and the module on which you made the port mode changes.



**Tip** To minimize the traffic disruption during system changes, form a Fibre Channel uplink port-channel across the fixed and expansion modules.

---

#### Impact of Port Mode Changes on an Expansion Module

After you make port mode changes on an expansion module, the module reboots. All traffic through ports on the expansion module is interrupted for approximately one minute while the module reboots.

#### Impact of Port Mode Changes on the Fixed Module in a Cluster Configuration

A cluster configuration has two fabric interconnects. After you make port changes to the fixed module, the fabric interconnect reboots. The impact on the data traffic depends upon whether or not you have configured the server vNICs to failover to the other fabric interconnect when one fails.

If you change the port modes on the expansion module of one fabric interconnect and then wait for that to reboot before changing the port modes on the second fabric interconnect, the following occurs:

- With server vNIC failover, traffic fails over to the other fabric interconnect and no interruption occurs.
- Without server vNIC failover, all data traffic through the fabric interconnect on which you changed the port modes is interrupted for approximately eight minutes while the fabric interconnect reboots.

If you change the port modes on the fixed modules of both fabric interconnects simultaneously, all data traffic through the fabric interconnects are interrupted for approximately eight minutes while the fabric interconnects reboot.

### Impact of Port Mode Changes on the Fixed Module in a Non-Cluster Configuration

A non-cluster configuration has only one fabric interconnect. After you make port changes to the fixed module, the fabric interconnect reboots. All data traffic through the fabric interconnect is interrupted for approximately eight minutes while the fabric interconnect reboots.

## Configuring Port Modes for a 6536 Fabric Interconnect

In Cisco UCS 6536 Fabric Interconnects, port breakout is supported for Ethernet Ports (1-36) and Unified Ports (33-36). The unified ports can be configured as FC uplink ports (with sub-group of 4 in each unified port, a maximum 16 sub-ports can be configured as FC port).



---

**Caution** Changing the port mode can cause an interruption in data traffic and lead to immediate Fabric Interconnect reboot.

If the Cisco UCS domain has a cluster configuration that is set up for high availability and servers with service profiles that are configured for failover, traffic fails over to the other fabric interconnect and data traffic is not interrupted when the port mode is changed on the fixed module.

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** In the **Actions** area of the **General** tab, click **Configure Unified Ports**.
- Step 5** Review the confirmation message and click one of the following:
  - **Yes**—To continue with configuring the port mode.
  - **No**—To exit without configuring the port mode, and, wait for an appropriate maintenance window.
- Step 6** In the **Configure Unified Ports** dialog box, use your mouse to drag the slider along the bar, from right to left, until the display shows the port-mode configuration that you want for the module.  
  
To unconfigure Unified Ports, use your mouse to drag the slider along the bar, from left to right. When you unconfigure the unified port, it defaults to Ethernet Uplink port.
- Step 7** Click **OK** to save your port-mode configuration.

The fabric interconnect reboots. All data traffic through that fabric interconnect is interrupted. If this occurs in a cluster configuration that provides high availability and includes servers with vNICs that are configured for failover, traffic fails over to the other fabric interconnect and no interruption occurs.

---

### What to do next

Configure the port types for the ports. You can right-click on any port in the module display above the slider and configure that port for an available port type.

## Configuring Port Modes for a 64108 Fabric Interconnect

On the UCS 64108 Fabric Interconnect, the first 16 ports are unified ports and can be configured as FC ports in groups of 4 or 8 ports by one of the following ways:

- First 4 ports - Ports 1 to 4 on the Fabric Interconnect
- First 8 ports - Ports 1 to 8 on the Fabric Interconnect




---

**Caution** Changing the port mode can cause an interruption in data traffic and lead to immediate Fabric Interconnect reboot.

If the Cisco UCS domain has a cluster configuration that is set up for high availability and servers with service profiles that are configured for failover, traffic fails over to the other fabric interconnect and data traffic is not interrupted when the port mode is changed on the fixed module.

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** In the **Actions** area of the **General** tab, click **Configure Unified Ports**.
- Step 5** Review the confirmation message and click one of the following:
- **Yes**—To continue with configuring the port mode.
  - **No**—To exit without configuring the port mode, and, wait for an appropriate maintenance window.
- Step 6** In the **Configure Unified Ports** dialog box, use your mouse to drag the slider along the bar, from left to right, until the display shows the port-mode configuration that you want for the module.
- To unconfigure Unified Ports, use your mouse to drag the slider along the bar, from right to left. When you unconfigure the unified port, it defaults to Ethernet Uplink port.
- Step 7** If you need to configure port modes for the other module, repeat Steps 5 and 6.
- Step 8** Click **OK** to save your port-mode configuration.



The fabric interconnect reboots. All data traffic through that fabric interconnect is interrupted. If this occurs in a cluster configuration that provides high availability and includes servers with vNICs that are configured for failover, traffic fails over to the other fabric interconnect and no interruption occurs.

---

### What to do next

Configure the port types for the ports. You can right-click on any port in the module display above the slider and configure that port for an available port type.

## Configuring Port Modes for a 6454 Fabric Interconnect

On the 6454 Fabric Interconnect, the first 16 ports are unified ports and can be configured as FC ports in groups of 4 or 8 ports by one of the following ways:

- First 4 ports - Ports 1 to 4 on the Fabric Interconnect
- First 8 ports - Ports 1 to 8 on the Fabric Interconnect



---

**Caution** Changing the port mode can cause an interruption in data traffic and lead to immediate Fabric Interconnect reboot.

If the Cisco UCS domain has a cluster configuration that is set up for high availability and servers with service profiles that are configured for failover, traffic fails over to the other fabric interconnect and data traffic is not interrupted when the port mode is changed on the fixed module.

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** In the **Actions** area of the **General** tab, click **Configure Unified Ports**.
- Step 5** Review the confirmation message and click one of the following:
- **Yes**—To continue with configuring the port mode.
  - **No**—To exit without configuring the port mode, and, wait for an appropriate maintenance window.
- Step 6** In the **Configure Unified Ports** dialog box, use your mouse to drag the slider along the bar, from left to right, until the display shows the port-mode configuration that you want for the module.
- To unconfigure Unified Ports, use your mouse to drag the slider along the bar, from right to left. When you unconfigure the unified port, it defaults to Ethernet Uplink port.
- Step 7** If you need to configure port modes for the other module, repeat Steps 5 and 6.
- Step 8** Click **OK** to save your port-mode configuration.

The fabric interconnect reboots. All data traffic through that fabric interconnect is interrupted. If this occurs in a cluster configuration that provides high availability and includes servers with vNICs that are configured for failover, traffic fails over to the other fabric interconnect and no interruption occurs.

---

### What to do next

Configure the port types for the ports. You can right-click on any port in the module display above the slider and configure that port for an available port type.

## Configuring Port Modes for a 6332-16UP Fabric Interconnect

On the 6332-16UP fabric interconnect, the first 16 ports are unified ports and can be configured as FC ports in groups of 6 ports.




---

**Caution** Changing the port mode on either module can cause an interruption in data traffic because changes to the fixed module require a reboot of the fabric interconnect and changes on an expansion module require a reboot of that module .

If the Cisco UCS domain has a cluster configuration that is set up for high availability and servers with service profiles that are configured for failover, traffic fails over to the other fabric interconnect and data traffic is not interrupted when the port mode is changed on the fixed module.

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** In the **Actions** area of the **General** tab, click **Configure Unified Ports**.
- Step 5** Review the confirmation message and click one of the following:
  - **Yes**—To continue with configuring the port mode.
  - **No**—To exit without configuring the port mode, and, wait for an appropriate maintenance window.
- Step 6** In the **Configure Unified Ports** dialog box, use your mouse to drag the slider along the bar, from left to right, until the display shows the port-mode configuration that you want for the module.  
 To unconfigure Unified Ports, use your mouse to drag the slider along the bar, from right to left.  
 If you change the port mode for a previously configured port, the port returns to an unconfigured state.
- Step 7** If you need to configure port modes for the other module, repeat Steps 5 and 6.
- Step 8** Click **OK** to save your port-mode configuration.

The fabric interconnect reboots. All data traffic through that fabric interconnect is interrupted. If this occurs in a cluster configuration that provides high availability and includes servers with vNICs that are configured for failover, traffic fails over to the other fabric interconnect and no interruption occurs.

---

#### What to do next

Configure the port types for the ports. You can right-click on any port in the module display above the slider and configure that port for an available port type.

## Configuring Port Modes for a 6324 Fabric Interconnect



**Caution** Changing the port mode on either module can cause an interruption in data traffic because changes to the fixed module require a reboot of the fabric interconnect and changes on an expansion module require a reboot of that module .

If the Cisco UCS domain has a cluster configuration that is set up for high availability and servers with service profiles that are configured for failover, traffic fails over to the other fabric interconnect and data traffic is not interrupted when the port mode is changed on the fixed module.

---

#### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** In the **Actions** area of the **General** tab, click **Configure Unified Ports**.
- Step 5** Review the confirmation message and click one of the following:
- **Yes**—To continue with configuring the port mode.
  - **No**—To exit without configuring the port mode, and, wait for an appropriate maintenance window.
- Step 6** In the **Configure Fixed Module Ports** dialog box, use your mouse to drag the slider along the bar until the displays shows the port-mode configuration that you want for the module.
- To unconfigure the port-mode configuration, drag the slider in opposite direction.
- If you change the port mode for a previously configured port, the port returns to an unconfigured state.
- Step 7** If you need to configure port modes for the other module, repeat Steps 5 and 6.
- Step 8** Click **OK** to save your port-mode configuration.

The fabric interconnect reboots. All data traffic through that fabric interconnect is interrupted. If this occurs in a cluster configuration that provides high availability and includes servers with vNICs that are configured for failover, traffic fails over to the other fabric interconnect and no interruption occurs.

---

**What to do next**

Configure the port types for the ports. You can right-click on any port in the module display above the slider and configure that port for an available port type.

## Reconfiguring a Port on a Fabric Interconnect

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
  - Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
  - Step 3** Expand the node for the ports that you want to reconfigure.
  - Step 4** Click the port or ports that you want to reconfigure.
  - Step 5** In the **Work** pane, click the **General** tab.
  - Step 6** In the **Actions** area, click **Reconfigure**.
  - Step 7** From the drop-down list, choose which way you want the port reconfigured.
- 

### Example: Reconfiguring an Uplink Ethernet Port as a Server Port

1. Expand the **Ethernet Ports** node and select the port you want to reconfigure.
2. Follow steps 5 and 6 above.
3. From the drop-down list choose **Configure as Server Port**.

## Enabling or Disabling a Port on a Fabric Interconnect

After you enable or disable a port on a fabric interconnect, wait for at least 1 minute before you re-acknowledge the chassis. If you re-acknowledge the chassis too soon, the pinning of server traffic from the chassis might not get updated with the changes to the port that you enabled or disabled.

You can enable or disable a port only when it is configured. If the port is unconfigured, the enable and disable options are not active.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the ports that you want to enable or disable.
- Step 4** Under the **Ethernet Ports** node, select a port.
- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** In the **Actions** area, click **Enable Port** or **Disable Port**.
- Step 7** If a confirmation dialog box displays, click **Yes**.

**Step 8** Click **OK**.

---

## Unconfiguring a Port on a Fabric Interconnect

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the ports that you want to unconfigure.
- Step 4** Under the **Ethernet Ports** node, select a port.
- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** In the **Actions** area, click **Unconfigure**.
- Step 7** If a confirmation dialog box displays, click **Yes**.
- Step 8** Click **OK**.
- 

## Server Ports

### Automatic Configuration of Fabric Interconnect Server Ports

Starting with Cisco UCS Manager release 3.1(3), you can automatically configure the fabric interconnect server ports. The server **Port Auto-Discovery Policy** determines how the system reacts when a new rack server, chassis, or FEX is added. By enabling this policy, Cisco UCS Manager automatically determines the type of device connected to the switch port and configures the switch port accordingly.



- Note**
- If you do not want a Cisco UCS C-Series appliance to be UCS Managed, pre-configure the appliance ports before connecting VIC ports to the Cisco UCS Fabric Interconnects.
  - The **Port Auto-Discovery Policy** is not applicable for servers connected through direct 25G port or 4x25g breakout on Cisco UCS 6454, UCS 64108, , and 6536 Fabric Interconnects.
  - The **Port Auto-Discovery Policy** is not supported on Cisco UCS 6324 Fabric Interconnects.
- 

### Automatically Configuring Server Ports

#### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Policies** > **Port Auto-Discovery Policy**.

**Step 3** In the **Port Auto-Discovery Policy** actions area, by default the policy is set to **Local**. The policy is determined and managed by Cisco UCS Manager. In this case, **Use Global** is visible in Cisco UCS Manager.

To have the port auto-discovery policy managed by Cisco UCS Central, refer *Registering a Cisco UCS Domain with Cisco UCS Central* in the [Cisco UCS Manager Server Management Guide](#).

**Step 4** In the **Properties** area complete the following fields:

Name	Description
<b>Owner</b> field	If set to local, the policy is determined and managed by Cisco UCS Manager. If set to global, the policy is determined and managed by Cisco UCS Central.
<b>Auto Configure Server Port</b>	<ul style="list-style-type: none"> <li>• <b>Enabled</b> - Cisco UCS Manager automatically determines the type of server connected to a switch port and configures the switch port accordingly.</li> <li>• <b>Disabled</b> - Disables automatic configuration of fabric interconnect server ports.</li> </ul>

## Configuring Server Ports

All of the port types listed are configurable on both the fixed module and expansion module, including the server ports.

This task describes only one method of configuring ports. You can also configure ports from a right-click menu, or in the LAN Uplinks Manager.

### Procedure

- 
- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name* > **Fixed Module** > **Ethernet Ports**.
- Step 3** Click a port under the **Ethernet Ports** node.
- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** In the **Actions** area, click **Reconfigure**.
- Step 6** From the drop-down list, choose **Configure as Server Port**.
-

## Modifying the Properties of a Server Port

### Procedure

- 
- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the server port that you want to modify.
- Step 4** Expand **Ethernet Ports**.
- Step 5** Click the server port for which you want to modify the properties.
- Step 6** In the **Work** pane, click the **General** tab.
- Step 7** In the **Actions** area, click **Show Interface**.
- You may need to expand the pane or use the scroll bars in the **Properties** dialog box to see all the fields.
- Step 8** In the **Properties** dialog box, modify the values as needed.
- Step 9** Click **OK**.
- 

## Configuring a Server Port for Forward Error Correction

The N9K-C93180YC-FX3 in FEX mode connects to 25Gbps or 100Gbps server port on the Cisco UCS 6400 series Fabric Interconnects. To have the link-up at 25Gbps, the server port on Cisco UCS 6400 series Fabric Interconnect requires forward error correction (FEC) of CL-74. This CL-74 configuration on the server port is required only for connecting N9K-C93180YC-FX3 to Cisco UCS 6400 series Fabric Interconnects.

For Cisco UCS 6500 Series Fabric Interconnect, the N9K-C93180YC-FX3 in FEX mode connects to Fabric Interconnect at 100Gbps server port. To have the link at 100Gbps, the server port and Cisco UCS 6500 Series Fabric Interconnect requires forward error correction (FEC) of CL-91.



**Note** The CL-74 configuration is not applicable for other server port connectivity such as I/O module or direct-attached rack server.

**Table 5: FEC CL-74 Support Matrix**

Port Speed	FEC CL-74
1 Gbps	Not supported
10 Gbps	Not supported
25 Gbps	Supported
40 Gbps	Not supported

Port Speed	FEC CL-74
100 Gbps	Supported
Auto	Based on inserted transceiver's maximum supported speed

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the server ports that you want to configure.
- Step 4** Select **Show Interface**.
- Step 5** Choose **Eth Server**.
- Step 6** Select **Auto** or **CI74** to set the forward error correction mode as for the server port. **Auto** is the default option.
- Step 7** Select **Enabled** or **Disabled** to set the auto negotiation for the server port. **Enabled** is the default option.
- Step 8** Click **OK**.

**Note** Following are the mandatory configuration parameters on the server port for connecting to N9K-C93180YC-FX3:

- The FEC must be **Auto** for 100Gps server port.
  - The FEC must be **CI74** for 25Gps server port.
  - The auto-negotiation must be **Disabled** for 100Gps server port.
- 

# Uplink Ethernet Ports

## Configuring Uplink Ethernet Ports

You can configure uplink Ethernet ports on either the fixed module or an expansion module.

This task describes only one method of configuring uplink Ethernet ports. You can also configure uplink Ethernet ports from a right-click menu.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the ports that you want to configure.
- Step 4** Click on one of the ports under the **Ethernet Ports** node.



If you want to reconfigure a server port, appliance port, or FCoE storage port, expand the appropriate node.

- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** In the **Actions** area, click **Reconfigure**.
- Step 7** From the drop-down list choose **Configure as Uplink Port**.

---

### What to do next

If desired, change the properties for the default flow control policy and admin speed of the uplink Ethernet port.

## Changing the Properties of an Uplink Ethernet Port

---

### Procedure

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the ports that you want to configure.
- Step 4** In the **Ethernet Ports** node, click the uplink Ethernet port that you want to change.
- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** In the **Actions** area, click **Show Interface**.
- Step 7** In the **Properties** dialog box, complete the following fields:
- (Optional) In the **User Label** field, enter a label to identify the port.
  - From the **Flow Control Policy** drop-down list, select a flow control policy to determine how the port sends and receives IEEE 802.3x pause frames when the receive buffer fills.
  - In the **Admin Speed** field, click one of the following radio buttons:
    - 1 Gbps
    - 10 Gbps
    - 25 Gbps
    - 40 Gbps
    - 100 Gbps

- Note** 25 Gbps can be selected for ports 1 to 48 only on Cisco UCS 6454 Fabric Interconnects. 40 Gbps and 100 Gbps speeds are only for ports 49 to 54 on Cisco UCS 6454 Fabric Interconnects.
- 25 Gbps can be selected for ports 1 to 96 only on Cisco UCS 64108 Fabric Interconnects. 40 Gbps and 100 Gbps speeds are only for ports 97 to 108 on Cisco UCS 64108 Fabric Interconnects.
- 25 Gbp, 40 Gbps and 100 Gbps can be selected for ports 1 to 36 only on Cisco UCS 6500 series Fabric Interconnects.

**Step 8** Click **OK**.

## Configuring an Ethernet Port for Forward Error Correction

You can configure forward error correction (FEC) for uplink Ethernet ports, Ethernet appliances, and FCoE uplinks for transceiver modules that operate at 25 Gbps and 100 Gbps speeds.

**Table 6: FEC CL-74 and FEC CL-91 Support Matrix**

Port Speed	FEC CL-74	FEC CL-91
1 Gbps	Not supported	Not supported
10 Gbps	Not supported	Not supported
25 Gbps	Supported	Supported
40 Gbps	Not supported	Not supported
100 Gbps	Not supported	Supported
Auto	Based on inserted transceiver's maximum supported speed	Based on inserted transceiver's maximum supported speed

### Procedure

**Step 1** In the **Navigation** pane, click **Equipment**.

**Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.

**Step 3** Expand the node for the ports that you want to configure.

**Step 4** Click on one of the ports under the **Ethernet Ports** node.

If you want to reconfigure a server port, appliance port, or FCoE storage port, expand the appropriate node.

**Step 5** Select **Show Interface**.

**Step 6** Choose **Uplink Eth Interface** or **Uplink FCoE Interface**.

**Step 7** Select **Auto**, **CL74**, or **CL91** for the forward error correction mode.

**Step 8** Click **OK**.

This sets the forward error correction setting to auto, cl74, or cl91 for the Ethernet uplink port. For the , UCS 6400 Series, UCS 6500 Series Fabric Interconnects, forward error correction is only configurable for 25 Gbps or 100 Gbps port speeds.

## Q-in-Q Forwarding

QinQ is defined by IEEE 802.1ad. QinQ is also known as 802.1Q-in-802.1Q that helps to expand the VLAN space through the addition of 802.1Q tag to 802.1Q-tagged packets. This expansion is also termed as VLAN stacking or double VLAN.

In general, the QinQ packets have a standard format. In a VLAN stacking, one 802.11Q tagged packet is encapsulated in another 802.1Q tag. During transmission, packets are forwarded on the outer VLAN tag on the public network and on the inner VLAN tag for private network.



---

**Note** The 802.1Q supports 4096 VLANs.

---

## Configuring Q-in-Q Forwarding

You can configure Q-in-Q Forwarding on Cisco UCS 6400 Series Fabric Interconnects and Cisco UCS 6536 Fabric Interconnect.

To configure Q-in-Q Forwarding, do the following:

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud**.
- Step 3** In the **Work** pane, click the **Global Policies** tab.
- Step 4** In the **Q-in-Q Forwarding** section, click to select **Enabled** radio button.
- Step 5** Click **Save Changes**.
- Step 6** If the **Q-in-Q Forwarding** option is successfully selected, a confirmation message displays. Click **OK** to close the dialog box.

**Note** **Q-in-Q Forwarding** is a prerequisite for **Enable QinQ** and **QinQ VLAN**. If you want to choose **Enable QinQ** on a vLAN, ensure **Q-in-Q Forwarding** field enabled.

---

## Unconfiguring Q-in-Q Forwarding

You can unconfigure Q-in-Q Forwarding on Cisco UCS 6400 Series Fabric Interconnects and Cisco UCS 6536 Fabric Interconnect. By default, Q-in-Q Forwarding is disabled.

To unconfigure Q-in-Q Forwarding, do the following:

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > LAN Cloud**.
  - Step 3** In the **Work** pane, click the **Global Policies** tab.
  - Step 4** In the **Q-in-Q Forwarding** section, choose **Disabled**.
  - Step 5** Click **Save Changes**.
  - Step 6** If the **Q-in-Q Forwarding** option is successfully disabled, a confirmation message displays. Click **OK** to close the dialog box.
- 

## Appliance Ports

Appliance ports are only used to connect fabric interconnects to directly attached NFS storage.



**Note** When you create a new appliance VLAN, its IEEE VLAN ID is not added to the LAN Cloud. Therefore, appliance ports that are configured with the new VLAN remain down, by default, due to a pinning failure. To bring up these appliance ports, you have to configure a VLAN in the LAN Cloud with the same IEEE VLAN ID.

---

Cisco UCS Manager supports up to four appliance ports per fabric interconnect.

## Configuring an Appliance Port

You can configure Appliance ports on either the fixed module or an expansion module.

This task describes only one method of configuring appliance ports. You can also configure appliance ports from the **General** tab for the port.



**Note** If you configure an appliance port when the uplink port is down, Cisco UCS Manager may display an error message stating that the appliance port has failed. This message is controlled by the **Action on Uplink Fail** option in the associated Network Control Policy.

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment > Fabric Interconnects > Fabric\_Interconnect\_Name**.
- Step 3** Expand the node for the ports that you want to configure.
- Step 4** Under the **Ethernet Ports** node, select a port.

If you want to reconfigure a server port, uplink Ethernet port, or FCoE storage port, expand the appropriate node.

- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** In the **Actions** area, click **Reconfigure**.
- Step 7** From the drop-down list, click **Configure as Appliance Port**.
- Step 8** If a confirmation dialog box displays, click **Yes**.
- Step 9** In the **Configure as Appliance Port** dialog box, complete the required fields.
- Step 10** In the **VLANs** area, do the following:
- In the **Port Mode** field, click one of the following radio buttons to select the mode you want to use for the port channel:
    - **Trunk**—Cisco UCS Manager GUI displays the VLANs Table that lets you choose the VLANs you want to use.
    - **Access**—Cisco UCS Manager GUI displays the **Select VLAN** drop-down list that allows you to choose a VLAN to associate with this port or port channel.
- With either mode, you can click the **Create VLAN** link to create a new VLAN.
- Note** If traffic for the appliance port needs to traverse the uplink ports, you must also define each VLAN used by this port in the LAN cloud. For example, you need the traffic to traverse the uplink ports if the storage is also used by other servers, or if you want to ensure that traffic fails over to the secondary fabric interconnect if the storage controller for the primary fabric interconnect fails.
- If you clicked the **Trunk** radio button, complete the required fields in the VLANs table.
  - If you clicked the **Access** radio button, choose a VLAN from the **Select VLAN** drop-down list.
- Step 11** (Optional) If you want to add an endpoint, check the **Ethernet Target Endpoint** check box and specify the name and MAC address.
- Step 12** Click **OK**.

---

## Modifying the Properties of an Appliance Port

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the appliance port that you want to modify.
- Step 4** Expand **Ethernet Ports**.
- Step 5** Click the appliance port for which you want to modify the properties.
- Step 6** In the **Work** pane, click the **General** tab.
- Step 7** In the **Actions** area, click **Show Interface**.
- You may need to expand the pane or use the scroll bars in the **Properties** dialog box to see all the fields.

- Step 8** In the **Properties** dialog box, modify the values as needed.
- Step 9** Click **OK**.

## Configuring an Appliance Port for Forward Error Correction

You can configure forward error correction (FEC) for appliance ports that operate at 25 Gbps and 100 Gbps speeds that support this feature.

**Table 7: FEC CL-74 and FEC CL-91 Support Matrix**

Port Speed	FEC CL-74	FEC CL-91
1 Gbps	Not supported	Not supported
10 Gbps	Not supported	Not supported
25 Gbps	Supported	Supported
40 Gbps	Not supported	Not supported
100 Gbps	Not supported	Supported
Auto	Based on inserted transceiver's maximum supported speed	Based on inserted transceiver's maximum supported speed

### Procedure

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the Appliance ports that you want to configure.
- Step 4** Select **Show Interface**.
- Step 5** Choose **Appliance Port**.
- Step 6** Select **Auto** or **CL-74** or **CL-91** to set the forward error correction mode as for the Appliance port. **Auto** is the default option.
- Step 7** Select **Enabled** or **Disabled** to set the auto negotiation for the Appliance port. **Enabled** is the default option.
- Step 8** Click **OK**.

## Modifying an Appliance Breakout Port for Forward Error Correction

You can configure forward error correction (FEC) for appliance breakout ports.

Table 8: FEC CL-74 and FEC CL-91 Support Matrix

BreakoutType	Port Speed	Forward Error Correction	Allowed
25x4	25 Gbps	Auto	Yes
25x4	25 Gbps	CL74	Yes
25x4	25 Gbps	CL91	Yes
25x4	Auto	Auto	Yes
v	Auto	CL74	No
25x4	Auto	CL91	No

### Procedure

- 
- Step 1** In the **Navigation** pane, click **Equipment**.
  - Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
  - Step 3** Expand the node for the Appliance ports that you want to configure.
  - Step 4** Select **Show Interface**.
  - Step 5** Choose **Appliance Port**.
  - Step 6** Select **Auto** or **CL-74** or **CL-91** to set the forward error correction mode as for the Appliance port. **Auto** is the default option.
  - Step 7** Select **Enabled** or **Disabled** to set the auto negotiation for the Appliance port. **Enabled** is the default option.
  - Step 8** Click **OK**.
- 

## FCoE and Fibre Channel Storage Ports

### Configuring an Ethernet Port as an FCoE Storage Port

You can configure FCoE storage ports on either the fixed module or an expansion module.

This task describes only one method of configuring FCoE storage ports. You can also configure FCoE storage ports from the **General** tab for the port.

#### Before you begin

The Fibre Channel switching mode must be set to **Switching** for these ports to be valid. The storage ports cannot function in **end-host** mode.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Depending upon the location of the ports you want to configure, expand one of the following:
- **Fixed Module**
  - **Expansion Module**
- Step 4** Click one or more of the ports under the **Ethernet Ports** node.  
If you want to reconfigure an uplink Ethernet port, server port, or appliance port, expand the appropriate node.
- Step 5** Right-click the selected port or ports and choose **Configure as FCoE Storage Port**.  
On Cisco UCS 6454 Fabric Interconnects, ports 49-54 cannot be configured as FCoE storage ports.  
On Cisco UCS 64108 Fabric Interconnects, port 97-108 cannot be configured as FCoE storage ports.
- Step 6** If a confirmation dialog box displays, click **Yes**.
- Step 7** Click **OK**.
- 

## Configuring a Fibre Channel Storage Port

This task describes only one method of configuring FC storage ports. You can also configure FC storage ports from the **General** tab for the port.

### Before you begin

The Fibre Channel switching mode must be set to Switching for these ports to be valid. The storage ports cannot function in end-host mode.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the **Expansion Module** node.
- Step 4** Click one or more of the ports under the **FC Ports** node.
- Step 5** Right-click the selected port or ports and choose **Configure as FC Storage Port**.
- Step 6** If a confirmation dialog box displays, click **Yes**.
- Step 7** Click **OK**.
-



## Restoring an Uplink Fibre Channel Port

This task describes only one method of restoring an FC storage port to function as an uplink FC port. You can also reconfigure FC storage ports from the **General** tab for the port.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
  - Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
  - Step 3** Expand the **Expansion Module** node.
  - Step 4** Click one or more of the ports under the **FC Ports** node.
  - Step 5** Right-click the selected port or ports and choose **Configure as Uplink Port**.
  - Step 6** If a confirmation dialog box displays, click **Yes**.
  - Step 7** Click **OK**.
- 

## Converting FC Storage Port to FC Uplink Port

You can configure an FC Uplink port on either a fixed module or an expansion module.

This task describes only one method of configuring FC Uplink ports. You can also configure FC uplink ports from a right-click menu for the port.



---

**Important** For Cisco UCS 6400 Series and Cisco UCS 6500 Series Fabric Interconnects, the fill pattern is greyed out and is automatically set to IDLE.

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the ports that you want to configure.
- Step 4** Under the **FC Ports** node, select any **Storage** port.
- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** From the **Actions** area, select **Configure as Uplink Port**.
- Step 7** If a confirmation dialog box displays, click **Yes**.
- Step 8** The Cisco UCS Manager GUI displays a success message.

In the **Actions** area, **Configure as Uplink Port** becomes grayed out and **Configure as FC Storage Port** becomes active.

---

# Configuring FCoE Uplink for Forward Error Correction

You can configure forward error correction (FEC) for FCoE uplinks that operate at 25 Gbps and 100 Gbps speeds that support this feature.

Cisco UCS Manager Release 4.2(3b) introduces support for FCoE uplink ports in Fibre Channel switch mode on the Cisco UCS 6536 Fabric Interconnect.

**Table 9: FEC CL-74 and FEC CL-91 Support Matrix**

Port Speed	FEC CL-74	FEC CL-91
1 Gbps	Not supported	Not supported
10 Gbps	Not supported	Not supported
25 Gbps	Supported	Supported
40 Gbps	Not supported	Not supported
100 Gbps	Not supported	Supported
Auto	Based on inserted transceiver's maximum supported speed	Based on inserted transceiver's maximum supported speed

## Procedure

	Command or Action	Purpose
<b>Step 1</b>	UCS-A# <b>scope fc-uplink</b>	Enters FCoE uplink mode.
<b>Step 2</b>	UCS-A /fc-uplink # <b>scope fabric a   b</b>	Enters fabric mode for the specified fabric.
<b>Step 3</b>	UCS-A /fc-uplink/fabric # <b>scope fcoeinterface slot-id port-id</b>	Enters FCoE interface mode for the specified interface.
<b>Step 4</b>	Required: UCS-A /fc-uplink/fabric/fcoeinterface # <b>set fec {auto   cl74   cl91}</b>	Sets the forward error correction setting as auto, cl74, or cl91 for the FCoE uplink. For the UCS 6400 Series Fabric Interconnect and Cisco UCS 6536 Fabric Interconnect, forward error correction is only configurable for 25 Gbps or 100 Gbps port speeds.
<b>Step 5</b>	UCS-A /fc-uplink/fabric/fcoeinterface # <b>commit-buffer</b>	Commits the transaction to the system configuration.

## Example

The following example shows how to enable forward error correction cl74 on an interface for FCoE uplink 35 on slot 1 of fabric A, and commits the transaction:

```
UCS-A# scope fc-uplink
UCS-A /fc-uplink # scope fabric a
UCS-A /fc-uplink/fabric # scope fcoeinterface 1 35
UCS-A /fc-uplink/fabric/fcoeinterface # set fec c174
UCS-A /fc-uplink/fabric/fcoeinterface # commit-buffer
```

## FCoE Uplink Ports

FCoE uplink ports are physical Ethernet interfaces between the fabric interconnects and the upstream Ethernet switch, used for carrying FCoE traffic. With this support the same physical Ethernet port can carry both Ethernet traffic and Fibre Channel traffic.

FCoE uplink ports connect to upstream Ethernet switches using the FCoE protocol for Fibre Channel traffic. This allows both the Fibre Channel traffic and Ethernet traffic to flow on the same physical Ethernet link.




---

**Note** FCoE uplinks and unified uplinks enable the multi-hop FCoE feature, by extending the unified fabric up to the distribution layer switch.

---

You can configure the same Ethernet port as any of the following:

- **FCoE uplink port**—As an FCoE uplink port for only Fibre Channel traffic.
- **Uplink port**—As an Ethernet port for only Ethernet traffic.
- **Unified uplink port**—As a unified uplink port to carry both Ethernet and Fibre Channel traffic.

## Configuring FCoE Uplink Ports

You can configure an FCoE Uplink port on either a fixed module or an expansion module.

This task describes only one method of configuring FCoE Uplink ports. You can also configure FCoE uplink ports from a right-click menu or from the General tab for the port.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the ports that you want to configure.
- Step 4** Under the **Ethernet Ports** node, select any **Unconfigured** port.
- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** In the **Actions** area, click **Reconfigure**.
- Step 7** From the drop down options, select **Configure as FCoE Uplink Port**.
- Step 8** If a confirmation dialog box displays, click **Yes**.
- Step 9** The Cisco UCS Manager GUI displays a success message.

In the **Properties** area, the **Role** changes to **Fcoe Uplink**.

## Unified Storage Ports

Unified storage involves configuring the same physical port as both an Ethernet storage interface and an FCoE storage interface. You can configure any appliance port or FCoE storage port as a unified storage port. To configure a unified storage port, you must have the fabric interconnect in Fibre Channel switching mode.

In a unified storage port, you can enable or disable individual FCoE storage or appliance interfaces.

- In an unified storage port, if you do not specify a non-default VLAN for the appliance port, the FCoE-storage-native-vlan will be assigned as the native VLAN on the unified storage port. If the appliance port has a non-default native VLAN specified as native VLAN, this will be assigned as the native VLAN for the unified storage port.
- When you enable or disable the appliance interface, the corresponding physical port is enabled or disabled. So when you disable the appliance interface in unified storage, even if the FCoE storage is enabled, it goes down with the physical port.
- When you enable or disable the FCoE storage interface, the corresponding VFC is enabled or disabled. So when the FCoE storage interface is disabled in a unified storage port, the appliance interface will continue to function normally.

## Configuring an Appliance Port as a Unified Storage Port

You can configure a unified storage port either from an appliance port or from an FCoE storage port. You can also configure the unified storage port from an unconfigured port. If you start from an unconfigured port, you will assign either an appliance configuration or an FCoE storage configuration to the port, and then will add another configuration to enable it as a unified storage port.



**Important** Make sure the fabric interconnect is in Fibre Channel switching mode.

### Procedure

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Depending on the location of the ports you want to configure, expand one of the following:
  - **Fixed Module**
  - **Expansion Module**
- Step 4** Under the **Ethernet Ports** node, select any the port that is already configured as an appliance port. In the **Work** pane, under the **General** tab, in the **Properties** area, the **Role** will show as **Appliance Storage**.

- Step 5** In the **Actions** area, click **Reconfigure**.
- Step 6** From the pop-up menu, select **Configure as FCoE Storage** port.
- Step 7** If a confirmation dialog box displays, click **Yes**.
- Step 8** The Cisco UCS Manager GUI displays a success message. In the **Properties** area, the **Role** changes to **Unified Storage**.
- 

## Unconfiguring a Unified Storage Port

You can unconfigure and remove both configurations from the unified connect port. Or you can unconfigure either of them and retain the other on the port.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the ports that you want to unconfigure.
- Step 4** Under the **Ethernet Ports** node, select the port that you want to unconfigure.
- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** In the **Actions** area, click **Unconfigure**. You will see the following options:
- **Unconfigure FCoE Storage Port**
  - **Unconfigure Appliance Port**
  - **Unconfigure both**
- Step 7** Select one of the unconfigure options.
- Step 8** If a confirmation dialog box displays, click **Yes**.
- Step 9** The Cisco UCS Manager GUI displays a success message. In the **Properties** area, the **Role** changes to based on your unconfigure selection.
- 

## Unified Uplink Ports

When you configure an Ethernet uplink and an FCoE uplink on the same physical Ethernet port, it is called a unified uplink port. You can individually enable or disable either the FCoE or Ethernet interfaces independently.

- Enabling or disabling the FCoE uplink results in the corresponding VFC being enabled or disabled.
- Enabling or disabling an Ethernet uplink results in the corresponding physical port being enabled or disabled.

If you disable an Ethernet uplink, it disables the underlying physical port in a unified uplink. Therefore, even when the FCoE uplink is enabled, the FCoE uplink also goes down. But if you disable an FCoE uplink, only the VFC goes down. If the Ethernet uplink is enabled, it can still function properly in the unified uplink port.

## Configuring Unified Uplink Ports

You can configure the unified uplink port from either of the following:

- From an existing FCoE uplink port or Ethernet uplink port
- From an unconfigured uplink port

You can configure the unified uplink port on either a fixed module or on an expansion module.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the ports that you want to configure.
- Step 4** Under the **Ethernet Ports** node, select a port.
- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** In the **Properties** area, make sure the **Role** shows as **Fcoe Uplink**.
- Step 7** In the **Actions** area, click **Reconfigure**.
- Step 8** From the drop-down options, select **Configure as Uplink Port**.
- Step 9** If a confirmation dialog box displays, click **Yes**.
- Step 10** The Cisco UCS Manager GUI displays a success message.
- In the **Properties** area, the **Role** changes to **Unified Uplink**.
- 

## Unconfiguring Unified Uplink Port

You can unconfigure and remove both configurations from the unified uplink port. Or you can unconfigure either the FCoE configuration or Ethernet port configuration and retain the other on the port.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Expand the node for the ports that you want to unconfigure.
- Step 4** Under the **Ethernet Ports** node, select the port you want to unconfigure.
- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** In the **Actions** area, click **Unconfigure**. Select one of the following options:
- **Unconfigure FCoE Uplink Port**

- **Unconfigure Uplink Port**
- **Unconfigure both**

- Step 7** If a confirmation dialog box displays, click **Yes**.
- Step 8** The Cisco UCS Manager GUI displays a success message. In the **Properties** area, the **Role** changes based on your unconfigure selection.
- Step 9** Click **Save Changes**.
- 

## Uplink Ethernet Port Channels

An uplink Ethernet port channel allows you to group several physical uplink Ethernet ports (link aggregation) to create one logical Ethernet link to provide fault-tolerance and high-speed connectivity. In Cisco UCS Manager, you create a port channel first and then add uplink Ethernet ports to the port channel. You can add up to 16 uplink Ethernet ports to a port channel.



- Important** The state of a configured port changes to unconfigured in the following scenarios:
- The port is deleted or removed from a port channel. The port channel can be of any type, such as, uplink or storage.
  - A port channel is deleted.
- 



- Note** Cisco UCS uses Link Aggregation Control Protocol (LACP), not Port Aggregation Protocol (PAgP), to group the uplink Ethernet ports into a port channel. If the ports on the upstream switch are not configured for LACP, the fabric interconnects treat all ports in an uplink Ethernet port channel as individual ports, and therefore forward packets.
- 

## Creating an Uplink Ethernet Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud**.
- Step 3** Expand the node for the fabric interconnect where you want to add the port channel.
- Step 4** Right-click the **Port Channels** node and choose **Create Port Channel**.
- Step 5** In the **Set Port Channel Name** panel, specify the ID and name, then click **Next**.
- Step 6** In the **Add Ports** panel, specify the ports that you want to add.

**Note** Cisco UCS Manager warns you if you select a port that has been configured as a server port. You can click **Yes** in the dialog box to reconfigure that port as an uplink Ethernet port and include it in the port channel.

**Step 7** Click **Finish**.

---

## Enabling an Uplink Ethernet Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > LAN Cloud**.
  - Step 3** Expand the node for the fabric interconnect that includes the port channel you want to enable.
  - Step 4** Expand the **Port Channels** node.
  - Step 5** Right-click the port channel you want to enable and choose **Enable Port Channel**.
  - Step 6** If a confirmation dialog box displays, click **Yes**.
- 

## Disabling an Uplink Ethernet Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > LAN Cloud**.
  - Step 3** Expand the node for the fabric interconnect that includes the port channel you want to disable.
  - Step 4** Expand the **Port Channels** node.
  - Step 5** Right-click the port channel you want to disable and choose **Disable Port Channel**.
- 

## Adding Ports to and Removing Ports from an Uplink Ethernet Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud > Fabric > Port Channels**.
- Step 3** Click the port channel to which you want to add or remove ports.
- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** In the **Actions** area, click **Add Ports**.



- Step 6** In the **Add Ports** dialog box, do one of the following:
- To add ports, choose one or more ports in the **Ports** table, and then click the >> button to add the ports to the **Ports in the port channel** table.
  - To remove ports, choose one or more ports in the **Ports in the port channel** table, and then click the << button to remove the ports from the port channel and add them to the **Ports** table.
- Step 7** Click **OK**.
- 

## Deleting an Uplink Ethernet Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud**.
- Step 3** Expand the node for the fabric interconnect where you want to delete the port channel.
- Step 4** Click the **Port Channels** node.
- Step 5** In the **General** tab for the **Port Channels** node, choose the port channel that you want to delete.
- Step 6** Right-click the port channel and choose **Delete**.
- 

## Appliance Port Channels

An appliance port channel allows you to group several physical appliance ports to create one logical Ethernet storage link for the purpose of providing fault-tolerance and high-speed connectivity. In Cisco UCS Manager, you create a port channel first and then add appliance ports to the port channel. You can add up to eight appliance ports to a port channel.

## Creating an Appliance Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Appliances**.
- Step 3** Expand the node for the fabric interconnect where you want to add the port channel.
- Step 4** Right-click the **Port Channels** node and choose **Create Port Channel**.
- Step 5** In the **Set Port Channel Name** panel of the **Create Port Channel** wizard, complete the required fields to specify the identity and other properties of the port channel.
- You can create a LAN pin group, network control policy, and flow control policy from this panel.
- Step 6** In the **VLANs** area, specify the **Port Mode** and other information for the VLANs.

You can create a VLAN from this panel.

- Step 7** (Optional) If you want to add an endpoint, click the **Ethernet Target Endpoint** check box to specify the name and MAC address.
- Step 8** Click **Next**.
- Step 9** In the **Add Ports** panel of the **Create Port Channel** wizard, specify the ports that you want to add.
- Note** Cisco UCS Manager warns you if your configuration could cause issues with service profiles or port configurations. You can click **Yes** in the dialog box if you want to create the port channel despite those potential issues.
- Step 10** Click **Finish**.
- 

## Enabling an Appliance Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Appliances**.
- Step 3** Expand the node for the fabric interconnect that includes the port channel you want to enable.
- Step 4** Expand the **Port Channels** node.
- Step 5** Right-click the port channel you want to enable and choose **Enable Port Channel**.
- Step 6** If a confirmation dialog box displays, click **Yes**.
- 

## Disabling an Appliance Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Appliances**.
- Step 3** Expand the node for the fabric interconnect that includes the port channel you want to disable.
- Step 4** Expand the **Port Channels** node.
- Step 5** Right-click the port channel that you want to disable and choose **Disable Port Channel**.
- Step 6** If a confirmation dialog box displays, click **Yes**.
-

## Deleting an Appliance Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Appliances**.
- Step 3** Expand the node for the fabric interconnect that includes the port channel you want to delete.
- Step 4** Expand the **Port Channels** node.
- Step 5** Right-click the port channel you want to enable and choose **Delete**.
- Step 6** If a confirmation dialog box displays, click **Yes**.
- 

## Adding Ports and Removing Ports within an Appliance Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Appliances > Fabric > Port Channels**.
- Step 3** Click the port channel to which you want to add ports, or from which to remove ports.
- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** In the **Actions** area, click **Add Ports**.
- Step 6** In the **Add Ports** dialog box, do one of the following:
- To add ports, choose one or more ports in the **Ports** table, and then click the >> button to add the ports to the **Ports in the port channel** table.
  - To remove ports, choose one or more ports in the **Ports in the port channel** table, and then click the << button to remove the ports from the port channel and add them to the **Ports** table.
- Step 7** Click **OK**.
- 

## Cisco UCS Mini Scalability Ports

The Cisco UCS 6324 Fabric Interconnect contains a scalability port as well as four unified ports. The scalability port is a 40GB QSFP+ breakout port that, with proper cabling, can support four 1G or 10G SFP+ ports. A scalability port can be used as a licensed server port for supported Cisco UCS rack servers, as an appliance port, or as an FCoE port.

In the Cisco UCS Manager GUI, the scalability port is displayed as **Scalability Port 5** below the **Ethernet Ports** node. The individual breakout ports are displayed as **Port 1** through **Port 4**.

In the Cisco UCS Manager CLI, the scalability port is not displayed, but the individual breakout ports are displayed as **Br-Eth1/5/1** through **Br-Eth1/5/4**.

## Configuring Scalability Ports

To configure any type of supported port or port member on the scalability port, expand the **Ethernet Ports** mode, then the **Scalability Port 5** node.

### Procedure

- 
- Step 1** In the **Navigation** pane, click **Equipment**.
  - Step 2** In the **Equipment** tab, expand **Fabric Interconnects** > *Fabric\_Interconnect\_Name* > **Fixed Module** > **Ethernet Ports** > **Scalability Port 5**.
  - Step 3** Click on a port under the **Scalability Port 5** node.
  - Step 4** Configure the port as needed.
- 

## Creating a Threshold Definition

### Procedure

- 
- Step 1** In the **Navigation** pane, click **Admin**.
  - Step 2** In the **Admin** tab, expand **All** > **Stats Management** > **fabric** > **Internal LAN** > **thr-policy-default**.
  - Step 3** Click **Create Threshold Class**.
  - Step 4** In the **Choose Statistics Class** > **Create Threshold Class**, choose **NI Ether Error Stats** statistics class to monitor network interface ports. You can configure a custom threshold for these ports from the **Stat Class** drop-down list.
  - Step 5** Click **Next**.
  - Step 6** In the **Threshold Definitions** screen of the **Create Threshold Class** wizard, click **Add**.  
The **Create Threshold Definition** dialog box opens.
    - a) From the **Property Type** field, choose the threshold property that you want to define for the class.
    - b) In the **Normal Value** field, enter the desired value for the property type.
    - c) In the **Alarm Triggers (Above Normal Value)** fields, check one or more of the following check boxes:
      - **Critical**
      - **Major**
      - **Minor**
      - **Warning**
      - **Condition**
      - **Info**
    - d) In the **Up and Down** fields, enter the range of values that should trigger the alarm.
    - e) In the **Alarm Triggers (Below Normal Value)** fields, click one or more of the following check boxes:

- **Critical**
- **Major**
- **Minor**
- **Warning**
- **Condition**
- **Info**

- f) In the **Up and Down** fields, enter the range of values that should trigger the alarm.
- g) Click **Ok**.

## Monitoring a Fabric Port

### Procedure

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** On the **Equipment** tab, expand **Chassis > IO Modules > IO Module 1 > Fabric Ports**.
- Step 3** Click the fabric port that you want to monitor.
- Step 4** Click one of the following tabs to view the status of the fabric:

Option	Description
<b>General</b>	Provides an overview of the status of the fabric, including a summary of any faults, a summary of the fabric properties, and a physical display of the fabric and its components.
<b>Faults</b>	Provides details of the faults generated by the fabric.
<b>Events</b>	Provides details of the events generated by the fabric.
<b>Statistics</b>	Provides statistics about the fabric and its components. You can view these statistics in tabular format or in chart format.

## Policy-Based Port Error Handling

If Cisco UCS Manager detects any errors on active network interface (NI) ports, and if the error-disable feature has been implemented, Cisco UCS Manager automatically disables the respective fabric interconnect port that is connected to the NI port that had errors. When a fabric interconnect port is error disabled, it is effectively shut down and no traffic is sent or received on that port.

The error-disable function serves two purposes:

- It lets you know which fabric interconnect port is error-disabled and that the connected NI Port has errors.
- It eliminates the possibility that this port can cause the failure of other ports other ports connected to the same Chassis/FEX. Such a failure can occur when the NI port has errors, which can ultimately cause serious network issues. The error-disable function helps prevent these situations.

## Configuring Error-Based Action

### Procedure

---

- Step 1** In the **Navigation** pane, click **Admin**.
- Step 2** Expand **Admin > All > Stats Management > fabric > Internal LAN > thr-policy-default > etherNiErrStats**.
- Step 3** Select a delta property.
- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** To implement an error-disable state on a fabric interconnect port, check the **Disable FI port when fault is raised** check box.
- Step 6** To enable auto recovery, in the **Enable Auto Recovery** field, select **Enable**.
- Step 7** To specify the time after which the port can automatically be re-enabled, in the **Time (in minutes)** field, type the desired value.
- Step 8** Click **Save Changes**.
- 

## FCoE Port Channels

An FCoE port channel allows you to group several physical FCoE ports to create one logical FCoE port channel. At a physical level, the FCoE port channel carries FCoE traffic over an Ethernet port channel. So an FCoE port channel with a set of members is essentially an Ethernet port channel with the same members. This Ethernet port channel is used as a physical transport for FCoE traffic.

For each FCoE port channel, Cisco UCS Manager creates a VFC internally and binds it to an Ethernet port channel. FCoE traffic received from the hosts is sent over the VFC the same way as the FCoE traffic is sent over Fibre Channel uplinks.

## Creating an FCoE Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **SAN**.
- Step 2** Expand **SAN > SAN Cloud**.
- Step 3** Expand the node for the fabric where you want to create the port channel.
- Step 4** Right-click the **FCoE Port Channels** node and choose **Create FCoE Port Channel**.

- Step 5** In the **Set Port Channel Name** panel of the **Create FCoE Port Channel** wizard, specify the ID and name, then click **Next**.
- Step 6** In the **Add Ports** panel of the **Create FCoE Port Channel** wizard, specify the ports that you want to add.
- Step 7** Click **Finish**.
- 

## Deleting an FCoE Port Channel

### Procedure

---

- Step 1** In the **Navigation** pane, click **SAN**.
- Step 2** On the **SAN** tab, expand **SAN > SAN Cloud > Fabric > FCoE Port Channels**.
- Step 3** Right-click the port channel you want to delete and choose **Delete**.
- Step 4** If a confirmation dialog box displays, click **Yes**.
- 

## Unified Uplink Port Channel

When you create an Ethernet port channel and an FCoE port channel with the same ID, it is called a unified uplink port channel. When the unified port channel is created, a physical Ethernet port channel and a VFC are created on the fabric interconnect with the specified members. The physical Ethernet port channel is used to carry both Ethernet and FCoE traffic. The VFC binds FCoE traffic to the Ethernet port channel.

The following rules will apply to the member port sets of the unified uplink port channel:

- The Ethernet port channel and FCoE port channel on the same ID, must have the same set of member ports.
- When you add a member port channel to the Ethernet port channel, Cisco UCS Manager adds the same port channel to FCoE port channel as well. Similarly, adding a member to the FCoE port channel adds the member port to the Ethernet port channel.
- When you delete a member port from one of the port channels, Cisco UCS Manager automatically deletes the member port from the other port channel.

If you disable an Ethernet uplink port channel, it disables the underlying physical port channel in a unified uplink port channel. Therefore, even when the FCoE uplink is enabled, the FCoE uplink port channel also goes down. If you disable an FCoE uplink port channel, only the VFC goes down. If the Ethernet uplink port channel is enabled, it can still function properly in the unified uplink port channel.

## Adapter Port Channels

An adapter port channel groups into one logical link all the physical links going from a Cisco UCS Virtual Interface Card (VIC) into an I/O.

Adapter port channels are created and managed internally by Cisco UCS Manager when it detects that the correct hardware is present. Adapter port channels cannot be configured manually. Adapter port channels are viewable using the Cisco UCS Manager GUI or the Cisco UCS Manager CLI.

## Viewing Adapter Port Channels

### Procedure

- 
- Step 1** In the **Navigation** pane, click **Equipment**.
  - Step 2** On the **Equipment** tab, expand **Equipment** > **Chassis** > *Chassis\_Number* > **Servers** > *Server\_Number* > **Interface Cards**
  - Step 3** Click the adapter for which you want to view the adapter port channels.
  - Step 4** In the **Work** pane, click the **DCE Interfaces** tab.
  - Step 5** To view details of the adapter port channel, click the link in the **Port Channel** column.
- 

## Fabric Port Channels

Fabric port channels allow you to group several of the physical links from an IOM and IFM (IOM for Cisco UCS X-Series Servers) to a fabric interconnect into one logical link for redundancy and bandwidth sharing. As long as one link in the fabric port channel remains active, the fabric port channel continues to operate.

If the correct hardware is connected, fabric port channels are created by Cisco UCS Manager in the following ways:

- During chassis discovery according to the settings configured in the chassis discovery policy.
- After chassis discovery according to the settings configured in the chassis connectivity policy for a specific chassis.

For each IOM and IFM (IOM for Cisco UCS X-Series Servers) there is a single fabric port channel. Each uplink connecting an IOM and IFM (IOM for Cisco UCS X-Series Servers) to a fabric interconnect can be configured as a discrete link or included in the port channel, but an uplink cannot belong to more than one fabric port channel. For example, if a chassis with two IOMs is discovered and the chassis discovery policy is configured to create fabric port channels, Cisco UCS Manager creates two separate fabric port channels: one for the uplinks connecting IOM-1 and another for the uplinks connecting IOM-2. No other chassis can join these fabric port channels. Similarly, uplinks belonging to the fabric port channel for IOM-1 cannot join the fabric port channel for IOM-2.

## Load Balancing Over Ports

Load balancing traffic among ports between IOMs and fabric interconnects uses the following criteria for hashing.

- For Ethernet traffic:
  - Layer 2 source and destination address



Layer 3 source and destination address

Layer 4 source and destination ports

- For FCoE traffic:

Layer 2 source and destination address

Source and destination IDs (SID and DID) and Originator Exchange ID (OXID)

In this example, a 2200 Series IOM module is verified by connecting iom *X* (where *X* is the chassis number).

```
show platform software fwmctrl nifport
(....)
Hash Parameters:
 12_da: 1 12_sa: 1 12_vlan: 0
 13_da: 1 13_sa: 1
 14_da: 1 14_sa: 1
FCoE 12_da: 1 12_sa: 1 12_vlan: 0
FCoE 13_did: 1 13_sid: 1 13_oxid: 1
```

## Configuring a Fabric Port Channel

### Procedure

---

- Step 1** To include all links from the IOM to the fabric interconnect in a fabric port channel during chassis discovery, set the link grouping preference in the chassis discovery policy to port channel.
- See the *Configuring the Chassis/FEX Discovery Policy* section in *Cisco UCS Manager Infrastructure Management Guide, Release 3.2*.
- Step 2** To include links from an individual chassis in a fabric port channel during chassis discovery, set the link grouping preference in the chassis connectivity policy to port channel.
- See the *Configuring a Chassis Connectivity Policy* section in *Cisco UCS Manager Infrastructure Management Guide, Release 3.2*.
- Step 3** After chassis discovery, enable or disable additional fabric port channel member ports.
- See [Enabling or Disabling a Fabric Port Channel Member Port, on page 80](#)
- 

### What to do next

To add or remove chassis links from a fabric port channel after making a change to the chassis discovery policy or the chassis connectivity policy, reacknowledge the chassis. Chassis reacknowledgement is not required to enable or disable chassis member ports from a fabric port channel.

## Viewing Fabric Port Channels

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
  - Step 2** Expand **Equipment** > **Chassis** > *Chassis Number* > **IO Modules**.
  - Step 3** Click the IOM for which you want to view the fabric port channels.
  - Step 4** In the **Work** pane, click the **Fabric Ports** tab.
  - Step 5** To view details of the fabric port channel, click the link in the **Port Channel** column.
- 

## Enabling or Disabling a Fabric Port Channel Member Port

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN** > **Internal LAN** > *Fabric* > **Port Channels**.
  - Step 3** Expand the port channel for which you want to enable or disable a member port.
  - Step 4** Click the Ethernet interface for the member port that you want to enable or disable.
  - Step 5** In the **Work** pane, click the **General** tab.
  - Step 6** In the **Actions** area, click one of the following:
    - **Enable Interface**
    - **Disable Interface**
  - Step 7** If a confirmation dialog box displays, click **Yes**.
- 

## Configuring Server Ports with the Internal Fabric Manager

### Internal Fabric Manager

The Internal Fabric Manager provides a single interface through which you can configure server ports for a fabric interconnect in a Cisco UCS domain. The Internal Fabric Manager is accessible from the **General** tab for that fabric interconnect.

Some of the configuration that you can do in the Internal Fabric Manager can also be done in nodes on the **Equipment** tab, on the **LAN** tab, or in the LAN Uplinks Manager.

## Launching the Internal Fabric Manager

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
  - Step 2** Expand **Equipment** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
  - Step 3** Click **Fixed Module**.
  - Step 4** In the **Work** pane, click **Internal Fabric Manager** in the **Actions** area.  
The Internal Fabric Manager opens in a separate window.
- 

## Configuring a Server Port with the Internal Fabric Manager

### Procedure

---

- Step 1** In the Internal Fabric Manager, click the down arrows to expand the **Unconfigured Ports** area.
  - Step 2** Right-click the port that you want to configure and choose **Configure as Server Port**.
  - Step 3** If a confirmation dialog box displays, click **Yes**.
  - Step 4** If you complete all of the tasks in the Internal Fabric Manager, click **OK**.
- 

## Unconfiguring a Server Port with the Internal Fabric Manager

### Procedure

---

- Step 1** In the Internal Fabric Manager, click the server port in the **Server Ports** table.
  - Step 2** Click **Unconfigure Port**.
  - Step 3** If a confirmation dialog box displays, click **Yes**.
  - Step 4** If you complete all of the tasks in the Internal Fabric Manager, click **OK**.
- 

## Enabling a Server Port with the Internal Fabric Manager

### Procedure

---

- Step 1** In the Internal Fabric Manager, click the server port in the **Server Ports** table.
- Step 2** Click **Enable Port**.

- Step 3** If a confirmation dialog box displays, click **Yes**.
- Step 4** If you complete all of the tasks in the Internal Fabric Manager, click **OK**.
- 

## Disabling a Server Port with the Internal Fabric Manager

### Procedure

---

- Step 1** In the Internal Fabric Manager, click the server port in the **Server Ports** table.
- Step 2** Click **Disable Port**.
- Step 3** If a confirmation dialog box displays, click **Yes**.
- Step 4** If you complete all of the tasks in the Internal Fabric Manager, click **OK**.
-



## CHAPTER 5

# LAN Uplinks Manager

---

This chapter includes the following sections:

- [LAN Uplinks Manager, on page 83](#)
- [Launching the LAN Uplinks Manager, on page 84](#)
- [Changing the Ethernet Switching Mode with the LAN Uplinks Manager, on page 84](#)
- [Configuring a Port with the LAN Uplinks Manager, on page 85](#)
- [Configuring Server Ports, on page 85](#)
- [Configuring Uplink Ethernet Ports, on page 86](#)
- [Configuring Uplink Ethernet Port Channels, on page 87](#)
- [Configuring LAN Pin Groups, on page 89](#)
- [Configuring Named VLANs, on page 90](#)
- [Configuring QoS System Classes with the LAN Uplinks Manager, on page 92](#)

## LAN Uplinks Manager

The LAN Uplinks Manager provides a single interface where you can configure the connections between Cisco UCS and the LAN. You can use the LAN Uplinks Manager to create and configure the following:

- Ethernet switching mode
- Uplink Ethernet ports
- Port channels
- LAN pin groups
- Named VLANs
- Server ports
- QoS system classes
- You can view Ethernet related events, faults, and FSM status using the tab available at the top in LAN Uplinks Manager.

Some of the configuration that you do in the LAN Uplinks Manager can also be done in nodes on other tabs, such as the **Equipment** tab or the **LAN** tab.

# Launching the LAN Uplinks Manager

## Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** On the **LAN** tab, click the **LAN** node.
  - Step 3** In the **Work** pane, click the **LAN Uplinks Manager** link on the **LAN Uplinks** tab.
- The LAN Uplinks Manager opens in a separate window.
- 

# Changing the Ethernet Switching Mode with the LAN Uplinks Manager



## Warning

When you change the Ethernet switching mode, Cisco UCS Manager logs you out and restarts the fabric interconnect. For a cluster configuration, Cisco UCS Manager restarts both fabric interconnects. The second fabric interconnect may take several minutes to complete the change in Ethernet switching mode and become system ready. The system retains the configuration.

While the fabric interconnects are booting, all blade servers lose all LAN and SAN connectivity, causing a complete outage of all services on the blades. This action may cause the operating system to crash.

---

## Procedure

---

- Step 1** In the LAN Uplinks Manager, click **LAN Uplinks**.
- Step 2** In the **Uplink Mode** area, click one of the following buttons:
  - Set **Ethernet Switching Mode**
  - Set **Ethernet End-Host Switching Mode**

The button for the current switching mode is dimmed.

- Step 3** In the dialog box, click **Yes**.
- Cisco UCS Manager restarts the fabric interconnect, logs you out, and disconnects the Cisco UCS Manager GUI.
-

# Configuring a Port with the LAN Uplinks Manager

All port types listed are configurable on both the fixed and expansion module, including server ports.

## Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.
- Step 2** In the **Ports** area, click the down arrows to expand the **Unconfigured Ports** section.
- Step 3** Expand **Fabric Interconnects** > *Fabric\_Interconnect\_Name* .
- Step 4** Expand the node where you want to configure ports.
- If no ports are listed below the node that you expanded, all ports in that module have already been configured.
- Step 5** Right-click the port that you want to configure and choose one of the following:
- **Configure as Server Port**
  - **Configure as Uplink Port**
- Step 6** If a confirmation dialog box displays, click **Yes**.
- 

## Configuring Server Ports

### Enabling a Server Port with the LAN Uplinks Manager

This procedure assumes that the port has been configured as a server port, but is disabled.

#### Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.
- Step 2** In the **Ports** area, click the down arrows to expand the **Server Ports** section.
- Step 3** Expand **Fabric Interconnects** > *Fabric\_Interconnect\_Name* .
- Step 4** Right-click the port that you want to enable and choose **Enable**.
- 

### Disabling a Server Port with the LAN Uplinks Manager

#### Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.
- Step 2** In the **Ports** area, click the down arrows to expand the **Server Ports** section.

- Step 3** Expand **Fabric Interconnects** > *Fabric\_Interconnect\_Name* .
  - Step 4** Right-click the port that you want to disable and choose **Disable**.
  - Step 5** If a confirmation dialog box displays, click **Yes**.
- 

## Configuring Uplink Ethernet Ports

### Enabling an Uplink Ethernet Port with the LAN Uplinks Manager

This procedure assumes that the port has been configured as an uplink Ethernet port, but is disabled.

#### Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.
  - Step 2** In the **Port Channels and Uplinks** area, expand **Interfaces** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name* .
  - Step 3** Right-click the port that you want to enable and choose **Enable Interface**.
  - Step 4** If a confirmation dialog box displays, click **Yes**.
- 

### Disabling an Uplink Ethernet Port with the LAN Uplinks Manager

#### Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.
  - Step 2** In the **Port Channels and Uplinks** area, expand **Interfaces** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name* .
  - Step 3** Right-click the port that you want to disable and choose **Disable Interfaces**.  
You can select multiple ports if you want to disable more than one uplink Ethernet port.
  - Step 4** If a confirmation dialog box displays, click **Yes**.
- 

The disabled port is removed from the list of enabled interfaces and returned to the **Unconfigured Ports** list.



# Configuring Uplink Ethernet Port Channels

## Creating a Port Channel with the LAN Uplinks Manager

### Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.
- Step 2** In the **Port Channels and Uplinks** area, click **Create Port Channel**.
- Step 3** From the pop-up menu, select one of the following fabric interconnects where you want to create the port channel:
- **Fabric Interconnect A**
  - **Fabric Interconnect B**
- Step 4** In the **Set Port Channel Name** panel, specify the ID and name, then click **Next**.
- Step 5** In the **Add Ports** panel, specify the ports you want to add.
- Note** Cisco UCS Manager warns you if you select a port that has been configured as a server port. You can reconfigure that port as an uplink Ethernet port, and include it in the port channel by clicking **Yes** in the dialog box.
- Step 6** Click **Finish**.
- 

## Enabling a Port Channel with the LAN Uplinks Manager

### Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.
- Step 2** In the **Port Channels and Uplinks** area, expand **Port Channels** > **Fabric Interconnects** > *Fabric\_Interconnect\_Name*.
- Step 3** Right-click the port channel that you want to enable and choose **Enable Port Channel**.
- Step 4** If a confirmation dialog box displays, click **Yes**.
- 

## Disabling a Port Channel with the LAN Uplinks Manager

### Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.

- Step 2** In the **Port Channels and Uplinks** area, expand **Port Channels > Fabric Interconnects > Fabric\_Interconnect\_Name**.
- Step 3** Right-click the port channel that you want to disable and choose **Disable Port Channel**.
- Step 4** If a confirmation dialog box displays, click **Yes**.
- 

## Adding Ports to a Port Channel with the LAN Uplinks Manager

### Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.
- Step 2** In the **Port Channels and Uplinks** area, expand **Port Channels > Fabric Interconnects > Fabric\_Interconnect\_Name**.
- Step 3** Right-click the port channel to which you want to add ports and choose **Add Ports**.
- Step 4** In the **Add Ports** dialog box, specify the ports that you want to add.
- Note** Cisco UCS Manager warns you if you select a port that has been configured as a server port. You can click **Yes** in the dialog box to reconfigure that port as an uplink Ethernet port and include it in the port channel.
- Step 5** Click **OK**.
- 

## Removing Ports from a Port Channel with the LAN Uplinks Manager

### Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.
- Step 2** In the **Port Channels and Uplinks** area, expand **Port Channels > Fabric Interconnects > Fabric\_Interconnect\_Name**.
- Step 3** Expand the port channel from which you want to remove ports.
- Step 4** Right-click the port that you want to remove from the port channel and choose **Delete**.
- Step 5** If a confirmation dialog box displays, click **Yes**.
- 

## Deleting a Port Channel with the LAN Uplinks Manager

### Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.

- Step 2** In the **Port Channels and Uplinks** area, expand **Port Channels > Fabric Interconnects > Fabric\_Interconnect\_Name**.
- Step 3** Right-click the port channel you want to delete and choose **Delete**.
- Step 4** If a confirmation dialog box displays, click **Yes**.
- 

## Configuring LAN Pin Groups

### Creating a Pin Group with the LAN Uplinks Manager

In a system with two fabric interconnects, you can associate the pin group with only one fabric interconnect or with both fabric interconnects.

#### Before you begin

Configure the ports and port channels with which you want to configure the pin group. You can only include ports and port channels configured as uplink ports in a LAN pin group.

#### Procedure

---

- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.
- Step 2** In the **Port Channels and Uplinks** area, click **Create Pin Group**.
- Step 3** In the **Create LAN Pin Group** dialog box, enter a unique name and description for the pin group.
- Step 4** To pin traffic for fabric interconnect A, do the following in the **Targets** area:
- Check the **Fabric Interconnect A** checkbox.
  - Click the drop-down arrow on the **Interface** field and navigate through the tree browser to select the port or port channel you want to associate with the pin group.
- Step 5** To pin traffic for fabric interconnect B, do the following in the **Targets** area:
- Check the **Fabric Interconnect B** checkbox.
  - Click the drop-down arrow on the **Interface** field and navigate through the tree browser to select the port or port channel you want to associate with the pin group.
- Step 6** Click **OK**.
- 

#### What to do next

Include the pin group in a vNIC template.

## Deleting a Port Channel with the LAN Uplinks Manager

### Procedure

- 
- Step 1** In the LAN Uplinks Manager, click the **LAN Uplinks** tab.
  - Step 2** In the **Port Channels and Uplinks** area, expand **Port Channels > Fabric Interconnects > Fabric\_Interconnect\_Name**.
  - Step 3** Right-click the port channel you want to delete and choose **Delete**.
  - Step 4** If a confirmation dialog box displays, click **Yes**.
- 

## Configuring Named VLANs

### Creating a Named VLAN with the LAN Uplinks Manager

In a Cisco UCS domain with two switches, you can create a named VLAN that is accessible to both switches or to only one switch.

**Table 10: Cisco UCS and fabric interconnect reserved VLANs**

Cisco UCS 6400 Series Fabric Interconnects	Cisco UCS 6500 Series Fabric Interconnects
VLANs 3915 to 4042 (reserved for Cisco NX-OS)	VLANs 1002 to 1005 (reserved for Cisco NX-OS)
VLANs 4043 to 4047 (reserved for Cisco UCS Manager)	
VLANs 4094 to 4098 (reserved for Cisco NX-OS)	



**Important** VLANs with IDs from 4043 to 4047 and from 4094 to 4095 are reserved. You cannot create VLANs with IDs from this range. Until Cisco UCS Manager Release 4.0(1d), VLAN ID 4093 was in the list of reserved VLANs. VLAN 4093 has been removed from the list of reserved VLANs and is available for configuration.

For Cisco UCS 6400 and 6500 FI Series, VLAN IDs from 1002 to 1005 are reserved for VLAN Trunking Protocol (VTP).

The VLAN IDs you specify must also be supported on the switch that you are using. For example, on Cisco Nexus 5000 Series switches, the VLAN ID range from 3968 to 4029 is reserved. Before you specify the VLAN IDs in Cisco UCS Manager, make sure that the same VLAN IDs are available on your switch.

VLANs in the LAN cloud and FCoE VLANs in the SAN cloud must have different IDs. Using the same ID for a VLAN and an FCoE VLAN in a VSAN results in a critical fault and traffic disruption for all vNICs and uplink ports using that VLAN. Ethernet traffic is dropped on any VLAN which has an ID that overlaps with an FCoE VLAN ID.

### Procedure

- 
- Step 1** In the LAN Uplinks Manager, click the **VLANs** tab.
- Step 2** On the icon bar to the right of the table, click +.  
If the + icon is disabled, click an entry in the table to enable it.
- Step 3** In the **Create VLANs** dialog box, specify the required fields and then click **OK**.  
Private VLANs are not supported for Cisco UCS Mini.
- Step 4** Click **OK**.  
Cisco UCS Manager adds the VLAN to one of the following **VLANs** nodes:
- The **LAN Cloud > VLANs** node for a VLAN accessible to both fabric interconnects.
  - The **Fabric\_Interconnect\_Name > VLANs** node for a VLAN accessible to only one fabric interconnect.
- 

## Deleting a Named VLAN with the LAN Uplinks Manager

If Cisco UCS Manager includes a named VLAN with the same VLAN ID as the one you delete, the VLAN is not removed from the fabric interconnect configuration until all named VLANs with that ID are deleted.

### Procedure

- 
- Step 1** In the LAN Uplinks Manager, click the **VLANs** tab.
- Step 2** Click one of the following subtabs, based on the VLAN that you want to delete:

Subtab	Description
<b>All</b>	Displays all VLANs in the Cisco UCS domain.
<b>Dual Mode</b>	Displays the VLANs that are accessible to both fabric interconnects.
<b>Fabric A</b>	Displays the VLANs that are accessible to only fabric interconnect A.
<b>Fabric B</b>	Displays the VLANs that are accessible to only fabric interconnect B.

- Step 3** In the table, click the VLAN you want to delete.  
You can use the **Shift** key or **Ctrl** key to select multiple entries.
- Step 4** Right-click the highlighted VLAN or VLANs and select **Delete**.
- Step 5** If a confirmation dialog box displays, click **Yes**.
-

# Configuring QoS System Classes with the LAN Uplinks Manager

The type of adapter in a server might limit the maximum MTU supported. For example, network MTU above the maximums might cause the packet to be dropped for the following adapters:

- The Cisco UCS M71KR CNA adapter, which supports a maximum MTU of 9216.
- The Cisco UCS 82598KR-CI adapter, which supports a maximum MTU of 14000.

## Procedure

**Step 1** In the LAN Uplinks Manager, click the **QoS** tab.

**Step 2** Update the following properties for the system class you want to configure, to meet the traffic management needs of the system:

**Note** Some properties may not be configurable for all system classes.

Name	Description
<b>Enabled</b> check box	<p>If checked, the associated QoS class is configured on the fabric interconnect and can be assigned to a QoS policy.</p> <p>If unchecked, the class is not configured on the fabric interconnect and any QoS policies associated with this class default to <b>Best Effort</b> or, if a system class is configured with a Cos of 0, to the Cos 0 system class.</p> <p><b>Note</b> This field is always checked for <b>Best Effort</b> and <b>Fibre Channel</b>.</p>
CoS field	<p>The class of service. You can enter an integer value between 0 and 6, with 0 being the lowest priority and 6 being the highest priority. We recommend that you do not set the value to 0, unless you want that system class to be the default system class for traffic if the QoS policy is deleted or the assigned system class is disabled.</p> <p><b>Note</b> This field is set to 7 for internal traffic and to <b>any</b> for <b>Best Effort</b>. Both of these values are reserved and cannot be assigned to any other priority.</p>

Name	Description
<b>Packet Drop</b> check box	<p>If checked, packet drop is allowed for this class. If unchecked, packets cannot be dropped during transmission. MTU configuration for drop classes is ignored.</p> <p>This field is always unchecked for the <b>Fibre Channel</b> class, which never allows dropped packets, and always checked for <b>Best Effort</b>, which always allows dropped packets.</p> <p><b>Note</b> When you save changes to the Packet Drop, the following warning message displays:</p> <p>You are making changes to the QoS system class, which may cause momentary disruption to traffic forwarding. Are you sure you want to apply the changes?</p>
<b>Weight</b> drop-down list	<p>This can be one of the following:</p> <ul style="list-style-type: none"> <li>• An integer between 1 and 10. If you enter an integer, Cisco UCS determines the percentage of network bandwidth assigned to the priority level as described in the <b>Weight (%)</b> field.</li> <li>• <b>best-effort</b>.</li> <li>• <b>none</b>.</li> </ul>
<b>Weight (%)</b> field	<p>To determine the bandwidth allocated to a channel, Cisco UCS:</p> <ol style="list-style-type: none"> <li>a. Adds the weights for all the channels</li> <li>b. Divides the channel weight by the sum of all weights to get a percentage</li> <li>c. Allocates that percentage of the bandwidth to the channel</li> </ol>

Name	Description
MTU drop-down list	<p>The maximum transmission unit for the channel. This can be one of the following:</p> <ul style="list-style-type: none"> <li>An integer between 1500 and 9216. This value corresponds to the maximum packet size.</li> </ul> <p><b>Note</b> When you save changes to the MTU, the following warning message displays:</p> <p>You are making changes to the QOS system class, which may cause momentary disruption to traffic forwarding. Are you sure you want to apply the changes?</p> <ul style="list-style-type: none"> <li><b>fc</b>—A predefined packet size of 2240.</li> <li><b>normal</b>—A predefined packet size of 1500.</li> </ul> <p><b>Note</b> This field is always set to <b>fc</b> for <b>Fibre Channel</b>.</p> <p><b>Note</b> Under the network QoS policy, the MTU is used only for buffer carving when no-drop classes are configured. No additional MTU adjustments are required under the network QoS policy to support jumbo MTU.</p>
<b>Multicast Optimized</b> check box	<p>If checked, the class is optimized to send packets to multiple destinations simultaneously.</p> <p><b>Note</b> This option is not applicable to the <b>Fibre Channel</b>.</p> <p><b>Note</b> Cisco UCS 6400 Series and Cisco UCS 6500 Series Fabric InterconnectFabric Interconnects do not support Multicast Optimized.</p>

**Step 3** Do one of the following:

- Click **OK** to save your changes and exit from the LAN Uplinks Manager.
- Click **Apply** to save your changes without exiting from the LAN Uplinks Manager.





## CHAPTER 6

# VLANs

---

- [About VLANs, on page 95](#)
- [Guidelines for Creating, Deleting, and Modifying VLANs, on page 96](#)
- [About the Native VLAN, on page 96](#)
- [About the Access and Trunk Ports, on page 97](#)
- [Named VLANs, on page 97](#)
- [Private VLANs, on page 98](#)
- [VLAN Port Limitations, on page 100](#)
- [Configuring Named VLANs, on page 101](#)
- [Configuring Private VLANs, on page 103](#)
- [Community VLANs , on page 105](#)
- [Viewing the VLAN Port Count, on page 111](#)
- [VLAN Port Count Optimization, on page 112](#)
- [VLAN Groups, on page 114](#)
- [VLAN Permissions, on page 117](#)
- [VIC QinQ Tunneling, on page 119](#)

## About VLANs

A VLAN is a switched network that is logically segmented by function, project team, or application, without regard to the physical locations of the users. VLANs have the same attributes as physical LANs, but you can group end stations even if they are not physically located on the same LAN segment.

Any switch port can belong to a VLAN. Unicast, broadcast, and multicast packets are forwarded and flooded only to end stations in the VLAN. Each VLAN is considered a logical network, and packets destined for stations that do not belong to the VLAN must be forwarded through a router or bridge.

VLANs are typically associated with IP subnetworks. For example, all of the end stations in a particular IP subnet belong to the same VLAN. To communicate between VLANs, you must route the traffic. By default, a newly created VLAN is operational. Additionally, you can configure VLANs to be in the active state, which is passing traffic, or in the suspended state, in which the VLANs are not passing packets. By default, the VLANs are in the active state and pass traffic.

You can use the Cisco UCS Manager to manage VLANs. You can do the following:

- Configure named VLANs.
- Assign VLANs to an access or trunk port.

- Create, delete and modify VLANs.

## Guidelines for Creating, Deleting, and Modifying VLANs

VLANs are numbered from 1 to 4094. All configured ports belong to the default VLAN when you first bring up a switch. The default VLAN (VLAN1) uses only default values. You cannot create, delete, or suspend activity in the default VLAN.

You configure a VLAN by assigning a number to it. You can delete VLANs or move them from the active operational state to the suspended operational state. If you attempt to create a VLAN with an existing VLAN ID, the switch goes into the VLAN submode, but does not create the same VLAN again. Newly created VLANs remain unused until you assign ports to the specific VLAN. All of the ports are assigned to VLAN1 by default. Depending on the range of the VLAN, you can configure the following parameters for VLANs (except for the default VLAN):

- VLAN name
- Shutdown or not shutdown

When you delete a specified VLAN, the ports associated to that VLAN are shut down and no traffic flows. However, the system retains all of the VLAN-to-port mappings for that VLAN. When you re-enable or recreate the specified VLAN, the system automatically re-instates all of the original ports to that VLAN.

If a vLAN group is used on a vNIC and also on a port-channel assigned to an uplink, then you cannot delete and add vLANs in the same transaction. Deleting and adding vLANs in the same transaction causes ENM pinning failure on the vNIC. vNIC configurations are done first and vLAN is deleted from the vNIC and a new vLAN is added, but this vLAN is not yet configured on the uplink. Hence, the transaction causes the pinning failure. You must add and delete a vLAN from a vLAN group in separate transactions.

## About the Native VLAN

The native VLAN and the default VLAN are not the same. Native refers to VLAN traffic without an 802.1q header and can be assigned or not. The native VLAN is the only VLAN that is not tagged in a trunk, and the frames are transmitted unchanged.

You can tag everything and not use a native VLAN throughout your network, and the VLAN or devices are reachable because switches use VLAN 1 as the native by default.

The UCS Manager LAN Uplink Manager enables you to configure VLANs and to change the native VLAN setting. Changing the native VLAN setting requires a port flap for the change to take effect; otherwise, the port flap is continuous. When you change the native VLAN, there is a loss of connectivity for approximately 20-40 seconds.

### Native VLAN Guidelines

- You can only configure native VLANs on trunk ports.
- You can change the native VLAN on a UCS vNIC; however, the port flaps and can lead to traffic interruptions.
- Cisco recommends using the native VLAN 1 setting to prevent traffic interruptions if using the Cisco Nexus 1000v switches. The native VLAN must be the same for the Nexus 1000v port profiles and your UCS vNIC definition.

- If the native VLAN 1 setting is configured, and traffic routes to an incorrect interface, there is an outage, or the switch interface flaps continuously, there might be incorrect settings in your disjoint layer 2 network configuration.
- Using the native VLAN 1 for management access to all of your devices can potentially cause problems if someone connects another switch on the same VLAN as your management devices.

## About the Access and Trunk Ports

### Access Ports on a Cisco Switch

Access ports only sends untagged frames and belongs to and carries the traffic of only one VLAN. Traffic is received and sent in native formats with no VLAN tagging. Anything arriving on an access port is assumed to belong to the VLAN assigned to the port.

You can configure a port in access mode and specify the VLAN to carry the traffic for that interface. If you do not configure the VLAN for a port in access mode, or an access port, the interface carries the traffic for the default VLAN, which is VLAN 1. You can change the access port membership in a VLAN by configuring the VLAN. You must create the VLAN before you can assign it as an access VLAN for an access port. If you change the access VLAN on an access port to a VLAN that is not yet created, the UCS Manager shuts down that access port.

If an access port receives a packet with an 802.1Q tag in the header other than the access VLAN value, that port drops the packet without learning its MAC source address.

### Trunk Ports on a Cisco Switch

Trunk ports allow multiple VLANs to transport between switches over that trunk link. A trunk port can carry untagged packets simultaneously with the 802.1Q tagged packets. When you assign a default port VLAN ID to the trunk port, all untagged traffic travels on the default port VLAN ID for the trunk port, and all untagged traffic is assumed to belong to this VLAN. This VLAN is referred to as the native VLAN ID for a trunk port. The native VLAN ID is the VLAN that carries untagged traffic on trunk ports.

The trunk port sends an egressing packet with a VLAN that is equal to the default port VLAN ID as untagged; all the other egressing packets are tagged by the trunk port. If you do not configure a native VLAN ID, the trunk port uses the default VLAN.



---

**Note** Changing the native VLAN on a trunk port, or an access VLAN of an access port flaps the switch interface.

---

## Named VLANs

A named VLAN creates a connection to a specific external LAN. The VLAN isolates traffic to that external LAN, including broadcast traffic.

The name that you assign to a VLAN ID adds a layer of abstraction that allows you to globally update all servers associated with service profiles that use the named VLAN. You do not need to reconfigure the servers individually to maintain communication with the external LAN.

You can create more than one named VLAN with the same VLAN ID. For example, if servers that host business services for HR and Finance need to access the same external LAN, you can create VLANs named

HR and Finance with the same VLAN ID. Then, if the network is reconfigured and Finance is assigned to a different LAN, you only have to change the VLAN ID for the named VLAN for Finance.

In a cluster configuration, you can configure a named VLAN to be accessible only to one fabric interconnect or to both fabric interconnects.

### Guidelines for VLAN IDs



**Important** VLANs with IDs from 4043 to 4047 and from 4094 to 4095 are reserved. You cannot create VLANs with IDs from this range. Until Cisco UCS Manager Release 4.0(1d), VLAN ID 4093 was in the list of reserved VLANs. VLAN 4093 has been removed from the list of reserved VLANs and is available for configuration.

For Cisco UCS 6400 and 6500 FI Series, VLAN IDs from 1002 to 1005 are reserved for VLAN Trunking Protocol (VTP).

The VLAN IDs you specify must also be supported on the switch that you are using. For example, on Cisco Nexus 5000 Series switches, the VLAN ID range from 3968 to 4029 is reserved. Before you specify the VLAN IDs in Cisco UCS Manager, make sure that the same VLAN IDs are available on your switch.

VLANs in the LAN cloud and FCoE VLANs in the SAN cloud must have different IDs. Using the same ID for a VLAN and an FCoE VLAN in a VSAN results in a critical fault and traffic disruption for all vNICs and uplink ports using that VLAN. Ethernet traffic is dropped on any VLAN which has an ID that overlaps with an FCoE VLAN ID.

VLAN 4048 is user configurable. However, Cisco UCS Manager uses VLAN 4048 for the following default values. If you want to assign 4048 to a VLAN, you must reconfigure these values:

- After an upgrade to Cisco UCS, Release 2.0—The FCoE storage port native VLAN uses VLAN 4048 by default. If the default FCoE VSAN was set to use VLAN 1 before the upgrade, you must change it to a VLAN ID that is not used or reserved. For example, consider changing the default to 4049 if that VLAN ID is not in use.
- After a fresh install of Cisco UCS, Release 2.0—The FCoE VLAN for the default VSAN uses VLAN 4048 by default. The FCoE storage port native VLAN uses VLAN 4049.

The VLAN name is case sensitive.

## Private VLANs

A private VLAN (PVLAN) partitions the Ethernet broadcast domain of a VLAN into subdomains, and allows you to isolate some ports. Each subdomain in a PVLAN includes a primary VLAN and one or more secondary VLANs. All secondary VLANs in a PVLAN must share the same primary VLAN. The secondary VLAN ID differentiates one subdomain from another.

### Isolated and Community VLANs

All secondary VLANs in a Cisco UCS domain can be Isolated or Community VLANs.



**Note** You cannot configure an isolated VLAN to use with a regular VLAN.

### Ports on Isolated VLANs

Communications on an isolated VLAN can only use the associated port in the primary VLAN. These ports are isolated ports and are not configurable in Cisco UCS Manager. A primary VLAN can have only one isolated VLAN, but multiple isolated ports on the same isolated VLAN are allowed. These isolated ports cannot communicate with each other. The isolated ports can communicate only with a regular trunk port or promiscuous port that allows the isolated VLAN.

An isolated port is a host port that belongs to an isolated secondary VLAN. This port has complete isolation from other ports within the same private VLAN domain. PVLANS block all traffic to isolated ports except traffic from promiscuous ports. Traffic received from an isolated port is forwarded only to promiscuous ports. You can have more than one isolated port in a specified isolated VLAN. Each port is completely isolated from all other ports in the isolated VLAN.

### Guidelines for Uplink Ports

When you create PVLANS, use the following guidelines:

- The uplink Ethernet port channel cannot be in promiscuous mode.
- Each primary VLAN can have only one isolated VLAN.
- VIFs on VNTAG adapters can have only one isolated VLAN.

### Guidelines for VLAN IDs



**Note** You cannot create VLANs with IDs from 3915 to 4042. These ranges of VLAN IDs are reserved.

The VLAN IDs you specify must also be supported on the switch that you are using. For example, on Cisco Nexus 5000 Series switches, the VLAN ID range from 3968 to 4029 is reserved. Before you specify the VLAN IDs in Cisco UCS Manager, make sure that the same VLAN IDs are available on your switch.

VLANs in the LAN cloud and FCoE VLANs in the SAN cloud must have different IDs. Using the same ID for a VLAN and an FCoE VLAN in a VSAN results in a critical fault and traffic disruption for all vNICs and uplink ports using that VLAN. Ethernet traffic is dropped on any VLAN which has an ID that overlaps with an FCoE VLAN ID.

VLAN 4048 is user configurable. However, Cisco UCS Manager uses VLAN 4048 for the following default values. If you want to assign 4048 to a VLAN, you must reconfigure these values:

- After an upgrade to Cisco UCS, Release 2.0—The FCoE storage port native VLAN uses VLAN 4048 by default. If the default FCoE VSAN was set to use VLAN 1 before the upgrade, you must change it to a VLAN ID that is not used or reserved. For example, consider changing the default to 4049 if that VLAN ID is not in use.
- After a fresh install of Cisco UCS, Release 2.0—The FCoE VLAN for the default VSAN uses VLAN 4048 by default. The FCoE storage port native VLAN uses VLAN 4049.

The VLAN name is case sensitive.

# VLAN Port Limitations

Cisco UCS Manager limits the number of VLAN port instances that you can configure under border and server domains on a fabric interconnect.

## Types of Ports Included in the VLAN Port Count

The following types of ports are counted in the VLAN port calculation:

- Border uplink Ethernet ports
- Border uplink Ether-channel member ports
- FCoE ports in a SAN cloud
- Ethernet ports in a NAS cloud
- Static and dynamic vNICs created through service profiles
- VM vNICs created as part of a port profile in a hypervisor in hypervisor domain

Based on the number of VLANs configured for these ports, Cisco UCS Manager tracks the cumulative count of VLAN port instances and enforces the VLAN port limit during validation. Cisco UCS Manager reserves some pre-defined VLAN port resources for control traffic. These include management VLANs configured under HIF and NIF ports.

## VLAN Port Limit Enforcement

Cisco UCS Manager validates VLAN port availability during the following operations:

- Configuring and unconfiguring border ports and border port channels
- Adding or removing VLANs from a cloud
- Configuring or unconfiguring SAN or NAS ports
- Associating or disassociating service profiles that contain configuration changes
- Configuring or unconfiguring VLANs under vNICs or vHBAs
- Receiving creation or deletion notifications from a VMWare vNIC and from an ESX hypervisor



---

**Note** This is outside the control of the Cisco UCS Manager.

---

- Fabric interconnect reboot
- Cisco UCS Manager upgrade or downgrade

Cisco UCS Manager strictly enforces the VLAN port limit on service profile operations. If Cisco UCS Manager detects that the VLAN port limit is exceeded, the service profile configuration fails during deployment.

Exceeding the VLAN port count in a border domain is less disruptive. When the VLAN port count is exceeded in a border domain Cisco UCS Manager changes the allocation status to Exceeded. To change the status back to **Available**, complete one of the following actions:

- Unconfigure one or more border ports
- Remove VLANs from the LAN cloud
- Unconfigure one or more vNICs or vHBAs

## Configuring Named VLANs

### Creating a Named VLAN

In a Cisco UCS domain that is configured for high availability, you can create a named VLAN that is accessible to both fabric interconnects or to only one fabric interconnect.



**Important** VLANs with IDs from 4043 to 4047 and from 4094 to 4095 are reserved. You cannot create VLANs with IDs from this range. Until Cisco UCS Manager Release 4.0(1d), VLAN ID 4093 was in the list of reserved VLANs. VLAN 4093 has been removed from the list of reserved VLANs and is available for configuration.

For Cisco UCS 6400 and 6500 FI Series, VLAN IDs from 1002 to 1005 are reserved for VLAN Trunking Protocol (VTP).

The VLAN IDs you specify must also be supported on the switch that you are using. For example, on Cisco Nexus 5000 Series switches, the VLAN ID range from 3968 to 4029 is reserved. Before you specify the VLAN IDs in Cisco UCS Manager, make sure that the same VLAN IDs are available on your switch.

VLANs in the LAN cloud and FCoE VLANs in the SAN cloud must have different IDs. Using the same ID for a VLAN and an FCoE VLAN in a VSAN results in a critical fault and traffic disruption for all vNICs and uplink ports using that VLAN. Ethernet traffic is dropped on any VLAN which has an ID that overlaps with an FCoE VLAN ID.

#### Procedure

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** On the **LAN** tab, click the **LAN** node.
- Step 3** In the **Work** pane, click the **VLANs** tab.
- Step 4** On the icon bar to the right of the table, click +.  
If the + icon is disabled, click an entry in the table to enable it.
- Step 5** In the **Create VLANs** dialog box, complete the required fields.
- Step 6** If you clicked the **Check Overlap** button, do the following:
  - Click the **Overlapping VLANs** tab and review the fields to verify that the VLAN ID does not overlap with any IDs assigned to existing VLANs.
  - Click the **Overlapping VSANs** tab and review the fields to verify that the VLAN ID does not overlap with any FCoE VLAN IDs assigned to existing VSANs.
  - Click **OK**.

- d) If Cisco UCS Manager identified any overlapping VLAN IDs or FCoE VLAN IDs, change the VLAN ID to one that does not overlap with an existing VLAN.

**Step 7** Click **OK**.

Cisco UCS Manager adds the VLAN to one of the following **VLANs** nodes:

- The **LAN Cloud > VLANs** node for a VLAN accessible to both fabric interconnects.
- The **Fabric\_Interconnect\_Name > VLANs** node for a VLAN accessible to only one fabric interconnect.

## Deleting a Named VLAN

If Cisco UCS Manager includes a named VLAN with the same VLAN ID as the one you delete, the VLAN is not removed from the fabric interconnect configuration until all named VLANs with that ID are deleted.

If you are deleting a private primary VLAN, ensure that you reassign the secondary VLANs to another working primary VLAN.

### Before you begin

Before you delete a VLAN from a fabric interconnect, ensure that the VLAN was removed from all vNICs and vNIC templates.



**Note** If you delete a VLAN that is assigned to a vNIC or vNIC template, the vNIC might allow that VLAN to flap.

### Procedure

**Step 1** In the **Navigation** pane, click **LAN**.

**Step 2** On the **LAN** tab, click the **LAN** node.

**Step 3** In the **Work** pane, click the **VLANs** tab.

**Step 4** Click one of the following subtabs, based on the VLAN that you want to delete:

Subtab	Description
<b>All</b>	Displays all VLANs in the Cisco UCS domain.
<b>Dual Mode</b>	Displays the VLANs that are accessible to both fabric interconnects.
<b>Fabric A</b>	Displays the VLANs that are accessible to only fabric interconnect A.
<b>Fabric B</b>	Displays the VLANs that are accessible to only fabric interconnect B.

**Step 5** In the table, click the VLAN that you want to delete.

You can use the **Shift** key or **Ctrl** key to select multiple entries.

**Step 6** Right-click the highlighted VLAN or VLANs and click **Delete**.



**Step 7** If a confirmation dialog box displays, click **Yes**.

---

## Configuring Private VLANs

### Creating a Primary VLAN for a Private VLAN

In a Cisco UCS domain that is configured for high availability, you can create a primary VLAN that is accessible to both fabric interconnects or to only one fabric interconnect.



**Important** VLANs with IDs from 4043 to 4047 and from 4094 to 4095 are reserved. You cannot create VLANs with IDs from this range. Until Cisco UCS Manager Release 4.0(1d), VLAN ID 4093 was in the list of reserved VLANs. VLAN 4093 has been removed from the list of reserved VLANs and is available for configuration.

For Cisco UCS 6400 and 6500 FI Series, VLAN IDs from 1002 to 1005 are reserved for VLAN Trunking Protocol (VTP).

The VLAN IDs you specify must also be supported on the switch that you are using. For example, on Cisco Nexus 5000 Series switches, the VLAN ID range from 3968 to 4029 is reserved. Before you specify the VLAN IDs in Cisco UCS Manager, make sure that the same VLAN IDs are available on your switch.

VLANs in the LAN cloud and FCoE VLANs in the SAN cloud must have different IDs. Using the same ID for a VLAN and an FCoE VLAN in a VSAN results in a critical fault and traffic disruption for all vNICs and uplink ports using that VLAN. Ethernet traffic is dropped on any VLAN which has an ID that overlaps with an FCoE VLAN ID.

#### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** On the **LAN** tab, click the **LAN** node.
- Step 3** In the **Work** pane, click the **VLANs** tab.
- Step 4** On the icon bar to the right of the table, click **+**.
- If the **+** icon is disabled, click an entry in the table to enable it.
- Step 5** In the **Create VLANs** dialog box, complete the required fields.
- Step 6** If you clicked the **Check Overlap** button, do the following:
- Click the **Overlapping VLANs** tab and review the fields to verify that the VLAN ID does not overlap with any IDs assigned to existing VLANs.
  - Click the **Overlapping VSANs** tab and review the fields to verify that the VLAN ID does not overlap with any FCoE VLAN IDs assigned to existing VSANs.
  - Click **OK**.
  - If Cisco UCS Manager identified any overlapping VLAN IDs or FCoE VLAN IDs, change the VLAN ID to one that does not overlap with an existing VLAN.
- Step 7** Click **OK**.

Cisco UCS Manager adds the primary VLAN to one of the following **VLANs** nodes:

- The **LAN Cloud > VLANs** node for a primary VLAN accessible to both fabric interconnects.
- The **Fabric Interconnect Name > VLANs** node for a primary VLAN accessible to only one fabric interconnect.

## Creating a Secondary VLAN for a Private VLAN

In a Cisco UCS domain that is configured for high availability, you can create a secondary VLAN that is accessible to both fabric interconnects or to only one fabric interconnect.



**Important** VLANs with IDs from 4043 to 4047 and from 4094 to 4095 are reserved. You cannot create VLANs with IDs from this range. Until Cisco UCS Manager Release 4.0(1d), VLAN ID 4093 was in the list of reserved VLANs. VLAN 4093 has been removed from the list of reserved VLANs and is available for configuration.

For Cisco UCS 6400 and 6500 FI Series, VLAN IDs from 1002 to 1005 are reserved for VLAN Trunking Protocol (VTP).

The VLAN IDs you specify must also be supported on the switch that you are using. For example, on Cisco Nexus 5000 Series switches, the VLAN ID range from 3968 to 4029 is reserved. Before you specify the VLAN IDs in Cisco UCS Manager, make sure that the same VLAN IDs are available on your switch.

VLANs in the LAN cloud and FCoE VLANs in the SAN cloud must have different IDs. Using the same ID for a VLAN and an FCoE VLAN in a VSAN results in a critical fault and traffic disruption for all vNICs and uplink ports using that VLAN. Ethernet traffic is dropped on any VLAN which has an ID that overlaps with an FCoE VLAN ID.

### Before you begin

Create the primary VLAN.

### Procedure

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** On the **LAN** tab, click the **LAN** node.
- Step 3** In the **Work** pane, click the **VLANs** tab.
- Step 4** On the icon bar to the right of the table, click +.
- If the + icon is disabled, click an entry in the table to enable it.

- Step 5** In the **Create VLANs** dialog box, specify the required fields.

**Note** The multicast policy is associated to the primary VLAN, not the secondary VLAN.

- Step 6** If you clicked the **Check Overlap** button, do the following:

- a) Click the **Overlapping VLANs** tab and review the fields to verify that the VLAN ID does not overlap with any IDs assigned to existing VLANs.
- b) Click the **Overlapping VSANs** tab and review the fields to verify that the VLAN ID does not overlap with any FCoE VLAN IDs assigned to existing VSANs.
- c) Click **OK**.
- d) If Cisco UCS Manager identified any overlapping VLAN IDs or FCoE VLAN IDs, change the VLAN ID to one that does not overlap with an existing VLAN.

**Step 7** Click **OK**.

Cisco UCS Manager adds the primary VLAN to one of the following **VLANs** nodes:

- The **LAN Cloud > VLANs** node for a primary VLAN accessible to both fabric interconnects.
- The **Fabric\_Interconnect\_Name > VLANs** node for a primary VLAN accessible to only one fabric interconnect.

---

## Community VLANs

Cisco UCS Manager supports Community VLANs in UCS Fabric Interconnects. Community ports communicate with each other and with promiscuous ports. Community ports have Layer 2 isolation from all other ports in other communities. A promiscuous port can communicate with all interfaces.

### Creating a Community VLAN

In a Cisco UCS domain configured for high availability, you can create a Community VLAN accessible to both fabric interconnects or to only one fabric interconnect.



---

**Important** VLANs with IDs from 4043 to 4047 and from 4094 to 4095 are reserved. You cannot create VLANs with IDs from this range. Until Cisco UCS Manager Release 4.0(1d), VLAN ID 4093 was in the list of reserved VLANs. VLAN 4093 has been removed from the list of reserved VLANs and is available for configuration.

For Cisco UCS 6400 and 6500 FI Series, VLAN IDs from 1002 to 1005 are reserved for VLAN Trunking Protocol (VTP).

The VLAN IDs you specify must also be supported on the switch that you are using. For example, on Cisco Nexus 5000 Series switches, the VLAN ID range from 3968 to 4029 is reserved. Before you specify the VLAN IDs in Cisco UCS Manager, make sure that the same VLAN IDs are available on your switch.

VLANs in the LAN cloud and FCoE VLANs in the SAN cloud must have different IDs. Using the same ID for a VLAN and an FCoE VLAN in a VSAN results in a critical fault and traffic disruption for all vNICs and uplink ports using that VLAN. Ethernet traffic is dropped on any VLAN which has an ID that overlaps with an FCoE VLAN ID.

---

## Procedure

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** On the **LAN** tab, click the **LAN** node.
- Step 3** In the **Work** pane, click the **VLANs** tab.
- Step 4** On the icon bar to the right of the table, click +.  
If the + icon is disabled, click an entry in the table to enable it.
- Step 5** In the **Create VLANs** dialog box, complete the following fields:

Name	Description
VLAN Name/Prefix field	<p>For a single VLAN, this is the VLAN name. For a range of VLANs, this is the prefix that the system uses for each VLAN name.</p> <p>The VLAN name is case sensitive.</p> <p>This name can be between 1 and 32 alphanumeric characters. You cannot use spaces or any special characters other than - (hyphen), _ (underscore), : (colon), and . (period), and you cannot change this name after the object is saved.</p>
Multicast Policy drop-down list	The multicast policy associated with this VLAN.
Create Multicast Policy link	Click this link to create a new multicast policy that will be available to all VLANs.
Configuration options	<p>You can choose one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Common/Global</b>—The VLANs apply to both fabrics and use the same configuration parameters in both cases.</li> <li>• <b>Fabric A</b>—The VLANs only apply to fabric A.</li> <li>• <b>Fabric B</b>—The VLAN only apply to fabric B.</li> <li>• <b>Both Fabrics Configured Differently</b>—The VLANs apply to both fabrics, but you can specify different VLAN IDs for each fabric.</li> </ul> <p>For upstream disjoint L2 networks, Cisco recommends that you choose <b>Common/Global</b> to create VLANs that apply to both fabrics.</p>

Name	Description
VLAN IDs field	<p>To create one VLAN, enter a single numeric ID. To create multiple VLANs, enter individual IDs or ranges of IDs separated by commas. A VLAN ID can:</p> <ul style="list-style-type: none"> <li>• Be between 1 and 3967</li> <li>• Be between 4048 and 4093</li> <li>• Overlap with other VLAN IDs already defined on the system</li> </ul> <p>For example, to create six VLANs with the IDs 4, 22, 40, 41, 42, and 43, enter <b>4, 22, 40-43</b>.</p> <p><b>Important</b> VLANs with IDs from 4043 to 4047 and from 4094 to 4095 are reserved. You cannot create VLANs with IDs from this range. Until Cisco UCS Manager Release 4.0(1d), VLAN ID 4093 was in the list of reserved VLANs. VLAN 4093 has been removed from the list of reserved VLANs and is available for configuration.</p> <p>For Cisco UCS 6400 and 6500 FI Series, VLAN IDs from 1002 to 1005 are reserved for VLAN Trunking Protocol (VTP).</p> <p>The VLAN IDs you specify must also be supported on the switch that you are using. For example, on Cisco Nexus 5000 Series switches, the VLAN ID range from 3968 to 4029 is reserved. Before you specify the VLAN IDs in Cisco UCS Manager, make sure that the same VLAN IDs are available on your switch.</p> <p>VLANs in the LAN cloud and FCoE VLANs in the SAN cloud must have different IDs. Using the same ID for a VLAN and an FCoE VLAN in a VSAN results in a critical fault and traffic disruption for all vNICs and uplink ports using that VLAN. Ethernet traffic is dropped on any VLAN which has an ID that overlaps with an FCoE VLAN ID.</p>
Sharing Type field	<p>Whether this VLAN is subdivided into private or secondary VLANs. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>None</b>—This VLAN does not have any secondary or private VLANs.</li> <li>• <b>Primary</b>—This VLAN can have one or more secondary VLANs, as shown in the <b>Secondary VLANs</b> area.</li> <li>• <b>Isolated</b>—This is a private VLAN. The primary VLAN with which it is associated is shown in the <b>Primary VLAN</b> drop-down list.</li> </ul>
Primary VLAN drop-down list	<p>If the <b>Sharing Type</b> field is set to <b>Isolated</b>, this is the primary VLAN associated with the IsolatedVLAN.</p>

Name	Description
<b>Permitted Orgs for VLAN(s)</b>	Select the organization from the list for the VLAN. This VLAN will be available for the organizations that you select.
<b>Check Overlap</b> button	Click this button to determine whether the VLAN ID overlaps with any other IDs on the system.

**Step 6** If you clicked the **Check Overlap** button, do the following:

- a) Click the **Overlapping VLANs** tab and review the following fields to verify that the VLAN ID does not overlap with any IDs assigned to existing VLANs.

Name	Description
<b>Fabric ID</b> column	This can be one of the following: <ul style="list-style-type: none"> <li>• <b>A</b></li> <li>• <b>B</b></li> <li>• <b>Dual</b>—The component is accessible to either fabric interconnect. This setting applies to virtual LAN and SAN networks created at the system level as opposed to the fabric-interconnect level.</li> </ul>
<b>Name</b> column	The name of the VLAN.
<b>VLAN</b> column	The numeric id for the VLAN.
<b>DN</b> column	The full path to the VLAN. Click the link in this column to view the properties for the VLAN.

- b) Click the **Overlapping VSANs** tab and review the following fields to verify that the VLAN ID does not overlap with any FCoE VLAN IDs assigned to existing VSANs:

Name	Description
<b>Fabric ID</b> column	This can be one of the following: <ul style="list-style-type: none"> <li>• <b>A</b></li> <li>• <b>B</b></li> <li>• <b>Dual</b>—The component is accessible to either fabric interconnect. This setting applies to virtual LAN and SAN networks created at the system level as opposed to the fabric-interconnect level.</li> </ul>
<b>Name</b> column	The name of the VSAN.
<b>ID</b> column	The numeric id for the VSAN.
<b>FCoE VLAN ID</b> column	The unique identifier assigned to the VLAN used for Fibre Channel connections.
<b>DN</b> column	The full path to the VSAN. Click the link in this column to view the properties for the VSAN.

- c) Click **OK**.
- d) If Cisco UCS Manager identified any overlapping VLAN IDs or FCoE VLAN IDs, change the VLAN ID to one that does not overlap with an existing VLAN.

**Step 7** Click **OK**.

Cisco UCS Manager adds the Community VLAN to one of the following **VLANs** nodes:

- The **LAN Cloud > VLANs** node for a VLAN accessible to both fabric interconnects.
- The *Fabric\_Interconnect\_Name* > **VLANs** node for a VLAN accessible to only one fabric interconnect.

## Creating Promiscuous Access on Appliance Port

Cisco UCS Manager supports Promiscuous access on appliance ports. The following procedure details the configurations steps.

### Before you begin

Create the PVLANs in Appliance Cloud.

### Procedure

- Step 1** In the **Navigation** pane, click **Admin**.
- Step 2** Expand **LAN > Appliances > Fabric > Interfaces**.  
The **Interfaces** pane displays.
- Step 3** In the **Interfaces** pane on the icon bar to the right of the table, click + .  
The **Appliance Links** pane displays.
- Step 4** In the **Appliance Links** pane, click the **Unconfigured Ethernet Ports** to expand the **Unconfigured Ethernet Ports**.  
All available Unconfigured Ethernet Ports display.
- Step 5** Click the **Unconfigured Ethernet Ports** that you want to make an Appliance Port.
- Step 6** Click **Make Appliance Port**.  
The **Configure as Appliance Port** confirmation box displays.
- Step 7** Click **Yes** to configure the appliance port.  
The **Configure Appliance Port** dialog box opens.
- Step 8** On the **LAN** tab, expand **LAN > Appliances > Fabric > Interfaces**.
- Step 9** Expand **Appliance Ports**.
- Step 10** Click the appliance port for which you want to modify the properties.
- Step 11** In the **Interfaces** pane on the icon bar to the right of the table, click **Modify**.  
The **Properties for Appliance Interface** dialog box displays.
- Step 12** In the **VLANs** pane, click the **Access** radio button.
- Step 13** Select a Primary VLAN from the **Select VLAN** drop-down list to assign to the appliance port.  
A list of secondary VLANs associated with the primary VLAN displays.
- Step 14** Select a set of secondary VLANs allowed on the port.

Selecting an **Isolated** or **Community** VLAN turns the **VLAN** into a **Promiscuous Port**. If you select the Primary VLAN from the **Select VLAN** drop-down list, you must select the required secondary VLAN.

**Step 15** Click **Apply** to configure **Promiscuous Access on Appliance Port**.

---

## Creating a Promiscuous Trunk on Appliance Port

**Cisco UCS Manager** supports Promiscuous Trunks on appliance ports. The following procedure details the configurations steps.

### Before you begin

Create the Private VLANs in the Appliance Cloud.

### Procedure

---

- Step 1** In the **Navigation** pane, click **Admin**.
  - Step 2** Expand **LAN > Appliances > Fabric > Interfaces**.  
The **Interfaces** pane displays.
  - Step 3** In the **Interfaces** pane on the icon bar to the right of the table, click **+**.  
The **Appliance Links** pane displays.
  - Step 4** In the **Appliance Links** pane, click the **Unconfigured Ethernet Ports** to expand the **Unconfigured Ethernet Ports**.  
All available Unconfigured Ethernet Ports display.
  - Step 5** Click the **Unconfigured Ethernet Ports** that you want to make an Appliance Port.
  - Step 6** Click **Make Appliance Port**.  
The **Configure as Appliance Port** confirmation box displays.
  - Step 7** Click **Yes** to configure the appliance port.
  - Step 8** On the **LAN** tab, expand **LAN > Appliances > Fabric > Interfaces**.
  - Step 9** Expand **Appliance Ports**.
  - Step 10** Click the appliance port for which you want to modify the properties.
  - Step 11** In the **Interfaces** pane on the icon bar to the right of the table, click the **Modify** icon.  
The **Properties for Appliance Interface** dialog box displays.
  - Step 12** In the **VLANs** pane, click the **Trunk** radio button.
  - Step 13** Select a **VLAN** from the available VLANs.  
  
From the list of VLANs, you can select multiple **Isolated**, **Community**, **Primary** and **Regular** VLANs to apply on the port to make it a promiscuous trunk port.
  - Step 14** Click **Apply** to configure **Promiscuous on Trunk on Appliance Port**.
-



## Viewing VLAN Optimization Sets

Cisco UCS Manager automatically creates VLAN port count optimization groups based on the VLAN IDs in the system. All of the VLANs in the group share the same IGMP policy. The following VLANs are not included in the VLAN port count optimization group:

- FCoE VLANs
- Primary PVLANS and secondary PVLANS
- VLANs that are specified as a SPAN source
- VLANs configured as a single allowed VLAN on an interface and port profiles with a single VLAN

Cisco UCS Manager GUI automatically groups the optimized VLANs.



---

**Note** It is recommended to keep the VLAN optimization set to be not more than 32. If the VLAN optimization set exceeds 32, you may observe latency during VLAN configuration changes and in bringing up all the server connections upon switch reboot.

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud**.
- Step 3** In the **Navigation** pane, click **Fabric A** or **Fabric B** to expand the list.
- Step 4** Click **VLAN Optimization Sets**.

The **Work** pane displays the list of VLAN optimization groups with **Name** and **Size**.

---

## Viewing the VLAN Port Count

### Procedure

---

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment > Fabric Interconnects**.
- Step 3** Click the fabric interconnect for which you want to view the VLAN port count.
- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** In the **General** tab, click the down arrows on the **VLAN Port Count** bar to expand that area.

Cisco UCS Manager GUI displays the following details:

Name	Description
<b>VLAN Port Limit</b> field	The maximum number of VLAN ports allowed on this fabric interconnect.
<b>Access VLAN Port Count</b> field	The number of available VLAN access ports.
<b>Border VLAN Port Count</b> field	The number of available VLAN border ports.
<b>Allocation Status</b> field	The VLAN port allocation status.

## VLAN Port Count Optimization

VLAN port count optimization enables mapping the state of multiple VLANs into a single internal state. When you enable the VLAN port count optimization, Cisco UCS Manager logically groups VLANs based on the port VLAN membership. This grouping increases the port VLAN count limit. VLAN port count optimization also compresses the VLAN state and reduces the CPU load on the fabric interconnect. This reduction in the CPU load enables you to deploy more VLANs over more vNICs. Optimizing VLAN port count does not change any of the existing VLAN configuration on the vNICs.

VLAN port count optimization is disabled by default. You can enable or disable the option based on your requirements.



### Important

- Enabling VLAN port count optimization increases the number of available VLAN ports for use. If the port VLAN count exceeds the maximum number of VLANs in a non-optimized state, you cannot disable the VLAN port count optimization.
- VLAN port count optimization is not supported in Cisco UCS 6100 Series fabric interconnect.

On the Cisco UCS 6400 Series Fabric Interconnect and Cisco UCS 6500 Series Fabric Interconnects, VLAN port count optimization is performed when the PV count exceeds 16000.

When the Cisco UCS 6400 Series Fabric Interconnect is in Ethernet switching mode:

- The FI does not support **VLAN Port Count Optimization Enabled**
- The FI supports 16000 PVs, similar to EHM mode, when **VLAN Port Count Optimization** is **Disabled**

The following table illustrates the PV Count with VLAN port count optimization enabled and disabled on UCS 6300, and Cisco UCS 6400 Series Fabric Interconnects and Cisco UCS 6500 Series Fabric Interconnects.

	Cisco UCS 6300 Series FI	Cisco UCS 6400 Series FI	Cisco UCS 6500 Series FI (6536 FI)
<b>PV Count with VLAN Port Count Optimization Disabled</b>	16000	16000	16000

	Cisco UCS 6300 Series FI	Cisco UCS 6400 Series FI	Cisco UCS 6500 Series FI (6536 FI)
<b>PV Count with VLAN Port Count Optimization Enabled</b>	64000	108000	108000

## Enabling Port VLAN Count Optimization

By default, the port VLAN count optimization is disabled. You can enable the port VLAN count optimization to optimize the CPU usage and to increase the port VLAN count.

### Procedure

- 
- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > LAN Cloud**.
  - Step 3** In the **Work** pane, click the **Global Policies** tab.
  - Step 4** In the **Port, VLAN Count Optimization** section, choose **Enabled**.
  - Step 5** Click **Save Changes**.
  - Step 6** If the **Port, VLAN Count Optimization** option is successfully enabled, a confirmation message displays. Click **OK** to close the dialog box.
- 

## Disabling Port VLAN Count Optimization

By default, the port VLAN count optimization is disabled. You can disable the port VLAN count optimization option if you enabled it to increase the port VLAN count and to optimize the CPU usage.

### Procedure

- 
- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > LAN Cloud**.
  - Step 3** In the **Work** pane, click the **Global Policies** tab.
  - Step 4** In the **Port, VLAN Count Optimization** section, choose **Disabled**.
  - Step 5** Click **Save Changes**.
  - Step 6** If the **Port, VLAN Count Optimization** option is successfully disabled, a confirmation message displays. Click **OK** to close the dialog box.
-

## Viewing VLAN Optimization Sets

Cisco UCS Manager automatically creates VLAN port count optimization groups based on the VLAN IDs in the system. All of the VLANs in the group share the same IGMP policy. The following VLANs are not included in the VLAN port count optimization group:

- FCoE VLANs
- Primary PVLANS and secondary PVLANS
- VLANs that are specified as a SPAN source
- VLANs configured as a single allowed VLAN on an interface and port profiles with a single VLAN

Cisco UCS Manager GUI automatically groups the optimized VLANs.



---

**Note** It is recommended to keep the VLAN optimization set to be not more than 32. If the VLAN optimization set exceeds 32, you may observe latency during VLAN configuration changes and in bringing up all the server connections upon switch reboot.

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud**.
- Step 3** In the **Navigation** pane, click **Fabric A** or **Fabric B** to expand the list.
- Step 4** Click **VLAN Optimization Sets**.

The **Work** pane displays the list of VLAN optimization groups with **Name** and **Size**.

---

## VLAN Groups

VLAN groups allow you to group VLANs on Ethernet uplink ports, by function or by VLANs that belong to a specific network. You can define VLAN membership and apply the membership to multiple Ethernet uplink ports on the fabric interconnect.



---

**Note** Cisco UCS Manager supports a maximum of 200 VLAN Groups. If Cisco UCS Manager determines that you create more than 200 VLAN groups, the system disables VLAN compression.

---

You can configure inband and out-of-band (OOB) VLAN groups to use to access the Cisco Integrated Management Interface (CIMC) on blade and rack servers. Cisco UCS Manager supports OOB IPv4 and inband IPv4 and IPv6 VLAN groups for use with the uplink interfaces or uplink port channels.



---

**Note** Inband Management is not supported on VLAN 2 or VLAN 3.

---

After you assign a VLAN to a VLAN group, any changes to the VLAN group are applied to all Ethernet uplink ports that are configured with the VLAN group. The VLAN group also enables you to identify VLAN overlaps between disjoint VLANs.

You can configure uplink ports under a VLAN group. When you configure an uplink port for a VLAN group, that uplink port will support all the VLANs that are part of the associated VLAN groups and individual VLANs that are associated with the uplink using LAN Uplinks Manager, if any. Further, any uplink that is not selected for association with that VLAN group will stop supporting the VLANs that are part of that VLAN group.

You can create VLAN groups from the **LAN Cloud** or from the **LAN Uplinks Manager**.

## Creating a VLAN Group

You can create a **VLAN Group** from **LAN Cloud** or the **LAN Uplinks Manager**. This procedure explains creating a VLAN group from the **LAN Cloud**. You can create separate VLAN groups to use for inband and out-of-band access using service profiles.

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud**.
- Step 3** Right-click **LAN Cloud** and choose **Create VLAN Group** from the drop-down list.  
The **Create VLAN Group** wizard launches.
- Step 4** In the **Select VLANs** dialog box, specify the name and VLANs, then click **Next**.
- Step 5** (Optional) In **Add Uplink Ports** dialog box, select the **Uplink Ports** from the list and add the ports to the **Selected Uplink Ports**, then click **Next**.
- Step 6** (Optional) In **Add Port Channels** dialog box, select the **Port Channels**, and add the port channels to the **Selected Port Channels**, then click **Next**.
- Step 7** (Optional) In the **Org Permissions** dialog box, select the appropriate groups from the list, then click **Next**.  
The VLANs that belong to the group that you are creating can only access the groups that you select.
- Step 8** Click **Finish**.  
This VLAN group is added to the list of **VLAN Groups** under **LAN > LAN Cloud > VLAN Groups**.
-

## Editing the Members of a VLAN Group

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud**.
- Step 3** In the **Navigation** pane, click **VLAN Groups** to expand the VLAN group list.
- Step 4** From the list of VLAN groups, choose the VLAN group name to edit the group member VLANs.  
You can use the **Shift** key or **Ctrl** key to select multiple entries.
- Step 5** Right-click the highlighted VLAN group or VLAN groups and choose **Edit VLAN Group Members**.  
The **Modify VLAN Group VLAN Group Name** dialog box opens.
- Step 6** In the **Modify VLAN Group VLAN Group Name** dialog box, select the VLANs that you want to remove or add from the list and click **Next**.
- Step 7** (Optional) In **Add Port Channels** pane, choose the **Port Channels**, and add them to the **Selected Port Channels**.
- Step 8** (Optional) In the **Org Permissions** pane, choose the appropriate groups from the list.  
The VLANs that belong to the group that you are creating can only access the groups that you select.
- Step 9** Click **Finish**.
- Step 10** This VLAN group is modified based on your selections.
- 

## Modifying the Organization Access Permissions for a VLAN Group

When you modify the organization access permissions for a VLAN group, the change in permissions applies to all VLANs that are in that VLAN group.

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud > VLAN Group**, select *VLAN group name*.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** In **Actions**, click **Modify VLAN Groups Org Permissions**.  
The **Modify VLAN Groups Org Permissions** dialog box opens.
- Step 5** In **Org Permissions**, do the following:
- To add organizations, select the organizations.
  - To remove access permission from an organization, click to remove the selection.
- Step 6** Click **OK**.
-

## Deleting a VLAN Group

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud**.
- Step 3** In the **Navigation** pane, click **VLAN Groups** to expand the VLAN group list.
- Step 4** From the displayed list of VLAN groups, choose the VLAN group name you want to delete.  
You can use the **Shift** key or **Ctrl** key to select multiple entries.
- Step 5** Right-click the highlighted VLAN group or VLAN groups and choose **Delete**.
- Step 6** If a confirmation dialog box displays, click **Yes**.
- 

## VLAN Permissions

VLAN permissions restrict access to VLANs based on specified organizations and on the service profile organizations to which the VLANs belong. VLAN permissions also restrict the set of VLANs that you can assign to service profile vNICs. VLAN permissions is an optional feature and is disabled by default. You can enable or disable the feature based on your requirements. If you disable the feature, all of the VLANs are globally accessible to all organizations.



---

**Note** If you enable the org permission in **LAN > LAN Cloud > Global Policies > Org Permissions**, when you create a VLAN, the **Permitted Orgs for VLAN(s)** option displays in the **Create VLANs** dialog box. If you do not enable the **Org Permissions**, the **Permitted Orgs for VLAN(s)** option does not display.

---

Enabling the org permission allows you to specify the organizations for the VLAN. When you specify the organizations, the VLAN becomes available to that specific organization and all of the sub organizations below the structure. Users from other organizations cannot access this VLAN. You can also modify the VLAN permission anytime based on changes to your VLAN access requirements.



---

**Caution** When you assign the VLAN org permission to an organization at the root level, all sub organizations can access the VLANs. After assigning the org permission at the root level, and you change the permission for a VLAN that belongs to a sub organization, that VLAN becomes unavailable to the root level organization.

---

## Enabling VLAN Permissions

By default, VLAN permissions are disabled. If you want to restrict VLAN access by creating permissions for different organizations, you must enable the org permission option.

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > LAN Cloud**.
  - Step 3** In the **Work** pane, click the **Global Policies** tab.
  - Step 4** In the **Org Permissions** section, choose **Enabled**.
  - Step 5** Click **Save Changes**.
  - Step 6** If the **Org Permissions** option is successfully enabled, a confirmation message displays. Click **OK** to close the dialog box.
- 

## Disabling VLAN Permissions

By default, VLAN permissions are disabled. You can enable VLAN permissions and assign a VLAN to a different network group or organization. You can also disable the VLAN permission globally; however, the permissions assigned to the VLANs continue to exist in the system, but are not enforced. If you want to use the org permissions later, you can enable the feature to use the assigned permissions.

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > LAN Cloud**.
  - Step 3** In the **Work** pane, click the **Global Policies** tab.
  - Step 4** In the **Org Permissions** section, choose **Disabled**.
  - Step 5** Click **Save Changes**.
  - Step 6** If the **Org Permissions** option is successfully disabled, a confirmation message displays. Click **OK** to close the dialog box.
- 

## Adding or Modifying VLAN Permissions

You can add or delete the permitted organization for a VLAN.



- Note** When you add an organization as a permitted organization for a VLAN, all of the descendant organizations can access the VLAN. When you remove the permission to access a VLAN from an organization, the descendant organizations no longer have access to the VLAN.
- 

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.



- Step 2** Expand **LAN > LAN Cloud > VLANs**, select *VLAN name*.
- Step 3** In the **Work** pane, click the **General** tab.
- Step 4** In **Actions**, click **Modify VLAN Org Permissions**.  
The **Modify VLAN Org Permissions** dialog box opens.
- Step 5** In **Permitted Orgs for VLAN(s)**,
- To add organizations, select the organizations.
  - To remove access permission from an organization, click to remove the selection.
- Step 6** Click **OK**.
- 

## Modifying Reserved VLANs

This task describes how to modify the reserved VLAN ID.

For Cisco UCS 6500 FI Series, VLAN IDs from 1002 to 1005 are reserved for NX-OS.

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** In the **Work** pane, click the **Global Policies** tab.
- Step 3** Specify a new value in the Reserved VLAN Start ID field. The reserved VLAN range ID can be specified from 2-3915.
- Step 4** Click **Save Changes**.
- 

## VIC QinQ Tunneling

Starting with release 4.3(2a), Cisco UCS Manager introduces support for VIC Q-in-Q tunneling configuration. A Q-in-Q (802.1Q-in-802.1Q) tunnel allows to segregate the traffic in the infrastructure and helps to expand the VLAN space through the addition of 802.1Q tag to 802.1Q-tagged packets.

To configure VIC QinQ Tunneling, ensure **Q-in-Q Forwarding** is enabled. For more information, see [Q-in-Q Forwarding, on page 57](#).

To know more about supported combinations and limitations of VIC QinQ Tunneling: see [VIC QinQ Tunneling - Supported Combinations and Limitations, on page 121](#).

## Enabling QinQ on a vNIC in a LAN Connectivity Policy

To enable VIC QinQ Tunneling on a vNIC in a LAN Connectivity Policy, do the following:

1. In the **Navigation** pane, click **LAN** and expand **LAN > Policies**.
2. Expand the node for the organization where you want to create the policy. If the system does not include multi tenancy, expand the **root** node.

3. Right-click **LAN Connectivity Policies** and choose **Create LAN Connectivity Policy**.
4. In the **Create LAN Connectivity Policy** dialog box, enter a name and optional description.
5. To add vNICs, click **Add** next to the plus sign and complete the following fields in the **Create vNIC** dialog box:
  - a. Enter a name for the vNIC.
  - b. Check the **Enable QinQ** check box.
  - c. In the **VLANs** table, click the **QinQ VLAN** radio button. The supported QinQ VLAN ID range is 2 to 4094.  
  
QinQ VLAN can be a Native or a Non-Native VLAN. You can configure a Native VLAN and a Non-Native VLAN as a QinQ VLAN on the vNIC. When using the Native VLAN as QinQ VLAN, no additional VLAN can be configured on the vNIC.
  - d. Select or update other fields for any necessary configurations on the vNIC. For more information, see [Creating a vNIC for a LAN Connectivity Policy, on page 188](#)
  - e. Click **OK**




---

**Note** This QinQ VLAN selection is considered only when the **Enable QinQ** check box is selected on the vNIC.

---

6. Click **Save Changes**.




---

**Note** VIC QinQ Tunneling can also be configured on any of the following ways:

- vNIC Template - For more information, see [Creating a vNIC Template, on page 150](#).
  - Creating a vNIC option on a Service Profile of a Policy - For more information, see [Enabling QinQ on a vNIC of a Service Profile, on page 120](#).
- 

## Enabling QinQ on a vNIC of a Service Profile

To enable VIC QinQ Tunneling on a vNIC of a Service Profile, do the following:

1. In the **Navigation** pane, click **Servers**.
2. On the **Servers** tab, expand **Servers > Service Profile > root**.
3. Expand the service profile that you want to configure QinQ Tunneling and then click **vNICs**.
4. Choose the desired vNIC.
5. In the **Work Pane**, click the **General** tab.
6. In the **Fabric Interconnect** area, do the following:
  - a. Check the **Enable QinQ** check box.

- b. In the **VLANs** table, click the **QinQ VLAN** radio button. The supported QinQ VLAN ID range is 2 to 4094.

QinQ VLAN can be a Native or a Non-Native VLAN. You can configure a Native VLAN and a Non-Native VLAN as a QinQ VLAN on the vNIC. When using the Native VLAN as QinQ VLAN, no additional VLAN can be configured on the vNIC.



**Note** This QinQ VLAN selection is considered only when the **Enable QinQ** check box is selected on the vNIC.

7. Click **OK**.
8. Click **Save Changes**.



**Note** VIC QinQ Tunneling can also be configured on any of the following ways:

- vNIC Template - For more information, see [Creating a vNIC Template, on page 150](#).
- Creating a vNIC option on a LAN Connectivity Policy - For more information, see [Enabling QinQ on a vNIC in a LAN Connectivity Policy, on page 119](#).

## Viewing QinQ VLAN

The VLANs tab displays the QinQ VLAN selection.

Name	Description
VLAN column	The vNIC network name.
VLAN ID column	The identifier for the VLAN associated with this network.
Oper VLAN column	The full path to the network. Click the link in this column to view the network properties in a pop-up window.
Native ID column	This column displays an icon if this is the native VLAN for the vNIC.
QinQ VLAN	This column displays the VIC QinQ Tunneling for the VLAN.



**Note** VLANs are not supported with Microsoft Hyper-V dynamic vNICs.

## VIC QinQ Tunneling - Supported Combinations and Limitations

Following are the supported combinations for VIC QinQ Tunneling:

- QinQ VLAN selection is considered only when the **Enable QinQ** check box is selected on a vNIC Interface.

- QinQ Configuration supports a maximum of two VLANs on a vNIC Interface. A QinQ VLAN can be a Native or a non-Native VLAN. You can configure a Native VLAN and a Non-Native VLAN as a QinQ VLAN on the vNIC.

When using the Native VLAN as QinQ VLAN, no additional VLAN can be configured on the vNIC.

- For Cisco UCS VIC 15000 series adapters, QinQ and Geneve Offload can be enabled on a vNIC Interface.

Following are the limitations of VIC QinQ Tunneling:

- QinQ configuration on a vNIC Interface is not supported on Cisco UCS VIC 1300 series adapters.
- The default VLAN (VLAN ID: 1) is not supported as a QinQ VLAN on a vNIC Interface.
- When a Native VLAN and a QinQ VLAN are configured on a vNIC Interface, a new VLAN configuration is not supported and results in Server Profile association failures when selected. To accommodate a new VLAN, either the Native VLAN or QinQ VLAN must be removed.
- When the QinQ VLAN is the same as the Native VLAN on a vNIC Interface, a new VLAN configuration is not supported and results in Server Profile association failures when selected. To accommodate a new VLAN, either the Native VLAN or QinQ VLAN must be modified.
- For Cisco UCS VIC 1400, 14000, and 15000 series adapters, LAN (or PXE) Boot and QinQ cannot be configured on a vNIC interface and result in configuration failures when enabled.
- For Cisco UCS VIC 1400, 14000, and 15000 series adapters, iSCSI Boot and QinQ cannot be configured on a vNIC interface and result in configuration failures when enabled.
- For Cisco UCS VIC 1400 and 14000 series adapters, QinQ and Geneve Offload cannot be configured on a vNIC interface and result in configuration failures when enabled.
- For Cisco UCS VIC 1400, 14000, and 15000 series adapters, QinQ and VMMQ cannot be configured on a vNIC interface and result in configuration failures when enabled.
- For Cisco UCS VIC 1400, 14000, and 15000 series adapters, QinQ and RDMA V2 cannot be configured on a vNIC interface and result in configuration failures when enabled.
- For Cisco UCS 6454, 64108, and 6536 Fabric Interconnects, QinQ must be enabled at LAN > Global Policies to support QinQ VLAN on a VIC adapter.
- For Cisco UCS VIC 1400, 14000, and 15000 series adapters, QinQ and SR-IOV cannot be configured on a vNIC interface and result in configuration failures when enabled.
- When the Service Profile is already associated, you cannot enable or disable QinQ on a B-Series server.
- For Cisco UCS 6454, Cisco UCS 64108, and Cisco UCS 6536 Fabric Interconnects, QinQ configuration for Fabric Interconnects in Global Policy > LAN Connectivity Policy must be enabled to configure QinQ on a vNIC interface.
- QinQ and usNIC cannot be enabled together on a vNIC interface.
- When VIC QinQ Tunneling is enabled, you cannot downgrade to lower release versions.



## CHAPTER 7

# MAC Pools

---

- [MAC Pools, on page 123](#)
- [Creating a MAC Pool, on page 123](#)
- [Deleting a MAC Pool, on page 124](#)

## MAC Pools

A MAC pool is a collection of network identities, or MAC addresses, that are unique in their Layer 2 environment and are available to be assigned to vNICs on a server. If you use MAC pools in service profiles, you do not have to manually configure the MAC addresses to be used by the server associated with the service profile.

In a system that implements multitenancy, you can use the organizational hierarchy to ensure that MAC pools can be used only by specific applications or business services. Cisco UCS uses the name resolution policy to assign MAC addresses from the pool.

To assign a MAC address to a server, you must include the MAC pool in a vNIC policy. The vNIC policy is then included in the service profile assigned to that server.

You can specify your own MAC addresses or use a group of MAC addresses provided by Cisco.

## Creating a MAC Pool

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Pools**.
- Step 3** Expand the node for the organization where you want to create the pool.  
If the system does not include multi tenancy, expand the **root** node.
- Step 4** Right-click **MAC Pools** and select **Create MAC Pool**.
- Step 5** In the **Define Name and Description** page of the **Create MAC Pool** wizard, complete the following fields:

Name	Description
Name field	The name of the MAC pool.  This name can be between 1 and 32 alphanumeric characters. You cannot use spaces or any special characters other than - (hyphen), _ (underscore), : (colon), and . (period), and you cannot change this name after the object is saved.
Description field	A description of the MAC pool.  Enter up to 256 characters. You can use any characters or spaces except ` (accent mark), \ (backslash), ^ (carat), " (double quote), = (equal sign), > (greater than), < (less than), or ' (single quote).
Assignment Order field	This can be one of the following: <ul style="list-style-type: none"> <li>• <b>Default</b>—Cisco UCS Manager selects a random identity from the pool.</li> <li>• <b>Sequential</b>—Cisco UCS Manager selects the lowest available identity from the pool.</li> </ul>

**Step 6** Click **Next**.

**Step 7** In the **Add MAC Addresses** page of the **Create MAC Pool** wizard, click **Add**.

**Step 8** In the **Create a Block of MAC Addresses** dialog box, complete the following fields:

Name	Description
First MAC Address field	The first MAC address in the block.
Size field	The number of MAC addresses in the block.

**Step 9** Click **OK**.

**Step 10** Click **Finish**.

### What to do next

Include the MAC pool in a vNIC template.

## Deleting a MAC Pool

If you delete a pool, Cisco UCS Manager does not reallocate any addresses from that pool that were assigned to vNICs or vHBAs. All assigned addresses from a deleted pool remain with the vNIC or vHBA to which they are assigned until one of the following occurs:

- The associated service profiles are deleted.
- The vNIC or vHBA to which the address is assigned is deleted.
- The vNIC or vHBA is assigned to a different pool.

## Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN > Pools > *Organization\_Name*** .
- Step 3** Expand the **MAC Pools** node.
- Step 4** Right-click the MAC pool you want to delete and select **Delete**.
- Step 5** If a confirmation dialog box displays, click **Yes**.
-







## CHAPTER 8

# Quality of Service

---

- [Quality of Service, on page 127](#)
- [Configuring System Classes, on page 128](#)
- [Configuring Quality of Service Policies, on page 131](#)
- [Configuring Flow Control Policies, on page 132](#)
- [Configuring Slow Drain, on page 133](#)
- [Configuring the Watchdog Timer, on page 137](#)

## Quality of Service

Cisco UCS provides the following methods to implement quality of service:

- System classes that specify the global configuration for certain types of traffic across the entire system
- QoS policies that assign system classes for individual vNICs
- Flow control policies that determine how uplink Ethernet ports handle pause frames

Global QoS changes made to the QoS system class may result in brief data-plane interruptions for all traffic. Some examples of such changes are:

- Changing the MTU size for an enabled class
- Changing packet drop for an enabled class
- Changing the CoS value for an enabled class

### **Guidelines and Limitations for Quality of Service on Cisco UCS 6400 Series Fabric Interconnects and Cisco UCS 6536 Fabric Interconnects**

- Multicast optimization is not supported.
- MTU is not configurable for drop type QoS system classes and is always set to 9216. MTU is only configurable for no-drop type QoS system classes, except for the fibre channel class.
- The default MTU size for the no-drop class is 1500 and the maximum supported size for this class is 9216.
- The MTU size for fibre channel is always 2240.

- Multicast is not supported on any no-drop QoS class.

### Guidelines and Limitations for Quality of Service on Cisco UCS 6300 Series Fabric Interconnect

- Cisco UCS 6300 Series Fabric Interconnect uses a shared buffer for all system classes.
- Multicast optimization is not supported.
- Multicast is not supported on any no-drop QoS class.
- When you change the QoS parameters for any class causes traffic disruption to all classes. The following table lists the changes in the QoS system class and the conditions that trigger a system reboot.

QoS System class status	Condition	FI Reboot Status
Enabled	Change between drop and no drop	Yes
No-drop	Change between enable and disable	Yes
Enable and no-drop	Change in MTU size	Yes

- The subordinate FI reboots first as a result of the change in the QoS system class. The primary FI reboots only after you acknowledge it in **Pending Activities**.

### Guidelines and Limitations for Quality of Service on Cisco UCS Mini

- Cisco UCS Mini uses a shared buffer for all system classes.
- The bronze class shares the buffer with SPAN. We recommend using either SPAN or the bronze class.
- Multicast optimization is not supported.
- Multicast is not supported on any no-drop QoS class.
- Changing the QoS parameters for any class causes traffic disruption to all classes.
- When mixing Ethernet and FC or FCoE traffic, the bandwidth distribution is not equal.
- Multiple streams of traffic from the same class may not be distributed equally.
- Use the same CoS values for all no-drop policies to avoid any FC or FCoE performance issues.
- Only the platinum and gold classes support no-drop policies.

## Configuring System Classes

### System Classes

Cisco UCS uses Data Center Ethernet (DCE) to handle all traffic inside a Cisco UCS domain. This industry standard enhancement to Ethernet divides the bandwidth of the Ethernet pipe into eight virtual lanes. Two virtual lanes are reserved for internal system and management traffic. You can configure quality of service

(QoS) for the other six virtual lanes. System classes determine how the DCE bandwidth in these six virtual lanes is allocated across the entire Cisco UCS domain.

Each system class reserves a specific segment of the bandwidth for a specific type of traffic, which provides a level of traffic management, even in an oversubscribed system. For example, you can configure the **Fibre Channel Priority** system class to determine the percentage of DCE bandwidth allocated to FCoE traffic.

The following table describes the system classes that you can configure.

**Table 11: System Classes**

System Class	Description
Platinum Gold Silver Bronze	<p>A configurable set of system classes that you can include in the QoS policy for a service profile. Each system class manages one lane of traffic.</p> <p>All properties of these system classes are available for you to assign custom settings and policies.</p> <p>For Cisco UCS Mini, packet drop can only be disabled on the platinum and gold classes. Only one platinum and one gold class can be configured as a no drop class at a time.</p>
Best Effort	<p>A system class that sets the quality of service for the lane reserved for basic Ethernet traffic.</p> <p>Some properties of this system class are preset and cannot be modified. For example, this class has a drop policy that allows it to drop data packets if required. You cannot disable this system class.</p>
Fibre Channel	<p>A system class that sets the quality of service for the lane reserved for Fibre Channel over Ethernet traffic.</p> <p>Some properties of this system class are preset and cannot be modified. For example, this class has a no-drop policy that ensures it never drops data packets. You cannot disable this system class.</p> <p><b>Note</b> FCoE traffic has a reserved QoS system class that should not be used by any other type of traffic. If any other type of traffic has a CoS value that is used by FCoE, the value is remarked to 0.</p>

## Configuring QoS System Classes



### Note

- Under the network QoS policy, the MTU is used only for buffer carving when no-drop classes are configured. No additional MTU adjustments are required under the network QoS policy to support jumbo MTU.
- For Cisco VIC 1400 series, 14000 series and later version adapters, you can change the MTU size of the vNIC from the host interface settings. When the Overlay network is configured, make sure that the overall MTU size does not exceed the MTU value in the QoS system class. If this MTU value exceeds the MTU value in the QoS system class, packets could be dropped during data transmission.




---

**Important** Use the same CoS (Class of Service) values on UCS and N5K/N9K for all the no-drop policies. To insure that end-to-end PFC works correctly, have the same QoS policy configured on all intermediate switches.

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud**.
- Step 3** Select the **QoS System Class** node. Packet drop should be unchecked to configure MTU.  
MTU is not configurable for drop type QoS system classes and is always set to 9216. MTU is only configurable for no-drop type QoS system classes
- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** Update the properties for the system class that you want to configure to meet the traffic management needs of the system.
- Note** Some properties may not be configurable for all system classes. The maximum value for MTU is 9216.
- Step 6** Click **Save Changes**.
- 

## Enabling a QoS System Class

The Best Effort or Fibre Channel system classes are enabled by default.

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > LAN Cloud**.
- Step 3** Select the **QoS System Class** node.
- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** Check the **Enabled** check box for the QoS system that you want to enable.
- Step 6** Click **Save Changes**.
- 

## Disabling a QoS System Class

You cannot disable the Best Effort or Fibre Channel system classes.

All QoS policies that are associated with a disabled system class default to Best Effort or, if the disabled system class is configured with a Cos of 0, to the Cos 0 system class.

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > LAN Cloud**.
  - Step 3** Select the **QoS System Class** node.
  - Step 4** In the **Work** pane, click the **General** tab.
  - Step 5** Uncheck the **Enabled** check box for the QoS system that you want to disable.
  - Step 6** Click **Save Changes**.
- 

## Configuring Quality of Service Policies

### Quality of Service Policy

A quality of service (QoS) policy assigns a system class to the outgoing traffic for a vNIC or vHBA. This system class determines the quality of service for that traffic. For certain adapters, you can also specify additional controls on the outgoing traffic, such as burst and rate.

You must include a QoS policy in a vNIC policy or vHBA policy and then include that policy in a service profile to configure the vNIC or vHBA.

### Creating a QoS Policy

#### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > Policies**.
  - Step 3** Expand the node for the organization where you want to create the pool.  
If the system does not include multi tenancy, expand the **root** node.
  - Step 4** Right-click **QoS Policy** and select **Create QoS Policy**.
  - Step 5** In the **Create QoS Policy** dialog box, complete the required fields.
  - Step 6** Click **OK**.
- 

#### What to do next

Include the QoS policy in a vNIC or vHBA template.

## Deleting a QoS Policy

If you delete a QoS policy that is in use or you disable a system class that is used in a QoS policy, any vNIC or vHBA that uses that QoS policy is assigned to the Best Effort system class or to the system class with a CoS of 0. In a system that implements multitenancy, Cisco UCS Manager first attempts to find a matching QoS policy in the organization hierarchy.

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **Servers > Policies > Organization\_Name**.
  - Step 3** Expand the **QoS Policies** node.
  - Step 4** Right-click the QoS policy you want to delete and select **Delete**.
  - Step 5** If a confirmation dialog box displays, click **Yes**.
- 

## Configuring Flow Control Policies

### Flow Control Policy

Flow control policies determine whether the uplink Ethernet ports in a Cisco UCS domain send and receive IEEE 802.3x pause frames when the receive buffer for a port fills. These pause frames request that the transmitting port stop sending data for a few milliseconds until the buffer clears.

For flow control to work between a LAN port and an uplink Ethernet port, you must enable the corresponding receive and send flow control parameters for both ports. For Cisco UCS, the flow control policies configure these parameters.

When you enable the send function, the uplink Ethernet port sends a pause request to the network port if the incoming packet rate becomes too high. The pause remains in effect for a few milliseconds before traffic is reset to normal levels. If you enable the receive function, the uplink Ethernet port honors all pause requests from the network port. All traffic is halted on that uplink port until the network port cancels the pause request.

Because you assign the flow control policy to the port, changes to the policy have an immediate effect on how the port reacts to a pause frame or a full receive buffer.

### Creating a Flow Control Policy

#### Before you begin

Configure the network port with the corresponding setting for the flow control that you need. For example, if you enable the send setting for flow-control pause frames in the policy, ensure that the receive parameter in the network port is set to on or to desired. If you want the Cisco UCS port to receive flow-control frames, ensure that the send parameter is set to on or to desire on the network port. If you do not want to use flow control, you can set the send and receive parameters on the network port to off.

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies**.
- Step 3** Expand the **root** node.
- You can only create a flow control policy in the root organization. You cannot create a flow control policy in a sub-organization.
- Step 4** Right-click the **Flow Control Policies** node and select **Create Flow Control Policy**.
- Step 5** In the **Create Flow Control Policy** wizard, complete the required fields.
- Step 6** Click **OK**.
- 

### What to do next

Associate the flow control policy with an uplink Ethernet port or port channel.

## Deleting a Flow Control Policy

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies > Organization\_Name**.
- Step 3** Expand the **Flow Control Policies** node.
- Step 4** Right-click the policy you want to delete and select **Delete**.
- Step 5** If a confirmation dialog box displays, click **Yes**.
- 

## Configuring Slow Drain

### QoS Slow Drain Device Detection and Mitigation

All data traffic between end devices in the fabric is carried by Fibre Channel services that use link-level, per-hop-based, and buffer-to-buffer flow control. These classes of service do not support end-to-end flow control. When slow devices are attached to the fabric, the end devices do not accept the frames at the configured or negotiated rate. The slow devices lead to an Inter-Switch Link (ISL) credit shortage in the traffic that is destined for these devices, and they congest the links. The credit shortage affects the unrelated flows in the fabric that use the same ISL link even though destination devices do not experience a slow drain.

Similarly, in End-Host Mode, if a server that is directly attached to the Fabric Interconnect receives traffic slowly, it may congest the uplink port shared by other servers. If a slow server is attached to a HIF port on FEX/IOM, it may congest the fabric port and/or uplink port.

Cisco UCS Manager Release 4.0(2) introduces the QoS Slow Drain Detection and Mitigation feature on Cisco UCS 6454 Fabric Interconnects. This feature provides various enhancements that enable you to detect slow drain devices that cause congestion in the network, and also mitigate it. The enhancements are mainly on the edge ports and core ports that connect to the slow drain devices. This is done to minimize the frames stuck condition in the edge and core ports due to slow drain devices that are causing an ISL blockage. To avoid or minimize the stuck condition, you can configure smaller frame timeout for the ports. A smaller frame timeout value helps to alleviate the slow drain condition that affects the fabric by dropping the packets on the edge ports sooner than the time they actually get timed out. This function frees the buffer space in ISL, which can be used by other unrelated flows that do not experience the slow drain condition. Cisco UCS Manager Release 4.1 extends support of this feature to Cisco UCS 64108 Fabric Interconnects.




---

**Note** Another way of mitigating network congestion is to use the watchdog timer function, supported on Cisco UCS 6400 Series Fabric Interconnects starting with Cisco UCS Manager 4.2. However, the slow drain and watchdog timer functions are mutually exclusive.

---

In this release, slow drain detection and mitigation is supported on the following ports:

- FCoE
- Back-plane

## Configuring Slow Drain

While configuring slow drain timeout timers, you can select the timeout value from the list of allowed values. You cannot configure custom timeout values.




---

**Note**

- In Cisco UCS Manager Release 4.1(3a), the slow drain timeout timer is enabled on the FCoE port by default with a 500ms timeout value. Starting with Cisco UCS Manager Release 4.2(1), the slow drain timeout timer is disabled and the watchdog timer is enabled by default.
- We recommend to change the default timeout values of the Core FCoE port and Edge FCoE Port only when the current default timeout values result in the dropping of packets during high traffic load.
- Slow drain and the watchdog timer cannot be used simultaneously. Attempting to do so will result in an error.

---

### Procedure

- 
- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > LAN Cloud**.
  - Step 3** Starting in UCS Manager 4.2.1 click on the **QoS System Class** entry. in earlier releases, go to the **QoS** entry and click to go to the **Work** pane.
  - Step 4** In the **Work** pane, click the **QoS** tab.
  - Step 5** Click **Configure Slow Drain**.
  - Step 6** In the **Configure Slow Drain Timers** dialog box that appears, configure the following fields:



Name	Description
FCoE Port radio button	<p>Whether slow drain timers are enabled on FCoE ports.</p> <ul style="list-style-type: none"><li>• <b>Disabled</b>—Configuration of slow drain timers is disabled. This is the default option till the previous version of Cisco UCS Manager Release 4.1(3a).</li><li>• <b>Enabled</b>—Configuration of slow drain timers is enabled. Starting with Cisco UCS Manager Release 4.1(3a), this is the default option.</li></ul>
Core FCoE port (ms) drop-down list	<p>The time in milliseconds (ms) after which frames timeout on core FCoE ports. You can select from the following values:</p> <ul style="list-style-type: none"><li>• 100</li><li>• 200</li><li>• 300</li><li>• 400</li><li>• 500—This is the default value</li><li>• 600</li><li>• 700</li><li>• 800</li><li>• 900</li><li>• 1000</li></ul>

Name	Description
Edge FCoE Port (ms) drop-down list	<p>The time in milliseconds (ms) after which frames timeout on edge FCoE ports. You can select from the following values:</p> <ul style="list-style-type: none"> <li>• 100</li> <li>• 200</li> <li>• 300</li> <li>• 400</li> <li>• 500—This is the default value</li> <li>• 600</li> <li>• 700</li> <li>• 800</li> <li>• 900</li> <li>• 1000</li> </ul>

**Step 7** Click **OK**.

**Step 8** Click **Save Changes**.

## Correcting a Slow Drain Condition

Correcting a slow drain condition will work only on those ports that are designated to be in the ‘error-disabled’ state because of ‘slow-drain’.

### Procedure

**Step 1** In the **Navigation** pane, click **Equipment**.

**Step 2** Expand **Equipment** > **Chassis** > *Chassis Number* > **IO Modules**.

**Step 3** Choose the I/O module on which you want to recover backplane ports that are in the **error-disabled** state.

**Step 4** In the **Work** pane, click the **General** tab.

**Step 5** In the **Actions** area, click **Correct Slow Drain Condition**.

**Step 6** If a confirmation dialog box displays, click **Yes**.

# Configuring the Watchdog Timer

## The Watchdog Timer

Cisco UCS Manager 4.2 supports the watchdog timer function on Cisco 6400 Series Fabric Interconnects with switch ports that are PFC mode enabled.

Priority flow control, (PFC) also referred to as Class-based Flow Control (CBFC) or Per Priority Pause (PPP), is a mechanism that prevents frame loss that is due to congestion. PFC functions on a per class-of-service (CoS) basis. A PFC storm could occur in the network due to a malfunctioning NIC or switch, causing the PFC frames to be propagated to all senders. This could cause a complete stall in network traffic. To mitigate a PFC storm, you can use a PFC watchdog timer. Configure a PFC watchdog interval to detect whether packets in a no-drop queue are being drained within a specified time period. If packets are present in buffer longer than the configured time period, once the time period is exceeded, all outgoing packets are dropped on the interfaces that match the PFC queue that is not being drained.

Use of watchdog timer and slow drain on are mutually exclusive options. You can enable either the slow drain or watchdog timer, but not both. Starting with Cisco UCS Manager Release 4.2(1), the slow drain timeout timer is disabled and the watchdog timer is enabled by default. The default watchdog interval is 500 with a shutdown multiplier of 1.

## Configuring the Watchdog Timer

The watchdog timer cannot be used in connection with slow drain.

### Before you begin

If slow drain was used previously, disable slow drain.

### Procedure

- 
- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > LAN Cloud**.
  - Step 3** Select a fabric interconnect and click on **QoS System Class**.
  - Step 4** In the **General** tab, click on **Configure Watchdog Timers**.
  - Step 5** In the **Configure WD Timers** window, click **On** for the **WD admin state** to globally enable the PFC watchdog interval for all interfaces, then select a watchdog interval between 100 and 1000 milliseconds and a shutdown multiplier between 1 and 10.  
  
The default watchdog interval is 500 and the default shutdown multiplier is 1.
  - Step 6** Click **OK**.
  - Step 7** Click **Save Changes**.
-





## CHAPTER 9

# Upstream Disjoint Layer-2 Networks

- [Upstream Disjoint Layer-2 Networks, on page 139](#)
- [Guidelines for Configuring Upstream Disjoint L2 Networks, on page 140](#)
- [Upstream Disjoint L2 Networks Pinning Considerations, on page 141](#)
- [Configuring Cisco UCS for Upstream Disjoint L2 Networks, on page 143](#)
- [Creating a VLAN for an Upstream Disjoint L2 Network, on page 144](#)
- [Assigning Ports and Port Channels to VLANs, on page 144](#)
- [Viewing Ports and Port Channels Assigned to VLANs, on page 145](#)
- [Removing Ports and Port Channels from VLANs, on page 146](#)

## Upstream Disjoint Layer-2 Networks

Upstream disjoint layer-2 networks (disjoint L2 networks) are required if you have two or more Ethernet clouds that never connect, but must be accessed by servers or virtual machines located in the same Cisco UCS domain. For example, you could configure disjoint L2 networks if you require one of the following:

- Servers or virtual machines to access a public network and a backup network
- Servers or virtual machines for more than one customer are located in the same Cisco UCS domain, and that need to access the L2 networks for both customers in a multi-tenant system



**Note** By default, data traffic in Cisco UCS works on a principle of mutual inclusion. All traffic for all VLANs and upstream networks travels along all uplink ports and port channels. If you have upgraded from a release that does not support upstream disjoint layer-2 networks, you must assign the appropriate uplink interfaces to your VLANs, or traffic for those VLANs continues to flow along all uplink ports and port channels.

The configuration for disjoint L2 networks works on a principle of selective exclusion. Traffic for a VLAN that is designated as part of a disjoint network can only travel along an uplink Ethernet port or port channel that is specifically assigned to that VLAN, and is selectively excluded from all other uplink ports and port channels. However, traffic for VLANs that are not specifically assigned to an uplink Ethernet port or port channel can still travel on all uplink ports or port channels, including those that carry traffic for the disjoint L2 networks.

In Cisco UCS, the VLAN represents the upstream disjoint L2 network. When you design your network topology for disjoint L2 networks, you must assign uplink interfaces to VLANs not the reverse.

For information about the maximum number of supported upstream disjoint L2 networks, see the appropriate *Cisco UCS Configuration Limits for Cisco UCS Manager Guide*.

## Guidelines for Configuring Upstream Disjoint L2 Networks

When you plan your configuration for upstream disjoint L2 networks, consider the following:

### Ethernet Switching Mode Must Be End-Host Mode

Cisco UCS only supports disjoint L2 networks when the Ethernet switching mode of the fabric interconnects is configured for end-host mode. You cannot connect to disjoint L2 networks if the Ethernet switching mode of the fabric interconnects is switch mode.

### Symmetrical Configuration Is Recommended for High Availability

If a Cisco UCS domain is configured for high availability with two fabric interconnects, we recommend that both fabric interconnects are configured with the same set of VLANs.

### VLAN Validity Criteria Are the Same for Uplink Ethernet Ports and Port Channels

The VLAN used for the disjoint L2 networks must be configured and assigned to an uplink Ethernet port or uplink Ethernet port channel. If the port or port channel does not include the VLAN, Cisco UCS Manager considers the VLAN invalid and does the following:

- Displays a configuration warning in the **Status Details** area for the server.
- Ignores the configuration for the port or port channel and drops all traffic for that VLAN.



---

**Note** The validity criteria are the same for uplink Ethernet ports and uplink Ethernet port channels. Cisco UCS Manager does not differentiate between the two.

---

### Overlapping VLANs Are Not Supported

Cisco UCS does not support overlapping VLANs in disjoint L2 networks. You must ensure that each VLAN only connects to one upstream disjoint L2 domain.

### Each vNIC Can Only Communicate with One Disjoint L2 Network

A vNIC can only communicate with one disjoint L2 network. If a server needs to communicate with multiple disjoint L2 networks, you must configure a vNIC for each of those networks.

To communicate with more than two disjoint L2 networks, a server must have a Cisco VIC adapter that supports more than two vNICs.

### Appliance Port Must Be Configured with the Same VLAN as Uplink Ethernet Port or Port Channel

For an appliance port to communicate with a disjoint L2 network, you must ensure that at least one uplink Ethernet port or port channel is in the same network and is therefore assigned to the same VLANs that are used by the appliance port. If Cisco UCS Manager cannot identify an uplink Ethernet port or port channel

that includes all VLANs that carry traffic for an appliance port, the appliance port experiences a pinning failure and goes down.

For example, a Cisco UCS domain includes a global VLAN named `vlan500` with an ID of 500. `vlan500` is created as a global VLAN on the uplink Ethernet port. However, Cisco UCS Manager does not propagate this VLAN to appliance ports. To configure an appliance port with `vlan500`, you must create another VLAN named `vlan500` with an ID of 500 for the appliance port. You can create this duplicate VLAN in the **Appliances** node on the **LAN** tab of the Cisco UCS Manager GUI or the **eth-storage** scope in the Cisco UCS Manager CLI. If you are prompted to check for VLAN Overlap, accept the overlap and Cisco UCS Manager creates the duplicate VLAN for the appliance port.

### Default VLAN 1 Cannot Be Configured Explicitly on an Uplink Ethernet Port or Port Channel

Cisco UCS Manager implicitly assigns default VLAN 1 to all uplink ports and port channels. Even if you do not configure any other VLANs, Cisco UCS uses default VLAN 1 to handle data traffic for all uplink ports and port channels.



---

**Note** After you configure VLANs in a Cisco UCS domain, default VLAN 1 remains implicitly on all uplink ports and port channels. You cannot explicitly assign default VLAN 1 to an uplink port or port channel, nor can you remove it from an uplink port or port channel.

---

If you attempt to assign default VLAN 1 to a specific port or port channel, Cisco UCS Manager raises an Update Failed fault.

Therefore, if you configure a Cisco UCS domain for disjoint L2 networks, do not configure any vNICs with default VLAN 1 unless you want all data traffic for that server to be carried on all uplink Ethernet ports and port channels and sent to all upstream networks.

### VLANs for Both FIs Must be Concurrently Assigned

When you assign a port to a global VLAN, the VLAN is removed from all of the ports that are not explicitly assigned to the VLAN on both fabric interconnects. The ports on both FIs must be configured at the same time. If the ports are only configured on the first FI, traffic on the second FI will be disrupted.

## Upstream Disjoint L2 Networks Pinning Considerations

Communication with an upstream disjoint L2 network requires that you ensure that the pinning is properly configured. Whether you implement soft-pinning or hard-pinning, a VLAN membership mismatch causes traffic for one or more VLANs to be dropped.

### Soft-Pinning

Soft-pinning is the default behavior in Cisco UCS. If you plan to implement soft-pinning, you do not need to create LAN pin groups to specify a pin target for a vNIC. Instead, Cisco UCS Manager pins the vNIC to an uplink Ethernet port or port channel according to VLAN membership criteria.

With soft-pinning, Cisco UCS Manager validates data traffic from a vNIC against the VLAN membership of all uplink Ethernet ports and port channels. If you have configured disjoint L2 networks, Cisco UCS Manager must be able to find an uplink Ethernet port or port channel that is assigned to all VLANs on the vNIC. If no

uplink Ethernet port or port channel is configured with all VLANs on the vNIC, Cisco UCS Manager does the following:

- Brings the link down.
- Drops the traffic for all of the VLANs on the vNIC.
- Raises the following faults:
  - Link Down
  - VIF Down

Cisco UCS Manager does not raise a fault or warning about the VLAN configuration.

For example, a vNIC on a server is configured with VLANs 101, 102, and 103. Interface 1/3 is assigned only to VLAN 102. Interfaces 1/1 and 1/2 are not explicitly assigned to a VLAN, which makes them available for traffic on VLANs 101 and 103. As a result of this configuration, the Cisco UCS domain does not include a border port interface that can carry traffic for all three VLANs for which the vNIC is configured. As a result, Cisco UCS Manager brings down the vNIC, drops traffic for all three VLANs on the vNIC, and raises the Link Down and VIF Down faults.

### hard-pinning

hard-pinning occurs when you use LAN pin groups to specify the pinning target for the traffic intended for the disjoint L2 networks. In turn, the uplink Ethernet port or port channel that is the pinning target must be configured to communicate with the appropriate disjoint L2 network.

With hard-pinning, Cisco UCS Manager validates data traffic from a vNIC against the VLAN membership of all uplink Ethernet ports and port channels, and validates the LAN pin group configuration to ensure it includes the VLAN and the uplink Ethernet port or port channel. If the validation fails at any point, Cisco UCS Manager does the following:

- Raises a Pinning VLAN Mismatch fault with a severity of Warning.
- Drops traffic for the VLAN.
- Does not bring the link down, so that traffic for other VLANs can continue to flow along it.

For example, if you want to configure hard-pinning for an upstream disjoint L2 network that uses VLAN 177, do the following:

- Create a LAN pin group with the uplink Ethernet port or port channel that carries the traffic for the disjoint L2 network.
- Configure at least one vNIC in the service profile with VLAN 177 and the LAN pin group.
- Assign VLAN 177 to an uplink Ethernet port or port channel included in the LAN pin group

If the configuration fails at any of these three points, then Cisco UCS Manager warns of a VLAN mismatch for VLAN 177 and drops the traffic for that VLAN only.





**Note** If changes are made to soft-pinning configurations resulting in vNIC VLANs not resolving with disjoint L2 uplink, a warning dialog box is displayed. The warning dialog box allows you to proceed with your configuration or cancel it. If you decide to proceed with the mis-configuration, you will experience a reduction in server traffic performance.

## Configuring Cisco UCS for Upstream Disjoint L2 Networks

When you configure a Cisco UCS domain to connect with upstream disjoint L2 networks, you need to ensure that you complete all of the following steps.

### Before you begin

Before you begin this configuration, ensure that the ports on the fabric interconnects are properly cabled to support your disjoint L2 networks configuration.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	Configure Ethernet switching mode for both fabric interconnects in Ethernet End-Host Mode.	The Ethernet switching mode must be in End-Host Mode for Cisco UCS to be able to communicate with upstream disjoint L2 networks. For more information, see the <i>LAN Ports and Port Channel</i> chapter in this guide..
<b>Step 2</b>	Configure the ports and port channels that you require to carry traffic for the disjoint L2 networks.	
<b>Step 3</b>	(Optional) Configure the LAN pin groups required to pin the traffic for the appropriate uplink Ethernet ports or port channels.	
<b>Step 4</b>	Create one or more VLANs.	These can be named VLANs or private VLANs. For a cluster configuration, we recommend that you create the VLANs accessible to both fabric interconnects.
<b>Step 5</b>	Assign the desired ports or port channels to the VLANs for the disjoint L2 networks.	When this step is complete, traffic for these VLANs is sent through the trunks for the assigned ports and/or port channels.
<b>Step 6</b>	Ensure that the service profiles for all servers that need to communicate with the disjoint L2 networks include the correct LAN connectivity configuration. This configuration ensures that the vNICs direct the traffic to the appropriate VLAN.	You can complete this configuration through one or more vNIC templates, or when you configure the networking options for the service profile. For more information about vNIC templates and service profiles, see the <i>Cisco UCS Manager Storage Management Guide</i> .

# Creating a VLAN for an Upstream Disjoint L2 Network

For upstream disjoint L2 networks, we recommend that you create VLANs in the VLAN Manager.

## Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** On the **LAN** tab, click the **LAN** node.
- Step 3** In the **Work** pane, click the **LAN Uplinks Manager** link on the **LAN Uplinks** tab.  
The LAN Uplinks Manager opens in a separate window.
- Step 4** In the LAN Uplinks Manager, click **VLANS > VLAN Manager**.  
You can create the VLAN on any of the sub tabs. However, if you use the **All** sub tab, you can view all of the configured VLANs in the table.
- Step 5** On the icon bar to the right of the table, click +.  
If the + icon is disabled, click an entry in the table to enable it.
- Step 6** In the **Create VLANs** dialog box, specify the required fields and then click **OK**.  
You cannot create VLANs with IDs from 3968 to 4047. This range of VLAN IDs is reserved. Private VLANs are not supported for Cisco UCS Mini.
- Step 7** Repeat Steps 6 and 7 to create additional VLANs.
- 

## What to do next

Assign ports and port channels to the VLANs.

# Assigning Ports and Port Channels to VLANs

## Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** On the **LAN** tab, click the **LAN** node.
- Step 3** In the **Work** pane, click the **LAN Uplinks Manager** link on the **LAN Uplinks** tab.  
The LAN Uplinks Manager opens in a separate window.
- Step 4** In the LAN Uplinks Manager, click **VLANS > VLAN Manager**.  
You can create the VLAN on any of the sub tabs. However, if you use the **All** sub tab, you can view all of the configured VLANs in the table.

**Step 5** Click one of the following sub tabs to configure ports and port channels on that fabric interconnect:

Subtab	Description
<b>Fabric A</b>	Displays the ports, port channels, and VLANs that are accessible to fabric interconnect A.
<b>Fabric B</b>	Displays the ports, port channels, and VLANs that are accessible to fabric interconnect B.

**Step 6** In the **Ports and Port Channels** table, do the following:

- To assign an Uplink Ethernet port channel to a VLAN, expand the **Port Channels** node and click the port channel you want to assign to the VLAN.
- To assign an Uplink Ethernet port to the VLAN, expand the **Uplink Interfaces** node and click the port you want to assign to the VLAN

You can hold down the **Ctrl** key and click multiple ports or port channels to assign to them to the same VLAN or set of VLANs .

**Step 7** In the **VLANs** table, expand the appropriate node if necessary and click the VLAN to which you want to assign the port or port channel.

You can hold down the **Ctrl** key and click multiple VLANs if you want to assign the same set of ports and/or port channels to them.

**Step 8** Click the **Add to VLAN/VLAN Group** button.

**Step 9** If a confirmation dialog box displays, click **Yes**.

**Step 10** To assign additional ports or port channels to VLANs on the same fabric, repeat Steps 6, 7, and 8.

**Step 11** To assign additional ports or port channels to VLANs on a different fabric, repeat Steps 5 through 8.

If the Cisco UCS domain is configured for high availability with two fabric interconnects, we recommend that you create the same set of VLANs on both fabric interconnects.

**Step 12** If a confirmation dialog box displays, click **Yes**.

**Step 13** Click **Apply** if you want to continue to work in the VLAN Manager, or click **OK** to close the window.

After a port or port channel is assigned to one or more VLANs, it is removed from all other VLANs.

## Viewing Ports and Port Channels Assigned to VLANs

### Procedure

**Step 1** In the **Navigation** pane, click **LAN**.

**Step 2** On the **LAN** tab, click the **LAN** node.

**Step 3** In the **Work** pane, click the **LAN Uplinks Manager** link on the **LAN Uplinks** tab.

The LAN Uplinks Manager opens in a separate window.

**Step 4** In the LAN Uplinks Manager, click **VLANs > VLAN Manager**.

You can create the VLAN on any of the sub tabs. However, if you use the **All** sub tab, you can view all of the configured VLANs in the table.

**Step 5** Click one of the following sub tabs to configure ports and port channels on that fabric interconnect:

Subtab	Description
<b>Fabric A</b>	Displays the ports, port channels, and VLANs that are accessible to fabric interconnect A.
<b>Fabric B</b>	Displays the ports, port channels, and VLANs that are accessible to fabric interconnect B.

**Step 6** In the **VLANs** table, expand the appropriate node and the VLAN for which you want to view the assigned ports or port channels.

## Removing Ports and Port Channels from VLANs

### Procedure

**Step 1** In the **Navigation** pane, click **LAN**.

**Step 2** On the **LAN** tab, click the **LAN** node.

**Step 3** In the **Work** pane, click the **LAN Uplinks Manager** link on the **LAN Uplinks** tab.

The LAN Uplinks Manager opens in a separate window.

**Step 4** In the LAN Uplinks Manager, click **VLANs > VLAN Manager**.

You can create the VLAN on any of the sub tabs. However, if you use the **All** sub tab, you can view all of the configured VLANs in the table.

**Step 5** Click one of the following sub tabs to configure ports and port channels on that fabric interconnect:

Subtab	Description
<b>Fabric A</b>	Displays the ports, port channels, and VLANs that are accessible to fabric interconnect A.
<b>Fabric B</b>	Displays the ports, port channels, and VLANs that are accessible to fabric interconnect B.

**Step 6** In the **VLANs** table, expand the appropriate node and the VLAN from which you want to remove a port or port channel.

**Step 7** Click the port or port channel that you want to remove from the VLAN.

Hold down the **Ctrl** key to click multiple ports or port channels.

**Step 8** Click the **Remove from VLAN/VLAN Group** button.

**Step 9** If a confirmation dialog box displays, click **Yes**.

**Step 10** Click **Apply** if you want to continue to work in the VLAN Manager, or click **OK** to close the window.

**Important** If you remove all port or port channel interfaces from a VLAN, the VLAN returns to the default behavior and data traffic on that VLAN flows on all uplink ports and port channels. Based on the configuration in the Cisco UCS domain, this default behavior can cause Cisco UCS Manager to drop traffic for that VLAN. To avoid this occurrence, Cisco recommends that you assign at least one interface to the VLAN or delete the VLAN.

---





# CHAPTER 10

## Network-Related Policies

---

- [Configuring vNIC Templates, on page 149](#)
- [Configuring Adapter Policies, on page 157](#)
- [Configuring the Default vNIC Behavior Policy, on page 184](#)
- [Configuring LAN Connectivity Policies, on page 185](#)
- [Configuring SRIOV HPN Connection Policies, on page 191](#)
- [Configuring Network Control Policies, on page 194](#)
- [Configuring Multicast Policies, on page 197](#)
- [Configuring LACP Policies, on page 199](#)
- [Configuring UDLD Link Policies, on page 200](#)
- [Configuring VMQ and VMMQ Connection Policies, on page 204](#)
- [NetQueue, on page 216](#)

## Configuring vNIC Templates

### vNIC Template

The vNIC LAN connectivity policy defines how a vNIC on a server connects to the LAN.

Cisco UCS Manager does not automatically create a VM-FEX port profile with the correct settings when you create a vNIC template. If you want to create a VM-FEX port profile, you must configure the target of the vNIC template as a VM. You must include this policy in a service profile for it to take effect.

You can select VLAN groups in addition to any individual VLAN while creating a vNIC template.



---

**Note** If your server has two Emulex or QLogic NICs (Cisco UCS CNA M71KR-E or Cisco UCS CNA M71KR-Q), you must configure vNIC policies for both adapters in your service profile to get a user-defined MAC address for both NICs. If you do not configure policies for both NICs, Windows still detects both of them in the PCI bus. Then because the second eth is not part of your service profile, Windows assigns it a hardware MAC address. If you then move the service profile to a different server, Windows sees additional NICs because one NIC did not have a user-defined MAC address.

---

## Creating a vNIC Template

### Before you begin

This policy requires that one or more of the following resources already exist in the system:

- Named VLAN
- MAC pool
- QoS policy
- LAN pin group
- Statistics threshold policy
- Network Control policy

### Procedure

- 
- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies**.
- Step 3** Expand the node for the organization where you want to create the policy.  
If the system does not include multi tenancy, expand the **root** node.
- Step 4** Right-click the **vNIC Templates** node and choose **Create vNIC Template**.
- Step 5** In the **Create vNIC Template** dialog box:
- a) In the **General** area, complete the following fields:

Name	Description
<b>Name</b> field	The name of the vNIC template.  This name can be between 1 and 16 alphanumeric characters. You cannot use spaces or any special characters other than - (hyphen), _ (underscore), : (colon), and . (period), and you cannot change this name after the object is saved.
<b>Description</b> field	A user-defined description of the template.  Enter up to 256 characters. You can use any characters or spaces except ` (accent mark), \ (backslash), ^ (carat), " (double quote), = (equal sign), > (greater than), < (less than), or ' (single quote).



Name	Description
<b>Fabric ID</b> field	<p>The fabric interconnect associated with the component.</p> <p>If you want vNICs created from this template to be able to access the second fabric interconnect if the default one is unavailable, check the <b>Enable Failover</b> check box.</p> <p><b>Note</b> Do not enable vNIC fabric failover under the following circumstances:</p> <ul style="list-style-type: none"> <li>• If the Cisco UCS domain is running in Ethernet switch mode. vNIC fabric failover is not supported in that mode. If all Ethernet uplinks on one fabric interconnect fail, the vNICs do not fail over to the other.</li> <li>• If you plan to associate one or more vNICs created from this template to a server with an adapter that does not support fabric failover, such as the Cisco UCS 82598KR-CI 10-Gigabit Ethernet Adapter. If so, Cisco UCS Manager generates a configuration fault when you associate the service profile with the server.</li> </ul>
<b>Redundancy Type</b>	<p>The Redundancy type that you choose initiates a fabric failover using vNIC/HBA redundancy pairs.</p> <ul style="list-style-type: none"> <li>• <b>Primary Template</b>—Creates configurations that can be shared with the Secondary template. Any other shared changes on the Primary template are automatically synchronized to the Secondary template.</li> <li>• <b>Secondary Template</b>—All shared configurations are inherited from the Primary template.</li> <li>• <b>No Redundancy</b>—Legacy vNIC/vHBA template behavior. Select this option if you do not want to use redundancy.</li> </ul>
<b>Target</b> list box	<p>A list of the possible targets for vNICs created from this template. The target you choose determines whether or not Cisco UCS Manager automatically creates a VM-FEX port profile with the appropriate settings for the vNIC template. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Adapter</b>—The vNICs apply to all adapters. No VM-FEX port profile is created if you choose this option.</li> <li>• <b>VM</b>—The vNICs apply to all virtual machines. A VM-FEX port profile is created if you choose this option.</li> </ul>

Name	Description
Template Type field	<ul style="list-style-type: none"> <li>• <b>Initial Template:</b> vNICs created from this template are not updated if the template changes.</li> <li>• <b>Updating Template:</b> vNICs created from this template are updated if the template changes.</li> </ul>
Enable QinQ check box	Check this check box to allow VIC QinQ Tunneling.

- b) In the **VLANs** area, use the table to select the VLAN to assign to vNICs created from this template. The table contains the following columns:

Name	Description
Select column	<p>Check the check box in this column for each VLAN that you want to use.</p> <p><b>Note</b> VLANs can not be assigned to the same vNIC.</p>
Name column	Displays the name of the VLAN.
Native VLAN column	Click the radio button in this column to designate one of the VLANs as the native VLAN.
VLAN ID column	The unique identifier of the VLAN.
QinQ VLAN column	<p>Click the radio button in this column to allow VIC QinQ Tunneling on the VLAN. The supported QinQ VLAN ID range is 2 to 4094.</p> <p>QinQ VLAN can be a Native or a Non-Native VLAN. You can configure a Native VLAN and a Non-Native VLAN as a QinQ VLAN on the vNIC.</p> <p>When using the Native VLAN as QinQ VLAN, no additional VLAN can be configured on the vNIC.</p> <p><b>Note</b> This <i>QinQ VLAN</i> selection is considered only when the <i>Enable QinQ</i> check box is selected.</p>

- c) In the **VLAN Groups** area, use the table to select the VLAN group to assign to vNICs created from this template. The table contains the following columns:

Name	Description
Select column	Check the check box in this column for each VLAN Group that you want to use.
Name column	The name of the VLAN Group.

- d) In the **Policies** area, complete the following fields:

Name	Description
CDN Source field	<p>This can be one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>vNIC Name</b>—Uses the vNIC template name of the vNIC instance as the CDN name. This is the default option.</li> <li>• <b>User Defined</b>—Displays the CDN Name field for you to enter a user-defined CDN name for the vNIC template.</li> </ul> <p>Refer to the <i>Cisco UCS Manager Server Management Guide</i> for more information on Consistent Device Naming.</p>
CDN Name field	Enter the CDN Name. This field is displayed only when the <b>CDN Source - User Defined</b> option is selected.
MTU field	<p>The maximum transmission unit, or packet size, that vNICs created from this vNIC template should use.</p> <p>Enter an integer between 1500 and 9000.</p> <p><b>Note</b> If the vNIC template has an associated QoS policy, the MTU specified here must be equal to or less than the MTU specified in the associated QoS system class. If this MTU value exceeds the MTU value in the QoS system class, packets may be dropped during data transmission.</p> <p>For VIC 1400 Series, VIC 14000 Series, and VIC 15000 Series adapters, you can change the MTU size of the vNIC from the host interface settings. When the Overlay network is configured, make sure that the new value is equal to or less than the MTU specified in the associated QoS system class or packets could be dropped during data transmission.</p>
MAC Pool drop-down list	The MAC address pool that vNICs created from this vNIC template should use.
QoS Policy drop-down list	The quality of service policy that vNICs created from this vNIC template should use.
Network Control Policy drop-down list	The network control policy that vNICs created from this vNIC template should use.
Pin Group drop-down list	The LAN pin group that vNICs created from this vNIC template should use.
Stats Threshold Policy drop-down list	The statistics collection policy that vNICs created from this vNIC template should use.

- e) In the **Connections Policies** area, complete the following fields:

Name	Description
<b>Connection Policy</b> radio button	Choose the type of connection policy to associate with the vNIC. This can be one of the following: <ul style="list-style-type: none"> <li>• <b>Dynamic vNIC</b></li> <li>• <b>usNIC</b></li> <li>• <b>VMQ</b></li> <li>• <b>SRIOV HPN</b></li> </ul>
<b>Connection Policy</b> drop-down list	Choose the connection policy that the vNIC should use. The values displayed depend on the type of connection policy chosen. You can also create a new connection policy in this area.

**Step 6** Click **OK**.

#### What to do next

Include the vNIC template in a service profile.

## Creating vNIC Template Pairs

### Procedure

- Step 1** In the Navigation pane, click the **LAN** tab. On the **LAN** tab, expand **LAN > Policies**.
- Step 2** Expand the node for the organization where you want to create the policy. If the system does not include multi-tenancy, expand the root node.
- Step 3** Right-click the **vNIC Templates** node and choose **Create vNIC Template**. In the **Create vNIC Template** dialog box, assign a **Name**, **Description**, and select the **Fabric ID** for the template.
- Step 4** Select the **Redundancy Type** as **Primary** or **Secondary** or **No Redundancy**. See the redundancy type descriptions below.
- Step 5** Select the **Peer Redundancy Template**—to choose the name of the corresponding **Primary** or **Secondary** redundancy template to perform the template pairing from the **Primary** or **Secondary** redundancy template.
- **Primary**—Creates configurations that can be shared with the Secondary template. Any other shared changes on the Primary template are automatically synchronized to the Secondary template.
    - **VLANS**
    - **Template Type**
    - **MTU**
    - **Network Control Policies**
    - **Connection Policies**

- **QoS Policy**
- **Stats Threshold Policy**

Following is a list of non-shared configurations:

- **Fabric ID**

**Note** The Fabric ID must be mutually exclusive. If you assign the Primary template to Fabric A, then Fabric B is automatically assigned to the Secondary template as part of the synchronization from the Primary template.

- **CDN Source**
- **MAC Pool**
- **Description**
- **Pin Group Policy**

- **Secondary—**

All shared configurations are inherited from the Primary template.

- **No Redundancy—**

Legacy vNIC template behavior.

**Step 6** Click **OK**.

---

### What to do next

After you create the vNIC redundancy template pair, you can use the redundancy template pair to create redundancy vNIC pairs for any service profile in the same organization or sub-organization.

## Undo vNIC Template Pairs

You can undo the vNIC template pair by changing the Peer Redundancy Template so that there is no peer template for the Primary or the Secondary template. When you undo a vNIC template pair, the corresponding vNIC pairs also becomes undone.

### Procedure

---

Select **not set** from the **Peer Redundancy Template** drop-down list to undo the pairing between the peer Primary or Secondary redundancy template used to perform the template pairing. You can also select **None** as the **Redundancy Type** to undo the pairing.

**Note** If you delete one template in a pair, you are prompted to delete the other template in the pair. If you do not delete the other template in the pair, that template resets its peer reference and retains its redundancy type.

---

## Binding a vNIC to a vNIC Template

You can bind a vNIC associated with a service profile to a vNIC template. When you bind the vNIC to a vNIC template, Cisco UCS Manager configures the vNIC with the values defined in the vNIC template. If the existing vNIC configuration does not match the vNIC template, Cisco UCS Manager reconfigures the vNIC. You can only change the configuration of a bound vNIC through the associated vNIC template. You cannot bind a vNIC to a vNIC template if the service profile that includes the vNIC is already bound to a service profile template.




---

**Important** If the vNIC is reconfigured when you bind it to a template, Cisco UCS Manager reboots the server associated with the service profile.

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **Servers**.
  - Step 2** Expand **Servers > Service Profiles**.
  - Step 3** Expand the node for the organization that includes the service profile with the vNIC you want to bind.  
If the system does not include multi-tenancy, expand the **root** node.
  - Step 4** Expand *Service\_Profile\_Name* > **vNICs**.
  - Step 5** Click the vNIC you want to bind to a template.
  - Step 6** In the **Work** pane, click the **General** tab.
  - Step 7** In the **Actions** area, click **Bind to a Template**.
  - Step 8** In the **Bind to a vNIC Template** dialog box, do the following:
    - a) From the **vNIC Template** drop-down list, choose the template to which you want to bind the vNIC.
    - b) Click **OK**.
  - Step 9** In the warning dialog box, click **Yes** to acknowledge that Cisco UCS Manager may need to reboot the server if the binding causes the vNIC to be reconfigured.
- 

## Unbinding a vNIC from a vNIC Template

### Procedure

---

- Step 1** In the **Navigation** pane, click **Servers**.
- Step 2** Expand **Servers > Service Profiles**.
- Step 3** Expand the node for the organization that includes the service profile with the vNIC you want to unbind.  
If the system does not include multi-tenancy, expand the **root** node.
- Step 4** Expand *Service\_Profile\_Name* > **vNICs**.
- Step 5** Click the vNIC you want to unbind from a template.

- Step 6** In the **Work** pane, click the **General** tab.
- Step 7** In the **Actions** area, click **Unbind from a Template**.
- Step 8** If a confirmation dialog box displays, click **Yes**.
- 

## Deleting a vNIC Template

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies > *Organization\_Name***.
- Step 3** Expand the **vNIC Templates** node.
- Step 4** Right-click the policy you want to delete and choose **Delete**.
- Step 5** If a confirmation dialog box displays, click **Yes**.
- 

## Configuring Adapter Policies

### Ethernet and Fibre Channel Adapter Policies

These policies govern the host-side behavior of the adapter, including how the adapter handles traffic. For example, you can use these policies to change default settings for the following:

- Queues
- Interrupt handling
- Performance enhancement
- RSS hash
- Failover in a cluster configuration with two fabric interconnects



---

**Note** For Fibre Channel adapter policies, the values displayed by Cisco UCS Manager may not match those displayed by applications such as QLogic SANsurfer. For example, the following values may result in an apparent mismatch between SANsurfer and Cisco UCS Manager:

- **Max LUNs Per Target**—SANsurfer has a maximum of 256 LUNs and does not display more than that number. Cisco UCS Manager supports a higher maximum number of LUNs. This parameter is applicable only for FC-Initiator.
- **Link Down Timeout**—In SANsurfer, you configure the timeout threshold for link down in seconds. In Cisco UCS Manager, you configure this value in milliseconds. Therefore, a value of 5500 ms in Cisco UCS Manager displays as 5s in SANsurfer.
- **Max Data Field Size**—SANsurfer has allowed values of 512, 1024, and 2048. Cisco UCS Manager allows you to set values of any size. Therefore, a value of 900 in Cisco UCS Manager displays as 512 in SANsurfer.
- **LUN Queue Depth**—The LUN queue depth setting is available for Windows system FC adapter policies. Queue depth is the number of commands that the HBA can send and receive in a single transmission per LUN. Windows Storport driver sets this to a default value of 20 for physical miniports and to 250 for virtual miniports. This setting adjusts the initial queue depth for all LUNs on the adapter. Valid range for this value is 1 - 254. The default LUN queue depth is 20. This feature only works with Cisco UCS Manager version 3.1(2) and higher. This parameter is applicable only for FC-Initiator.
- **IO TimeOut Retry**—When the target device does not respond to an IO request within the specified timeout, the FC adapter cancels the pending command then resends the same IO after the timer expires. The FC adapter valid range for this value is 1 - 59 seconds. The default IO retry timeout is 5 seconds. This feature only works with Cisco UCS Manager version 3.1(2) and higher.

---

### Operating System Specific Adapter Policies

By default, Cisco UCS provides a set of Ethernet adapter policies and Fibre Channel adapter policies. These policies include the recommended settings for each supported server operating system. Operating systems are sensitive to the settings in these policies. Storage vendors typically require non-default adapter settings. You can find the details of these required settings on the support list provided by those vendors.



---

**Important** We recommend that you use the values in these policies for the applicable operating system. Do not modify any of the values in the default policies unless directed to do so by Cisco Technical Support.

However, if you are creating an Ethernet adapter policy for an OS (instead of using the default adapter policy), you must use the following formulas to calculate values that work for that OS.

Depending on the UCS firmware, your driver interrupt calculations may be different. Newer UCS firmware uses a calculation that differs from previous versions. Later driver release versions on Linux operating systems now use a different formula to calculate the Interrupt Count. In this formula, the Interrupt Count is the maximum of either the Transmit Queue or the Receive Queue plus 2.

---



### Interrupt Count in Linux Adapter Policies

Drivers on Linux operating systems use differing formulas to calculate the Interrupt Count, depending on the eNIC driver version. The UCS 3.2 release increased the number of Tx and Rx queues for the eNIC driver from 8 to 256 each.

Use one of the following strategies, according to your driver version.

For Linux drivers before the UCS 3.2 firmware release, use the following formula to calculate the Interrupt Count.

$$\begin{aligned} \text{Completion Queues} &= \text{Transmit Queues} + \text{Receive Queues} \\ \text{Interrupt Count} &= (\text{Completion Queues} + 2) \text{ rounded up to nearest power of } 2 \end{aligned}$$

For example, if Transmit Queues = 1 and Receive Queues = 8 then:

$$\begin{aligned} \text{Completion Queues} &= 1 + 8 = 9 \\ \text{Interrupt Count} &= (9 + 2) \text{ rounded up to the nearest power of } 2 = 16 \end{aligned}$$

On drivers for UCS firmware release 3.2 and higher, the Linux eNIC drivers use the following formula to calculate the Interrupt Count.

$$\text{Interrupt Count} = \text{Max}(\text{Tx}, \text{Rx}) + 2$$

For example:

$$\begin{aligned} \text{Interrupt Count } wq = 32, rq = 32, cq = 64 &- \text{ then Interrupt Count} = \text{Max}(32, 32) + 2 = 34 \\ \text{Interrupt Count } wq = 64, rq = 8, cq = 72 &- \text{ then Interrupt Count} = \text{Max}(64, 8) + 2 = 66 \\ \text{Interrupt Count } wq = 1, rq = 16, cq = 17 &- \text{ then Interrupt count} = \text{Max}(1, 16) + 2 = 18 \end{aligned}$$

### Interrupt Count in Windows Adapter Policies

For Windows OS, the recommended adapter policy in UCS Manager for VIC 1400 series and above adapters is Win-HPN and if RDMA is used, the recommended policy is Win-HPN-SMB. For VIC 1400 series and above adapters, the recommended interrupt value setting is 512 and the Windows VIC driver takes care of allocating the required number of Interrupts.

For VIC 1300 and VIC 1200 series adapters, the recommended UCS Manager adapter policy is Windows and the Interrupt would be TX + RX + 2, rounded to closest power of 2. The maximum supported Windows queues is 8 for Rx Queues and 1 for Tx Queues.

Example for VIC 1200 and VIC 1300 series adapters:

$$\text{Tx} = 1, \text{Rx} = 4, \text{CQ} = 5, \text{Interrupt} = 8 (1 + 4 \text{ rounded to nearest power of } 2), \text{Enable RSS}$$

Example for VIC 1400 series, 14000 series and 15000 series adapters and above adapters:

$$\text{Tx} = 1, \text{Rx} = 4, \text{CQ} = 5, \text{Interrupt} = 512, \text{Enable RSS}$$

### NVMe over Fabrics using Fibre Channel

The NVM Express (NVMe) interface allows host software to communicate with a non-volatile memory subsystem. This interface is optimized for Enterprise non-volatile storage, which is typically attached as a register level interface to the PCI Express (PCIe) interface.

NVMe over Fabrics using Fibre Channel (FC-NVMe) defines a mapping protocol for applying the NVMe interface to Fibre Channel. This protocol defines how Fibre Channel services and specified Information Units (IUs) are used to perform the services defined by NVMe over a Fibre Channel fabric. NVMe initiators can access and transfer information to NVMe targets over Fibre Channel.

FC-NVMe combines the advantages of Fibre Channel and NVMe. You get the improved performance of NVMe along with the flexibility and the scalability of the shared storage architecture. Cisco UCS Manager Release 4.0(2) supports NVMe over Fabrics using Fibre Channel on UCS VIC 1400 Series adapters.

Starting with UCS Manager release 4.3(2b), NVMeoF using RDMA is supported on Cisco UCS VIC 14000 series adapters.

Starting with UCS Manager release 4.2(2), NVMeoF using Fibre Channel is supported on Cisco UCS VIC 15000 series adapters.

Cisco UCS Manager provides the recommended FC NVMe Initiator adapter policies in the list of pre-configured adapter policies. To create a new FC-NVMe adapter policy, follow the steps in the *Creating a Fibre Channel Adapter Policy* section.

### NVMe over Fabrics Using RDMA

NVMe over Fabrics (NVMeoF) is a communication protocol that allows one computer to access NVMe namespaces available on another computer. NVMeoF is similar to NVMe, but differs in the network-related steps involved in using the NVMeoF storage devices. The commands for discovering, connecting, and disconnecting a NVMeoF storage device are integrated into the **nvme** utility provided in Linux..

The NVMeoF fabric that Cisco supports is RDMA over Converged Ethernet version 2 (RoCEv2). RoCEv2 is a fabric protocol that runs over UDP. It requires a no-drop policy.

The eNIC RDMA driver works in conjunction with the eNIC driver, which must be loaded first when configuring NVMeoF.

Cisco UCS Manager provides the default Linux-NVMe-RoCE adapter policy for creating NVMe RoCEv2 interfaces. Do not use the default Linux adapter policy. For complete information on configuring RoCEv2 over NVMeoF, refer to the *Cisco UCS Manager Configuration Guide for RDMA over Converged Ethernet (RoCE) v2*.

NVMeoF using RDMA is supported on M5 B-Series or C-Series Servers with Cisco UCS VIC 1400 Series adapters.

Starting with UCS Manager release 4.3(2b), NVMeoF using RDMA is supported on Cisco UCS VIC 14000 series adapters.

Starting with UCS Manager release 4.2(2), NVMeoF using RDMA is supported on Cisco UCS VIC 15000 series adapters.

## Accelerated Receive Flow Steering

Accelerated Receive Flow Steering (ARFS) is hardware-assisted receive flow steering that can increase CPU data cache hit rate by steering kernel level processing of packets to the CPU where the application thread consuming the packet is running.

Using ARFS can improve usage CPU efficiency and reduce network traffic latency. Each receive queue of a CPU has an interrupt associated with it. You can configure the Interrupt Service Routine (ISR) to run on a CPU. The ISR moves the packet from the receive queue to the backlog of one of the current CPUs, which processes the packet later. If the application is not running on this CPU, the CPU must copy the packet to non-local memory, which adds to latency. ARFS can reduce this latency by moving that particular stream to the receive queue of the CPU on which the application is running.

ARFS is disabled by default and can be enabled through Cisco UCS Manager. To configure ARFS, do the following:

1. Create an adapter policy with ARFS enabled.

2. Associate the adapter policy with a service profile.
3. Enable ARFS on a host:
  - a. Turn off Interrupt Request Queue (IRQ) balance.
  - b. Associate IRQ with different CPUs.
  - c. Enable ntuple by using ethtool.

### Guidelines and Limitations for Accelerated Receive Flow Steering

- ARFS supports 64 filters per vNIC
- ARFS is supported on the following adapters:
  - Cisco UCS VIC 1300 Series
  - Cisco UCS VIC 1400 Series
  - Cisco UCS VIC 14000 Series
  - Cisco UCS VIC 15000 Series
- ARFS is supported on the following Operating Systems:
  - Red Hat Enterprise Linux 8.4 and higher versions
  - Red Hat Enterprise Linux 9.0 and higher versions
  - SUSE Linux Enterprise Server 15 SP4 and higher versions
  - Ubuntu 20.04 and higher versions

## Interrupt Coalescing

Adapters typically generate a large number of interrupts that a host CPU must service. Interrupt coalescing reduces the number of interrupts serviced by the host CPU. This is done by interrupting the host CPU only once for multiple occurrences of the same event over a configurable coalescing interval.

When interrupt coalescing is enabled for receive operations, the adapter continues to receive packets, but the host CPU does not immediately receive an interrupt for each packet. A coalescing timer starts when the first packet is received by the adapter. When the configured coalescing interval times out, the adapter generates one interrupt with the packets received during that interval. The NIC driver on the host then services the multiple packets that are received. Reduction in the number of interrupts generated reduces the time spent by the host CPU on context switches. This means that the CPU has more time to process packets, which results in better throughput and latency.

## Adaptive Interrupt Coalescing

Due to the coalescing interval, the handling of received packets adds to latency. For small packets with a low packet rate, this latency increases. To avoid this increase in latency, the driver can adapt to the pattern of traffic flowing through it and adjust the interrupt coalescing interval for a better response from the server.

Adaptive interrupt coalescing (AIC) is most effective in connection-oriented low link utilization scenarios including email server, databases server, and LDAP server. It is not suited for line-rate traffic.

## Guidelines and Limitations for Adaptive Interrupt Coalescing

- Adaptive Interrupt Coalescing (AIC) does not provide any reduction in latency when the link utilization is more than 80 percent.
- Enabling AIC disables static coalescing.
- AIC is supported on the following Operating Systems:
  - Red Hat Enterprise Linux 6.4 and higher versions
  - SUSE Linux Enterprise Server 11 SP2 and higher versions
  - XenServer 6.5 and higher versions
  - Ubuntu 14.04.2 and higher versions

## PTP Adapter Policy

Precision Time Protocol (PTP) precisely synchronizes the server clock with other devices and peripherals on Linux operating systems. PTP must be set for each adapter, and is only supported on Cisco UCS VIC 15000 Series and later adapters.

Clocks managed by PTP follow a client-worker hierarchy, with workers synchronized to a master client. The hierarchy is updated by the best master clock (BMC) algorithm, which runs on every clock. One PTP interface per adapter must be enabled to synchronize it to the grand master clock. After enabling PTP, the host must be rebooted.

The time stamping parameters displayed by `ethtool -T int_name` will show a field for PTP Hardware Clock. The value of `PTP Hardware Clock: 0` shows that PTP is enabled for the interface. Otherwise, it will show `PTP Hardware Clock: none`.



---

**Note** PTP Adapter Policy is not supported on Cisco UCS VIC 1400 and 14000 series adapters.

---

## RDMA Over Converged Ethernet Overview

Remote Direct Memory Access (RDMA) improves performance by enabling direct data exchange in and out of a server. NVMe over Ethernet (NVMeoF) support for RDMA provides faster access to NVMe namespaces on another computer. RDMA over Converged Ethernet (RoCE) allows direct memory access over an Ethernet network. RoCE is a link layer protocol, and hence, it allows communication between any two hosts in the same Ethernet broadcast domain. RoCE delivers superior performance compared to traditional network socket implementations because of lower latency, lower CPU utilization and higher utilization of network bandwidth. Windows 2012 R2 and later versions use RDMA for accelerating and improving the performance of SMB file sharing and Live Migration.

Cisco UCS Manager supports RoCE for Microsoft SMB Direct. It sends additional configuration information to the adapter while creating or modifying an Ethernet adapter policy. Basic RoCE is also referred to as RoCE version 1 (RoCEv1), and is supported on UCS Manager releases from UCS Manager 2.2(4b) to 4.1(1a).

With Cisco UCS Manager 4.1(1a) and later releases, the RoCEv2 protocol is used.

## RDMA Over Converged Ethernet (RoCE) v2

RDMA over Converged Ethernet version 2 (RoCEv2) is an *internet layer* protocol, which means that RoCEv2 packets can be routed. RoCEv2 allows direct memory access over the network by encapsulating an Infiniband (IB) transport packet over Ethernet.

The RoCEv2 protocol exists on top of either the UDP/IPv4 or the UDP/IPv6 protocol. The UDP destination port number 4791 has been reserved for RoCEv2. Since RoCEv2 packets are routable, the RoCEv2 protocol is sometimes called Routable RoCE.

RoCEv2 is supported on the Windows, Linux, and ESXi Operating Systems.

## Guidelines for Using SMB Direct support on Windows using RDMA over converged Ethernet (RoCE) v2

### General Guidelines and Limitations:

- Cisco UCS Manager release 4.1.x and later releases support Microsoft SMB Direct with RoCEv2 on Microsoft Windows Server 2019 and later. Cisco recommends that you have all KB updates from Microsoft for your Windows Server release.



---

**Note** RoCEv2 is not supported on Microsoft Windows Server 2016.

---

- Cisco recommends you check [UCS Hardware and Software Compatibility](#) specific to your UCS Manager release to determine support for Microsoft SMB Direct with RoCEv2 on Microsoft Windows.
- Microsoft SMB Direct with RoCEv2 is supported only with Cisco UCS VIC 1400 Series, 14000 Series, and 15000 Series adapters. It is not supported with UCS VIC 1200 Series and 1300 Series adapters. SMB Direct with RoCEv2 is supported on all UCS Fabric Interconnects.



---

**Note** RoCEv1 is not supported with Cisco UCS VIC 1400 Series, Cisco UCS VIC 14000 Series, and Cisco UCS VIC 15000 Series.

---

- RoCEv2 configuration is supported only between Cisco adapters. Interoperability between Cisco adapters and third party adapters is not supported.
- RoCEv2 supports two RoCEv2 enabled vNIC per adapter and four virtual ports per adapter interface, independent of SET switch configuration.
- RoCEv2 cannot be used on the same vNIC interface as NVGRE, NetFlow, and VMQ features.
- RoCEv2 cannot be used with usNIC.
- RoCEv2-enabled vNIC interfaces must have the no-drop QoS system class enabled in UCS Manager.
- The RoCE Properties queue pairs setting must for be a minimum of 4 queue pairs.
- Maximum number of queue pairs per adapter is 2048.
- The QoS No Drop class configuration must be properly configured on upstream switches such as Cisco Nexus 9000 series switches. QoS configurations will vary between different upstream switches.
- The maximum number of memory regions per rNIC interface is 131072.

- UCS Manager does not support fabric failover for vNICs with RoCEv2 enabled.
- SMB Direct with RoCEv2 is supported on both IPv4 and IPv6.
- RoCEv2 cannot be used with GENEVE offload.

#### MTU Properties:

- In older versions of the VIC driver, the MTU was derived from either a UCS Manager service profile or from the Cisco IMC vNIC MTU setting in non-cluster setup. This behavior changes on Cisco UCS VIC 1400 Series and later adapters, where MTU is controlled from the Windows OS Jumbo Packet advanced property. A value configured from UCS Manager or Cisco IMC has no effect.
- The RoCEv2 MTU value is always power-of-two and its maximum limit is 4096.
- RoCEv2 MTU is derived from the Ethernet MTU.
- RoCEv2 MTU is the highest power-of-two that is less than the Ethernet MTU. For example:
  - if the Ethernet value is 1500, then the RoCEv2 MTU value is 1024
  - if the Ethernet value is 4096, then the RoCEv2 MTU value is 4096
  - if the Ethernet value is 9000, then the RoCEv2 MTU value is 4096

#### Windows NDPKI Modes of Operation:

- Cisco's implementation of Network Direct Kernel Provider Interface (NDPKI) supports two modes of operation: Mode 1 and Mode 2. Mode 1 and Mode 2 relate to the implementation of Network Direct Kernel Provider Interface (NDKPI): Mode 1 is native RDMA, and Mode 2 involves configuration for the virtual port with RDMA. Cisco does not support NDPKI Mode 3 operation.
- The recommended default adapter policy for RoCEv2 Mode 1 is Win-HPN-SMBd .
- The recommended default adapter policy for RoCEv2 Mode 2 is MQ-SMBd.
- RoCEv2 enabled vNICs for Mode2 operation require the QoS host control policy set to full.
- Mode 2 is inclusive of Mode 1: Mode 1 must be enabled to operate Mode 2.
- On Windows, the RoCEv2 interface supports MSI & MSIx interrupt modes. By default, it is in MSIx interrupt mode. Cisco recommends you avoid changing interrupt mode when the interface is configured with RoCEv2 properties.

**Downgrade Limitations:** Cisco recommends you remove the RoCEv2 configuration before downgrading to any non-supported RoCEv2 release. If the configuration is not removed or disabled, downgrade will fail.

## Guidelines for using NVMe over Fabrics (NVMeoF) with RoCEv2 on Linux

#### General Guidelines and Limitations:

- Cisco recommends you check [UCS Hardware and Software Compatibility](#) specific to your UCS Manager release to determine support for NVMeoF. NVMeoF is supported on UCS M5 and later B-Series and C-Series servers.
- NVMe over RDMA with RoCEv2 is supported with the fourth generation Cisco UCS VIC 1400 Series UCS VIC 14000, and UCS VIC 15000 Series and UCS VIC 15000 Series adapters. NVMe over RDMA is not supported on UCS 6324 Fabric Interconnects or on UCS VIC 1200 Series and 1300 Series adapters.

- When creating RoCEv2 interfaces, use Cisco UCS Manager provided Linux-NVMe-RoCE adapter policy.



---

**Note** Do not use the default Linux Adapter policy with RoCEv2; RoCEv2 interfaces will not be created in the OS.

---

- When configuring RoCEv2 interfaces, use both the enic and enic\_rdma binary drivers downloaded from Cisco.com and install the matched set of enic and enic\_rdma drivers. Attempting to use the binary enic\_rdma driver downloaded from Cisco.com with an inbox enic driver will not work.
- RoCEv2 supports maximum two RoCEv2 enabled interfaces per adapter.
- Booting from an NVMeoF namespace is not supported.
- Layer 3 routing is not supported.
- RoCEv2 does not support bonding.
- Saving a crashdump to an NVMeoF namespace during a system crash is not supported.
- NVMeoF cannot be used with usNIC, VMFEX, VxLAN, VMQ, VMMQ, NVGRE, GENEVE Offload, and DPDK features.
- Netflow monitoring is not supported on RoCEv2 interfaces.
- In the Linux-NVMe-RoCE policy, do not change values of Queue Pairs, Memory Regions, Resource Groups, and Priority settings other than to Cisco provided default values. NVMeoF functionality may not be guaranteed with different settings for Queue Pairs, Memory Regions, Resource Groups, and Priority.
- The QoS no drop class configuration must be properly configured on upstream switches such as Cisco Nexus 9000 series switches. QoS configurations will vary between different upstream switches.
- Set MTU size correctly on the VLANs and QoS policy on upstream switches.
- Spanning Tree Protocol (STP) may cause temporary loss of network connectivity when a failover or failback event occurs. To prevent this issue from occurring, disable STP on uplink switches.
- UCS Manager does not support fabric failover for vNICs with RoCEv2 enabled.

### Interrupts

- Linux RoCEv2 interface supports only MSIx interrupt mode. Cisco recommends avoiding changing interrupt mode when the interface is configured with RoCEv2 properties.
- The minimum interrupt count for using RoCEv2 with Linux is 8.

### Downgrade Limitations:

- Cisco recommends you remove the RoCEv2 configuration before downgrading to any non-supported RoCEv2 release.

## Guidelines for using RoCEv2 Protocol in the Native ENIC driver on ESXi

### General Guidelines and Limitations:

- Cisco UCS Manager release 4.2(3b) supports RoCEv2 only on ESXi 7.0 U3.
- Cisco recommends you check [UCS Hardware and Software Compatibility](#) specific to your UCS Manager release to determine support for ESXi. RoCEv2 on ESXi is supported on UCS B-Series and C-Series servers with Cisco UCS VIC 15000 Series and later adapters.
- RoCEv2 on ESXi is not supported on UCS VIC 1200, 1300 and 1400 Series adapters.
- RDMA on ESXi nENIC currently supports only ESXi NVME that is part of the ESXi kernel. The current implementation does not support the ESXi user space RDMA application.
- Multiple mac addresses and multiple VLANs are supported only on VIC 15000 Series adapters.
- RoCEv2 supports maximum two RoCEv2 enabled interfaces per adapter.
- PvrDMA, VSAN over RDMA, and iSER are not supported.
- The COS setting is not supported on UCS Manager.

#### Downgrade Limitations:

- Cisco recommends you remove the RoCEv2 configuration before downgrading to any non-supported RoCEv2 release.

## GENEVE Offload

Cisco UCS Manager now supports Generic Network Virtualization Encapsulation (GENEVE) Offload on the ESXi platform, which allows essentially any information to be encoded in a packet and passed between tunnel endpoints. GENEVE provides the overlay capability to create isolated, multi-tenant broadcast domains across data center fabrics on UCS VIC 1400 Series, VIC 14000 Series, and VIC 15000 Series adapters. Using the GENEVE protocol allows you to create logical networks that span physical network boundaries.

GENEVE offload is present in all Ethernet adapter policies and is disabled by default.

Refer to the NSX-T documentation for how to implement GENEVE offload end to end configuration.

Cisco recommends configuring the following values in the Ethernet adapter policy when GENEVE offload is enabled:

- Transmit Queues: 1
- TX Ring Size: 4096
- Receive Queues: 8
- RX Ring Size: 4096
- Completion Queues: 16
- Interrupts: 32

The following features are not supported when GENEVE offload is enabled on any interface:

- Azure Stack QoS
- RoCEv2

GENEVE offload-enabled interfaces do not support usNIC, Netflow, advanced filters, NetQueue, or aRFS.





**Note** There are exceptions for the Cisco UCS VIC 15000 series adapter. GENEVE offload-enabled interfaces on the UCS VIC 15000 series adapter also support advanced filters, NetQueue, and ARFS.

Other limitations with GENEVE offload include:

- External outer IPV6 is NOT supported with GENEVE offload.
- GENEVE offload is supported only with Cisco UCS VIC1400, VIC 14000, and VIC 15000 series adapters. It is not supported on Cisco UCS VIC 1300 Series and 1200 Series adapters.
- GENEVE offload is supported with ESX 7.0 (NSX-T 3.0) and ESX 6.7U3(NSX-T 2.5).
- Cisco recommends that you remove the GENEVE offload configuration before downgrading to any non-supported release.

## Creating an Ethernet Adapter Policy



**Tip** If the fields in an area do not display, click the **Expand** icon to the right of the heading.

### Procedure

**Step 1** In the **Navigation** pane, click **Servers**.

**Step 2** Expand **Servers** > **Policies**.

**Step 3** Expand the node for the organization where you want to create the policy.

If the system does not include multi tenancy, expand the **root** node.

**Step 4** Right-click **Adapter Policies** and choose **Create Ethernet Adapter Policy**.

**Step 5** Enter a **Name** and optional **Description** for the policy.

This name can be between 1 and 16 alphanumeric characters. You cannot use spaces or any special characters other than - (hyphen), \_ (underscore), : (colon), and . (period), and you cannot change this name after the object is saved.

**Step 6** (Optional) In the **Resources** area, adjust the following values:

Name	Description
<b>Pooled</b> radio button	Whether the queue resources are pooled or not. <ul style="list-style-type: none"> <li>• <b>Disabled</b>—Pooling is disabled.</li> <li>• <b>Enabled</b>—Pooling is enabled.</li> </ul> <p>When pooling is enabled, the counts of queue resources specified in the Adapter Policy will be the total number of queues allocated across all vPorts.</p>

Name	Description
<b>Transmit Queues</b> field	The number of transmit queue resources to allocate. Enter an integer between 1 and 1000.
<b>Ring Size</b> field	The number of descriptors in each transmit queue. Enter an integer between 64 and 16384. Cisco UCS VIC 1400 series and 14000 series adapters support maximum 4K (4096) Ring Size. Cisco UCS VIC 15000 Series and above adapters support up to 16K (16384) Ring Size.
<b>Receive Queues</b> field	The number of receive queue resources to allocate. Enter an integer between 1 and 1000.
<b>Ring Size</b> field	The number of descriptors in each receive queue. Enter an integer between 64 and 16384. Cisco UCS VIC 1400 series and 14000 series adapters support maximum 4K (4096) Ring Size. Cisco UCS VIC 15000 Series and above adapters support up to 16K (16384) Ring Size.
<b>Completion Queues</b> field	The number of completion queue resources to allocate. In general, the number of completion queue resources you should allocate is equal to the number of transmit queue resources plus the number of receive queue resources. Enter an integer between 1 and 2000.
<b>Interrupts</b> field	The number of interrupt resources to allocate. In general, this value should be equal to (Completion Queues + 2) rounded up to nearest power of 2. Enter an integer between 1 and 1024. For example, if Transmit Queues = 1 and Receive Queues = 8 then: <ul style="list-style-type: none"> <li>• Completion Queues = 1 + 8 = 9</li> <li>• Interrupt Count = (9 + 2) rounded up to the nearest power of 2 = 16</li> </ul>

**Step 7** (Optional) In the **Options** area, adjust the following values:

**Note** The RoCE Version 2 Option should be used with UCS Manager 4.2.1 and later releases.

Name	Description
<b>Transmit Checksum Offload</b> radio button	This can be one of the following: <ul style="list-style-type: none"> <li>• <b>Disabled</b>—The CPU calculates all packet checksums.</li> <li>• <b>Enabled</b>—The CPU sends all packets to the hardware so that the checksum can be calculated. This option may reduce CPU overhead.</li> </ul> <p><b>Note</b> This option affects only packets sent from the interface.</p>
<b>Receive Checksum Offload</b> radio button	This can be one of the following: <ul style="list-style-type: none"> <li>• <b>Disabled</b>—The CPU validates all packet checksums.</li> <li>• <b>Enabled</b>—The CPU sends all packet checksums to the hardware for validation. This option may reduce CPU overhead.</li> </ul> <p><b>Note</b> This option affects only packets received by the interface.</p>
<b>TCP Segmentation Offload</b> radio button	This can be one of the following: <ul style="list-style-type: none"> <li>• <b>Disabled</b>—The CPU segments large TCP packets.</li> <li>• <b>Enabled</b>—The CPU sends large TCP packets to the hardware to be segmented. This option may reduce CPU overhead and increase throughput rate.</li> </ul> <p><b>Note</b> This option is also known as Large Send Offload (LSO) and affects only packets sent from the interface.</p>
<b>TCP Large Receive Offload</b> radio button	This can be one of the following: <ul style="list-style-type: none"> <li>• <b>Disabled</b>—The CPU processes all large packets.</li> <li>• <b>Enabled</b>—The hardware reassembles all segmented packets before sending them to the CPU. This option may reduce CPU utilization and increase inbound throughput.</li> </ul> <p><b>Note</b> This option affects only packets received by the interface.</p>
<b>Receive Side Scaling</b> radio button	RSS distributes network receive processing across multiple CPUs in multiprocessor systems. This can be one of the following: <ul style="list-style-type: none"> <li>• <b>Disabled</b>—Network receive processing is always handled by a single processor even if additional processors are available.</li> <li>• <b>Enabled</b>—Network receive processing is shared across processors whenever possible.</li> </ul>

Name	Description
<b>Accelerated Receive Flow Steering</b> radio button	<p>Packet processing for a flow must be performed on the local CPU. This is supported for Linux operating systems only. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—The CPU is not specified.</li> <li>• <b>Enabled</b>—Packet processing is performed on the local CPU.</li> </ul>
<b>Network Virtualization using Generic Routing Encapsulation</b> radio button	<p>Whether NVGRE overlay hardware offloads for TSO and checksum are enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—NVGRE overlay hardware offloads are not enabled.</li> <li>• <b>Enabled</b>—NVGRE overlay hardware offloads are enabled.</li> </ul> <p>NVGRE overlay hardware offloads can be enabled when using UCS VIC 1400 and 14000 Series adapters.</p>
<b>Virtual Extensible LAN</b> radio button	<p>Whether VXLAN overlay hardware offloads for TSO and checksum are enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—VXLAN overlay hardware offloads are not enabled.</li> <li>• <b>Enabled</b>—VXLAN overlay hardware offloads are enabled.</li> </ul> <p>VXLAN overlay hardware offloads can be enabled with RoCE and VMQ when using UCS VIC 1400 Series adapters.</p> <p>VXLAN overlay hardware offloads can be enabled with RoCEv2 and VMQ when using Cisco UCS VIC 1400 ,VIC 14000, or 15000 Series adapters</p>
<b>GENEVE</b> radio button	<p>Whether Generic Network Virtualization Encapsulation (GENEVE) overlay hardware offloads are enabled. GENEVE offload provides the overlay capability to create isolated, multi-tenant broadcast domains across data center fabrics on VIC 1400, VIC 14000, and VIC 15000 series adapters. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—GENEVE overlay offloads are not enabled.</li> <li>• <b>Enabled</b>—GENEVE overlay offloads are enabled.</li> </ul>
<b>AzureStack-Host QoS</b> radio button	<p>Enable this feature to successfully deploy Azure Stack based solutions with RDMA enabled.</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—Enabling AzureStack-Host QoS on an adapter allows the user to carve out traffic classes for RDMA traffic and ensure a desired portion of the bandwidth is allocated to it.</li> <li>• <b>Disabled</b>—Disables the AzureStack-Host QoS feature on the adapter.</li> </ul>

Name	Description
<b>Failback Timeout</b> field	<p>After a vNIC has started using its secondary interface, this setting controls how long the primary interface must be available before the system resumes using the primary interface for the vNIC.</p> <p>Enter a number of seconds between 0 and 600.</p>
<b>Interrupt Mode</b> radio button	<p>The preferred driver interrupt mode. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>MSI X</b>—Message Signaled Interrupts (MSI) with the optional extension. This is the recommended option.</li> </ul> <p><b>Note</b> If you set <b>Interrupt Mode</b> as <b>Msi-X</b>, and if <b>pci=noms</b> parameter is enabled in <code>/boot/grub/grub.conf</code> on RHEL system, then <b>pci=noms</b> would block the eNIC/fNIC driver to run in the Msi-X mode, impacting system performance.</p> <ul style="list-style-type: none"> <li>• <b>MSI</b>—MSI only.</li> <li>• <b>IN Tx</b>—PCI IN Tx interrupts.</li> </ul> <p><b>Note</b> INTx interrupt mode is not supported with the ESX nenic driver and Windows nenic driver.</p> <p>MSI interrupt mode on Fibre Channel interfaces is not supported. If the MSI interrupt mode is configured for Fibre Channel interface, Fibre Channel interfaces will come up in MSIX mode.</p>
<b>Interrupt Coalescing Type</b> radio button	<p>This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Min</b>—The system waits for the time specified in the <b>Interrupt Timer</b> field before sending another interrupt event.</li> <li>• <b>Idle</b>—The system does not send an interrupt until there is a period of no activity lasting as least as long as the time specified in the <b>Interrupt Timer</b> field.</li> </ul>
<b>Interrupt Timer</b> field	<p>The time to wait between interrupts or the idle period that must be encountered before an interrupt is sent.</p> <p>Enter a value between 1 and 65535. To turn off interrupt coalescing, enter 0 (zero) in this field.</p>
<b>RoCE</b> radio button	<p>Whether Remote Direct Memory Access over an Ethernet network is enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—RoCE is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—RoCE is enabled on the Ethernet adapter.</li> </ul>
<b>RoCE Properties</b> area	Lists the RoCE properties. This area is enabled only if you enable RoCE.

Name	Description
<b>Version 1</b> radio button	<p>RoCE Version 1 is a link layer protocol. It allows communication between any two hosts in the same Ethernet broadcast domain.</p> <p>Whether RoCE Version 1 is enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—RoCE version 1 is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—RoCE version 1 is enabled on the Ethernet adapter.</li> </ul>
<b>Version 2</b> radio button	<p>RoCEv2 is an internet layer protocol. RoCEv2 packets can be routed. This is possible because RoCEv2 packets now include an IP and UDP header.</p> <p>Whether RoCE Version 2 is enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—RoCE version 2 is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—RoCE version 2 is enabled on the Ethernet adapter.</li> </ul>
<b>Queue Pairs</b> field	<p>The number of queue pairs per adapter.</p> <p>Enter an integer between 1 and 8192. It is recommended that this number be an integer power of 2.</p>
<b>Memory Regions</b> field	<p>The number of memory regions per adapter.</p> <p>Enter an integer between 1 and 524288. It is recommended that this number be an integer power of 2.</p>
<b>Resource Groups</b> field	<p>The number of resource groups per adapter.</p> <p>Enter an integer between 1 and 128.</p> <p>It is recommended that this number be an integer power of 2 greater than or equal to the number of CPU cores on the system for optimum performance.</p>
<b>Priority</b> field	<p>Priority is set as <b>Platinum</b> by default. The supported values include:</p> <ul style="list-style-type: none"> <li>• Fibre Channel</li> <li>• Best Effort</li> <li>• Bronze</li> <li>• Silver</li> <li>• Gold</li> <li>• Platinum</li> </ul> <p>For RoCE version 2, set <b>Priority</b> as <b>Platinum</b>.</p>

Name	Description
<b>Advance Filter</b> radio button	Whether Advance Filter over an Ethernet network is enabled. This can be one of the following: <ul style="list-style-type: none"> <li>• <b>Disabled</b>—Advance filter is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—Advance filter is enabled on the Ethernet adapter.</li> </ul>
<b>Interrupt Scaling</b> radio button	Whether Interrupt Scaling over an Ethernet network is enabled. This can be one of the following: <ul style="list-style-type: none"> <li>• <b>Disabled</b>—Interrupt Scaling is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—Interrupt Scaling is enabled on the Ethernet adapter.</li> </ul>
<b>Adapter PTP</b> radio button	Whether Precision Time Protocol is implemented for adapters on an Ethernet network. PTP is only available on Linux operating systems and can only be enabled for UCS VIC 15000 series and later adapters. <ul style="list-style-type: none"> <li>• <b>Disabled</b>—PTP is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—PTP is enabled on the Ethernet adapter.</li> </ul>

**Step 8** Click **OK**.

**Step 9** If a confirmation dialog box displays, click **Yes**.

## Receive Side Scaling (RSS)

### Receive Side Scaling Version 2 (RSSv2)

Beginning with Cisco UCS Manager release 4.3(2a), UCS Manager supports Receive Side Scaling Version 2 (RSSv2). RSSv2 is supported on Windows 2019 and Windows 2022 Operating System (OS) and it requires Windows NENIC driver.

Receive Side Scaling (RSS) supports multiple cores to process the incoming data traffic. With RSS enabled Windows NENIC driver and Cisco UCS VIC adapter, you can configure multiple hardware receive queues on the Physical Function(PF). With VMMQ enabled on the VIC, you can configure multiple hardware receive queues per Virtual Machine(VM). RSSv2 is compatible with RSS. Before using the RSSv2 functionality, ensure the NENIC driver supports RSSv2. In general, a NENIC driver supports 4 queues. With RSSv2, the NENIC driver has no upper limit on the number of hardware queues for PF or VM.

RSSv2 is supported on the following adapters and servers:

- Cisco UCS VIC 15000 Series adapters
- Cisco UCS B-Series M6, Cisco UCS C-Series M6 and M7, and Cisco UCS X-Series M6 and M7 servers

RSSv2 is compatible with the following features:

- Remote Direct Memory Access (RDMA)
- Virtual Machine Multi Queues (VMMQ)

- Virtual Extensible LAN (VXLAN)
- Network Virtualization using Generic Routing Encapsulation (NVGRE)
- Azure Stack QoS



**Note** For more information on RSSv2 with Windows Driver, see [Microsoft > Windows Driver > Network documentation](#).

## Configuring an Ethernet Adapter Policy to Enable RSS on Windows Operating Systems

To enable Receive Side Scaling (RSS) or Receive Side Scaling Version 2 (RSSv2) and configure an Ethernet Adapter Policy, do the following:

### Procedure

- Step 1** In the Navigation pane, click **Servers**.
- Step 2** Expand **Servers > Policies**.
- Step 3** Expand the node for the organization where you want to create the policy. If the system does not include multi tenancy, expand the root node.
- Step 4** Right-click **Adapter Policies** and choose **Create Ethernet Adapter Policy**.
- Step 5** Enter a **Name** and optional **Description** for the policy. This name can be between 1 and 16 alphanumeric characters. You cannot use spaces or any special characters other than - (hyphen), \_ (underscore), : (colon), and . (period), and you cannot change this name after the object is saved.
- Step 6** Create an Ethernet adapter policy.

In the **Resources** area, use the following values when creating the Ethernet adapter policy:

Name	Description
<b>Pooled</b> radio button	Whether the queue resources are pooled or not. <ul style="list-style-type: none"> <li>• <b>Disabled</b>—Pooling is disabled.</li> <li>• <b>Enabled</b>—Pooling is enabled.</li> </ul> When pooling is enabled, the counts of queue resources specified in the Adapter Policy will be the total number of queues allocated across all vPorts.
<b>Transmit Queues</b> field	The number of transmit queue resources to allocate. Enter an integer between 1 and 1000.



Name	Description
Ring Size field	The number of descriptors in each transmit queue. Enter an integer between 64 and 16384. Cisco UCS VIC 1400 Series and older adapters support maximum 4K (4096) Ring Size. Cisco UCS VIC 14000 Series and older adapters support maximum 16K (4096) Ring Size. Cisco UCS VIC 15000 Series and above adapters support up to 16K (16384) Ring Size.
Receive Queues field	The number of receive queue resources to allocate. Enter an integer between 1 and 1000.
Ring Size field	The number of descriptors in each receive queue. Enter an integer between 64 and 16384. Cisco UCS VIC 1400 Series and older adapters support maximum 4K (4096) Ring Size. Cisco UCS VIC 14000 Series and above adapters support up to 16K (16384) Ring Size. Cisco UCS VIC 15000 Series and above adapters support up to 16K (16384) Ring Size.
Completion Queues field	The number of completion queue resources to allocate. In general, the number of completion queue resources you should allocate is equal to the number of transmit queue resources plus the number of receive queue resources.
Interrupts field	The number of interrupt resources to allocate. In general, this value should be equal to (Completion Queues + 2) rounded up to nearest power of 2.

In the **Options** area, use the following values:

Name	Description
Transmit Checksum Offload radio button	This can be one of the following: <ul style="list-style-type: none"> <li>• <b>Disabled</b>—The CPU calculates all packet checksums.</li> <li>• <b>Enabled</b>—The CPU sends all packets to the hardware so that the checksum can be calculated. This option may reduce CPU overhead.</li> </ul>
Receive Checksum Offload radio button	This can be one of the following: <ul style="list-style-type: none"> <li>• <b>Disabled</b>—The CPU validates all packet checksums.</li> <li>• <b>Enabled</b>—The CPU sends all packet checksums to the hardware for validation. This option may reduce CPU overhead.</li> </ul>

Name	Description
<b>TCP Segmentation Offload</b> radio button	<p>This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—The CPU segments large TCP packets.</li> <li>• <b>Enabled</b>—The CPU sends large TCP packets to the hardware to be segmented. This option may reduce CPU overhead and increase throughput rate.</li> </ul>
<b>TCP Large Receive Offload</b> radio button	<p>This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—The CPU processes all large packets.</li> <li>• <b>Enabled</b>—The hardware reassembles all segmented packets before sending them to the CPU. This option may reduce CPU utilization and increase inbound throughput.</li> </ul>
<b>Receive Side Scaling</b> radio button	<p>RSS distributes network receive processing across multiple CPUs in multiprocessor systems. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—Network receive processing is always handled by a single processor even if additional processors are available.</li> <li>• <b>Enabled</b>—Network receive processing is shared across processors whenever possible. Click <b>Enabled</b> to support RSS or RSSv2.</li> </ul>
<b>Accelerated Receive Flow Steering</b> radio button	<p>Packet processing for a flow must be performed on the local CPU. This is supported for Linux operating systems only. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—The CPU is not specified.</li> <li>• <b>Enabled</b>—Packet processing is performed on the local CPU.</li> </ul>
<b>Network Virtualization using Generic Routing Encapsulation</b> radio button	<p>Whether NVGRE overlay hardware offloads for TSO and checksum are enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—NVGRE overlay hardware offloads are not enabled.</li> <li>• <b>Enabled</b>—NVGRE overlay hardware offloads are enabled.</li> </ul> <p>NVGRE overlay hardware offloads can be enabled when using UCS VIC 1400 and 14000 Series adapters.</p>

Name	Description
<b>Virtual Extensible LAN</b> radio button	<p>Whether VXLAN overlay hardware offloads for TSO and checksum are enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—VXLAN overlay hardware offloads are not enabled.</li> <li>• <b>Enabled</b>—VXLAN overlay hardware offloads are enabled.</li> </ul> <p>VXLAN overlay hardware offloads can be enabled with RoCE and VMQ when using UCS VIC 1400 Series adapters.</p> <p>VXLAN overlay hardware offloads can be enabled with RoCEv2 and VMQ when using Cisco UCS VIC 1400 or VIC 15000, VIC 14000, or 15000 Series adapters</p>
<b>GENEVE</b>	<p>Whether Generic Network Virtualization Encapsulation (GENEVE) overlay hardware offloads are enabled. GENEVE offload provides the overlay capability to create isolated, multi-tenant broadcast domains across data center fabrics on Cisco UCS VIC 1400, VIC 14000, or 15000 Series series adapters. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—GENEVE overlay offloads are not enabled.</li> <li>• <b>Enabled</b>—GENEVE overlay offloads are enabled.</li> </ul>
<b>AzureStack-Host QoS</b>	<p>Enable this feature to successfully deploy Azure Stack based solutions with RDMA enabled.</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—Enabling AzureStack-Host QoS on an adapter allows the user to carve out traffic classes for RDMA traffic and ensure a desired portion of the bandwidth is allocated to it.</li> <li>• <b>Disabled</b>—Disables the AzureStack-Host QoS feature on the adapter.</li> </ul>
<b>Failback Timeout</b> field	<p>After a vNIC has started using its secondary interface, this setting controls how long the primary interface must be available before the system resumes using the primary interface for the vNIC.</p> <p>Enter a number of seconds between 0 and 600.</p>
<b>Interrupt Mode</b> radio button	<p>The preferred driver interrupt mode.</p> <ul style="list-style-type: none"> <li>• <b>MSI X</b>—Message Signaled Interrupts (MSI) with the optional extension. RSS or RSSv2 is supported only on <i>MSI X</i>.</li> <li>• <b>MSI</b>—MSI only.</li> <li>• <b>IN Tx</b>—PCI IN Tx interrupts.</li> </ul>

Name	Description
<b>Interrupt Coalescing Type</b> radio button	<p>This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Min</b>—The system waits for the time specified in the <b>Interrupt Timer</b> field before sending another interrupt event.</li> <li>• <b>Idle</b>—The system does not send an interrupt until there is a period of no activity lasting as least as long as the time specified in the <b>Interrupt Timer</b> field.</li> </ul>
<b>Interrupt Timer</b> field	<p>The time to wait between interrupts or the idle period that must be encountered before an interrupt is sent.</p> <p>Enter a value between 1 and 65535. To turn off interrupt coalescing, enter 0 (zero) in this field.</p>
<b>RoCE</b> radio button	<p>Whether Remote Direct Memory Access over an Ethernet network is enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—RoCE is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—RoCE is enabled on the Ethernet adapter.</li> </ul>
<b>RoCE Properties</b> area	Lists the RoCE properties. This area is enabled only if you enable RoCE.
<b>Version 1</b> radio button	<p>RoCE Version 1 is a link layer protocol. It allows communication between any two hosts in the same Ethernet broadcast domain.</p> <p>Whether RoCE Version 1 is enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—RoCE version 1 is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—RoCE version 1 is enabled on the Ethernet adapter.</li> </ul>
<b>Version 2</b> radio button	<p>RoCEv2 is an internet layer protocol. RoCEv2 packets can be routed. This is possible because RoCEv2 packets now include an IP and UDP header.</p> <p>Whether RoCE Version 2 is enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—RoCE version 2 is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—RoCE version 2 is enabled on the Ethernet adapter.</li> </ul> <p>If you enable RoCE version 2, you can also set the <b>Priority</b> field.</p>
<b>Queue Pairs</b> field	<p>The number of queue pairs per adapter.</p> <p>Enter an integer between 1 and 8192. It is recommended that this number be an integer power of 2.</p>

Name	Description
<b>Priority</b> drop-down list	<p>Pre-defined set of Global (system wide) QoS classes. These are:</p> <ul style="list-style-type: none"> <li>• Fibre Channel</li> <li>• Best Effort</li> <li>• Bronze</li> <li>• Silver</li> <li>• Gold</li> <li>• Platinum</li> </ul> <p>For RoCE version 2, set <b>Priority</b> as <b>Platinum</b>.</p>
<b>Memory Regions</b> field	<p>The number of memory regions per adapter.</p> <p>Enter an integer between 1 and 524288. It is recommended that this number be an integer power of 2.</p>
<b>Resource Groups</b> field	<p>The number of resource groups per adapter.</p> <p>Enter an integer between 1 and 128.</p> <p>It is recommended that this number be an integer power of 2 greater than or equal to the number of CPU cores on the system for optimum performance.</p>
<b>Advance Filter</b> radio button	<p>Whether Advance Filter over an Ethernet network is enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—Advance filter is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—Advance filter is enabled on the Ethernet adapter.</li> </ul>
<b>Interrupt Scaling</b> radio button	<p>Whether Interrupt Scaling over an Ethernet network is enabled. This can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—Interrupt Scaling is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—Interrupt Scaling is enabled on the Ethernet adapter.</li> </ul>
<b>Adapter PTP</b> radio button	<p>Whether Precision Time Protocol is implemented for adapters on an Ethernet network. PTP is only available on Linux operating systems and can only be enabled for Cisco UCS VIC 14000 and Cisco UCS VIC 15000 series and later adapters.</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—PTP is disabled on the Ethernet adapter.</li> <li>• <b>Enabled</b>—PTP is enabled on the Ethernet adapter.</li> </ul>

Click **OK**. Click **Yes** to confirm the Ethernet Adapter Policy creation.

**Step 7** Install RSS or RSSv2 capable latest NENIC driver version.

**Note** For more information, see [Cisco UCS Virtual Interface Card Drivers Installation Guide](#).

**Step 8** Reboot the server.

---

## Configuring an Ethernet Adapter Policy to Enable eNIC Support for RSS on VMware ESXi

Cisco UCS Manager includes eNIC support for the Receive Side Scaling (RSS) feature on ESXi 5.5 and later releases.

### Procedure

---

**Step 1** Create an Ethernet adapter policy.

Use the following parameters when creating the Ethernet adapter policy.

In the **Resources** area, set the following options:

- Transmit Queues = 1
- Receive Queues = n (up to 16)
- Completion Queues = # of Transmit Queues + # of Receive Queues
- Interrupts = (# Completion Queues +2) rounded up to the nearest power of 2

In the **Options** area, set the following option:

- Receive Side Scaling (RSS) = Enabled

**Step 2** Install the appropriate drivers according to the [UCS Hardware and Software Compatibility](#).

For more information, see the *Cisco UCS Virtual Interface Card Drivers Installation Guide*.

**Step 3** Reboot the server.

---

## Configuring an Ethernet Adapter Policy to Enable eNIC Support for MRQS on Linux Operating Systems

Cisco UCS Manager includes eNIC support for the Multiple Receive Queue Support (MRQS) feature on Red Hat Enterprise Linux Version 6.x and SUSE Linux Enterprise Server Version 11.x.

### Procedure

---

**Step 1** Create an Ethernet adapter policy.

Use the following parameters when creating the Ethernet adapter policy:

- Transmit Queues = 1

- Receive Queues = n (up to 8)
- Completion Queues = # of Transmit Queues + # of Receive Queues
- Interrupts = # Completion Queues + 2
- Receive Side Scaling (RSS) = Enabled
- Interrupt Mode = Msi-X

**Note** If you set **Interrupt Mode** as **Msi-X**, and if **pci=noms** parameter is enabled in `/boot/grub/grub.conf` on RHEL system, then **pci=noms** would block the eNIC/fNIC driver to run in the **Msi-X** mode, impacting system performance.

- Step 2** Install an eNIC driver Version 2.1.1.35 or later.  
For more information, see the *Cisco UCS Virtual Interface Card Drivers Installation Guide*.
- Step 3** Reboot the server.

## Configuring an Ethernet Adapter Policy to Enable Stateless Offloads with NVGRE

Cisco UCS Manager supports stateless offloads with NVGRE on Cisco UCS VIC 1300 Series adapters that are installed on servers running on Windows Server 2012 R2 operating systems and higher versions. NVGRE feature is also supported on servers with Cisco UCS VIC 1400 Series, Cisco UCS VIC 14000 Series, and Cisco UCS VIC 15000 Series adapters running on Windows Server 2016. Stateless offloads with NVGRE cannot be used with Netflow, usNIC, or VM-FEX.

### Procedure

- Step 1** In the **Navigation** pane, click **Servers**.
- Step 2** Expand **Servers > Policies**.
- Step 3** Expand the node for the organization where you want to create the policy.  
If the system does not include multi tenancy, expand the **root** node.
- Step 4** Right-click **Adapter Policies** and choose **Create Ethernet Adapter Policy**.
- In the **Resources** area, set the following options:
    - Transmit Queues = 1
    - Receive Queues = n (up to 8)
    - Completion Queues = # of Transmit Queues + # of Receive Queues
    - Interrupts = # Completion Queues + 2
  - In the **Options** area, set the following options:
    - Network Virtualization using Generic Routing Encapsulation = Enabled

- Interrupt Mode = Msi-X

**Note** If you set **Interrupt Mode** as **Msi-X**, and if **pci=noms** parameter is enabled in `/boot/grub/grub.conf` on RHEL system, then **pci=noms** would block the eNIC/fNIC driver to run in the **Msi-X** mode, impacting system performance.

For more information on creating an Ethernet adapter policy, see [Creating an Ethernet Adapter Policy, on page 167](#).

**Step 5** Click **OK** to create the Ethernet adapter policy.

**Step 6** Install an eNIC driver Version 3.0.0.8 or later.

For more information, see the *Cisco UCS Virtual Interface Card Drivers Installation Guide*.

**Step 7** Reboot the server.

## Configuring an Ethernet Adapter Policy to Enable Stateless Offloads with VXLAN

VXLAN with Receive Side-Scaling (RSS) support starts with the Cisco UCS Manager 3.1(2) release. RSS is supported with VXLAN stateless offload on VIC adapters 1300 Series and SIOC on Cisco UCS S3260 system for ESXi 5.5 and later releases.

Cisco UCS Manager 4.0(1a) Release introduces VXLAN support on servers with Cisco UCS VIC 1400 Series running ESXi 6.5 and later releases. Stateless offloads with VXLAN cannot be used with NetFlow, usNIC, VM-FEX, or Netqueue.

VXLAN support for Linux and Windows 2016 starts with Cisco UCS Manager 4.0(1a) for VIC 1400 Series adapters.

VXLAN is now supported on Cisco UCS VIC 1300, 1400, 14000, and 15000 Series adapters.

The maximum amount of receive queues may be up to 16 for Cisco UCS VIC 1300 Series and Cisco UCS 1400 and 14000 Series adapters on ESXi.

Cisco UCS VIC 15000 Series adapters also support up to 16 receive queues on ESXi.



**Note** VXLAN stateless hardware offloads are not supported with Guest OS TCP traffic over IPv6 on UCS VIC 1300 Series adapters. However, Cisco UCS VIC 1400, 14000, and 15000 series adapters do not have this VxLAN offload limitation.

- To run VXLAN encapsulated TCP traffic over IPV6, disable the VXLAN stateless offloads feature.
- To disable the VXLAN stateless offload feature in UCS Manager, disable the Virtual Extensible LAN field in the Ethernet Adapter Policy.



## Procedure

---

- Step 1** In the **Navigation** pane, click **Servers**.
- Step 2** Expand **Servers > Policies**.
- Step 3** Expand the node for the organization where you want to create the policy.  
If the system does not include multi tenancy, expand the **root** node.
- Step 4** Right-click **Adapter Policies** and choose **Create Ethernet Adapter Policy**.
- a) In the **Resources** area, set the following options:
- Transmit Queues = 1
  - Receive Queues = n (up to 16)
  - Completion Queues = # of Transmit Queues + # of Receive Queues
  - Interrupts = # Completion Queues + 2
- b) In the **Options** area, set the following options:
- Receive Side Scaling = Enabled
  - Virtual Extensible LAN = Enabled
  - Interrupt Mode = Msi-X
- Note** If you set **Interrupt Mode** as **Msi-X**, and if **pci=noms** parameter is enabled in `/boot/grub/grub.conf` on RHEL system, then **pci=noms** would block the eNIC/fNIC driver to run in the **Msi-X** mode, impacting system performance.
- For more information on creating an ethernet adapter policy, see [Creating an Ethernet Adapter Policy, on page 167](#).
- Step 5** Click **OK** to create the Ethernet adapter policy.
- Step 6** Install an eNIC driver Version 2.1.2.59 or later.  
For more information, see the *Cisco UCS Virtual Interface Card Drivers Installation Guide*.
- Step 7** Reboot the server.
- 

## Deleting an Ethernet Adapter Policy

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies > Organization\_Name**.
- Step 3** Expand the **Adapter Policies** node.
- Step 4** Right-click the Ethernet adapter policy that you want to delete and choose **Delete**.

**Step 5** If a confirmation dialog box displays, click **Yes**.

---

## Configuring the Default vNIC Behavior Policy

### Default vNIC Behavior Policy

Default vNIC behavior policy allows you to configure how vNICs are created for a service profile. You can choose to create vNICs manually, or you can create them automatically.

You can configure the default vNIC behavior policy to define how vNICs are created. This can be one of the following:

- **None**—Cisco UCS Manager does not create default vNICs for a service profile. All vNICs must be explicitly created.
- **HW Inherit**—If a service profile requires vNICs and none have been explicitly defined, Cisco UCS Manager creates the required vNICs based on the adapter installed in the server associated with the service profile.



---

**Note** If you do not specify a default behavior policy for vNICs, **HW Inherit** is used by default.

---

## Configuring a Default vNIC Behavior Policy

### Procedure

---

**Step 1** In the **Navigation** pane, click **LAN**.

**Step 2** Expand **LAN > Policies**.

**Step 3** Expand the **root** node.

You can configure only the default vNIC behavior policy in the root organization. You cannot configure the default vNIC behavior policy in a sub-organization.

**Step 4** Click **Default vNIC Behavior**.

**Step 5** On the **General Tab**, in the **Properties** area, click one of the following radio buttons in the **Action** field:

- **None**—Cisco UCS Manager does not create default vNICs for a service profile. All vNICs must be explicitly created.
- **HW Inherit**—If a service profile requires vNICs and none have been explicitly defined, Cisco UCS Manager creates the required vNICs based on the adapter installed in the server associated with the service profile.

**Step 6** Click **Save Changes**.

---

## Configuring LAN Connectivity Policies

### About the LAN and SAN Connectivity Policies

Connectivity policies determine the connections and the network communication resources between the server and the LAN or SAN on the network. These policies use pools to assign MAC addresses, WWNs, and WWPNS to servers and to identify the vNICs and vHBAs that the servers use to communicate with the network.



**Note** We do not recommend that you use static IDs in connectivity policies, because these policies are included in service profiles and service profile templates and can be used to configure multiple servers.

---

### Privileges Required for LAN and SAN Connectivity Policies

Connectivity policies enable users without network or storage privileges to create and modify service profiles and service profile templates with network and storage connections. However, users must have the appropriate network and storage privileges to create connectivity policies.

#### Privileges Required to Create Connectivity Policies

Connectivity policies require the same privileges as other network and storage configurations. For example, you must have at least one of the following privileges to create connectivity policies:

- admin—Can create LAN and SAN connectivity policies
- ls-server—Can create LAN and SAN connectivity policies
- ls-network—Can create LAN connectivity policies
- ls-storage—Can create SAN connectivity policies

#### Privileges Required to Add Connectivity Policies to Service Profiles

After the connectivity policies have been created, a user with ls-compute privileges can include them in a service profile or service profile template. However, a user with only ls-compute privileges cannot create connectivity policies.

### Interactions between Service Profiles and Connectivity Policies

You can configure the LAN and SAN connectivity for a service profile through either of the following methods:

- LAN and SAN connectivity policies that are referenced in the service profile
- Local vNICs and vHBAs that are created in the service profile
- Local vNICs and a SAN connectivity policy

- Local vHBAs and a LAN connectivity policy

Cisco UCS maintains mutual exclusivity between connectivity policies and local vNIC and vHBA configuration in the service profile. You cannot have a combination of connectivity policies and locally created vNICs or vHBAs. When you include a LAN connectivity policy in a service profile, all existing vNIC configuration is erased, and when you include a SAN connectivity policy, all existing vHBA configuration in that service profile is erased.

## Creating a LAN Connectivity Policy

### Procedure

- 
- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies**.
- Step 3** Expand the node for the organization where you want to create the policy.
- If the system does not include multi tenancy, expand the **root** node.
- Step 4** Right-click **LAN Connectivity Policies** and choose **Create LAN Connectivity Policy**.
- Step 5** In the **Create LAN Connectivity Policy** dialog box, enter a name and optional description.
- Step 6** Do one of the following:
- To add vNICs to the LAN connectivity policy, continue with Step 7.
  - To add iSCSI vNICs to the LAN connectivity policy and use iSCSI boot with the server, continue with Step 8.
- Step 7** To add vNICs, click **Add** next to the plus sign and complete the following fields in the **Create vNIC** dialog box:
- In the **Create vNIC** dialog box, enter the name, select a **MAC Address Assignment**, and check the **Use vNIC Template** check box to use an existing vNIC template.  
You can also create a MAC pool from this area.
  - Choose the **Fabric ID**, select the **VLANs** that you want to use, enter the **MTU**, and choose a **Pin Group**.  
You can also add a VLAN and enable QinQ on a vNIC. For more information, see [Enabling QinQ on a vNIC of a Service Profile, on page 120](#).
- Note** Cisco recommends using the native VLAN 1 setting to prevent traffic interruptions if using the Cisco Nexus 1000V Series Switches because changing the native VLAN 1 setting on a vNIC causes the port to turn on and off. You can only change the native VLAN setting on a Virtual Private Cloud (VPC) secondary port, and then change the primary port on the VPC.
- In the **Operational Parameters** area, choose a **Stats Threshold Policy**.
  - In the Adapter Performance Profile area, choose an **Adapter Policy**, **QoS Policy**, and a **Network Control Policy**.  
You can also create an Ethernet adapter policy, QoS policy, and network control policy from this area.
  - In the Connection Policies area, choose the **Dynamic vNIC**, **usNIC** or **VMQ** radio button, then choose the corresponding policy.

You can also create a dynamic vNIC, usNIC, or VMQ connection policy from this area.

**Note** Cisco UCS 6400 Series Fabric Interconnect and Cisco UCS 6536 Fabric Interconnects do not support dynamic vNICs.

f) Click **OK**.

**Step 8** If you want to use iSCSI boot with the server, click the down arrows to expand the **Add iSCSI vNICs** bar and do the following:

- a) Click **Add** on the table icon bar.
- b) In the **Create iSCSI vNIC** dialog box, enter the **Name** and choose the **Overlay vNIC, iSCSI Adapter Policy**, and **VLAN**.

You can also create an iSCSI adapter policy from this area.

**Note** For the Cisco UCS M81KR Virtual Interface Card and the Cisco UCS VIC-1240 Virtual Interface Card, the VLAN that you specify must be the same as the native VLAN on the overlay vNIC.

For the Cisco UCS M51KR-B Broadcom BCM57711 Adapter, the VLAN that you specify can be any VLAN assigned to the overlay vNIC.

- c) In the **MAC Address Assignment** drop-down list in the **iSCSI MAC Address** area, choose one of the following:

- Leave the MAC address unassigned, select **Select (None used by default)**. Select this option if the server that will be associated with this service profile contains a Cisco UCS M81KR Virtual Interface Card adapter or a Cisco UCS VIC-1240 Virtual Interface Card.

**Important** If the server that will be associated with this service profile contains a Cisco UCS NIC M51KR-B adapter, you must specify a MAC address.

- A specific MAC address, select **00:25:B5:XX:XX:XX** and enter the address in the **MAC Address** field. To verify that this address is available, click the corresponding link.
- A MAC address from a pool, select the pool name from the list. Each pool name is followed by a pair of numbers in parentheses. The first number is the number of available MAC addresses in the pool and the second is the total number of MAC addresses in the pool.

If this Cisco UCS domain is registered with Cisco UCS Central, there might be two pool categories. **Domain Pools** are defined locally in the Cisco UCS domain and **Global Pools** are defined in Cisco UCS Central.

- d) (Optional) If you want to create a MAC pool that will be available to all service profiles, click **Create MAC Pool** and complete the fields in the **Create MAC Pool** wizard.

For more information, see the *UCS Manager Storage Management Guide*, Pools chapter, Creating a MAC Pool topic.

e) Click **OK**.

**Step 9** After you have created all the vNICs or iSCSI vNICs you need for the policy, click **OK**.

**What to do next**

Include the policy in a service profile or service profile template.

## Deleting a LAN Connectivity Policy

If you delete a LAN connectivity policy that is included in a service profile, it also deletes all vNICs and iSCSI vNICs from that service profile, and disrupt LAN data traffic for the server associated with the service profile.

**Procedure**

- 
- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > Policies > Organization\_Name**.
  - Step 3** Expand the **LAN Connectivity Policies** node.
  - Step 4** Right-click the policy that you want to delete and choose **Delete**.
  - Step 5** If a confirmation dialog box displays, click **Yes**.
- 

## Creating a vNIC for a LAN Connectivity Policy

**Procedure**

- 
- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > Policies > Organization\_Name**.
  - Step 3** Expand the **LAN Connectivity Policies** node.
  - Step 4** Choose the policy to which you want to add a vNIC.
  - Step 5** In the **Work** pane, click the **General** tab.
  - Step 6** On the icon bar of the **vNICs** table, click **Add**.
  - Step 7** In the **Create vNIC** dialog box, enter the name, select a **MAC Address Assignment**, and check the **Use vNIC Template** check box if you want to use an existing vNIC template.  
You can also create a MAC pool from this area.
  - Step 8** Choose the **Fabric ID**, select the **VLANs** that you want to use, enter the **MTU**, and choose a **Pin Group**.  
You can also create a VLAN and a LAN pin group from this area.
  - Step 9** In the **Operational Parameters** area, choose a **Stats Threshold Policy**.
  - Step 10** In the Adapter Performance Profile area, choose an **Adapter Policy**, **QoS Policy**, and a **Network Control Policy**.  
You can also create an Ethernet adapter policy, QoS policy, and network control policy from this area.
  - Step 11** In the Connection Policies area, choose the **Dynamic vNIC**, **usNIC** or **VMQ** radio button, then choose the corresponding policy.

You can also create a dynamic vNIC, usNIC, or VMQ connection policy from this area.

**Note** Cisco UCS 6400 Series Fabric Interconnects and Cisco UCS 6536 Fabric Interconnect do not support dynamic vNICs.

- Step 12** Click **OK**.
- Step 13** Click **Save Changes**.
- 

## Deleting a vNIC from a LAN Connectivity Policy

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies > Organization\_Name**.
- Step 3** Expand the **LAN Connectivity Policies** node.
- Step 4** Select the policy from which you want to delete the vNIC.
- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** In the **vNICs** table, do the following:
- Click the vNIC you want to delete.
  - On the icon bar, click **Delete**.
- Step 7** If a confirmation dialog box displays, click **Yes**.
- Step 8** Click **Save Changes**.
- 

## Creating an iSCSI vNIC for a LAN Connectivity Policy

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies > Organization\_Name**.
- Step 3** Expand the **LAN Connectivity Policies** node.
- Step 4** Choose the policy to which you want to add an iSCSI vNIC.
- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** On the icon bar of the **Add iSCSI vNICs** table, click **Add**.
- Step 7** In the **Create iSCSI vNIC** dialog box, complete the following fields:

Name	Description
Name field	The name of the iSCSI vNIC.  This name can be between 1 and 16 alphanumeric characters. You cannot use spaces or any special characters other than - (hyphen), _ (underscore), : (colon), and . (period), and you cannot change this name after the object is saved.
Overlay vNIC drop-down list	The LAN vNIC associated with this iSCSI vNIC, if any.
iSCSI Adapter Policy drop-down list	The iSCSI adapter policy associated with this iSCSI vNIC, if any.
Create iSCSI Adapter Policy link	Click this link to create a new iSCSI adapter policy that will be available to all iSCSI vNICs.
VLAN drop-down list	The virtual LAN associated with this iSCSI vNIC. The default VLAN is <b>default</b> .  <b>Note</b> For the Cisco UCS M81KR Virtual Interface Card and the Cisco UCS VIC-1240 Virtual Interface Card, the VLAN that you specify must be the same as the native VLAN on the overlay vNIC.  For the Cisco UCS M51KR-B Broadcom BCM57711 Adapter, the VLAN that you specify can be any VLAN assigned to the overlay vNIC.

**Step 8** In the **MAC Address Assignment** drop-down list in the **iSCSI MAC Address** area, choose one of the following:

- Leave the MAC address unassigned, select **Select (None used by default)**. Select this option if the server that will be associated with this service profile contains a Cisco UCS M81KR Virtual Interface Card adapter or a Cisco UCS VIC-1240 Virtual Interface Card.

**Important** If the server that will be associated with this service profile contains a Cisco UCS NIC M51KR-B adapter, you must specify a MAC address.

- A specific MAC address, select **00:25:B5:XX:XX:XX** and enter the address in the **MAC Address** field. To verify that this address is available, click the corresponding link.
- A MAC address from a pool, select the pool name from the list. Each pool name is followed by a pair of numbers in parentheses. The first number is the number of available MAC addresses in the pool and the second is the total number of MAC addresses in the pool.

If this Cisco UCS domain is registered with Cisco UCS Central, there might be two pool categories.

**Domain Pools** are defined locally in the Cisco UCS domain and **Global Pools** are defined in Cisco UCS Central.

**Step 9** (Optional) If you want to create a MAC pool that will be available to all service profiles, click **Create MAC Pool** and complete the fields in the **Create MAC Pool** wizard.

For more information, see the *UCS Manager Storage Management Guide*, Pools chapter, Creating a MAC Pool topic.



- Step 10** Click **OK**.
- Step 11** Click **Save Changes**.
- 

## Deleting a vNIC from a LAN Connectivity Policy

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies > Organization\_Name**.
- Step 3** Expand the **LAN Connectivity Policies** node.
- Step 4** Select the policy from which you want to delete the vNIC.
- Step 5** In the **Work** pane, click the **General** tab.
- Step 6** In the **vNICs** table, do the following:
- Click the vNIC you want to delete.
  - On the icon bar, click **Delete**.
- Step 7** If a confirmation dialog box displays, click **Yes**.
- Step 8** Click **Save Changes**.
- 

## Configuring SRIOV HPN Connection Policies

### Single Root I/O Virtualization HPN Connection Policy

Beginning with the release 4.3(2b), Cisco UCS Manager provides Single Root I/O Virtualization High Performance Networking (SRIOV-HPN) Connection Policy support on Cisco UCS M5, M6 and M7 servers with UCS VIC 14xx, 14xxx and 15xxx series adapters.

Single Root I/O Virtualization allows multiple VMs running a variety of guest operating systems to share a single PCIe network adapter within a host server. SR-IOV allows a VM to move data directly to and from the network adapter, bypassing the hypervisor for increased network throughput and lower server CPU burden.

To configure the SRIOV-HPN policy in a service profile, select **SRIOV-HPN** from **vNIC Adapter Policy** drop-down list.

You cannot enable the following when SRIOV-HPN is enabled:

- QinQ on the same vNIC
- VXLAN on the same vNIC
- Geneve offload on the same vNIC
- ENS on the same vNIC
- RoCE V2 on the same vNIC

- Netqueue on the same vNIC



- Note**
- CDN is supported on the host interface only and is not supported on the VM interface.
  - Microsoft stand-alone NIC Teaming on SRIOV-HPN enabled vNICs is not supported.
  - DPDK is supported on Linux VM.
  - RSS is supported on the same vNIC

## Creating or Viewing SRIOV HPN Connection Policy Properties

### Procedure

	Command or Action	Purpose								
<b>Step 1</b>	In the <b>Navigation</b> pane, click <b>LAN</b> .									
<b>Step 2</b>	Expand <b>Servers &gt; Policies</b> .									
<b>Step 3</b>	Expand the node for the organization where you want to create and view the SRIOV-HPN Connection Policies.	If the system does not include multi-tenancy, expand the root node.								
<b>Step 4</b>	To create SRIOV HPN Connection Policy, right click on <b>SRIOV HPN Connection Policies</b> .									
<b>Step 5</b>	In the <b>General</b> tab, you can view and modify the created SRIOV HPN Connection Policy properties.	<table border="1"> <thead> <tr> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>Name</b> field</td> <td>The name of the policy.  This name can be between 1 and 16 alphanumeric characters. You cannot use spaces or any special characters other than - (hyphen), _ (underscore), : (colon), and . (period), and you cannot change this name after the object is saved.</td> </tr> <tr> <td><b>Description</b> field</td> <td>Brief description of the policy.</td> </tr> <tr> <td><b>Number of SRIOV HPN vnic</b> field</td> <td>Enter an integer between 1 and 64.</td> </tr> </tbody> </table>	Name	Description	<b>Name</b> field	The name of the policy.  This name can be between 1 and 16 alphanumeric characters. You cannot use spaces or any special characters other than - (hyphen), _ (underscore), : (colon), and . (period), and you cannot change this name after the object is saved.	<b>Description</b> field	Brief description of the policy.	<b>Number of SRIOV HPN vnic</b> field	Enter an integer between 1 and 64.
Name	Description									
<b>Name</b> field	The name of the policy.  This name can be between 1 and 16 alphanumeric characters. You cannot use spaces or any special characters other than - (hyphen), _ (underscore), : (colon), and . (period), and you cannot change this name after the object is saved.									
<b>Description</b> field	Brief description of the policy.									
<b>Number of SRIOV HPN vnic</b> field	Enter an integer between 1 and 64.									

	Command or Action	Purpose	
		Name	Description
		<b>Transmit Queues</b> field	The number of descriptors in each transmit queue.  Enter an integer between 1 and 8.
		<b>Receive Queues</b> field	The number of receive queue resources to allocate.  Enter an integer between 1 and 8.
		<b>Completion Queues</b> field	The number of completion queue resources to allocate. In general, the number of completion queue resources you should allocate is equal to the number of transmit queue resources plus the number of receive queue resources.  Enter an integer between 1 and 16.
		<b>Interrupt Count</b> field	The number of interrupt resources to allocate. In general, this value should be equal to the number of completion queue resources.  Enter an integer between 1 and 16.
<b>Step 6</b>	Click <b>OK</b> to save the changes, if any.		

## Assigning SRIOV HPN Connection Policy to a vNIC

### Procedure

- Step 1** In the **Navigation** pane, click **Servers**.

- Step 2** On the **Servers** tab, expand **Servers > Service Profile > root**.
- Step 3** Expand the service profile that you want to configure for SRIOV-HPN policy and then click **vNICs**.
- Step 4** Choose the desired vNIC.
- Step 5** In the **Work Pane**, click the **General** tab.
- Step 6** In the **Policies** area, select **SRIOV-HPN** from the drop-down list.
- Step 7** In the **Connection Policies** area, click the **SRIOV-HPN** radio button.  
The **SRIOV HPN Connection Policy** drop-down list is displayed.
- Step 8** Select the desired policy from the **SRIOV HPN Connection Policy** drop-down list.
- Step 9** Click **OK**.
- Step 10** Click **Save Changes**.
- 

## Deleting a SRIOV HPN Connection Policy

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **Servers > Policies > Organization\_Name**.
- Step 3** Expand **SRIOV HPN Connection Policies**.
- Step 4** Right-click the policy you want to delete and select **Delete**.
- Step 5** If a confirmation dialog box displays, click **Yes**.
- 

## Configuring Network Control Policies

### Network Control Policy

This policy configures the network control settings for the Cisco UCS domain, including the following:

- Whether the Cisco Discovery Protocol (CDP) is enabled or disabled
- How the virtual interface ( VIF) behaves if no uplink port is available in end-host mode
- The action that Cisco UCS Manager takes on the remote Ethernet interface, vEthernet interface , or vFibre Channel interface when the associated border port fails
- Whether the server can use different MAC addresses when sending packets to the fabric interconnect
- Whether MAC registration occurs on a per-VNIC basis or for all VLANs

### Action on Uplink Fail

By default, the **Action on Uplink Fail** property in the network control policy is configured with a value of link-down. For adapters such as the Cisco UCS M81KR Virtual Interface Card, this default behavior directs Cisco UCS Manager to bring the vEthernet or vFibre Channel interface down if the associated border port fails. For Cisco UCS systems using a non-VM-FEX capable converged network adapter that supports both Ethernet and FCoE traffic, such as Cisco UCS CNA M72KR-Q and the Cisco UCS CNA M72KR-E, this default behavior directs Cisco UCS Manager to bring the remote Ethernet interface down if the associated border port fails. In this scenario, any vFibre Channel interfaces that are bound to the remote Ethernet interface are brought down as well.



---

**Note** If your implementation includes those types of non-VM-FEX capable converged network adapters mentioned in this section and the adapter is expected to handle both Ethernet and FCoE traffic, we recommend that you configure the **Action on Uplink Fail** property with a value of warning. Note that this configuration might result in an Ethernet teaming driver not being able to detect a link failure when the border port goes down.

---

### MAC Registration Mode

MAC addresses are installed only on the native VLAN by default, which maximizes the VLAN port count in most implementations.



---

**Note** If a trunking driver is being run on the host and the interface is in promiscuous mode, we recommend that you set the MAC Registration Mode to All VLANs.

---

### NIC Teaming and Port Security

NIC teaming is a grouping together of network adapters to build in redundancy, and is enabled on the host. This teaming or bonding facilitates various functionalities, including load balancing across links and failover. When NIC teaming is enabled and events such as failover or reconfiguration take place, MAC address conflicts and movement may happen.

Port security, which is enabled on the fabric interconnect side, prevents MAC address movement and deletion. Therefore, you must not enable port security and NIC teaming together.

## Configuring Link Layer Discovery Protocol for Fabric Interconnect vEthernet Interfaces

Cisco UCS Manager allows you to enable and disable LLDP on a vEthernet interface. You can also retrieve information about these LAN uplink neighbors. This information is useful while learning the topology of the LAN connected to the UCS system and while diagnosing any network connectivity issues from the fabric interconnect (FI). The fabric interconnect of a UCS system is connected to LAN uplink switches for LAN connectivity and to SAN uplink switches for storage connectivity. When using Cisco UCS with Cisco Application Centric Infrastructure (ACI), LAN uplinks of the fabric interconnect are connected to ACI leaf nodes. Enabling LLDP on a vEthernet interface will help the Application Policy Infrastructure Controller (APIC) to identify the servers connected to the fabric interconnect by using vCenter.

To permit the discovery of devices in a network, support for Link Layer Discovery Protocol (LLDP), a vendor-neutral device discovery protocol that is defined in the IEEE 802.1ab standard, is introduced. LLDP is a one-way protocol that allows network devices to advertise information about themselves to other devices

on the network. LLDP transmits information about the capabilities and current status of a device and its interfaces. LLDP devices use the protocol to solicit information only from other LLDP devices.

You can enable or disable LLDP on a vEthernet interface based on the Network Control Policy (NCP) that is applied on the vNIC in the service profile.

## Creating a Network Control Policy

MAC address-based port security for Emulex converged Network Adapters (N20-AE0102) is not supported. When MAC address-based port security is enabled, the fabric interconnect restricts traffic to packets that contain the MAC address that it first learns. This is either the source MAC address used in the FCoE Initialization Protocol packet, or the MAC address in an ethernet packet, whichever is sent first by the adaptor. This configuration can result in either FCoE or Ethernet packets being dropped.

### Procedure

- 
- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies**.
- Step 3** Expand the node for the organization where you want to create the policy.  
If the system does not include multi tenancy, expand the **root** node.
- Step 4** Right-click the **Network Control Policies** node and select **Create Network Control Policy**.
- Step 5** In the **Create Network Control Policy** dialog box, complete the required fields.
- Step 6** In the LLDP area, do the following:
- To enable the transmission of LLDP packets on an interface, click **Enabled** in the **Transmit** field.
  - To enable the reception of LLDP packets on an interface, click **Enabled** in the **Receive** field.
- Step 7** In the **MAC Security** area, do the following to determine whether the server can use different MAC addresses when sending packets to the fabric interconnect:
- Click the **Expand** icon to expand the area and display the radio buttons.
  - Click one of the following radio buttons to determine whether forged MAC addresses are allowed or denied when packets are sent from the server to the fabric interconnect:
    - **Allow**— All server packets are accepted by the fabric interconnect, regardless of the MAC address associated with the packets.
    - **Deny**— After the first packet has been sent to the fabric interconnect, all other packets must use the same MAC address or they will be silently rejected by the fabric interconnect. In effect, this option enables port security for the associated vNIC.
- If you plan to install VMware ESX on the associated server, you must configure the **MAC Security** to **allow** for the network control policy applied to the default vNIC. If you do not configure **MAC Security** for **allow**, the ESX installation may fail because the MAC security permits only one MAC address while the installation process requires more than one MAC address.
- Step 8** Click **OK**.
-

## Deleting a Network Control Policy

### Procedure

- 
- |               |  |
|---------------|--|
| <b>Step 1</b> | In the <b>Navigation</b> pane, click <b>LAN</b> .                    |
| <b>Step 2</b> | Expand <b>LAN &gt; Policies &gt; <i>Organization_Name</i></b> .      |
| <b>Step 3</b> | Expand the <b>Network Control Policies</b> node.                     |
| <b>Step 4</b> | Right-click the policy you want to delete and select <b>Delete</b> . |
| <b>Step 5</b> | If a confirmation dialog box displays, click <b>Yes</b> .            |
- 

## Configuring Multicast Policies

### Multicast Policy

This policy is used to configure Internet Group Management Protocol (IGMP) snooping, IGMP querier, and IGMP source IP proxy. IGMP Snooping dynamically determines hosts in a VLAN that should be included in particular multicast transmissions. You can create, modify, and delete a multicast policy that can be associated to one or more VLANs. When a multicast policy is modified, all VLANs associated with that multicast policy are re-processed to apply the changes.

By default, IGMP snooping is enabled and IGMP querier is disabled. When IGMP snooping is enabled, the fabric interconnects send the IGMP queries only to the hosts. They do not send IGMP queries to the upstream network. To send IGMP queries to the upstream, do one of the following:

- Configure IGMP querier on the upstream fabric interconnect with IGMP snooping enabled
- Disable IGMP snooping on the upstream fabric interconnect
- Change the fabric interconnects to switch mode

By default, IGMP Source IP Proxy state is enabled. When IGMP Source IP Proxy is enabled, the fabric interconnect acts as a proxy for its hosts and manages the membership of hosts and routing devices in multicast groups. IP hosts use IGMP to report their multicast group memberships to any immediately neighboring multicast routing devices. When IGMP source IP proxy is disabled, the fabric interconnect will forward the IGMP messages from the hosts towards the upstream router or switch without any change.

The following limitations and guidelines apply to multicast policies:

- Only the default multicast policy is allowed for a global VLAN.
- If a Cisco UCS domain includes 6300 series fabric interconnects, any multicast policy can be assigned.
- We highly recommend you use the same IGMP snooping state on the fabric interconnects and the associated LAN switches. For example, if IGMP snooping is disabled on the fabric interconnects, it should be disabled on any associated LAN switches as well.
- The option to enable or disable IGMP source IP proxy is supported on Cisco UCS 6500, UCS UCS 6400, and UCS 6300 Series fabric interconnects.

## Creating a Multicast Policy

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies**.
- Step 3** Expand the **root** node.
- Step 4** Right-click the **Multicast Policies** node and select **Create Multicast Policy**.
- Step 5** In the **Create Multicast Policy** dialog box, specify the name, IGMP snooping, and IGMP source IP proxy information.

**Note** Follow these guidelines if you choose to set IGMP Snooping querier IP addresses for a multicast policy:

- a. In the Ethernet Switch-Mode configuration, you must set the querier IP addresses for each FI in the domain.
- b. In the Ethernet End-Host mode, you can set the querier IP address just for FI A, and optionally for FI B as well. If an IP address is not set explicitly for FI-B, it uses the same address set for FI A.

Querier IP address can be any valid IP address. However, IP address from same subnet is required if there is a strict subnet check in the host.

- Step 6** Click **OK**.
- 

## Modifying a Multicast Policy

This procedure describes how to change the IGMP snooping state, IGMP snooping querier state, and IGMP Source IP Proxy state of an existing multicast policy.



**Note** You cannot change the name of the multicast policy once it has been created.

---

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies**.
- Step 3** Expand the **root** node.
- Step 4** Click the policy that you want to modify.
- Step 5** In the work pane, edit the fields as needed.
- Step 6** Click **Save Changes**.
-



## Deleting a Multicast Policy



**Note** If you assigned a non-default (user-defined) multicast policy to a VLAN and then delete that multicast policy, the associated VLAN inherits the multicast policy settings from the default multicast policy until the deleted policy is re-created.

### Procedure

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** Expand **LAN > Policies**.
- Step 3** Expand the **root** node.
- Step 4** Right-click the **Multicast Policies** node and select **Delete Multicast Policy**.
- Step 5** If a confirmation dialog box displays, click **Yes**.

## Configuring LACP Policies

### LACP Policy

Link Aggregation combines multiple network connections in parallel to increase throughput and to provide redundancy. Link aggregation control protocol (LACP) provides additional benefits for these link aggregation groups. Cisco UCS Manager enables you to configure LACP properties using LACP policy.

You can configure the following for a lacp policy:

- **Suspended-individual:** If you do not configure the ports on an upstream switch for lacp, the fabric interconnects treat all ports as uplink Ethernet ports to forward packets. You can place the lacp port in suspended state to avoid loops. When you set suspend-individual on a port-channel with LACP, if a port that is part of the port-channel does not receive PDUs from the peer port, it will go into suspended state.
- **Timer values:** You can configure rate-fast or rate-normal. In rate-fast configuration, the port is expected to receive 1 PDU every 1 second from the peer port. The time out for this is 3 seconds. In rate-normal configuration, the port is expected to receive 1 PDU every 30 seconds. The timeout for this is 90 seconds.

System creates a default LACP policy at system start up. You can modify this policy or create a new policy. You can also apply one LACP policy to multiple port-channels.

### Creating a LACP Policy

#### Procedure

- Step 1** In the **Navigation** pane, click **LAN**.

- Step 2** Expand **LAN > Policies**.
  - Step 3** Expand the node for the organization where you want to create the policy.  
If the system does not include multi tenancy, expand the **root** node.
  - Step 4** In the **Work Pane**, click **LACP Policies** tab, and click the + sign.
  - Step 5** In the **Create LACP Policy** dialog box, fill in the required fields.
  - Step 6** Click **OK**.
- 

## Modifying a LACP Policy

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > Policies**.
  - Step 3** Expand the node for the organization where you want to create the policy.  
If the system does not include multi tenancy, expand the **root** node.
  - Step 4** In the **Work Pane**, **LACP Policies** tab, and click on the policy you want to edit.
  - Step 5** Click the **Properties** icon on the right.
  - Step 6** In the **Properties** dialog box, make the required changes and click **Apply**.
  - Step 7** Click **OK**.
- 

## Configuring UDLD Link Policies

### Understanding UDLD

UniDirectional Link Detection (UDLD) is a Layer 2 protocol that enables devices connected through fiber-optic or twisted-pair Ethernet cables to monitor the physical configuration of the cables and detect when a unidirectional link exists. All connected devices must support UDLD for the protocol to successfully identify and disable unidirectional links. When UDLD detects a unidirectional link, it marks the link as unidirectional. Unidirectional links can cause a variety of problems, including spanning-tree topology loops.

UDLD works with the Layer 1 mechanisms to determine the physical status of a link. At Layer 1, autonegotiation takes care of physical signaling and fault detection. UDLD performs tasks that autonegotiation cannot perform, such as detecting the identities of neighbors and shutting down misconnected interfaces. When you enable both autonegotiation and UDLD, the Layer 1 and Layer 2 detections work together to prevent physical and logical unidirectional connections and the malfunctioning of other protocols.

A unidirectional link occurs whenever traffic sent by a local device is received by its neighbor but traffic from the neighbor is not received by the local device.

## Modes of Operation

UDLD supports two modes of operation: normal (the default) and aggressive. In normal mode, UDLD can detect unidirectional links due to misconnected interfaces on fiber-optic connections. In aggressive mode, UDLD can also detect unidirectional links due to one-way traffic on fiber-optic and twisted-pair links and to misconnected interfaces on fiber-optic links.

In normal mode, UDLD detects a unidirectional link when fiber strands in a fiber-optic interface are misconnected and the Layer 1 mechanisms do not detect this misconnection. If the interfaces are connected correctly but the traffic is one way, UDLD does not detect the unidirectional link because the Layer 1 mechanism, which is supposed to detect this condition, does not do so. In case, the logical link is considered undetermined, and UDLD does not disable the interface. When UDLD is in normal mode, if one of the fiber strands in a pair is disconnected and autonegotiation is active, the link does not stay up because the Layer 1 mechanisms did not detect a physical problem with the link. In this case, UDLD does not take any action, and the logical link is considered undetermined.

UDLD aggressive mode is disabled by default. Configure UDLD aggressive mode only on point-to-point links between network devices that support UDLD aggressive mode. With UDLD aggressive mode enabled, when a port on a bidirectional link that has a UDLD neighbor relationship established stops receiving UDLD packets, UDLD tries to reestablish the connection with the neighbor and administratively shuts down the affected port. UDLD in aggressive mode can also detect a unidirectional link on a point-to-point link on which no failure between the two devices is allowed. It can also detect a unidirectional link when one of the following problems exists:

- On fiber-optic or twisted-pair links, one of the interfaces cannot send or receive traffic.
- On fiber-optic or twisted-pair links, one of the interfaces is down while the other is up.
- One of the fiber strands in the cable is disconnected.

## Methods to Detect Unidirectional Links

UDLD operates by using two mechanisms:

- Neighbor database maintenance

UDLD learns about other UDLD-capable neighbors by periodically sending a hello packet (also called an advertisement or probe) on every active interface to keep each device informed about its neighbors. When the switch receives a hello message, it caches the information until the age time (hold time or time-to-live) expires. If the switch receives a new hello message before an older cache entry ages, the switch replaces the older entry with the new one.

UDLD clears all existing cache entries for the interfaces affected by the configuration change whenever an interface is disabled and UDLD is running, whenever UDLD is disabled on an interface, or whenever the switch is reset. UDLD sends at least one message to inform the neighbors to flush the part of their caches affected by the status change. The message is intended to keep the caches synchronized.

- Event-driven detection and echoing

UDLD relies on echoing as its detection mechanism. Whenever a UDLD device learns about a new neighbor or receives a resynchronization request from an out-of-sync neighbor, it restarts the detection window on its side of the connection and sends echo messages in reply. Because this behavior is the same on all UDLD neighbors, the sender of the echoes expects to receive an echo in reply.

If the detection window ends and no valid reply message is received, the link might shut down, depending on the UDLD mode. When UDLD is in normal mode, the link might be considered undetermined and

might not be shut down. When UDLD is in aggressive mode, the link is considered unidirectional, and the interface is shut down.

If UDLD in normal mode is in the advertisement or in the detection phase and all the neighbor cache entries are aged out, UDLD restarts the link-up sequence to resynchronize with any potentially out-of-sync neighbors.

If you enable aggressive mode when all the neighbors of a port have aged out either in the advertisement or in the detection phase, UDLD restarts the link-up sequence to resynchronize with any potentially out-of-sync neighbor. UDLD shuts down the port if, after the fast train of messages, the link state is still undetermined.

## UDLD Configuration Guidelines

The following guidelines and recommendations apply when you configure UDLD:

- A UDLD-capable interface also cannot detect a unidirectional link if it is connected to a UDLD-incapable port of another switch.
- When configuring the mode (normal or aggressive), make sure that the same mode is configured on both sides of the link.
- UDLD should be enabled only on interfaces that are connected to UDLD capable devices. The following interface types are supported:
  - Ethernet uplink
  - FCoE uplink
  - Ethernet uplink port channel member
  - FCoE uplink port channel member

## Creating a Link Profile

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > Policies > LAN Cloud**.
  - Step 3** Right-click the **Link Profile** node and choose **Create Link Profile**.
  - Step 4** In the **Create Link Profile** dialog box, specify the name and the UDLD link policy.
  - Step 5** Click **OK**.
- 

## Creating a UDLD Link Policy

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.

- Step 2** Expand **LAN > Policies > LAN Cloud**.
  - Step 3** Right-click the **UDLD Link Policy** node and choose **Create UDLD Link Policy**.
  - Step 4** In the **Create UDLD Link Policy** dialog box, specify the name, admin state, and mode.
  - Step 5** Click **OK**.
- 

## Modifying the UDLD System Settings

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > Policies > LAN Cloud**.
  - Step 3** On the **LAN** tab, expand **LAN > Policies > root**.
  - Step 4** Expand the **Link Protocol Policy** node and click **UDLD System Settings**.
  - Step 5** In the **Work** pane, click the **General** tab.
  - Step 6** In the **Properties** area, modify the fields as needed.
  - Step 7** Click **Save Changes**.
- 

## Assigning a Link Profile to a Port Channel Ethernet Interface

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
  - Step 2** Expand **LAN > LAN Cloud > Fabric > Port Channels**.
  - Step 3** Expand the port channel node and click the Eth Interface where you want to assign a link profile.
  - Step 4** In the **Work** pane, click the **General** tab.
  - Step 5** In the **Properties** area, choose the link profile that you want to assign.
  - Step 6** Click **Save Changes**.
- 

## Assigning a Link Profile to an Uplink Ethernet Interface

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** On the **LAN** tab, expand **LAN > LAN Cloud > Fabric > Uplink Eth Interface**.
- Step 3** Click the Eth Interface where you want to assign a link profile.

- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** In the **Properties** area, choose the link profile that you want to assign.
- Step 6** Click **Save Changes**.
- 

## Assigning a Link Profile to a Port Channel FCoE Interface

### Procedure

---

- Step 1** In the **Navigation** pane, click **SAN**.
- Step 2** On the **SAN** tab, expand **SAN > SAN Cloud > Fabric > FCoE Port Channels**.
- Step 3** Expand the FCoE port channel node and click the FCoE Interface where you want to assign a link profile.
- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** In the **Properties** area, choose the link profile that you want to assign.
- Step 6** Click **Save Changes**.
- 

## Assigning a Link Profile to an Uplink FCoE Interface

### Procedure

---

- Step 1** In the **Navigation** pane, click **SAN**.
- Step 2** On the **SAN** tab, expand **SAN > SAN Cloud > Fabric > Uplink FC Interfaces**.
- Step 3** Click the FCoE interface where you want to assign a link profile.
- Step 4** In the **Work** pane, click the **General** tab.
- Step 5** In the **Properties** area, choose the link profile that you want to assign.
- Step 6** Click **Save Changes**.
- 

# Configuring VMQ and VMMQ Connection Policies

## VMQ Connection Policy

Cisco UCS Manager enables you to configure VMQ connection policy for a vNIC. VMQ provides improved network performance to the entire management operating system. Configuring a VMQ vNIC connection policy involves the following:

- Create a VMQ connection policy
- Create a static vNIC in a service profile

- Apply the VMQ connection policy to the vNIC

If you want to configure the VMQ vNIC on a service profile for a server, at least one adapter in the server must support VMQ. Make sure the servers have at least one the following adapters installed:

- UCS VIC 1300 Series
- UCS VIC 1400 Series
- UCS VIC 14000 Series
- UCS-VIC-15000 Series

The following are the supported Operating Systems for VMQ:

- Windows 2012
- Windows 2012R2
- Windows 2016
- Windows 2019
- Windows 2022



---

**Note** The Cisco UCS VIC 1400, UCS VIC 14000, and UCS VIC 15000 Series adapters are not supported on Windows 2012 VMQ and Windows 2012 R2 VMQ

---

You can apply only any one of the vNIC connection policies on a service profile at any one time. Make sure to select one of the three options such as Dynamic, usNIC or VMQ connection policy for the vNIC. When a VMQ vNIC is configured on service profile, make sure you have the following settings:

- Select SRIOV in the BIOS policy.
- Select Windows in the Adapter policy.

## Creating a VMQ Connection Policy

Before you create a VMQ connection policy, consider the following:

- VMQ Tuning on the Windows Server—When an adapter is placed on a virtual switch, running the **Get-NetAdapterVmq** cmdlet displays **True** for VMQ.
- Virtual machine level—By default, VMQ is enabled on all newly deployed VMs. VMQ can be enabled or disabled on existing VMs.
- Microsoft SCVMM—VMQ must be enabled on the port profile. If not, you will not be able to successfully create the virtual switch in SCVMM.
- Microsoft Azure Stack extends the existing VMQ support for host-side virtual switch ports called vPorts to Virtual Machine Multi Queues (VMMQ). You can configure VMMQ by enabling multi queues in the VMQ Connection Policy.

For Cisco UCS VIC 1400 Series or above adapters to support VMQ functionality, the vNIC should be configured in the VMQ connection policy with the multi-queue option enabled.



**Note** Microsoft stand-alone NIC Teaming and Virtual Machine Queue (VMQ) support for adapters:

Microsoft stand-alone NIC teaming works only with VMQ. For Cisco UCS VIC 1400 , VIC 14000 , and VIC 15000 Series adapters, the supported VMQ is VMMQ with single queue. To support VMMQ with single queue, you must create a new VMMQ adapter policy containing a 1 TQ, 1 RQ and 2 CQ combination, then assign it to the VMQ Connection Policy.

**Procedure**

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** In the **LAN** tab, expand **Policies**.
- Step 3** Expand the nodes for the organization where you want to create the policy. If the system does not include multitenancy, expand the root node.
- Step 4** Right-click the **VMQ Connection Policies** node and select **Create VMQ Connection Policy**.
- Step 5** In the **Create VMQ Connection Policy** dialog box, complete the following fields:

Name	Description
Name field	The VMQ connection policy name.
Description field	The description of the VMQ connection policy.



Name	Description
<b>Multi Queue</b> radio button	<p>Whether Virtual Machine Multi-Queue (VMMQ) is enabled in the policy. With VMMQ, multiple queues are allocated to a single VM.</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b>—Multi Queue is disabled and you can configure a VMQ policy.</li> </ul> <p>When Multi Queue is disabled, the following fields appear:</p> <ul style="list-style-type: none"> <li>• <b>Number of VMQs</b></li> <li>• <b>Number of Interrupts</b></li> </ul> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—Multi Queue is enabled and the vNIC is placed into VMMQ mode. You can specify a VMMQ Adapter Policy.</li> </ul> <p>When Multi Queue is enabled, the following fields appear:</p> <ul style="list-style-type: none"> <li>• <b>Number of Sub vNICs</b></li> <li>• <b>VMMQ Adapter Policy</b></li> </ul> <p><b>Note</b> For Cisco UCS VIC 1400 Series and above adapters, enable the Multi-Queue option to support both VMQ and VMMQ functionality.</p> <p>For more information on creating a VMQ Connection Policy with Multi-Queue enabled, see <a href="#">Creating a VMMQ Connection Policy, on page 210</a>.</p>
<b>Number of VMQs</b> field	<p>The number of VMQs per adapter must be one more than the maximum number of VM NICs. The default value is 64.</p>
<b>Number of Interrupts</b> field	<p>The number of CPU threads or logical processors available in the server. The default value is 64.</p> <p><b>Note</b> The minimum interrupt to be used is “2 x number of CPU core + 4”.</p>

**Step 6** Click **OK**.

## Assigning VMQ Setting to a vNIC

### Procedure

- 
- Step 1** In the **Navigation** pane, click **Servers**.
- Step 2** On the **Servers** tab, expand **Servers > Service Profile > root** .
- Step 3** Expand the service profile that you want to configure for VMQ and then click **vNICs**.
- Step 4** In the **Work Pane**, click the **Network** tab.
- Step 5** In the **vNICs** area, choose a vNIC and double-click the **Actual Order** column.  
**Modify vNIC** window is displayed.
- Step 6** In the **Adapter Performance Profile** area of the Modify vNIC dialog box, choose **Windows** from the Adapter Policy drop-down list.
- Step 7** In the **Connection Policies** area, click the **VMQ** radio button.
- Step 8** Select the **VMQ Connection Policy** from the VMQ Connection Policy drop-down list.
- Step 9** Click **OK**.
- Step 10** Click **Save Changes**.
- 

## Enabling VMQ and NVGRE Offloading on the same vNIC

Perform the tasks in the table below to enable VMQ and NVGRE offloading on the same vNIC.



- Note** VMQ is not supported along with VXLAN on the same vNIC except for Cisco UCS VIC 1400 Series adapters and above. Cisco UCS VIC 1400, VIC 14000, and VIC 15000 Series adapters support VMQ and VMMQ along with VXLAN or NVGRE on the same vNIC.

Task	Description	See
Enable normal NVGRE offloading	Perform this task by setting the corresponding flags in the adapter profile which is associated with the given vNIC.  <b>Note</b> The Transmit checksum offload and TSO must be enabled for the NVGRE offloading to be effective.	<a href="#">Configuring an Ethernet Adapter Policy to Enable Stateless Offloads with NVGRE, on page 181</a>

Task	Description	See
Enable VMQ	Perform this task by setting the appropriate connection policy when you add a vNIC to the service profile.	<a href="#">Creating a VMQ Connection Policy, on page 205</a> <a href="#">Assigning VMQ Setting to a vNIC, on page 208</a>

## VMMQ Connection Policy

Cisco UCS Manager introduces support for Virtual Machine Multi Queues (VMMQ). VMMQ allows you to configure multiple I/O queues to a single VM and, thus, distribute traffic across multiple CPU cores in a VM. VMMQ is supported on UCS VIC 1400 Series and above adapters with Windows 2016 and later versions. VMMQ with RDMA/RDMA Over Converged Ethernet (RoCEv2) mode 2 is supported from Windows 2019 and later.

The VMQ Connection Policy has an option called **Multi Queue**. When **Multi Queue** is enabled, the vNIC is placed into VMMQ mode. In this mode, you can configure sub vNICs and specify a VMMQ Adapter policy. The policy includes the aggregate queue counts for VMMQ and determines how the connectivity between VMs and Azure Stack vPorts is configured.

Enabling VMMQ on a vNIC involves the following two configurations:

- Attach an adapter-policy for the vNIC. The recommended adapter policy for VMMQ is **Win-HPN**, available in UCS Manager.
- Include a VMQ connection policy on the vNIC. The VMQ connection policy defines Tx/Rx queues for the vPorts. For the VMQ connection policy, Cisco recommends using a pre-defined multi-queue (MQ) policy, which is available in UCS Manager. Pre-defined policies are available in UCSM: **MQ** for regular VMMQ. The pre-defined policies are good for 64 sub vNICs or vPorts in pooled mode.




---

**Note** To use RDMA, you must enable RDMA in the options under the vNIC adapter policy. For RDMA, refer to the *Cisco UCS Manager Configuration Guide for RDMA over Converged Ethernet (RoCE) v2*.

---

There are two different ways to define the total number of queues available for vPorts. In the pooled mode, the resource counts in the VMMQ adapter policy are the totals available across vPorts. In non-pooled mode, the total available is the selected resource count from the VMMQ adapter policy \* subvnic count. In VMMQ mode, these are the default queue counts:

Queue Resource	Pooled Mode	Non Pooled Mode
Transmit Queue	64	1
Receive Queue	512	8
Completion Queue	576	9

[Creating a VMMQ Connection Policy, on page 210](#) provides detailed information about creating a VMMQ connection policy.

## VMMQ Guidelines

- Each VMMQ vPort may use one Transmit Queue and multiple Receive Queues. When VMMQ is enabled, a pool of queues is created, and the host driver assigns queues to vPorts. Different vPorts may be assigned different numbers of queues based on the number of cores that the vPort will be servicing.
- VXLAN and NVGRE offloads are supported with VMMQ functionality. The option is enabled in the vNIC adapter policy and not in the sub vNIC adapter policy.
- RSS is supported on VMMQ Receive Queues, including inner packet of overlay packets.
- VMMQ vNICs support a rate limit set by the host, not from Cisco UCS Manager. COS will not be adjustable per vPort from Cisco UCS Manager.
- vNICs with the VMQ feature, specified through the VMQ Connection Policy with **Multi Queue** disabled, are not allowed on the same adapter as Multi Queue-enabled vNICs.
- FCoE and VMMQ vNICs can coexist on the same server.
- usNIC and Multi-Queue VMQ can not be enabled on the same VIC.
- Modifying the VMMQ adapter policy through the VMQ connection policy results in exceeding the maximum Completion Queue (CQ) value. Each VIC 1400 Series or above adapter supports a maximum of 2000 hardware CQ resources. If this number is exceeded, the `Out of CQ Resources` error appears in the Cisco UCS Manager GUI, and vNIC creation fails with a configuration failure at service profile association.
- Use the following PS command to enable VMMQ on the vport.

```
Set-VMNetworkAdapter -Name (vmNIC Name) -VMName (VM_NAME) -VmmqEnabled $true
-VmmqQueuePairs (Queue_Pair_Count) -VrssEnabled $true
```

## Creating a VMMQ Connection Policy

A VMMQ connection policy can be created using VMQ policy with Multi Queue enabled.

### Procedure

- 
- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** In the **LAN** tab, expand **Policies**.
- Step 3** Expand the nodes for the organization where you want to create the policy. If the system does not include multitenancy, expand the root node.
- Step 4** Right-click the **VMQ Connection Policies** node and select **Create VMQ Connection Policy**.
- Step 5** In the **Create VMQ Connection Policy** dialog box, complete the following fields:

Name	Description
Name field	The VMQ connection policy name.
Description field	The description of the VMQ connection policy.

Name	Description
<b>Multi Queue</b> radio button	<p>When Virtual Machine Multi-Queue (VMMQ) is enabled in the policy, multiple queues are allocated to a single vport.</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—Multi Queue is enabled and the vNIC is placed into VMMQ mode. You can specify a VMMQ Adapter Policy.</li> </ul> <p>When Multi Queue is enabled, the following fields appear:</p> <ul style="list-style-type: none"> <li>• <b>Number of Sub vNICs</b></li> <li>• <b>VMMQ Adapter Policy</b></li> </ul> <p><b>Note</b> For Cisco UCS VIC 1400, VIC 14000, and VIC 15000 series adapters, enable the Multi-Queue option to support both VMQ and VMMQ functionality.</p>
<b>Number of Sub vNICs</b> field	<p>Number of sub vNICs that are available for Multi Queue. The default value is 64.</p> <p><b>Note</b> The TQ and RQ resource value of VMMQ adapter policy should be greater than or equal to the configured number of sub vNICs.</p>
<b>VMMQ Adapter Policy</b> drop-down list	<p>Name of the VMMQ adapter policy. Cisco recommends using the default MQ Adapter Policy.</p> <p>The default MQ policy includes the aggregate queue counts for VMMQ.</p> <p><b>Note</b> You can also specify a custom policy designed for a specific configuration,</p>

LAN / Policies / root / VMQ Connection Policies

VMQ Connection Policies

Advanced Filter Export Print

Name
win-vmmq1

### Properties for: win-vmmq1

General Events

Actions	Properties
Delete	Name : <b>win-vmmq1</b>
Show Policy Usage	Description : <input type="text"/>
	Multi Queue : <input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
	Number of Sub vNICs : <input type="text" value="64"/>
	VMMQ Adapter Policy : <input type="text" value="MQ"/>

**Step 6** Click **OK**.

**Step 7** Go to the new policy under **VMQ Connection Policies**

Servers / Policies / root / Adapter Policies / Eth Adapter Policy MQ

General Events

**Actions**

Delete

Show Policy Usage

Use Global

**Properties**

Name : MQ

Description : Recommended adapter settings for VM Multi Queue

Owner : Local

Resources

Pooled :  Disabled  Enabled

Transmit Queues : 64 [1-1000]

Ring Size : 256 [64-4096]

Receive Queues : 512 [1-1000]

Ring Size : 512 [64-4096]

Completion Queues : 576 [1-2000]

Interrupts : 256 [1-1024]

Options

Transmit Checksum Offload :  Disabled  Enabled

Receive Checksum Offload :  Disabled  Enabled

TCP Segmentation Offload :  Disabled  Enabled

TCP Large Receive Offload :  Disabled  Enabled

Receive Side Scaling (RSS) :  Disabled  Enabled

Accelerated Receive Flow Steering :  Disabled  Enabled

Network Virtualization using Generic Routing Encapsulation :  Disabled  Enabled

- Step 8** Set the number of **Transmit Queues** to 64 and **Receive Queues** to 8 times the transmit queues (512). The **Completion Queues** is the total of these two numbers (576).
- Step 9** Set the **Interrupt** count to 256.
- Step 10** Enable **Pooled** resources.
- Step 11** Enable **Receive Side Scaling (RSS)**.
- Step 12** Click **OK**.

### What to do next

Assign a QoS policy.

## Creating a QoS Policy for VMMQ

### Procedure

---

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** In the **LAN** tab, expand **Policies**.
- Step 3** Expand the nodes for the organization where you want to create the pool. If the system does not include multitenancy, expand the **root** node.
- Step 4** Right-click the **QoS Policy** dialog box and enter the name of the policy in the **Name** field. VMMQ uses **TrustedCos** as the policy. Assign this policy to the vNIC QoS.
- Step 5** Select the desired priority in the **Priority** drop-down list.
- Step 6** In the **Host Control** field, click the **Full** radio button.

- Step 7** Click **OK**.
- 

### What to do next

Assign the VMMQ Setting to a vNIC.

## Assigning a VMMQ Setting to a vNIC

### Procedure

---

- Step 1** In the **Navigation** pane, click **Servers**.



- Step 2** In the **Servers** tab, expand **Servers > Service Profiles > root**.
- Step 3** Expand the service profile that you want to configure VMMQ and click **vNICs**.
- Step 4** In the **Work Pane**, click the **Network** tab.
- Step 5** In the **vNICs** area, choose the desired vNIC and double-click the **Actual Order** column.  
**Modify vNIC** window is displayed.
- Step 6** In the **Adapter Performance Profile** area of the **Modify vNIC** dialog box, choose **WIN-HPN** from the **Adapter Policy** drop-down list.
- Step 7** From the **QoS Policy** drop-down list, select the created QoS policy for VMMQ.
- Step 8** In the **Connection Policies** area, click the **VMQ** radio button.
- Step 9** Choose the created VMQ connection policy with Multi-Queue enabled from the **VMQ Connection Policy** drop-down list.
- Step 10** Click **OK**.

The screenshot shows the 'Modify vNIC' dialog box with the following configuration:

- VLANs:** A list of VLANs with checkboxes and IDs. 'vlan-602' and 'vlan-603' are visible.
- Create VLAN:** A section with a 'CDN Source' dropdown set to 'vNIC Name' and an 'MTU' field set to '1500'.
- Warning:** A message: 'Make sure that the MTU has the same value in the QoS System Class corresponding to the Egress priority of the selected QoS Policy.'
- Pin Group:** A dropdown menu set to '<not set>' with a 'Create LAN Pin Group' button.
- Operational Parameters:** A section containing:
  - Adapter Performance Profile:** 'Adapter Policy' set to 'Win-HPN', 'QoS Policy' set to 'best-Effort', and 'Network Control Policy' set to '<not set>'. Each has a 'Create' button.
  - Connection Policies:** Radio buttons for 'Dynamic vNIC', 'usNIC', and 'VMQ' (selected). Below is 'VMQ Connection Policy' set to 'VMMQ-RDMA' with a 'Create VMQ Connection Policy' button.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right.

- Step 11** Click **Save Changes**.

# NetQueue

## Information About NetQueue

NetQueue improves traffic performance by providing a network adapter with multiple receive queues. These queues allow the data interrupt processing that is associated with individual virtual machines to be grouped.



**Note** NetQueue is supported on servers running VMware ESXi operating systems.

## Configuring NetQueue

### Procedure

- Step 1** In the **Navigation** pane, click **LAN**.
- Step 2** In the **LAN** tab, expand **Policies**.
- Step 3** Expand the nodes for the organization where you want to create the policy. If the system does not include multitenancy, expand the root node.
- Step 4** Right-click the **VMQ Connection Policies** node and select **Create VMQ Connection Policy**.
- Step 5** In the **Create VMQ Connection Policy** dialog box, complete the following fields:

Name	Description
Name field	The NetQueue policy name.
Description field	The description of the NetQueue.
Multi Queue radio button	Select disabled for NetQueue.
Number of VMQs field	Enter a number between 1 to 64 to specify the number of NetQueues for this connection policy. The driver supports up to 16 NetQueues per port for standard frame configurations. <p><b>Note</b> VMware recommends that you use up to eight NetQueues per port for standard frame configurations.</p>
Number of Interrupts field	The number of interrupts count of each VNIC. The value should be set to 2 x number of VMQs + 2.

- Step 7** Click **OK**.
- Step 8** In the **Navigation** pane, click **Servers**.
- Step 9** On the **Servers** tab, expand **Servers > Service Profiles > root**.

- Step 10** Expand the service profile that you want to configure NetQueue and click vNICs.
- Step 11** In the **Work** pane, click the **Network** tab.
- Step 12** In the vNICs area, choose a vNIC and double-click the **Actual Order** column.  
**Modify vNIC** window is displayed.
- Step 13** In the **Adapter Performance Profile** area of the Modify vNIC dialog box, choose **VMWare** from the Adapter Policy drop-down list.
- Step 14** In the **Connection Policies** area, click the **VMQ** radio button.
- Step 15** Choose the created VMQ connection policy for NetQueue from the VMQ Connection Policy drop-down list.
- Step 16** Click **OK**.
- Step 17** Click **Save Changes**.

**Note** NetQueue should be enabled only on MSIX systems.  
You should disable NetQueue on 1GB NICs.

---

