



System Event Log

- [System Event Log, on page 1](#)
- [Viewing the System Event Log for an Individual Server, on page 1](#)
- [Viewing the System Event Log for the Servers in a Chassis, on page 2](#)
- [Configuring the SEL Policy, on page 2](#)
- [Copying One or More Entries in the System Event Log, on page 5](#)
- [Printing the System Event Log, on page 5](#)
- [Refreshing the System Event Log, on page 6](#)
- [Manually Backing Up the System Event Log, on page 6](#)
- [Manually Clearing the System Event Log, on page 6](#)

System Event Log

The System Event Log (SEL) resides on the CIMC in NVRAM. The SEL is used for troubleshooting system health. It records most server-related events, such as instances of over or under voltage, temperature events, fan events, and BIOS events. The types of events supported by SEL include BIOS events, memory unit events, processor events, and motherboard events.

The SEL logs are stored in the CIMC NVRAM, through a SEL log policy. It is best practice to periodically download and clear the SEL logs. The SEL file is approximately 40KB in size, and no further events can be recorded once it is full. It must be cleared before additional events can be recorded.

You can use the SEL policy to back up the SEL to a remote server, and optionally to clear the SEL after a backup operation occurs. Backup operations can be triggered based on specific actions, or they can be set to occur at regular intervals. You can also manually back up or clear the SEL.

The backup file is automatically generated. The filename format is *sel-SystemName-ChassisID-ServerID-ServerSerialNumber-Timestamp*.

For example, sel-UCS-A-ch01-serv01-QCII2522939-20091121160736.

Viewing the System Event Log for an Individual Server

SUMMARY STEPS

1. In the **Navigation** pane, click **Equipment**.

2. Expand **Equipment** > **Chassis** > *Chassis Number* > **Servers**.
3. Click the server for which you want to view the system event log.
4. In the **Work** pane, click the **SEL Logs** tab.

DETAILED STEPS

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Expand **Equipment** > **Chassis** > *Chassis Number* > **Servers**.
- Step 3** Click the server for which you want to view the system event log.
- Step 4** In the **Work** pane, click the **SEL Logs** tab.
- Cisco UCS Manager retrieves the system event log for the server and displays the list of events.
-

Viewing the System Event Log for the Servers in a Chassis

SUMMARY STEPS

1. In the **Navigation** pane, click **Equipment**.
2. On the **Equipment** tab, expand **Equipment** > **Chassis** > *Chassis_Name* .
3. In the **Work** pane, click the **SEL Logs** tab.
4. In the Server table, click the server for which you want to view the system event log.

DETAILED STEPS

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** On the **Equipment** tab, expand **Equipment** > **Chassis** > *Chassis_Name* .
- Step 3** In the **Work** pane, click the **SEL Logs** tab.
- Cisco UCS Manager retrieves the system event log for the server and displays the list of events.
- Step 4** In the Server table, click the server for which you want to view the system event log.
- Cisco UCS Manager retrieves the system event log for the server and displays the list of events.
-

Configuring the SEL Policy

SUMMARY STEPS

1. In the **Navigation** pane, click **Equipment**.
2. Click the **Equipment** node.
3. In the **Work** pane, click the **Policies** tab.

4. Click the **SEL Policy** subtab.
5. (Optional) In the **General** area, type a description of the policy in the **Description** field.
6. In the **Backup Configuration** area, complete the following fields:
7. Click **Save Changes**.

DETAILED STEPS

- Step 1** In the **Navigation** pane, click **Equipment**.
- Step 2** Click the **Equipment** node.
- Step 3** In the **Work** pane, click the **Policies** tab.
- Step 4** Click the **SEL Policy** subtab.
- Step 5** (Optional) In the **General** area, type a description of the policy in the **Description** field.
The other fields in this area are read-only.
- Step 6** In the **Backup Configuration** area, complete the following fields:

Name	Description
Protocol field	<p>The protocol to use when communicating with the remote server. This can be one of the following:</p> <ul style="list-style-type: none"> • FTP • TFTP • SCP • SFTP • USB A—The USB drive inserted into fabric interconnect A. This option is only available for certain system configurations. • USB B—The USB drive inserted into fabric interconnect B. This option is only available for certain system configurations.
Hostname field	<p>The hostname or IP address of the server on which the backup configuration resides. If you use a hostname rather than an IPv4 or IPv6 address, you must configure a DNS server. If the Cisco UCS domain is not registered with Cisco UCS Central or DNS management is set to local, configure a DNS server in Cisco UCS Manager. If the Cisco UCS domain is registered with Cisco UCS Central and DNS management is set to global, configure a DNS server in Cisco UCS Central.</p> <p>Note The name of the backup file is generated by Cisco UCS. The name is in the following format:</p> <pre>sel-system-name-chchassis-id- servblade-id-blade-serial -timestamp</pre>

Name	Description
Remote Path field	<p>The absolute path to the file on the remote server, if required.</p> <p>If you use SCP, the absolute path is always required. If you use any other protocol, you may not need to specify a remote path, provided that the file resides in the default download folder. For details about how your file server is configured, contact your system administrator.</p>
Backup Interval drop-down list	<p>The time to wait between automatic backups. This can be one of the following:</p> <ul style="list-style-type: none"> • Never—Do not perform any automatic SEL data backups. • 1 Hour • 2 Hours • 4 Hours • 8 Hours • 24 Hours • 1 Week • 1 Month <p>Note If you want the system to create automatic backups, make sure that you check the Timer check box in the Action option box.</p>
Format field	<p>The format to use for the backup file. This can be one of the following:</p> <ul style="list-style-type: none"> • Ascii • Binary
Clear on Backup check box	If checked, Cisco UCS clears all system event logs after the backup is completed.
User field	The username the system should use to log into the remote server. This field does not apply if the protocol is TFTP.
Password field	The password for the remote server username. This field does not apply if the protocol is TFTP.
Action check box	<p>For each box that is checked, the system creates an SEL backup when that event is encountered:</p> <ul style="list-style-type: none"> • Log Full—The log reaches the maximum size allowed. • On Change of Association—The association between a server and its service profile changes. • On Clear—The user manually clears a system event log. • Timer—The time interval specified in the Backup Interval drop-down list is reached.
Reset Configuration button	Click this button to reset the background configuration information.

Step 7 Click **Save Changes**.

Copying One or More Entries in the System Event Log

This task assumes that you are viewing the system event log for a server from the **SEL Logs** tab for a server or a chassis.

SUMMARY STEPS

1. After the Cisco UCS Manager GUI displays the system event log in the **SEL Logs** tab, use your mouse to highlight the entry or entries that you want to copy from the system event log.
2. Click **Copy** to copy the highlighted text to the clipboard.
3. Paste the highlighted text into a text editor or other document.

DETAILED STEPS

- Step 1** After the Cisco UCS Manager GUI displays the system event log in the **SEL Logs** tab, use your mouse to highlight the entry or entries that you want to copy from the system event log.
- Step 2** Click **Copy** to copy the highlighted text to the clipboard.
- Step 3** Paste the highlighted text into a text editor or other document.
-

Printing the System Event Log

This task assumes that you are viewing the system event log for a server from the **SEL Logs** tab for a server or a chassis.

SUMMARY STEPS

1. After the Cisco UCS Manager GUI displays the system event log in the **SEL Logs** tab, click **Print**.
2. In the **Print** dialog box, do the following:

DETAILED STEPS

- Step 1** After the Cisco UCS Manager GUI displays the system event log in the **SEL Logs** tab, click **Print**.
- Step 2** In the **Print** dialog box, do the following:
- a) (Optional) Modify the default printer, or any other fields or options.
 - b) Click **Print**.
-

Refreshing the System Event Log

This task assumes that you are viewing the system event log for a server from the **SEL Logs** tab for a server or a chassis.

SUMMARY STEPS

1. After the Cisco UCS Manager GUI displays the system event log in the **SEL Logs** tab, click **Refresh**.

DETAILED STEPS

After the Cisco UCS Manager GUI displays the system event log in the **SEL Logs** tab, click **Refresh**.

Cisco UCS Manager retrieves the system event log for the server and displays the updated list of events.

Manually Backing Up the System Event Log

This task assumes that you are viewing the system event log for a server from the **SEL Logs** tab for a server or a chassis.

Before you begin

Configure the system event log policy. The manual backup operation uses the remote destination configured in the system event log policy.

SUMMARY STEPS

1. After Cisco UCS Manager GUI displays the system event log in the **SEL Logs** tab, click **Backup**.

DETAILED STEPS

After Cisco UCS Manager GUI displays the system event log in the **SEL Logs** tab, click **Backup**.

Cisco UCS Manager backs up the system event log to the location specified in the SEL policy.

Manually Clearing the System Event Log

This task assumes that you are viewing the system event log for a server from the **SEL Logs** tab for a server or a chassis.

SUMMARY STEPS

1. After Cisco UCS Manager GUI displays the system event log in the **SEL Logs** tab, click **Clear**.

DETAILED STEPS

After Cisco UCS Manager GUI displays the system event log in the **SEL Logs** tab, click **Clear**.

Note This action triggers an automatic backup if **Clear** is enabled in the SEL policy **Action** option box.
