



Preface

- [Organization, page iii](#)
- [Related Procedures, page iv](#)
- [Conventions, page iv](#)
- [Obtaining Documentation and Submitting a Service Request, page v](#)

Organization

Title	Description
Live WMV Stream from Cisco TelePresence Content Server to Cisco Show and Share	Describes the configuration required in Cisco TCS and Cisco Show and Share to view a Live event stream from Cisco TCS to view on Cisco Show and Share.
Live WMV Stream from Cisco TelePresence Content Server to Cisco MXE 3500 to Cisco Digital Media Player	Describes the configuration required in the Cisco TCS, Cisco MXE 3500 and Cisco DMM to enable a live stream from Cisco TCS for sharing on a Cisco DMP.
Video On Demand from Cisco TelePresence Content Server to Cisco Cisco Show and Share	Describes the configuration required in Cisco TCS to share a VoD on Cisco Show and Share that was captured on Cisco TCS.
Transcode and Add Pulse Video Analytics to Video Content on Cisco Show and Share	Describes the configuration required in the Cisco MXE 3500 and Cisco Show and Share to enable transcoding and Pulse video analytics for videos uploaded to Cisco Show and Share.

Related Procedures

To configure a Wowza or Quicktime media server and for other product integration procedures, see these additional resources.

Cisco TCS:

http://www.cisco.com/en/US/products/ps11347/products_installation_and_configuration_guides_list.html

http://www.cisco.com/en/US/products/ps11347/tsd_products_support_series_home.html

Cisco Show and Share

http://www.cisco.com/en/US/products/ps6682/products_installation_and_configuration_guides_list.html

http://www.cisco.com/en/US/products/ps6682/tsd_products_support_series_home.html

Cisco MXE 3500:

http://www.cisco.com/en/US/products/ps12130/products_installation_and_configuration_guides_list.html

http://www.cisco.com/en/US/products/ps12130/tsd_products_support_series_home.html

Conventions

Convention	Indication
bold font	Commands and keywords and user-entered text appear in bold font .
<i>italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
[]	Elements in square brackets are optional.
{ x y z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<code>courier font</code>	Terminal sessions and information the system displays appear in <code>courier font</code> .
< >	Nonprinting characters such as passwords are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.



Note

Means *reader take note*.

**Tip**

Means *the following information will help you solve a problem.*

**Caution**

Means *reader be careful.* In this situation, you might perform an action that could result in equipment damage or loss of data.

**Timesaver**

Means *the described action saves time.* You can save time by performing the action described in the paragraph.

**Warning**

Means *reader be warned.* In this situation, you might perform an action that could result in bodily injury.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.

