



Preface

Revised: August 10, 2011, OL-25015-01

Introduction

This document is the *Operations and Maintenance Guide* for the Cisco BTS 10200 Softswitch, Release 6.0.3.

Organization

This guide has the following chapters:

- [Chapter 1, “Starting and Shutting Down the BTS”](#)—Tells you how to start up and shut down the BTS
- [Chapter 2, “Managing BTS Users and Commands Using EMS”](#)—Describes operator interfaces to the BTS and how to manage access and users
- [Chapter 3, “Monitoring and Backing Up the BTS”](#)—Includes overall BTS maintenance strategies
- [Chapter 4, “Operating the BTS”](#)—Tells you how to operate the BTS
- [Chapter 5, “Managing External Resources”](#)—Tells you how to manage external resources provisioned on the BTS using administrative (ADM) commands
- [Chapter 6, “Using BTS Measurements”](#)—Describes BTS traffic measurements and tells you how to use them
- [Chapter 7, “Using the BTS SNMP Agent”](#)—Explains how to use the Simple Network Management Protocol (SNMP) agent
- [Appendix A, “Feature Tones”](#)—Explains special tones the BTS supports for subscriber and operator features
- [Appendix B, “FIM/XML”](#)—Explains the Feature Interaction Module/Extensible Markup Language (FIM/XML) feature.

Document Change History

This table provides the revision history for the *Cisco BTS 10200 Softswitch Operations and Maintenance Guide, Release 6.0.3*.

Table 1 **Revision History**

Version Number	Issue Date	Status	Reason for Change
OL-25015-01	August 10, 2011	Initial	Initial document for Release 6.0.3.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.