



Troubleshooting

- [General Troubleshooting Information, on page 1](#)
- [Startup Problems, on page 2](#)
- [Phone Reset Problems, on page 6](#)
- [Phone Cannot Connect to LAN, on page 8](#)
- [Cisco IP Phone Security Problems, on page 8](#)
- [Audio Problems, on page 11](#)
- [General Telephone Call Problems, on page 11](#)
- [Troubleshooting Procedures, on page 12](#)
- [Control Debug Information from Cisco Unified Communications Manager, on page 16](#)
- [Additional Troubleshooting Information, on page 17](#)

General Troubleshooting Information

The following table provides general troubleshooting information for the Cisco IP Phone.

Table 1: Cisco IP Phone Troubleshooting

Summary	Explanation
Prolonged broadcast storms cause IP phones to reset, or be unable to make or answer a call	A prolonged Layer 2 broadcast storm (lasting several minutes) on the v may cause IP phones to reset, lose an active call, or be unable to initiate a call. Phones may not come up until a broadcast storm ends.
Moving a network connection from the phone to a workstation	<p>If you power your phone through the network connection, you must be c decide to unplug the network connection of the phone and plug the cable i computer.</p> <p>Caution The network card in the computer cannot receive power th network connection; if power comes through the connection, card can be destroyed. To protect a network card, wait 10 s longer after unplugging the cable from the phone before plu a computer. This delay gives the switch enough time to rec there is no longer a phone on the line and to stop providing the cable.</p>

Summary	Explanation
Changing the telephone configuration	<p>By default, the administrator password settings are locked to prevent users making changes that could impact their network connectivity. You must un administrator password settings before you can configure them.</p> <p>See Apply a Phone Password for details.</p> <p>Note If the administrator password is not set in common phone pro the user can modify the network settings.</p>
Codec mismatch between the phone and another device	<p>The RxType and the TxType statistics show the codec that is used for a conversation between this Cisco IP Phone and the other device. The values of these statistics should match. If they do not, verify that the other device can handle the codec conversation or that a transcoder is in place to handle the service. See Display the Call Statistics Window for details.</p>
Sound sample mismatch between the phone and another device	<p>The RxSize and the TxSize statistics show the size of the voice packets that are used in a conversation between this Cisco IP Phone and the other device. The values of these statistics should match. See Display the Call Statistics Window for details.</p>
Loopback condition	<p>A loopback condition can occur when the following conditions are met:</p> <ul style="list-style-type: none"> • The SW Port Configuration option on the phone is set to 10 Half (10-Bit duplex). • The phone receives power from an external power supply. • The phone is powered down (the power supply is disconnected). <p>In this case, the switch port on the phone can become disabled and the following message appears in the switch console log:</p> <pre>HALF_DUX_COLLISION_EXCEED_THRESHOLD</pre> <p>To resolve this problem, reenable the port from the switch.</p>

Startup Problems

After you install a phone into your network and add it to Cisco Unified Communications Manager, the phone should start up as described in the related topic below.

If the phone does not start up properly, see the following sections for troubleshooting information.

Related Topics

[Verify the Phone Startup](#)

Cisco IP Phone Does Not Go Through the Normal Startup Process

Problem

When you connect a Cisco IP Phone to the network port, the phone does not go through the normal startup process as described in the related topic and the phone screen does not display information.

Cause

If the phone does not go through the startup process, the cause may be faulty cables, bad connections, network outages, lack of power, or the phone may not be functional.

Solution

To determine whether the phone is functional, use the following suggestions to eliminate other potential problems.

- Verify that the network port is functional:
 - Exchange the Ethernet cables with cables that you know are functional.
 - Disconnect a functioning Cisco IP Phone from another port and connect it to this network port to verify that the port is active.
 - Connect the Cisco IP Phone that does not start up to a different network port that is known to be good.
 - Connect the Cisco IP Phone that does not start up directly to the port on the switch, eliminating the patch panel connection in the office.
- Verify that the phone is receiving power:
 - If you are using external power, verify that the electrical outlet is functional.
 - If you are using in-line power, use the external power supply instead.
 - If you are using the external power supply, switch with a unit that you know to be functional.
- If the phone still does not start up properly, power up the phone from the backup software image.
- If the phone still does not start up properly, perform a factory reset of the phone.
- After you attempt these solutions, if the phone screen on the Cisco IP Phone does not display any characters after at least five minutes, contact a Cisco technical support representative for additional assistance.

Related Topics

[Verify the Phone Startup](#)

Cisco IP Phone Does Not Register with Cisco Unified Communications Manager

If the phone proceeds past the first stage of the startup process (LED buttons flashing on and off) but continues to cycle through the messages that displays on the phone screen, the phone is not starting up properly. The phone cannot successfully start up unless it connects to the Ethernet network and it registers with a Cisco Unified Communications Manager server.

In addition, problems with security may prevent the phone from starting up properly. See [Troubleshooting Procedures, on page 12](#) for more information.

Phone Displays Error Messages

Problem

Status messages display errors during startup.

Solution

While the phone cycles through the startup process, you can access status messages that might provide you with information about the cause of a problem. See the “Display Status Messages Window” section for instructions about accessing status messages and for a list of potential errors, their explanations, and their solutions.

Related Topics

[Display the Status Messages Window](#)

Phone Cannot Connect to TFTP Server or to Cisco Unified Communications Manager

Problem

If the network is down between the phone and either the TFTP server or Cisco Unified Communications Manager, the phone cannot start up properly.

Solution

Ensure that the network is currently running.

Phone Cannot Connect to TFTP Server

Problem

The TFTP server settings may not be correct.

Solution

Check the TFTP settings.

Related Topics

[Check TFTP Settings](#), on page 13

Phone Cannot Connect to Server

Problem

The IP addressing and routing fields may not be configured correctly.

Solution

You should verify the IP addressing and routing settings on the phone. If you are using DHCP, the DHCP server should provide these values. If you have assigned a static IP address to the phone, you must enter these values manually.

Related Topics

[Check DHCP Settings](#), on page 14

Phone Cannot Connect Using DNS

Problem

The DNS settings may be incorrect.

Solution

If you use DNS to access the TFTP server or Cisco Unified Communications Manager, you must ensure that you specify a DNS server.

Related Topics

[Verify DNS Settings](#), on page 15

Cisco Unified Communications Manager and TFTP Services Are Not Running

Problem

If the Cisco Unified Communications Manager or TFTP services are not running, phones may not be able to start up properly. In such a situation, it is likely that you are experiencing a systemwide failure, and other phones and devices are unable to start up properly.

Solution

If the Cisco Unified Communications Manager service is not running, all devices on the network that rely on it to make phone calls are affected. If the TFTP service is not running, many devices cannot start up successfully. For more information, see [Start Service](#), on page 15.

Configuration File Corruption

Problem

If you continue to have problems with a particular phone that other suggestions in this chapter do not resolve, the configuration file may be corrupted.

Solution

Create a new phone configuration file.

Related Topics

[Create a New Phone Configuration File](#), on page 14

Cisco Unified Communications Manager Phone Registration

Problem

The phone is not registered with the Cisco Unified Communications Manager

Solution

A Cisco IP Phone can register with a Cisco Unified Communications Manager server only if the phone is added to the server or if autoregistration is enabled. Review the information and procedures in [Phone Addition Methods](#) to ensure that the phone is added to the Cisco Unified Communications Manager database.

To verify that the phone is in the Cisco Unified Communications Manager database, choose **Device > Phone** from Cisco Unified Communications Manager Administration. Click **Find** to search for the phone based on the MAC Address. For information about determining a MAC address, see [Determine the Phone MAC Address](#).

If the phone is already in the Cisco Unified Communications Manager database, the configuration file may be damaged. See [Configuration File Corruption, on page 5](#) for assistance.

Cisco IP Phone Cannot Obtain IP Address

Problem

If a phone cannot obtain an IP address when it starts up, the phone may not be on the same network or VLAN as the DHCP server, or the switch port to which the phone connects may be disabled.

Solution

Ensure that the network or VLAN to which the phone connects has access to the DHCP server, and ensure that the switch port is enabled.

Phone Reset Problems

If users report that their phones are resetting during calls or while the phones are idle, you should investigate the cause. If the network connection and Cisco Unified Communications Manager connection are stable, a phone should not reset.

Typically, a phone resets if it has problems in connecting to the network or to Cisco Unified Communications Manager.

Phone Resets Due to Intermittent Network Outages

Problem

Your network may be experiencing intermittent outages.

Solution

Intermittent network outages affect data and voice traffic differently. Your network might be experiencing intermittent outages without detection. If so, data traffic can resend lost packets and verify that packets are received and transmitted. However, voice traffic cannot recapture lost packets. Rather than retransmitting a lost network connection, the phone resets and attempts to reconnect to the network. Contact the system administrator for information on known problems in the voice network.

Phone Resets Due to DHCP Setting Errors

Problem

The DHCP settings may be incorrect.

Solution

Verify that you have properly configured the phone to use DHCP. Verify that the DHCP server is set up properly. Verify the DHCP lease duration. We recommend that you set the lease duration to 8 days.

Related Topics

[Check DHCP Settings](#), on page 14

Phone Resets Due to Incorrect Static IP Address

Problem

The static IP address assigned to the phone may be incorrect.

Solution

If the phone is assigned a static IP address, verify that you have entered the correct settings.

Phone Resets During Heavy Network Usage

Problem

If the phone appears to reset during heavy network usage, it is likely that you do not have a voice VLAN configured.

Solution

Isolating the phones on a separate auxiliary VLAN increases the quality of the voice traffic.

Phone Resets Due to Intentional Reset

Problem

If you are not the only administrator with access to Cisco Unified Communications Manager, you should verify that no one else has intentionally reset the phones.

Solution

You can check if a Cisco IP Phone received a command from Cisco Unified Communications Manager to reset by pressing **Settings** on the phone and choosing **Admin Settings > Status > Network Statistics**.

- If the Restart Cause field displays `Reset-Reset`, the phone receives a Reset/Reset from Cisco Unified Communications Manager Administration.

- If the Restart Cause field displays `Reset-Restart`, the phone closed because it received a Reset/Restart from Cisco Unified Communications Manager Administration.

Phone Resets Due to DNS or Other Connectivity Issues

Problem

The phone reset continues and you suspect DNS or other connectivity issues.

Solution

If the phone continues to reset, eliminate DNS or other connectivity errors by following the procedure in [Determine DNS or Connectivity Issues, on page 13](#).

Phone Does Not Power Up

Problem

The phone does not appear to be powered up.

Solution

In most cases, a phone restarts if it powers up by using external power but loses that connection and switches to PoE. Similarly, a phone may restart if it powers up by using PoE and then connects to an external power supply.

Phone Cannot Connect to LAN

Problem

The physical connection to the LAN may be broken.

Solution

Verify that the Ethernet connection to which the Cisco IP Phone connects is up. For example, check whether the particular port or switch to which the phone connects is down and that the switch is not rebooting. Also ensure that no cable breaks exist.

Cisco IP Phone Security Problems

The following sections provide troubleshooting information for the security features on the Cisco IP Phone. For information about the solutions for any of these issues, and for additional troubleshooting information about security, see *Cisco Unified Communications Manager Security Guide*.

CTL File Problems

The following sections describe troubleshooting problems with the CTL file.

Authentication Error, Phone Cannot Authenticate CTL File

Problem

A device authentication error occurs.

Cause

CTL file does not have a Cisco Unified Communications Manager certificate or has an incorrect certificate.

Solution

Install a correct certificate.

Phone Cannot Authenticate CTL File

Problem

Phone cannot authenticate the CTL file.

Cause

The security token that signed the updated CTL file does not exist in the CTL file on the phone.

Solution

Change the security token in the CTL file and install the new file on the phone.

CTL File Authenticates but Other Configuration Files Do Not Authenticate

Problem

Phone cannot authenticate any configuration files other than the CTL file.

Cause

A bad TFTP record exists, or the configuration file may not be signed by the corresponding certificate in the phone Trust List.

Solution

Check the TFTP record and the certificate in the Trust List.

ITL File Authenticates but Other Configuration Files Do Not Authenticate

Problem

Phone cannot authenticate any configuration files other than the ITL file.

Cause

The configuration file may not be signed by the corresponding certificate in the phone Trust List.

Solution

Re-sign the configuration file by using the correct certificate.

TFTP Authorization Fails

Problem

Phone reports TFTP authorization failure.

Cause

The TFTP address for the phone does not exist in the CTL file.

If you created a new CTL file with a new TFTP record, the existing CTL file on the phone may not contain a record for the new TFTP server.

Solution

Check the configuration of the TFTP address in the phone CTL file.

Phone Does Not Register

Problem

Phone does not register with Cisco Unified Communications Manager.

Cause

The CTL file does not contain the correct information for the Cisco Unified Communications Manager server.

Solution

Change the Cisco Unified Communications Manager server information in the CTL file.

Signed Configuration Files Are Not Requested

Problem

Phone does not request signed configuration files.

Cause

The CTL file does not contain any TFTP entries with certificates.

Solution

Configure TFTP entries with certificates in the CTL file.

Audio Problems

The following sections describe how to resolve audio problems.

No Speech Path

Problem

One or more people on a call do not hear any audio.

Solution

When at least one person in a call does not receive audio, IP connectivity between phones is not established. Check the configuration of routers and switches to ensure that IP connectivity is properly configured.

Choppy Speech

Problem

A user complains of choppy speech on a call.

Cause

There may be a mismatch in the jitter configuration.

Solution

Check the AvgJtr and the MaxJtr statistics. A large variance between these statistics might indicate a problem with jitter on the network or periodic high rates of network activity.

General Telephone Call Problems

The following sections help troubleshoot general telephone call problems.

Phone Call Cannot Be Established

Problem

A user complains about not being able to make a call.

Cause

The phone does not have a DHCP IP address, is unable to register to Cisco Unified Communications Manager. Phones with an LCD display show the message `Configuring IP` or `Registering`. Phones without an LCD display play the reorder tone (instead of dial tone) in the handset when the user attempts to make a call.

Solution

1. Verify the following:
 - a. The Ethernet cable is attached.
 - b. The Cisco CallManager service is running on the Cisco Unified Communications Manager server.
 - c. Both phones are registered to the same Cisco Unified Communications Manager.
2. Audio server debug and capture logs are enabled for both phones. If needed, enable Java debug.

Phone Does Not Recognize DTMF Digits or Digits Are Delayed

Problem

The user complains that numbers are missed or delayed when the keypad is used.

Cause

Pressing the keys too quickly can result in missed or delayed digits.

Solution

Keys should not be pressed rapidly.

Troubleshooting Procedures

These procedures can be used to identify and correct problems.

Create a Phone Problem Report from Cisco Unified Communications Manager

You can generate a problem report for the phones from Cisco Unified Communications Manager. This action results in the same information that the Problem Report Tool (PRT) softkey generates on the phone.


The problem report contains information about the phone and the headsets.

Procedure

- Step 1** In Cisco Unified CM Administration, select **Device > Phone**.
 - Step 2** Click **Find** and select one or more Cisco IP Phones.
 - Step 3** Click **Generate PRT for Selected** to collect PRT logs for the headsets used on the selected Cisco IP Phones.
-

Check TFTP Settings

Procedure

Step 1 On the phone, press **Applications** .

Step 2 On the phone, press **Settings**.

Step 3 Select **Network Setup > IPv4 Setup**.

Step 4 Check the TFTP Server 1 field.

If you have assigned a static IP address to the phone, you must manually enter a setting for the TFTP Server 1 option.

If you are using DHCP, the phone obtains the address for the TFTP server from the DHCP server. Check that the IP address is configured in Option 150.

Step 5 You can also enable the phone to use an alternate TFTP server. Such a setting is particularly useful if the phone recently moved from one location to another.

Step 6 If the local DHCP does not offer the correct TFTP address, enable the phone to use an alternate TFTP server. This is often necessary in VPN scenarios.

Determine DNS or Connectivity Issues

Procedure

Step 1 Use the Reset Settings menu to reset phone settings to their default values.

Step 2 Modify DHCP and IP settings:

- a) Disable DHCP.
- b) Assign static IP values to the phone. Use the same default router setting that other functioning phones use.
- c) Assign a TFTP server. Use the same TFTP server that other functioning phones use.

Step 3 On the Cisco Unified Communications Manager server, verify that the local host files have the correct Cisco Unified Communications Manager server name mapped to the correct IP address.

Step 4 From Cisco Unified Communications Manager, choose **System > Server** and verify that reference to the server is made by the IP address and not by the DNS name.

Step 5 From Cisco Unified Communications Manager, choose **Device > Phone**. Click **Find** to search for this phone. Verify that you have assigned the correct MAC address to this Cisco IP Phone.

Step 6 Power cycle the phone.


Related Topics

[Determine the Phone MAC Address](#)

[Restart or Reset the Conference Phone](#)

Check DHCP Settings

Procedure

Step 1 On the phone, press **Applications** .

Step 2 On the phone, press **Settings**.

Step 3 Select **Network Setup > IPv4 Setup**.

Step 4 Check the DHCP server field.

If you have assigned a static IP address to the phone, you do not need to enter a value for the DHCP Server option. However, if you are using a DHCP server, this option must have a value. If no value is found, check your IP routing and VLAN configuration. See the *Troubleshooting Switch Port and Interface Problems* document, available at this URL:

https://www.cisco.com/en/US/customer/products/hw/switches/ps708/prod_tech_notes_list.html

Step 5 Check the IP Address, Subnet Mask, and Default Router fields.

If you assign a static IP address to the phone, you must manually enter settings for these options.

Step 6 If you are using DHCP, check the IP addresses that your DHCP server distributes.

See the *Understanding and Troubleshooting DHCP in Catalyst Switch or Enterprise Networks* document, available at this URL:

https://www.cisco.com/en/US/tech/tk648/tk361/technologies_tech_note09186a00800f0804.shtml

Create a New Phone Configuration File

When you remove a phone from the Cisco Unified Communications Manager database, the configuration file is deleted from the Cisco Unified Communications Manager TFTP server. The phone directory number or numbers remain in the Cisco Unified Communications Manager database. They are called unassigned DNs and can be used for other devices. If unassigned DNs are not used by other devices, delete these DNs from the Cisco Unified Communications Manager database. You can use the Route Plan Report to view and delete unassigned reference numbers. For more information, see the documentation for your particular Cisco Unified Communications Manager release.

Changing the buttons on a phone button template, or assigning a different phone button template to a phone, may result in directory numbers that are no longer accessible from the phone. The directory numbers are still assigned to the phone in the Cisco Unified Communications Manager database, but the phone has no button on the phone with which calls can be answered. These directory numbers should be removed from the phone and deleted if necessary.

Procedure

Step 1 From Cisco Unified Communications Manager, choose **Device > Phone** and click **Find** to locate the phone that is experiencing problems.

Step 2 Choose **Delete** to remove the phone from the Cisco Unified Communications Manager database.

Note When you remove a phone from the Cisco Unified Communications Manager database, the configuration file is deleted from the Cisco Unified Communications Manager TFTP server. The phone directory number or numbers remain in the Cisco Unified Communications Manager database. They are called unassigned DNs and can be used for other devices. If unassigned DNs are not used by other devices, delete these DNs from the Cisco Unified Communications Manager database. You can use the Route Plan Report to view and delete unassigned reference numbers.

Step 3 Add the phone back to the Cisco Unified Communications Manager database.

Step 4 Power cycle the phone.


Related Topics

[Phone Addition Methods](#)

[Cisco Unified Communications Manager Documentation](#)

Verify DNS Settings

Procedure

- Step 1** On the phone, press **Applications** .
- Step 2** On the phone, press **Settings**.
- Step 3** Select **Network Setup > IPv4 Setup**
- Step 4** Check that the DNS Server 1 field is set correctly.
- Step 5** You should also verify that a CNAME entry was made in the DNS server for the TFTP server and for the Cisco Unified Communications Manager system.

You must also ensure that DNS is configured to do reverse lookups.

Start Service

A service must be activated before it can be started or stopped.

Procedure

- Step 1** From Cisco Unified Communications Manager Administration, choose **Cisco Unified Serviceability** from the Navigation drop-down list and click **Go**.
- Step 2** Choose **Tools > Control Center - Feature Services**.
- Step 3** Choose the primary Cisco Unified Communications Manager server from the Server drop-down list.
- The window displays the service names for the server that you chose, the status of the services, and a service control panel to start or stop a service.
- Step 4** If a service has stopped, click the corresponding radio button and then click **Start**.

The Service Status symbol changes from a square to an arrow.

Control Debug Information from Cisco Unified Communications Manager

If you are experiencing phone problems that you cannot resolve, Cisco TAC can assist you. You will need to turn debugging on for the phone, reproduce the problem, turn debugging off, and send the logs to TAC for analysis.

Because debugging captures detailed information, the communication traffic can slow down the phone, making it less responsive. After you capture the logs, you should turn debugging off to ensure phone operation.

The debug information may include a single digit code that reflects the severity of the situation. Situations are graded as follows:

- 0 - Emergency
- 1 - Alert
- 2 - Critical
- 3 - Error
- 4 - Warn
- 5 - Notification
- 6 - Information
- 7 - Debugging

Contact Cisco TAC for more information and assistance.

Procedure

Step 1 In the Cisco Unified Communications Manager Administration, select one of the following windows:

- **Device > Device settings > Common Phone Profile**
- **System > Enterprise Phone Configuration**
- **Device > Phone**

Step 2 Set the following parameters:

- Log Profile - values: Preset (default), Default, Telephony, SIP, UI, Network, Media, Upgrade, Accessory, Security, Energywise, MobileRemoteAccess
- Remote Log - values: Disable (default), Enable
- IPv6 Log Server or Log Server - IP address (IPv4 or IPv6 address)

Note When the Log Server cannot be reached, the phone stops sending debug messages.

- The format for the IPv4 Log Server address is **address : <port>@@base=<0-7>;pfs=<0-1>**
 - The format for the IPv6 Log Server address is **[address] : <port>@@base=<0-7>;pfs=<0-1>**
 - Where:
 - the IPv4 address is separated with dot (.)
 - the IPv6 address is separated with colon (:)
-

Additional Troubleshooting Information

If you have additional questions about troubleshooting your phone, go to the following Cisco website and navigate to the desired phone model:

<https://www.cisco.com/c/en/us/support/collaboration-endpoints/unified-ip-phone-8800-series/series.html#Troubleshooting>

