



Cisco Unified SIP Proxy Module EXEC Commands

Last Updated: November 25, 2019

- [cusp](#)
- [shutdown graceful](#)
- [ip route](#)
- [show license smart agent-version](#)
- [show license smart udi](#)
- [show license smart summary](#)
- [Eshow license smart status application cusp](#)
- [show tcp connections](#)
- [license smart destinationAddr](#)
- [license smart httpProxyAddr](#)
- [license smart activate cusp](#)
- [license smart register token_id](#)

cusp

To enter Cisco Unified SIP Proxy EXEC mode, use the **cusp** command in module EXEC mode. To exit Cisco Unified SIP Proxy EXEC mode, use the **exit** command.

cusp

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Module EXEC (>)

Command History	Cisco Unified SIP Proxy Version	Modification
	1.0	This command was introduced.

Examples The following example accesses the Cisco Unified SIP Proxy module and enters Cisco Unified SIP Proxy EXEC mode:

```
Router# service-module integrated-service-engine 1/0 session
se-10-1-0-0> cusp
se-10-1-0-0(cusp)>
```

Related Commands	Command	Description
	configure	Enters Cisco Unified SIP Proxy configuration mode.
	exit	Exits out of a Cisco Unified SIP Proxy configuration or management mode and returns to the higher mode.

shutdown graceful

To perform a graceful shutdown of the Cisco Unified SIP Proxy module, use the **shutdown graceful** command in module EXEC mode.

shutdown graceful [*timeout*]



Note

This command is deprecated.

Syntax Description

<i>timeout</i>	(Optional) Specifies the timeout value for the Cisco Unified SIP Proxy module. The valid range is 10 to 180 seconds. The default is 32 seconds.
----------------	---

Command Default

The default timeout value is 32 seconds.

Command Modes

Module EXEC (>)

Command History

Cisco Unified SIP Proxy Version	Modification
1.0	This command was introduced.
10.0	This command is deprecated.

Usage Guidelines

The timeout value specifies how long the Cisco Unified SIP Proxy waits for pending tasks to complete before exiting.

Examples

The following example executes a graceful shutdown of the Cisco Unified SIP Proxy module, specifying a timeout value of 120 seconds:

```
se-10-1-0-0# shutdown graceful 120
```

Related Commands

Command	Description
reload	Restarts the Cisco Unified SIP Proxy system after the shutdown command has been used and activates the uploaded file information after the restore command has been used.

ip route

To establish static routes to Cisco Unified SIP Proxy's virtual interfaces and other routers, use the **ip route** command in module configuration mode.

```
ip route destination-ip destination-mask {gigabitethernet | ip-address}
```

Syntax Description		
	<i>destination-ip</i>	Destination network address.
	<i>destination-mask</i>	Destination network address mask.
	gigabitethernet	Virtual interface to which to route.
	<i>ip-address</i>	Forwarding router's address.

Command Default No static routes are established.

Command Modes Module configuration (config)

Command History	Cisco Unified SIP Proxy Version	Modification
	1.0	This command was introduced.

Usage Guidelines The last argument specifies the forwarding address which is either the virtual interface to route to or the forwarding router's address.

Examples The following example establishes a static route to Cisco Unified SIP Proxy's Gigabit Ethernet interface 0.2:

```
se-10-1-0-0(config)# ip route 10.10.10.2 255.255.255.0 GigabitEthernet0.2
```

The following example establishes a static route to the router whose IP address is 10.10.20.2:

```
se-10-1-0-0(config)# ip route 10.10.10.2 255.255.255.0 10.10.20.2
```

show license smart agent-version

To display the version of the Smart Agent running on Cisco Unified SIP Proxy, use the **show license smart agent-version** command in module EXEC mode.

Syntax Description This command has no arguments or keywords.

Command Modes Module EXEC (>)

Command History	Cisco Unified SIP Proxy Version	Modification
	9.1.6	This command was introduced.

Examples The following example shows the version of the Smart Agent running on Cisco Unified SIP Proxy:

```
se-10-1-0-0-0# show license smart agent-version
SmartAgent Version: 3.0.9
```

show license smart udi

To display the Unique Device Identifier (UDI) of Cisco Unified SIP Proxy, use the **show license smart udi** command in module EXEC mode.

show license smart udi

Syntax Description This command has no arguments or keywords.

Command Modes Module EXEC (>)

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Examples The following example shows the Cisco Unified SIP Proxy software UDI:

```
se-9-41-12-29# show license smart udi
UDI: UC_CUSP:VJQ6q77nQod
Serial Number: VJQ6q77nQod
Product ID: UC_CUSP
```

show license smart summary

To show current state of the Cisco Unified SIP Proxy Smart Licensing application, entitlement count, time left in evaluation mode (if applicable), product specific details, authorization and registration related timers, and to capture recent failures with communication related to licensing server, use the **show license smart summary** command in module EXEC mode.

show license smart summary

Syntax Description This command has no arguments or keywords.

Command Modes Module EXEC (>)

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Examples The following example shows current state of the Cisco Unified SIP proxy Smart Licensing application:

```
se-10-104-45-238# show license smart summary
Smart Agent is Enabled: true
Current State of the Agent: OUT_OF_COMPLIANCE
Is Evaluation Mode: No
Is Registration Successful: YES
Is Authorization Successful: YES
Requested license count: 5
Entitlement tag: regid.2019-02.com.cisco.CUSP_5,10.0_a8c7a082-c70b-465b-812f-eb4a520f2fc3
Configured destination
address:https://tools.cisco.com/its/service/oddce/services/DDCEService
Transport Mode: TransportCallHome
UDI: UC_CUSP:VOEanZTRAZk
Serial Number: VOEanZTRAZk
product ID: UC_CUSP
Software ID Tag: regid.2019-02.com.cisco.CUSP,10.0_bcc5017c-1e5b-4294-a6a6-3f664298e6b5
Product ID Tag: UC_CUSP
Entitlement Version: 10.0
Enforcement Mode: OutOfCompliance
Registration expiry period: Wed Feb 26 06:25:37 IST 2020
Latest Failure Reason String Notification: Successful.
Auth period: Wed Feb 27 06:46:40 IST 2019
Http Proxy Address: Not Set::
```

Eshow license smart status application cusp

To capture the current state of the licensing agent, use the **show license smart status application cusp** command in module EXEC mode.

show license smart status application cusp

Syntax Description This command has no arguments or keywords.

Command History

Cisco Unified SIP Proxy Version	Modification
9.0	This command was introduced.

Examples

The following example shows current state of the licensing agent:

```
se-10-104-45-238# show license smart status application cusp
Smart Agent is Enabled: true
```

```
Smart Agent current state: UNIDENTIFIED
```


show tcp connections

To display the status of Transmission Control Protocol (TCP) connections, use the **show tcp connections** command in module EXEC mode.

show tcp connections [*summary*]

Syntax Description

<i>summary</i>	(Optional) Displays the summary statement for all the tcp connections for the Cisco Unified SIP Proxy module.
----------------	---

Command History

Cisco Unified SIP Proxy Version	Modification
8.5.13 and 9.1.4	This command was introduced.

Usage Guidelines

The **show tcp connections** command displays detailed connection information at the operating system level. To obtain information at the application level, use the **show sip tcp connections detail** command.

Examples

The following example shows the current active tcp connections available on the operating system:

```
se-10-64-86-198# show tcp connections
Active Internet connections (servers and established)
Proto Recv-Q Send-Q Local Address           Foreign Address         State       PID/Program name
tcp        0      0 127.0.0.1:389          0.0.0.0:*               LISTEN      1634/slapd
tcp        0      0 0.0.0.0:911           0.0.0.0:*               LISTEN      1106/tclsh
tcp        0      0 0.0.0.0:21            0.0.0.0:*               LISTEN      2637/vsftpd
tcp        0      0 0.0.0.0:22            0.0.0.0:*               LISTEN      1108/ssh
tcp        0      0 127.0.0.1:5432        0.0.0.0:*               LISTEN      1824/postmaster
tcp        0      96 10.64.86.198:22       10.196.106.64:62609    ESTABLISHED 2693/ssh:
cuspd [
tcp        0      0 127.0.0.1:389          127.0.0.1:49865        ESTABLISHED 1634/slapd
tcp        0      0 127.0.0.1:58065       127.0.0.1:12345        ESTABLISHED 2751/cli_xconn
tcp        0      0 127.0.0.1:5432        127.0.0.1:45198        ESTABLISHED 2782/postgres: post
tcp        0      0 127.0.0.1:5432        127.0.0.1:56925        ESTABLISHED 2286/postgres: post
tcp        0      0 127.0.0.1:58064       127.0.0.1:12345        ESTABLISHED 2687/cli_xconn
tcp        0      0 10.64.86.198:22       10.196.106.64:62608    ESTABLISHED 2306/ssh:
cuspd [
```

license smart destinationAddr

To specify the smart manager URL, use the **license smart destinationAddr** command in module EXEC mode.

license smart destinationAddr *url*

Syntax Description	<i>url</i>	Connects to the central licensing server.
---------------------------	------------	---

Command Default	None
------------------------	------

Command Modes	Module EXEC (>)
----------------------	-----------------

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Usage Guidelines	Use this command to configure the central license URL.
-------------------------	--

Examples	The following example configures the smart manager URL:
-----------------	---

```
se-10-1-0-0# license smart destinationAddr
https://tools.cisco.com/its/service/oddce/services/D
DCEService
```

license smart httpProxyAddr

To set the HTTP(S) proxy server address for smart licensing, use the **license smart httpProxyAddr** command in module EXEC mode.

license smart httpProxyAddr *url*

Syntax Description	<i>url</i>	Specifies the HTTP proxy address.
---------------------------	------------	-----------------------------------

Command Default	None
------------------------	------

Command Modes	Module EXEC (>)
----------------------	-----------------

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Usage Guidelines	If HTTP Proxy is required to connect to the smart manager, use this command to set the proxy address through which the request will be sent.
-------------------------	--

Examples	The following example specifies the HTTP(S) proxy server address for smart licensing: <pre>se-10-1-0-0# license smart httpProxyAddr 10.1.1.1</pre>
-----------------	---

license smart activate cusp

To enable smart agent licensing in Cisco Unified SIP Proxy, use the **license smart activate cusp** command in module EXEC mode. To enable call routing through Cisco Unified SIP Proxy, this command must be enabled. Else, the calls will drop.

license smart activate cusp *count*

Syntax Description	<i>count</i>	Specifies the maximum calls per second. The value should be a multiple of 5.
---------------------------	--------------	--

Command Default	None
------------------------	------

Command Modes	Module EXEC (>)
----------------------	-----------------

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Usage Guidelines	Set license smart destinationAddr before running this command. If HTTP proxy is required, execute license smart httpProxyAddr before you execute this command.
-------------------------	--

Examples	The following example sets the maximum calls per second:
-----------------	--

```
se-10-1-0-0# license smart activate cusp 100
```

license smart register token_id

To register the device instance with the Cisco licensing cloud, use **license smart register token_id** in module EXEC mode. Execute **license smart activate cusp** before you execute this command.

license smart register token_id token

Syntax Description	<i>token</i>	Specifies the token generated in smart manager.
---------------------------	--------------	---

Command Default	None
------------------------	------

Command Modes	Cisco Unified SIP Proxy configuration (cusp-config)
----------------------	---

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Usage Guidelines	Use this command to register the device instance with the Cisco licensing cloud.
-------------------------	--

Examples	The following example registers and sets the token ID required for registration of smart agent on Cisco Unified SIP Proxy:
-----------------	--

```
se-10-1-0-0# license smart register token_id
MjgXZjdK4Y2RtMwY5Ny00YTk4LOI2N2MtNjcxNmYaMTkzZGFhLHE0
MjA3MjY0%0AMjI5N34Z8OVAOdmNzSjdIeG4MMHIZTmZubNFzMHhK
OTYyeH1UZWQzQzVIM3Jk%0AHV3MD0A3D%0N
```

■ license smart register token_id