



# Update Unified CM IP Address Change in Unified CCX

---

- [Update Unified CM IP Address Change in Unified CCX](#) , on page 1

## Update Unified CM IP Address Change in Unified CCX

The following section details the procedure to update any change in Unified CM IP Address in Unified CCX.



---

**Note** Unified CCX supports changing one or more IP addresses of Unified CM servers but does not support changing the Unified CM cluster.

---

### Procedure

---

Run the following CLI commands on the Unified CCX publisher using the new IP address of Unified CM as input.

- **set uccx provider ip axl** - Sets the Unified CCX AXL provider IP address.
- **set uccx provider ip jtapi** - Sets the Unified CCX JTAPI provider IP address.
- **set uccx provider ip rmcm** - Sets the Unified CCX Resource Manager-Contact Manager provider IP address.

**Note** After you run the above CLI commands, restart the Unified CCX Engine service on the publisher node. After Unified CCX Engine service starts successfully, restart Cisco Tomcat.

---

