



# Display Cisco Unity Express License Information

---

Use this procedure to display Cisco Unity Express license information:

---

Choose Administration > Licenses.

The Licenses display appears, showing the following fields:

- Product ID—The Cisco Unity Express hardware installed
  - Serial Number—The serial number for the Cisco Unity Express hardware
  - Feature—The installed license feature
  - Description—Description of the license, such as voice mail mailboxes or IVR
  - Type—Whether the license is a permanent or evaluation license
  - State—Whether the license is Active, Inactive, In Use, or Not in Use
  - Priority—The priority of the license, either High, Medium, or Low
  - Usage—The number of the license that is used
  - Validity Left—Days left that the license is valid (evaluation licenses only)
-

