



H

Last Updated: May 1, 2006

hostname

hostname

To configure the hostname for the Cisco Unity Express applications, use the **hostname** command in Cisco Unity Express configuration mode. To change the hostname to the default hostname, use the **no** form of this command.

hostname *hostname*

no hostname *hostname*

Syntax Description

<i>hostname</i>	Name of the host system. Do not include the domain name.
-----------------	--

Defaults

IP address of the Cisco Unity Express module

Command Modes

Cisco Unity Express configuration

Command History

Cisco Unity Express Release	Modification
1.0	This command was introduced on the Cisco Unity Express network module and in Cisco Unified Communications Manager Express 3.0.
1.1	This command was implemented on the advanced integration module (AIM) and in Cisco Unified Communications Manager 3.3(3).
1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

Usage Guidelines

The *hostname* value identifies the Cisco Unity Express module. The default value is the IP address of the module.

Cisco Unity Express uses the *hostname* value in the module prompt.

Examples

The following example changes the hostname of the module with IP address 10.0.0.0 to mybranch and then restores the default hostname:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# hostname mybranch
mybranch(config)# no hostname mybranch
se-10-0-0-0(config)#
```

Related Commands

Command	Description
ip domain-name	Specifies the DNS domain name.
ip name-server	Specifies the DNS server name.

Command	Description
ntp server	Specifies the NTP clocking server.
show hosts	Displays all configured hosts.

