



L

Last Updated: June 20, 2007

[list name](#)

[list number delete](#)

[list number description](#)

[list number member](#)

[list number owner](#)

[locale \(ccn trigger http\)–IVR Only](#)

[locale \(ccn trigger jtapi\)](#)

[locale \(ccn trigger sip\)](#)

[log console](#)

[log console monitor](#)

[log server](#)

[log trace boot](#)

[log trace buffer save](#)

list name

To create a public distribution list, use the **list name** command in Cisco Unity Express configuration mode. This command does not have a **no** form.

list name *list-name* **number** *list-number* **create**

Syntax Description

<i>list-name</i>	Name of the list. Valid names have up to 64 characters letters and include letters A to Z, a to z, digits 0 to 9, underscore (_), dot (.), and dash (-). Names must start with a letter. Do not use spaces in the name.
number <i>list-number</i>	Number of the list. Valid public list numbers can have up to 15 digits.
create	Activates the list.

Defaults

The system creates the everyone list with number 999 to contain everyone on the system.

Command Modes

Cisco Unity Express configuration

Command History

Cisco Unity Express Release	Modification
2.1	This command was introduced.

Usage Guidelines

Each list must have a unique name or number.

The system supports a maximum of 15 public lists.

A list number can match the subscriber's or general delivery mailbox (GDM) telephone number but must not match another local public list number.

The system automatically assigns 9999 to the default **everyone** public list. An administrator can change this number using the GUI menu option **Voice Mail > Distribution Lists > Public Lists**. The 9999 number cannot be changed using TUI options or CLI commands.

A local subscriber cannot modify a remote distribution list and cannot use a remote distribution list as the recipient of a voice message.



Note Use the graphical user interface (GUI) or telephone user interface (TUI) to create and manage private distribution lists.

Examples

The following example creates public distribution list number 12 for designers:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# list name designers number 12 create
se-10-0-0-0(config)# exit
```

Related Commands	Command	Description
	list number delete	Deletes a public distribution list from the local system.
	list number description	Assigns a description to a public distribution list.
	list number member	Assigns members to a public distribution list.
	list number owner	Assigns an owner to a public distribution list.
	show lists	Displays all public lists on the system.

list number delete

To delete a public distribution list from the local system, use the **list number delete** command in Cisco Unity Express configuration mode. This command does not have a **no** form.

list number *list-number* **delete**

Syntax Description	<i>list-number</i>	Number of the list. Valid public list numbers can have up to 15 digits.
---------------------------	--------------------	---

Defaults No list number is deleted.

Command Modes Cisco Unity Express configuration

Command History	Cisco Unity Express Release	Modification
	2.1	This command was introduced.

Usage Guidelines An error message appears if the list does not exist.
A local subscriber or administrator cannot delete a public distribution list at a remote site.



Note Use the graphical user interface (GUI) or telephone user interface (TUI) to create and manage private distribution lists.

Examples The following example deletes list number 35:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# list number 35 delete
se-10-0-0-0(config)# exit
```

Related Commands	Command	Description
	list name	Creates a public distribution list.
	list number description	Assigns a description to a public distribution list.
	list number member	Assigns members to a public distribution list.
	list number owner	Assigns an owner to a public distribution list.
	show lists	Displays all public lists on the system.

list number description

To add a description to a public distribution list, use the **list number** description command in Cisco Unity Express configuration command. To delete the description, use the **no** form of this command.

list number *list-number* **description** *description*

no list number *list-number* **description** *description*

Syntax Description

<i>list-number</i>	Number of the list. Valid public list numbers can have up to 15 digits.
<i>description</i>	Text description of the list. Enclose the text in double quotes (“ ”) if the text is more than one word.

Defaults

No description is defined.

Command Modes

Cisco Unity Express configuration

Command History

Cisco Unity Express Release	Modification
2.1	This command was introduced.

Usage Guidelines

An error message appears if the list does not exist.



Note Use the graphical user interface (GUI) or telephone user interface (TUI) to create and manage private distribution lists.

Examples

The following example assigns a description to list number 35:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# list number 35 description "SJC Engineers"
se-10-0-0-0(config)# exit
```

Related Commands

Command	Description
list name	Creates a public distribution list.
list number delete	Deletes a public distribution list from the local system.
list number member	Assigns members to a public distribution list.
list number owner	Assigns an owner to a public distribution list.
show lists	Displays all public lists on the system.

list number member

To add members to a public distribution list, use the **list number member** command in Cisco Unity Express configuration mode. To delete the member from the list, use the **no** form of this command.

```
list number list-number member {member-name | extension}
      type {group | user | gdm | list | remote | blind}
```

```
no list number list-number member {member-name | extension}
      type {group | user | gdm | list | remote | blind}
```

Syntax Description

<i>list-number</i>	Number of the list. Valid public list numbers can have up to 15 digits.
<i>member-name</i>	Name of the member to be added. Valid members include: <ul style="list-style-type: none"> • Local or remote subscribers • Group IDs • General delivery mailbox (GDM) name • Voice mailbox extension (blind address) • Other public distribution list numbers • Other public distribution list names
<i>extension</i>	Extension of the member to be added.
type	Category of the member. Valid values are: <ul style="list-style-type: none"> • group—The member is a group. • user—The member is a local subscriber. • gdm—The member is a general delivery mailbox. • list—The member is a public distribution list. • remote—The member is a remote subscriber. • blind—The member is a voice mailbox extension (blind address).

Defaults

No list members are configured.

Command Modes

Cisco Unity Express configuration

Command History

Cisco Unity Express Release	Modification
2.1	This command was introduced.

Usage Guidelines

An error message appears if the member name or extension does not exist. Additionally, the system verifies that the public list has members. If the list is empty, the system plays a prompt indicating that the list contains no members and does not allow the list to be used as a recipient of the message.

The maximum number of public list members is 1000 for the system. An error message appears if a new member would exceed the maximum.

A remote subscriber that is statically configured on the local system can be a member of a distribution list. However, that remote subscriber cannot own a distribution list on the local system.

A private list cannot be a member of a public list.

Recursive distribution lists are permitted; for example, list A can be a member of list B and list B can be a member of list A.

To use a blind address, specify the location ID and extension of the blind address. The system verifies the location ID and extension length.



Note Use the graphical user interface (GUI) or telephone user interface (TUI) to create and manage private distribution lists.

Examples

The following example assigns members to list number 35:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# list number 35 member user2 type user
se-10-0-0-0(config)# list number 35 member user7 type user
se-10-0-0-0(config)# list number 35 member supervisors type group
se-10-0-0-0(config)# list number 35 member sales type gdm
se-10-0-0-0(config)# list number 35 member project3 type list
se-10-0-0-0(config)# list number 35 member user4 type remote
se-10-0-0-0(config)# list number 35 member nyc72222 type blind
se-10-0-0-0(config)# exit
```

The following examples delete members from list number 35:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# no list number 35 member user2 type user
se-10-0-0-0(config)# no list number 35 member sales type gdm
se-10-0-0-0(config)# exit
```

Related Commands

Command	Description
list name	Creates a public distribution list.
list number delete	Deletes a public distribution list from the local system.
list number description	Assigns a description to a public distribution list.
list number owner	Assigns an owner to a public distribution list.
show lists	Displays all public lists on the system.

list number owner

To assign an owner to a public distribution list, use the **list number owner** command in Cisco Unity Express configuration mode. To delete the list owner, use the **no** form of this command.

list number *list-number* **owner** *owner-ID*

no list number *list-number* **owner** *owner-ID*

Syntax Description

<i>list-number</i>	Number of the list. Valid public list numbers can have up to 15 digits.
<i>owner-ID</i>	Name of the list owner.

Defaults

No list number or list owner is configured.

Command Modes

Cisco Unity Express configuration

Command History

Cisco Unity Express Release	Modification
2.1	This command was introduced.

Usage Guidelines

The list owner can be a local subscriber or a local group. If the owner is a group, all the members of the group are owners of the list. The default list **everyone** cannot have an owner.

The list owner can edit and delete members of the list and can assign other owners to the list.

An error message appears if the list number or list owner does not exist.

The maximum number of owners on the system is 50. An error message appears if a new owner ID would exceed the maximum number of list owners.

Members of the Administrators group are implicit owners of all public distribution lists and can edit any public list at any time. If all the owners of a list are deleted, the Administrator group continues to have ownership of the list.

The owner of a public or private distribution list can record a spoken name for the list using the TUI. The default **everyone** public list has a spoken name by default. An administrator can change this name using the TUI.



Note Use the graphical user interface (GUI) or telephone user interface (TUI) to create and manage private distribution lists.

Examples

The following example assigns user2 as the owner of list number 35:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# list number 35 owner user2
se-10-0-0-0(config)# exit
```


The following example deletes the owner of list 35:

```
se-10-0-0-0# config t  
se-10-0-0-0(config)# no list number 35 owner user2  
se-10-0-0-0(config)# exit
```

Related Commands

Command	Description
list name	Creates a public distribution list.
list number delete	Deletes a public distribution list from the local system.
list number description	Assigns a description to a public distribution list.
list number member	Assigns members to a public distribution list.
show lists	Displays all public lists on the system.

locale (ccn trigger http)–IVR Only

To specify the language to use for the prompts that the caller hears when a Cisco Unity Express IVR HTTP-based trigger is activated, use the **locale** command in Cisco Unity Express IVR HTTP trigger configuration mode. Use the **no** form of this command to set the language to the *systemDefault*.

locale *xx_YY*

no locale

Syntax Description	<i>xx_YY</i>	Specifies the language used for the prompts heard by the caller. Cisco Unity Express supports several languages but only one language can be used for all triggers on the system. See Release Notes for Cisco Unity Express 3.1 for the current list of supported languages.
---------------------------	--------------	--

Command Default The default locale is *systemDefault*.

Command Modes Cisco Unity Express IVR HTTP trigger configuration

Command History	Cisco Unity Express Version	Modification
	3.0	This command was introduced.

Examples The following example sets the trigger language to US English:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# ccn trigger http urlname myhttpapp
Adding new trigger
se-10-0-0-0(config-trigger)# locale en_US
se-10-0-0-0(config-trigger)# end
se-10-0-0-0(config)# exit
```

The following example sets the trigger language to the default (systemDefault):

```
se-10-0-0-0# config t
se-10-0-0-0(config)# ccn trigger http urlname myhttpapp
Adding new trigger
se-10-0-0-0(config-trigger)# no locale
se-10-0-0-0(config-trigger)# end
se-10-0-0-0(config)# exit
```

Related Commands	Command	Description
	show ccn trigger http–IVR Only	Displays the trigger and application settings. Use the show ccn trigger http command option to display the Cisco Unity Express IVR HTTP-based trigger settings.

locale (ccn trigger jtapi)

To specify the language used for the prompts that are heard by the caller when a JTAPI trigger is activated, use the **locale** command in Cisco Unity Express CCN configuration trigger mode. To set the language to the system default, use the no form of this command.

locale *xx_YY*

no locale

Syntax	Description
<i>xx_YY</i>	Specifies the language used for the prompts heard by the caller. Cisco Unity Express supports several languages but only one language can be used for all triggers on the system. See Release Notes for Cisco Unity Express 3.1 for the current list of supported languages.

Defaults	U.S. English
----------	--------------

Command Modes	CCN configuration trigger
---------------	---------------------------

Command History	Cisco Unity Express Release	Modification
	1.0	This command was introduced on the Cisco Unity Express network module and in Cisco Unified Communications Manager Express 3.0.
	1.1	This command was implemented on the advanced integration module (AIM) and in Cisco Unified Communications Manager 3.3(3).
	1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

Examples The following example sets the trigger language to French.

```
se-10-0-0-0# config t
se-10-0-0-0(config)# ccn trigger jtapi phonenumber 1234
se-10-0-0-0(config-trigger)# locale fr_FR
se-10-0-0-0(config-trigger)# end
se-10-0-0-0(config)# exit
```

Related Commands	Command	Description
	ccn trigger jtapi phonenumber	Enters trigger configuration mode.
	show ccn trigger all	Displays the CCN trigger details.

locale (ccn trigger sip)

To specify the language used for the SIP system prompts that are heard by the caller when a SIP trigger is activated, use the **locale** command in Cisco Unity Express CCN configuration trigger mode. To set the language to the system defaults, use the **no** form of this command.

locale *xx_YY*

no locale

Syntax	Description
<i>xx_YY</i>	Specifies the language used for the prompts heard by the caller. Cisco Unity Express supports several languages but only one language can be used for all triggers on the system. See Release Notes for Cisco Unity Express 3.1 for the current list of supported languages.

Defaults	Description
U.S. English	

Command Modes	Description
CCN configuration trigger	

Command History	Cisco Unity Express Release	Modification
	1.0	This command was introduced on the Cisco Unity Express network module and in Cisco Unified Communications Manager Express 3.0.
	1.1	This command was implemented on the advanced integration module (AIM) and in Cisco Unified Communications Manager 3.3(3).
	1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

Examples The following example sets the trigger language to French.

```
se-10-0-0-0# config t
se-10-0-0-0(config)# ccn trigger sip phonenum 1234
se-10-0-0-0(config-trigger)# locale fr_FR
se-10-0-0-0(config-trigger)# end
se-10-0-0-0(config)# exit
```

Related Commands	Command	Description
	ccn trigger sip phonenum	Enters trigger configuration mode.
	show ccn trigger all	Displays the CCN trigger details.

log console

To configure the types of messages to be displayed on the console, use the **log console** command in Cisco Unity Express configuration mode. To stop messages from displaying, use the **no** form of this command.

```
log console { errors | info | warning }
```

```
no log console { errors | info | warning }
```



Caution

This command generates many screen messages that scroll down the screen until you turn off the display. Seeing the prompt to turn off the display may be difficult. Pressing CTRL-c does not work for this command.

Syntax Description

errors	Error messages.
info	Information messages.
warning	Warning messages.

Defaults

Only fatal error messages are displayed.

Command Modes

Cisco Unity Express configuration

Command History

Cisco Unity Express Release	Modification
1.0	This command was introduced on the Cisco Unity Express network module and in Cisco Unified Communications Manager Express 3.0.
1.1	This command was implemented on the advanced integration module (AIM) and in Cisco Unified Communications Manager 3.3(3).
1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

Usage Guidelines

The messages on the console display are also saved in the messages.log file. These messages can be used for debugging purposes.

Examples

The following example configures error messages to be displayed on the console:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# log console errors
se-10-0-0-0(config)# exit
```

Related Commands

Command	Description
show logging	Displays the types of messages that are displayed on the console.

log console monitor

To display system messages on the console, use the **log console monitor** command in Cisco Unity Express configuration mode. To stop messages from displaying, use the **no** form of this command.

log console monitor {*module* | *entity* | *activity*}

no log console monitor {*module* | *entity* | *activity*}



Caution

This command generates many screen messages that scroll down the screen until you turn off the display. Seeing the prompt to turn off the display may be difficult. Pressing CTRL-c does not work for this command.

Syntax Description

<i>module</i>	Cisco Unity Express modules.
<i>entity</i>	Cisco Unity Express module entities.
<i>activity</i>	Cisco Unity Express entity actions.

Defaults

Only fatal error messages are displayed.

Command Modes

Cisco Unity Express EXEC

Command History

Cisco Unity Express Release	Modification
1.0	This command was introduced on the Cisco Unity Express network module and in Cisco Unified Communications Manager Express 3.0.
1.1	This command was implemented on the advanced integration module (AIM) and in Cisco Unified Communications Manager 3.3(3).
1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

Usage Guidelines

The messages on the console monitor are also saved in the messages.log file. These messages can be used for debugging purposes.

Examples

The following example displays messages for results of the database entity in the networking module:

```
se-10-0-0-0# log console monitor networking database results
```

Related Commands

Command	Description
show logging	Displays the types of messages that are displayed on the console.

log server

To configure an external server for saving log messages, use the **log server** command in Cisco Unity Express configuration mode. To delete the log server, use the **no** form of this command.

log server address {*ip-address* | *hostname*}

no log server address {*ip-address* | *hostname*}

Syntax Description

address <i>ip-address</i>	IP address of the external log server.
address <i>hostname</i>	Hostname of the external log server.

Defaults

No external log server is configured. The local hard disk is used for saving log messages.

Command Modes

Cisco Unity Express configuration

Command History

Cisco Unity Express Release	Modification
1.0	This command was introduced on the Cisco Unity Express network module and in Cisco Unified Communications Manager Express 3.0.
1.1	This command was implemented on the advanced integration module (AIM) and in Cisco Unified Communications Manager 3.3(3).
1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

Usage Guidelines

An external log server contains a copy of the messages.log file that is stored on the hard disk of the router that contains the Cisco Unity Express module. Copying the file to a server permits flexibility in viewing, printing, and troubleshooting system messages.

Examples

The following example assigns 10.1.61.16 as the external log server:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# log server address 10.1.61.16
se-10-0-0-0(config)# exit
```

Related Commands

Command	Description
hostname	Specifies the server that stores the Cisco Unity Express applications.
ntp server	Specifies the NTP clocking server.

Command	Description
show hosts	Displays all configured hosts.
show running-config	Displays the log server as part of the configuration.

log trace boot

To save the trace configuration upon rebooting, use the **log trace boot** command in Cisco Unity Express EXEC mode.

log trace boot

Syntax Description This command has no arguments or keywords.

Command Modes Cisco Unity Express EXEC

Command History	Cisco Unity Express Release	Modification
	1.1	This command was introduced on the Cisco Unity Express network module (NM), advanced integration module (AIM), and in Cisco Unified Communications Manager Express 3.3(3).
	1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

Usage Guidelines The current trace configuration is lost upon reboot because tracing is CPU intensive. To ensure that the current trace configuration is saved when the CUE module is rebooted, use the **log trace boot** command.

Examples The following example illustrates the **log trace boot** command:

```
se-10-0-0-0# log trace boot
```

Related Commands	Command	Description
	show trace	Displays the modules and entities being traced.

log trace buffer save

To save the current trace information, use the **log trace buffer save** command in Cisco Unity Express EXEC mode. To turnoff the log trace, use the **no** form of this command.

log trace buffer save

no log trace buffer

Syntax Description This command has no arguments or keywords.

Command Modes Cisco Unity Express EXEC

Command History	Cisco Unity Express Release	Modification
	1.1	This command was introduced on the Cisco Unity Express network module (NM), advanced integration module (AIM), and in Cisco Unified Communications Manager Express 3.3(3).
	1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

Usage Guidelines Current trace information stored in the memory buffer can be saved to a file. The file created with the **log trace buffer save** command is `atrace_save.log`.

Examples The following example illustrates the **log trace buffer save** command:

```
se-10-0-0-0# log trace buffer save
```

Related Commands	Command	Description
	show logs	Displays a list of the trace logs.
	show trace buffer	Displays the modules and entities being traced.