



U

Last Updated: June 21, 2007

username

username generate

username notification cascade-to after

username profile (phone devices)

username profile email

username profile num-pager

username profile text-pager

username

To configure a Cisco Unity Express subscriber, use the **username** command in either Cisco Unity Express EXEC mode or configuration mode.

EXEC Mode

```
username name [create | delete | faxnumber extension fullname [first “first” | last “last-name” | display “full-name”] | group group-name | language xx_YY | password “password” | pin number]
```

Configuration Mode

```
username name [password “password” | phonenumber phonenumber | phonenumberE164 full-number | pin number]
```

Syntax Description		
<i>name</i>		Specifies the name or ID of the subscriber to be created. The username must be at least 3 and no more than 32 characters in length. Cisco Unity Express allows only letters, numbers, underscore (_), dot (.), and dash (-) in user IDs. User IDs must start with a letter. Do not use spaces in the username.
create		(Optional) Creates a subscriber with no other information.
delete		(Optional) Deletes the subscriber.
faxnumber <i>extension</i>		Assigns the specified fax number to the user. In case of a single DID, there is no need to configure this number.
fullname first “ <i>first</i> ”		(Optional) First name of the subscriber. The name must be entered in double quotes (“ ”).
fullname last “ <i>last-name</i> ”		(Optional) Last name of the subscriber. The name must be entered in double quotes (“ ”).
fullname display “ <i>full-name</i> ”		(Optional) Name as the subscriber wants it to appear on other telephone displays. The name must be entered in double quotes (“ ”).
group <i>group-name</i>		(Optional) Group with which this subscriber is associated. If the <i>group-name</i> value does not exist, this command creates it.
language <i>xx_YY</i>		(Optional) Language of the prompt. See Release Notes for Cisco Unity Express 2.3 for a list of supported languages.
password “ <i>password</i> ”		(Optional) Password for the subscriber. The password must be entered in double quotes (“ ”). Valid values contain at least 3 but not more than 32 characters in length. Spaces are not allowed. Acceptable password characters are lowercase letters a to z, uppercase letters A to Z, digits 0 to 9, and the following symbols: -, ., +, =, _ ! @ # \$ ^ * () ? / ~ < > & %.
phonenumber <i>phonenumber</i>		(Optional) Extension or number for this subscriber.

phonenumE164 <i>full-number</i>	(Optional) Full telephone number, including area code, for the subscriber.
pin <i>number</i>	(Optional) Personal identification number for the subscriber. Valid values are at least 3 but not more than 19 characters in length, consisting of letters and numbers. No other characters are permitted.

Command Default **language:** U.S. English

Command Modes Cisco Unity Express EXEC
Cisco Unity Express configuration

Command History	Cisco Unity Express Version	Modification
	1.0	This command was introduced on the Cisco Unity Express network module and in Cisco Unified Communications Manager Express 3.0.
	1.1	This command was implemented on the advanced integration module (AIM) and in Cisco Unified Communications Manager 3.3(3).
	1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.
	2.0	This command supports additional languages for prompts.
	3.0	This command was modified to allow you to assign a fax extension to a mailbox.

Usage Guidelines The EXEC version of the command stores the permitted information in Cisco Unity Express flash memory. If a problem with the disk occurs, this information is available so that the subscriber may access the voice-mail system.

The configuration version of the command is stored in the Cisco Unity Express system configuration file. If a power outage or a system shutdown occurs, the subscriber information can be retrieved.

Examples The following example creates a subscriber user1, assigns her as a member to the Sales group, and assigns the extension 0190, a password, and a PIN.

```
se-10-0-0-0# username user1 fullname display "User 1"
se-10-0-0-0# username user1 faxnumber 0100
se-10-0-0-0# username user1 group Sales
se-10-0-0-0# username user1 password "sales123"
se-10-0-0-0# username user1 pin 4122
se-10-0-0-0# config t
se-10-0-0-0(config)# username user1 phonenum 50190
se-10-0-0-0(config)# username user1 phonenumE164 12225550190
se-10-0-0-0(config)# end
se-10-0-0-0# show user detail username user1
Full Name:           User 1
```

```
First Name:
Last Name:      user1
Nickname:       user1
Phone:          50190
Phone (E.164):  12225550190
Language:       en_ENU
se-10-0-0-0#
```

Related Commands

Command	Description
show groups	Displays the configured groups.
show user detail username	Displays details for a specific subscriber.
show users	Displays a list of all usernames.

username generate

To generate a temporary password or PIN for a subscriber, use the `username generate` command in Cisco Unity Express EXEC mode.

```
username username generate {password | pin}
```

Syntax Description		
	<i>username</i>	User ID for the subscriber that needs the password or PIN.
	password	Authentication needed to access the Cisco Unity Express GUI.
	pin	Authentication needed to access the Cisco Unity Express telephone user interface (TUI).

Defaults Password and PIN are blank.

Command Modes Cisco Unity Express EXEC

Command History	Cisco Unity Express Version	Modification
	2.2	This command was introduced.

Usage Guidelines To display the generated password or PIN, use the `show user auth username username` command. The subscriber must change this password or PIN after logging in to the GUI or TUI.

Examples The following example generates a temporary password and PIN for user5:

```
se-10-0-0-0# username user5 generate password
se-10-0-0-0# username user5 generate pin
se-10-0-0-0# show user auth username user5
```

```
Password:          rfg889920
Pin:               7850
```

Related Commands	Command	Description
	show user auth username	Displays the authentication information (password and PIN) for the subscriber.

username notification cascade-to after

To define a rule for cascading a notification, use the **username notification cascade-to after** command in Cisco Unity Express EXEC mode. Use the **no** form of this command to remove the rule and disable cascading to the specified user.

username *user-id* **notification cascade-to** *uid* **after** *minutes*

no username *user-id* **notification cascade-to** *uid* **after** *minutes*

Syntax Description		
	<i>user-id</i>	The ID of the user for whom notification cascading is being configured.
	<i>uid</i>	The ID of the user to whom cascaded notification is being sent.
	<i>minutes</i>	The amount of time after which the notification cascade occurs.

Command Default There are no notification cascading rules defined for the subscriber.

Command Modes Cisco Unity Express EXEC

Command History	Cisco Unity Express Version	Modification
	3.0	This command was introduced.

Usage Guidelines Use the **username notification cascade-to after** command in Cisco Unity Express configuration mode to define:

- The user for whom notification cascading is being configured.
- The user to whom cascaded notification is being sent.
- The amount of time after which the notification cascade occurs.

An error message appears when:

- The specified user or profile does not exist on the local system.
- The user exists but a rule is already defined to cascade to that user.
- The user does not have a mailbox.
- The user cannot define a rule to cascade notification to himself.
- The maximum number of users have already been configured for cascading.
- The time is outside the allowed range.
- The time is within the allowed range, but a rule is already defined to cascade notification at that time.

Examples The following example define a rule to cascade notification from user22 to user 42 after 10 minutes:

```
se-10-0-0-0# username user22 notification cascade-to user42 after 10
```

Related Commands	Command	Description
	show voicemail msg-notification restriction-table	Displays information about the restriction table associated with the non-subscriber message delivery feature.
	show voicemail notification	Displays the message notification configuration.
	show voicemail notification owner cascade	Displays the details of the message notification configuration for a specific user.

username profile (phone devices)

To configure a subscriber's cell phone for message notification, use the **username profile (phone devices)** command in Cisco Unity Express EXEC mode. To remove or deactivate a parameter from the cell phone, use the **no** or **default** form of this command.

```
username username profile vm-notif-profile { cell-phone | home-phone | work-phone }
  { enable
  extra-digits digits
  phonenumber phonenumber
  preference { all | urgent }
  schedule day day-of-week active from hh:mm to hh:mm }
```

```
no username username profile vm-notif-profile { cell-phone | home-phone | work-phone }
  { enable
  extra-digits digits
  phonenumber phonenumber
  preference { all | urgent }
  schedule day day-of-week active from hh:mm to hh:mm }
```

```
default username username profile vm-notif-profile { cell-phone | home-phone | work-phone }
  preference { all | urgent }
```

Syntax Description		
<i>username</i>		User ID for the voice-mail subscriber who owns the cell phone.
enable		Enables the device in the subscriber's profile.
extra-digits <i>digits</i>		Extra digits to be sent as DTMF digits. Valid values include numbers 0 to 9, pound or hash mark (#), star (*), and plus (+) for a 1-second pause.
phonenumber <i>phonenumber</i>		Phone number of the subscriber's phone device. The system dials this number when the subscriber's mailbox receives a message. Valid values include digits 0 to 9.
preference { all urgent }		Enables the message notification type for the device. all sends all voice messages to the device. urgent sends only urgent messages to the device.
schedule day <i>day-of-week</i> active from <i>hh:mm</i> to <i>hh:mm</i>		Sets a time slot when the device can receive notifications. Valid values for <i>day-of-week</i> are 1 to 7, where 1 is Sunday, 2 is Monday, and so forth. Use the hour and half-hour on the 24-hour clock for the time. Valid values for <i>hh</i> are 00 to 24 and for <i>mm</i> either 00 or 30.

Defaults
Cell phone notifications are disabled.
Default preference is **urgent**.

Command Modes
Cisco Unity Express EXEC

Command History

Cisco Unity Express Release	Modification
2.3	This command was introduced.

Usage Guidelines

The system creates one default notification profile with the filename **vm-notif-profile** per subscriber. This filename cannot be changed.

Repeat the command with the **schedule** parameter to configure more than one time slot. This parameter changes only the specified time slots; the configuration for the other time slots is not changed.

An error message appears for the following conditions:

- The subscriber does not exist in the system.
- The subscriber does not have a mailbox.
- *phonenumber* is a restricted number.
- More than 64 digits are entered for *digits*.
- A valid phone number is not assigned to the device.
- The administrator has disabled message notification on a system-wide basis.
- The system-wide notification preference is set to **urgent** and an attempt is made to set this subscriber's preference to **all**.
- The schedule start time is later than the schedule end time.

Using the **no** or **default** form of this command results in the following conditions:

- **no username *username* profile vm-notif-profile { cell-phone | home-phone | work-phone } enable** disables the sending of notifications to the device.
- **no username *username* profile vm-notif-profile { cell-phone | home-phone | work-phone } extra-digits** removes the extra digits assigned to the device.
- **no username *username* profile vm-notif-profile { cell-phone | home-phone | work-phone } phonenumber** removes the phone number from the device and automatically disables the device.
- **no (or default) username *username* profile vm-notif-profile { cell-phone | home-phone | work-phone } preference** sets the notification preference to **urgent**.
- **no username *username* profile vm-notif-profile { cell-phone | home-phone | work-phone } schedule day *day-of-week* active from *hh:mm* to *hh:mm*** deactivates the sending of notifications for the specified time slot.

Examples

The following example configures the cell phone for subscriber user3:

```
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone phonenumber 12225550150
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone enable
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone extra-digits 9
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone all
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone schedule day 2 active from
08:00 to 17:00
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone schedule day 3 active from
08:00 to 12:00
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone schedule day 4 active from
13:00 to 16:00
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone schedule day 5 active from
08:00 to 14:00
```

```
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone schedule day 6 active from
08:00 to 17:00
```

Related Commands

Command	Description
show voicemail notification owner	Displays the voicemail notification configuration for specific subscribers or groups.
username profile email	Configures notification parameters for a subscriber's e-mail.
username profile num-pager	Configures notification parameters for a subscriber's numeric pager.
username profile text-pager	Configures notification parameters for a subscriber's text pager.

username profile email

To configure a subscriber's e-mail for message notification, use the **username profile email** command in Cisco Unity Express EXEC mode. To remove or deactivate a parameter from the e-mail device, use the **no** or **default** form of this command.

```
username username profile vm-notif-profile email
  {address email-address
  attach
  enable
  preference {all | urgent}
  schedule day day-of-week active from hh:mm to hh:mm
  text email-text}
```

```
no username username profile vm-notif-profile email
  {address email-address
  attach
  enable
  preference {all | urgent}
  schedule day day-of-week active from hh:mm to hh:mm
  text email-text}
```

```
default username username profile vm-notif-profile email attach
```

```
default username username profile vm-notif-profile email preference {all | urgent}
```

Syntax Description

<i>username</i>	User ID for the voice-mail subscriber who owns the e-mail.
address <i>email-address</i>	E-mail address to which an outgoing text notification will be sent.
attach	Enables a voice message to be attached to the outgoing e-mail notification. The default is disabled.
enable	Enables the device in the subscriber's profile.
preference { all urgent }	Enables the message notification type for the device. all sends all voice messages to the device. urgent sends only urgent messages to the device.
schedule day <i>day-of-week</i> active from <i>hh:mm</i> to <i>hh:mm</i>	Sets a time slot when the device can receive notifications. Valid values for <i>day-of-week</i> are 1 to 7, where 1 is Sunday, 2 is Monday, and so forth. Use the hour and half-hour on the 24-hour clock for the time. Valid values for <i>hh</i> are 00 to 24 and for <i>mm</i> either 00 or 30.
text <i>email-text</i>	Text of the message that will be appended to the outgoing e-mail notification. The message can contain all alphanumeric characters except question mark (?). The maximum message length is 128 characters. Enclose the text in double quotes (" ").

Defaults

E-mail notifications are disabled.
E-mail attachments are disabled.
Default preference is **urgent**.

Command Modes Cisco Unity Express EXEC

Command History	Cisco Unity Express Release	Modification
	2.3	This command was introduced.

Usage Guidelines The system creates one default notification profile with the filename **vm-notif-profile** per subscriber. This filename cannot be changed.

Repeat the command with the **schedule** parameter to configure more than one time slot. This parameter changes only the specified time slots; the configuration for the other time slots is not changed.

An error message appears for the following conditions:

- The subscriber does not exist in the system.
- The subscriber does not have a mailbox.
- The administrator has disabled message notification on a system-wide basis.
- The administrator has disabled e-mail attachments on a system-wide basis.
- E-mail is enabled before the e-mail address is defined.
- E-mail is enabled and an SMTP server is not configured.
- The system-wide notification preference is set to **urgent** and an attempt is made to set this subscriber's preference to **all**.
- The schedule start time is later than the schedule end time.
- E-mail text contains a question mark (?).
- E-mail text is longer than 128 characters.

Using the **no** or **default** form of this command results in the following conditions:

- **no username *username* profile vm-notif-profile email enable** disables the sending of notifications to the device.
- **no username *username* profile vm-notif-profile email address *email-address*** removes the email address assigned to the device and automatically disables the device.
- **no (or default) username *username* profile vm-notif-profile email attach** disables attaching voice messages to outgoing e-mail notifications for this device.
- **no (or default) username *username* profile vm-notif-profile email preference** sets the notification preference to **urgent**.
- **no username *username* profile vm-notif-profile email schedule *day day-of-week active from hh:mm to hh:mm*** deactivates the sending of notifications for the specified time slot.
- **no username *username* profile vm-notif-profile email text** removes the text associated with this device.

Examples The following example configures the cell phone for subscriber user3:

```
se-10-0-0-0# username user3 profile vm-notif-profile email address user1@company.com
se-10-0-0-0# username user3 profile vm-notif-profile email enable
se-10-0-0-0# username user3 profile vm-notif-profile email attach
se-10-0-0-0# username user3 profile vm-notif-profile email all
```

```
se-10-0-0-0# username user3 profile vm-notif-profile email schedule day 3 active from
08:00 to 10:00
se-10-0-0-0# username user3 profile vm-notif-profile email text "Sales meeting scheduled
in main office conference room C 1:00-3:00 p.m. 4/19/06"
```

Related Commands

Command	Description
show voicemail notification owner	Displays the voicemail notification configuration for specific subscribers or groups.
username profile (phone devices)	Configures notification parameters for a subscriber's cell phone.
username profile num-pager	Configures notification parameters for a subscriber's numeric pager.
username profile text-pager	Configures notification parameters for a subscriber's text pager.

username profile num-pager

To configure a subscriber's numeric pager for message notification, use the **username profile num-pager** command in Cisco Unity Express EXEC mode. To remove or deactivate a parameter from the home phone, use the **no** or **default** form of this command.

```
username username profile vm-notif-profile num-pager
  { enable
  extra-digits digits
  phonenumber phonenumber
  preference { all | urgent }
  schedule day day-of-week active from hh:mm to hh:mm }
```

```
no username username profile vm-notif-profile num-pager
  { enable
  extra-digits digits
  phonenumber phonenumber
  preference { all | urgent }
  schedule day day-of-week active from hh:mm to hh:mm }
```

```
default username username profile vm-notif-profile num-pager preference { all | urgent }
```

Syntax Description		
	<i>username</i>	User ID for the voice-mail subscriber who owns the numeric pager.
	enable	Enables the device in the subscriber's profile.
	extra-digits <i>digits</i>	Extra digits to be sent as DTMF digits. Valid values include numbers 0 to 9, pound or hash mark (#), star (*), and plus (+) for a 1-second pause.
	phonenumber <i>phonenumber</i>	Phone number of the subscriber's numeric pager. The system dials this number when the subscriber's mailbox receives a message. Valid values include digits 0 to 9.
	preference { all urgent }	Enables the message notification type for the device. all sends all voice messages to the device. urgent sends only urgent messages to the device.
	schedule day <i>day-of-week</i> active from <i>hh:mm</i> to <i>hh:mm</i>	Sets a time slot when the device can receive notifications. Valid values for <i>day-of-week</i> are 1 to 7, where 1 is Sunday, 2 is Monday, and so forth. Use the hour and half-hour on the 24-hour clock for the time. Valid values for <i>hh</i> are 00 to 24 and for <i>mm</i> either 00 or 30.

Defaults Numeric pager notifications are disabled.
Default preference is **urgent**.

Command Modes Cisco Unity Express EXEC

Command History	Cisco Unity Express Release	Modification
	2.3	This command was introduced.

Usage Guidelines

The system creates one default notification profile with the filename **vm-notif-profile** per subscriber. This filename cannot be changed.

Repeat the command with the **schedule** parameter to configure more than one time slot. This parameter changes only the specified time slots; the configuration for the other time slots is not changed.

An error message appears for the following conditions:

- The subscriber does not exist in the system.
- The subscriber does not have a mailbox.
- *phonenumber* is a restricted number.
- More than 64 digits are entered for *digits*.
- A valid phone number is not assigned to the device.
- The administrator has disabled message notification on a system-wide basis.
- The system-wide notification preference is set to **urgent** and an attempt is made to set this subscriber's preference to **all**.
- The schedule start time is later than the schedule end time.

Using the **no** or **default** form of this command results in the following conditions:

- **no username *username* profile vm-notif-profile num-pager enable** disables the sending of notifications to the device.
- **no username *username* profile vm-notif-profile num-pager extra-digits** removes the extra digits assigned to the device.
- **no username *username* profile vm-notif-profile num-pager phonenumber** removes the phone number from the device and automatically disables the device.
- **no (or default) username *username* profile vm-notif-profile num-pager preference** sets the notification preference to **urgent**.
- **no username *username* profile vm-notif-profile num-pager schedule day *day-of-week* active from *hh:mm* to *hh:mm*** deactivates the sending of notifications for the specified time slot.

Examples

The following example configures the cell phone for subscriber user3:

```
se-10-0-0-0# username user3 profile vm-notif-profile num-pager phonenumber 12225550150
se-10-0-0-0# username user3 profile vm-notif-profile num-pager enable
se-10-0-0-0# username user3 profile vm-notif-profile num-pager extra-digits 9
se-10-0-0-0# username user3 profile vm-notif-profile num-pager all
se-10-0-0-0# username user3 profile vm-notif-profile num-pager schedule day 2 active from
08:00 to 17:00
se-10-0-0-0# username user3 profile vm-notif-profile num-pager schedule day 3 active from
08:00 to 12:00
se-10-0-0-0# username user3 profile vm-notif-profile num-pager schedule day 4 active from
13:00 to 16:00
se-10-0-0-0# username user3 profile vm-notif-profile num-pager schedule day 5 active from
08:00 to 14:00
se-10-0-0-0# username user3 profile vm-notif-profile num-pager schedule day 6 active from
08:00 to 17:00
```

Related Commands	Command	Description
	show voicemail notification owner	Displays the voicemail notification configuration for specific subscribers or groups.
	username profile (phone devices)	Configures notification parameters for a subscriber's cell phone.
	username profile email	Configures notification parameters for a subscriber's e-mail.
	username profile text-pager	Configures notification parameters for a subscriber's text pager.

username profile text-pager

To configure a subscriber's text pager for message notification, use the **username profile text-pager** command in Cisco Unity Express EXEC mode. To remove or deactivate a parameter from the text pager device, use the **no** or **default** form of this command.

```
username username profile vm-notif-profile text-pager
  {address email-address
  enable
  preference {all | urgent}
  schedule day day-of-week active from hh:mm to hh:mm
  text email-text}
```

```
no username username profile vm-notif-profile text-pager
  {address email-address
  enable
  preference {all | urgent}
  schedule day day-of-week active from hh:mm to hh:mm
  text message-text}
```

```
default username username profile vm-notif-profile text-pager preference {all | urgent}
```

Syntax	Description
<i>username</i>	User ID for the voice-mail subscriber who owns the text pager.
address <i>email-address</i>	E-mail address to which an outgoing text notification will be sent.
enable	Enables the device in the subscriber's profile.
preference { all urgent }	Enables the message notification type for the device. all sends all voice messages to the device. urgent sends only urgent messages to the device.
schedule day <i>day-of-week</i> active from <i>hh:mm</i> to <i>hh:mm</i>	Sets a time slot when the device can receive notifications. Valid values for <i>day-of-week</i> are 1 to 7, where 1 is Sunday, 2 is Monday, and so forth. Use the hour and half-hour on the 24-hour clock for the time. Valid values for <i>hh</i> are 00 to 24 and for <i>mm</i> either 00 or 30.
text <i>message-text</i>	Text of the message that will be appended to the outgoing text pager notification. The message can contain all alphanumeric characters except question mark (?). The maximum message length is 128 characters.

Defaults
Text pager notifications are disabled.
Default preference is **urgent**.

Command Modes
Cisco Unity Express EXEC

Command History	Cisco Unity Express Release	Modification
	2.3	This command was introduced.

Usage Guidelines

The system creates one default notification profile with the filename **vm-notif-profile** per subscriber. This filename cannot be changed.

Repeat the command with the **schedule** parameter to configure more than one time slot. This parameter changes only the specified time slots; the configuration for the other time slots is not changed.

An error message appears for the following conditions:

- The subscriber does not exist in the system.
- The subscriber does not have a mailbox.
- The administrator has disabled message notification on a system-wide basis.
- Text paging is enabled before the e-mail address is defined.
- Text paging is enabled and an SMTP server is not configured.
- The system-wide notification preference is set to **urgent** and an attempt is made to set this subscriber's preference to **all**.
- The schedule start time is later than the schedule end time.
- Message text contains a question mark (?).
- Message text is longer than 128 characters.

Using the **no** or **default** form of this command results in the following conditions:

- **no username *username* profile vm-notif-profile text-pager enable** disables the sending of notifications to the device.
- **no username *username* profile vm-notif-profile text-pager address *email-address*** removes the e-mail address assigned to the device and automatically disables the device.
- **no (or default) username *username* profile vm-notif-profile text-pager preference** sets the notification preference to **urgent**.
- **no username *username* profile vm-notif-profile text-pager schedule day *day-of-week* active from *hh:mm* to *hh:mm*** deactivates the sending of notifications for the specified time slot.
- **no username *username* profile vm-notif-profile text-pager text** removes the text associated with this device.

Examples

The following example configures the cell phone for subscriber user3:

```
se-10-0-0-0# username user3 profile vm-notif-profile text-pager address user1@company.com
se-10-0-0-0# username user3 profile vm-notif-profile text-pager enable
se-10-0-0-0# username user3 profile vm-notif-profile text-pager all
se-10-0-0-0# username user3 profile vm-notif-profile text-pager schedule day 3 active from
08:00 to 10:00
se-10-0-0-0# username user3 profile vm-notif-profile text-pager text "Sales meeting
scheduled in main office conference room C 1:00-3:00 p.m. 4/19/06"
```

Related Commands

Command	Description
show voicemail notification owner	Displays the voicemail notification configuration for specific subscribers or groups.
username profile (phone devices)	Configures notification parameters for a subscriber's cell phone.

Command	Description
username profile email	Configures notification parameters for a subscriber's e-mail.
username profile num-pager	Configures notification parameters for a subscriber's numeric pager.

