



WSG Lookup Priority List Configuration Mode Commands

Command Modes

The Wireless Security Gateway Lookup Priority List Configuration Mode is used to set the priority of subnet components for site-to-site tunnels. This is a Security Gateway (SecGW) feature [VPC-VSM only].

Exec > Global Configuration > WSG-Lookup Priority List Configuration

configure > wsg-lookup

Entering the above command sequence results in the following prompt:

```
host_name(config-wsg-lookup) #
```



Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- [do show, on page 1](#)
- [end, on page 2](#)
- [exit, on page 2](#)
- [priority, on page 2](#)

do show

Executes all **show** commands while in Configuration mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

do show

Usage Guidelines

Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.

**Caution**

There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

```
Failure: Cannot execute 'do show support' command from Config mode.
```

end

Exits the current configuration mode and returns to the Exec mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description**end****Usage Guidelines**

Use this command to return to the Exec mode.

exit

Exits the current mode and returns to the parent configuration mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description**exit****Usage Guidelines**

Use this command to return to the parent configuration mode.

priority

Sets the priority level for a WSG subnet combination (source and destination netmasks). It also disables an existing priority for a specified subnet combination. (VPC-VSM only).

Product

SecGW

Privilege

Security Administrator

Command Modes

Exec > Global Configuration > WSG-Lookup Priority List Configuration
configure > wsg-lookup

Entering the above command sequence results in the following prompt:

Syntax Description `[no] priority priority_level source-netmask subnet_size destination netmask subnet_size`

no

Disables the priority for the specified subnet combination.

priority *priority_level*

Specifies the priority level for the subnet combination as an integer from 1 through 6.

source-netmask *subnet_size*

Specifies the subnet size for the source netmask as an integer from 1 through 128.

destination netmask *subnet_size*

Specifies the subnet size for the destination netmask as an integer from 1 through 128.

Usage Guidelines

Use this command to set the priority level for a WSG subnet combination (source and destination netmasks). It can also be used to disable an existing priority for a specified subnet combination.

Example

The following command sets a priority of 2 for a subnet combination with a /32 subnet size.

```
priority 2 source-netmask 32 destination netmask 32
```

■ priority