



# PDG Service Configuration Mode Commands

The PDG Service Configuration Mode is used to specify the properties required for the UEs in the WLAN (Wireless Local Access Network) to interface with the Packet Data Gateway/Tunnel Termination Gateway (PDG/TTG).

## Command Modes

Exec > Global Configuration > Context Configuration > PDG Service Configuration

**configure** > **context** *context\_name* > **pdg-service** *service\_name*

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-pdg-service) #
```



## Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- [aaa attribute, on page 1](#)
- [associate sgtp-service, on page 2](#)
- [certificate-selection, on page 3](#)
- [bind, on page 4](#)
- [do show, on page 6](#)
- [end, on page 6](#)
- [exit, on page 6](#)
- [ip gnp-qos-dscp, on page 7](#)
- [ip qos-dscp, on page 10](#)
- [ip source-violation, on page 12](#)
- [max-tunnels-per-ue, on page 14](#)
- [plmn id, on page 14](#)
- [setup-timeout, on page 15](#)

## aaa attribute

Sets the attributes that the system uses in AAA messages.

## Product

PDG/TTG

<b>Privilege</b>	Security Administrator, Administrator
<b>Command Modes</b>	Exec > Global Configuration > Context Configuration > PDG Service Configuration <b>configure &gt; context</b> <i>context_name</i> > <b>pdg-service</b> <i>service_name</i> Entering the above command sequence results in the following prompt: <pre>[context_name]host_name(config-pdg-service)#</pre>
<b>Syntax Description</b>	<b>aaa attribute { 3gpp-negotiated-qos-profile</b> <i>string</i> } <b>no aaa attribute</b>  <b>3gpp-negotiated-qos-profile</b> <i>string</i> Specifies the 3GPP negotiated QoS profile to use in AAA messages during IMS emergency call handling as an alphanumeric string of 1 through 31 characters.  <b>no aaa attribute</b> Removes a previously configured AAA attribute.
<b>Usage Guidelines</b>	Specifies the 3GPP negotiated QoS profile to use in AAA messages during IMS emergency call handling.

**Example**

The following command specifies the 3GPP negotiated QoS profile to use during IMS emergency call handling:

```
aaa attribute 3gpp-negotiated-qos-profile 100
```

## associate sgtp-service

Identifies the SGTP service to be associated with the PDG service to enable TTG functionality on the PDG/TTG. TTG functionality supports GTP-C (GTP control plane) messaging and GTP-U (GTP user data plane) messaging between the TTG and the GGSN over the Gn' interface.

**Important**

This command can be used before the associated service instance is created and configured but care should be used to match the service names.

**Product**

PDG/TTG

**Privilege**

Security Administrator, Administrator

**Command Modes**

Exec > Global Configuration > Context Configuration > PDG Service Configuration

**configure > context** *context\_name* > **pdg-service** *service\_name*

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-pdg-service)#
```

**Syntax Description** `[ no ] associate sgtp-service sgtp_service_name [ context sgtp_context_name ]`

**no**

Removes the service association definition from the configuration.

**sgtp-service *sgtp\_service\_name***

Specifies which SGTP service configuration, by naming the SGTP service instance, to associate with this PDG service.

*sgtp\_service\_name* is an alphanumeric string of 1 through 63 characters with no spaces.

**context *sgtp\_context\_name***

Defines the context in which the SGTP service was created. If no context is specified, the current context is used.

*sgtp\_context\_name* is an alphanumeric string of 1 through 63 characters with no spaces.

**Usage Guidelines**

Use this command to associate the SGTP service to be associated with the PDG service to enable TTG functionality on the PDG/TTG.

**Example**

The following command associates SGTP service *sgtp\_service\_1* with this PDG service:

```
associate sgtp-service sgtp_service_1 context sgtp_context_1
```

## certificate-selection

Configures the PDG/TTG to select the trusted certificate (and the private key for calculating the AUTH payload) to be included in the first IKE\_AUTH message from the PDG/TTG based on the APN (Access Point Name). The selected certificate is associated with the APN included in the IDr payload of the first IKE\_AUTH message from the UE.

**Product**

PDG/TTG

**Privilege**

Security Administrator, Administrator

**Command Modes**

Exec > Global Configuration > Context Configuration > PDG Service Configuration

```
configure > context context_name > pdg-service service_name
```

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-pdg-service) #
```

**Syntax Description**

`[ no ] certificate-selection apn-based  
default certificate-selection`

**certificate-selection apn-based**

Selects a trusted certificate for the first IKE-AUTH message based on the APN.

**no certificate-selection**

Disables APN-based certificate selection and resumes sending a certificate bound to a crypto template.

**default certificate-selection**

Sets the default certificate selection method to a certificate bound to a crypto template.

**Usage Guidelines**

Configures the PDG/TTG to select the trusted certificate to be included in the first IKE\_AUTH message based on the APN.

**Example**

Use the following example to enable APN-based certificate selection:

```
certificate-selection apn-based
```

# bind

Binds the PDG service IP address to a crypto template and specifies the maximum number of sessions the PDG service supports.

**Product**

PDG/TTG

**Privilege**

Security Administrator, Administrator

**Command Modes**

Exec > Global Configuration > Context Configuration > PDG Service Configuration

```
configure > context context_name > pdg-service service_name
```

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-pdg-service)#
```

**Syntax Description**

```
[ no ] bind address ipv4_address { crypto-template string } mode { ttg | pdg } [ max-sessions number ]
```

**no**

Removes a previously configured binding.

**bind address ipv4\_address**

Specifies the IPv4 address of the PDG service with which the UE attempts to establish an IKEv2/IPSec tunnel. This address must be a valid IP address within the context.

This is a mandatory parameter.

**crypto-template *string***

Specifies the name of the crypto template to be bound to the PDG service. This is the name of the IPsec policy to be used as a template for PDG/TTG subscriber session IPsec policies. The crypto template includes most of the IPsec and IKEv2 parameters for keepalive, lifetime, NAT-T, and cryptographic and authentication algorithms. There must be one crypto template per PDG service.

This is a mandatory parameter.

*string* is an alphanumeric string of 0 through 127 characters.

**mode { *ttg* | *pdg* }**

Default: There is no default value.

Specifies whether the PDG service provides TTG or PDG functionality, as follows:

- In TTG mode, PDN connectivity is provided through the GGSN. PDG functionality is provided by the combined TTG and GGSN.
- In PDG mode, PDN connectivity and PDG functionality are provided directly through the PDG service.

This is a mandatory parameter.

**Important**

PDG mode is not supported in this software release.

**Dependencies:**

When you configure the PDG service to be in TTG mode, you must also configure the SGTP service using the **associate sgtp-service** command, as the TTG needs to connect with the GGSN to complete the PDG functionality.

The following behaviors occur when the PDG service operates in TTG mode:

- If the SGTP service associated with PDG service is not configured, the PDG service is not started.
- If the SGTP service associated with PDG service is not started, the PDG service is not started.
- If the SGTP service associated with PDG service is stopped, the PDG service is stopped.
- If the SGTP service associated with PDG service is re-started, the PDG service is re-started.
- If the SGTP service is not yet configured, whenever the SGTP service is started, the PDG service is started.

Note that starting or stopping the PDG service has no impact on the SGTP service.

**max-sessions *number***

Specifies the maximum number of sessions to be supported by the PDG service as an integer from 0 through 1000000. Default: 1000000

If the max-sessions value is changed on an existing system, the new value takes effect immediately if it is higher than the current value. If the new value is lower than the current value, existing sessions remain established, but no new sessions are permitted until usage falls below the newly-configured value.

**Usage Guidelines**

Use this command in PDG Service Configuration Mode to bind the IP address used as the connection point for establishing IKEv2/IPsec sessions to a crypto template. You can also use it to define the maximum number of sessions the PDG service supports.

**Example**

The following command binds a PDG service with an IP address of *10.2.3.4* to the crypto template *crypto\_template\_1*, sets the mode to TTG, and sets the maximum number of sessions to *500000*:

```
bind address 10.2.3.4 crypto-template crypto_template_1 mode ttg
max-sessions 500000
```

## do show

Executes all **show** commands while in Configuration mode.

**Product**

All

**Privilege**

Security Administrator, Administrator

**Syntax Description****do show****Usage Guidelines**

Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.

**Caution**

There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

```
Failure: Cannot execute 'do show support' command from Config mode.
```

## end

Exits the current configuration mode and returns to the Exec mode.

**Product**

All

**Privilege**

Security Administrator, Administrator

**Syntax Description****end****Usage Guidelines**

Use this command to return to the Exec mode.

## exit

Exits the current mode and returns to the parent configuration mode.

<b>Product</b>	All
<b>Privilege</b>	Security Administrator, Administrator
<b>Syntax Description</b>	<b>exit</b>
<b>Usage Guidelines</b>	Use this command to return to the parent configuration mode.

## ip gnp-qos-dscp

Configures the quality of service (QoS) differentiated service code point (DSCP) used when sending data packets over the Gn' interface in the uplink direction.

<b>Product</b>	PDG/TTG
<b>Privilege</b>	Security Administrator, Administrator
<b>Command Modes</b>	Exec > Global Configuration > Context Configuration > PDG Service Configuration

**configure > context** *context\_name* > **pdg-service** *service\_name*

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-pdg-service)#
```

<b>Syntax Description</b>	<pre>[ no ] ip gnp-qos-dscp { background <i>dscp</i>   conversational<i>dscp</i>   interactive <i>dscp</i>   streaming <i>dscp</i>   interactive [ traffic-handling-priority <i>traffic_priority</i> ] { allocation-retention-priority <i>allocation_retention_priority</i> } } + default ip gnp-qos-dscp</pre>
---------------------------	---

**no**

Disables the overriding of the ToS (Type of Service) field and enables the pass-through option.

### **background** *dscp*

Specifies the DSCP marking to be used for packets of sessions subscribed to the 3GPP background class, in which the data transfer is not time-critical (for example, in e-mail exchanges). This traffic class is the lowest QoS.

*dscp*: Sets the DSCP for the specified traffic class. See the *dscp* section below.

### **conversational** *dscp*

Specifies the DSCP marking to be used for packets of sessions subscribed to the 3GPP conversational class, in which there is a constant flow of traffic in both the uplink and downlink direction. This traffic class is the highest QoS.

*dscp*: Sets the DSCP for the specified traffic pattern. See the *dscp* section below.

**interactive [ traffic-handling-priority *traffic\_priority* ]**

Specifies the DSCP marking to be used for packets of sessions subscribed to three possible traffic priorities in the 3GPP interactive class, in which there is an intermittent flow of packets in the uplink and downlink direction. This traffic class has a higher QoS than the background class, but not as high as the streaming class.

*traffic\_priority* is the 3GPP traffic handling priority and can be the integers 1, 2 or 3.

**allocation-retention-priority *allocation\_retention\_priority***

Specifies the DSCP for the interactive class if the allocation priority is present in the QoS profile.

*allocation-retention-priority* can be the integers 1, 2, or 3.

DSCP uses the values in the following table based on the traffic handling priority and allocation/retention priority if the allocation priority is present in the QoS profile.

Allocation Priority	1	2	3
Traffic Handling Priority			
1	ef	ef	ef
2	af21	af21	af21
3	af21	af21	af21

**Important**

If you only configure DSCP marking for interactive traffic classes without specifying ARP, it may not properly take effect. The CLI allows this scenario for backward compatibility however, it is recommended that you configure all three values.

**streaming *dscp***

Specifies the DSCP marking to be used for packets of sessions subscribed to the 3GPP streaming class, in which there is a constant flow of data in either in the uplink or downlink direction. This traffic class has a higher QoS than the interactive class, but not as high as the conversational class.

*dscp*: Set the DSCP for the specified traffic pattern. See the *dscp* section below.

***dscp***

Default:

- background: be
- interactive
- Traffic Priority 1: ef
- Traffic Priority 1: af21
- Traffic Priority 1: af21
- streaming: af11
- conversational: ef

Specifies the DSCP for the specified traffic pattern. *dscp* can be configured to any one of the following:



- af11: Assured Forwarding 11 per-hop-behavior (PHB)
- af12: Assured Forwarding 12 PHB
- af13: Assured Forwarding 13 PHB
- af21: Assured Forwarding 21 PHB
- af22: Assured Forwarding 22 PHB
- af23: Assured Forwarding 23 PHB
- af31: Assured Forwarding 31 PHB
- af32: Assured Forwarding 32 PHB
- af33: Assured Forwarding 33 PHB
- af41: Assured Forwarding 41 PHB
- af42: Assured Forwarding 42 PHB
- af43: Assured Forwarding 43 PHB
- be: Best effort forwarding PHB
- ef: Expedited forwarding PHB

+

More than one of the above keywords can be entered within a single command.

**Usage Guidelines**

DSCP levels can be assigned to specific traffic patterns in order to ensure that data packets are delivered according to the precedence with which they're tagged. The diffserv markings are applied to the IP header of every subscriber data packet transmitted over the Gn' interface(s).

The four traffic patterns have the following order of precedence: background (lowest), interactive, streaming, and conversational (highest). Data packets falling under the category of each of the traffic patterns are tagged with a DSCP that further indicate their precedence as shown in the following tables:

Drop Precedence	Class			
	Class 1	Class 2	Class 3	Class 4
Low	af11	af21	af31	af41
Medium	af12	af22	af32	af41
High	af13	af23	af33	af43

Precedence (low to high)	DSCP
1	Best Effort (be)
2	Class 1
3	Class 2
4	Class 3
5	Class 4
6	Express Forwarding (ef)

The DSCP level can be configured for multiple traffic patterns within a single instance of this command.

**Example**

The following command configures the DSCP level for the streaming traffic pattern to be ef:  
**ip gnp-qos-dscp streaming ef**

The following command configures the DSCP levels for the conversational, streaming, interactive and background traffic patterns to be ef, af22, and af41, respectively:  
**ip gnp-qos-dscp conversational ef streaming ef interactive af22 background af41**

## ip qos-dscp

Configures the quality of service (QoS) differentiated service code point (DSCP) used when sending data packets over the Wu interface in the downlink direction.

<b>Product</b>	PDG/TTG
<b>Privilege</b>	Security Administrator, Administrator
<b>Command Modes</b>	Exec > Global Configuration > Context Configuration > PDG Service Configuration

**configure > context context\_name > pdg-service service\_name**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-pdg-service)#
```

**Syntax Description**

```
ip qos-dscp { qci { 1 { dscp-pt } | 2 { dscp-pt } | 3 { dscp-pt } | 4 { dscp-pt } | 5 { allocation-retention-priority 1..3 | dscp-pt } | 6 { allocation-retention-priority 1..3 | dscp-pt } | 7 { allocation-retention-priority 1..3dscp | dscp-pt } | 8 { allocation-retention-priority 1..3 | dscp-pt } | 9 { dscp-pt } + }
no ip qos-dscp { qci { 1 | 2 | 3 | 4 | 5 { allocation-retention-priority 1..3 | dscp-pt } | 6 { allocation-retention-priority 1..3 | dscp-pt } | 7 { allocation-retention-priority 1..3 | dscp-pt } | 8 { allocation-retention-priority 1..3 | dscp-pt } | 9 { + }
```

**allocation-retention-priority**

Specifies the DSCP for interactive class if the allocation priority is present in the QOS profile.

*allocation-retention-priority* can be the integers 1, 2, or 3.

DSCP values use the following matrix to map based on traffic handling priority and Alloc/Retention priority if the allocation priority is present in the QOS profile.

The following table shows the DSCP value matrix for *allocation-retention-priority*.

**Table 1: Default DSCP Value Matrix**

	Allocation Priority 1	Allocation Priority 2	Allocation Priority 3
<b>Traffic Handling Priority</b>			
<b>1</b>	ef	ef	ef

	Allocation Priority 1	Allocation Priority 2	Allocation Priority 3
2	af21	af21	af21
3	af21	af21	af21

**qci**

Configures the QCI attribute of QoS. Here the *qci\_val* is the QCI for which the negotiate limit is being set, it ranges from 1 to 9.

**dscp**

Default QCI:

- 1: ef
- 2: ef
- 3: af11
- 4: af11
- 5: ef
- 6: ef
- 7: af21
- 8: af21
- 9: be

Specifies the DSCP for the specified traffic pattern. *dscp* can be configured to any one of the following:

• <b>af11</b> : Assured Forwarding 11 per-hop-behavior (PHB)	• <b>af32</b> : Assured Forwarding 32 PHB
• <b>af12</b> : Assured Forwarding 12 PHB	• <b>af33</b> : Assured Forwarding 33 PHB
• <b>af13</b> : Assured Forwarding 13 PHB	• <b>af41</b> : Assured Forwarding 41 PHB
• <b>af21</b> : Assured Forwarding 21 PHB	• <b>af42</b> : Assured Forwarding 42 PHB
• <b>af22</b> : Assured Forwarding 22 PHB	• <b>af43</b> : Assured Forwarding 43 PHB
• <b>af23</b> : Assured Forwarding 23 PHB	• <b>be</b> : Best effort forwarding PHB
• <b>af31</b> : Assured Forwarding 31 PHB	• <b>ef</b> : Expedited forwarding PHB

+

More than one of the above keywords can be entered within a single command.

**Usage Guidelines**

You can assign DSCP to specific traffic patterns to ensure that data packets are delivered according to the precedence with which they are tagged. The diffserv markings are applied to the outer IP header of every GTP data packet. The diffserv marking of the inner IP header is not modified.

The traffic patterns are defined by QCI (1 to 9). Data packets falling under the category of each of the traffic patterns are tagged with a DSCP that further indicate their precedence as shown in the following tables:

**Table 2: Class structure for assured forwarding (af) levels**

Drop Precedence	Class			
	Class 1	Class 2	Class 3	Class 4
Low	af11	af21	af31	af41
Medium	af12	af22	af32	af41
High	af13	af23	af33	af43

**Table 3: DSCP Precedence**

Precedence (low to high)	DSCP
0	Best Effort (be)
1	Class 1
2	Class 2
3	Class 3
4	Class 4
5	Express Forwarding (ef)

The DSCP level can be configured for multiple traffic patterns within a single instance of this command.

The no ip qos command can be issued to remove a QOS setting and return it to it's default setting.

**Example**

The following command configures the DSCP level for QCI to be Expedited Forwarding,ef:

```
ip qos-dscp qci 1 ef
```

## ip source-violation

Sets the parameters for IP source validation. Source validation is useful if packet spoofing is suspected, or for verifying packet routing and labeling within the network.

**Product**

PDG/TTG

**Privilege**

Security Administrator, Administrator

**Command Modes**

Exec > Global Configuration > Context Configuration > PDG Service Configuration

**configure > context** *context\_name* > **pdg-service** *service\_name*

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-pdg-service)#
```

**Syntax Description**

```
ip source-violation { clear-on-valid-packet | drop-limit num period secs }  
default ip source-violation { drop-limit num period secs }  
no ip source-violation clear-on-valid-packet
```

**clear-on-valid-packet**

Configures the service to reset the drop-limit counters upon receipt of a properly addressed packet. Default: disabled

**drop-limit *num***

Sets the maximum number of allowed IP source violations within the detection period before dropping a call. If *num* is not specified, the value is set to the default value.

*num* is an integer from 1 to 1000000. Default: 10

**period *secs***

Sets the detection period (in seconds) for IP source violations as an integer from 1 through 1000000. If *secs* is not specified, the value is set to the default value. Default: 120

**default ip source-violation { drop-limit *num* period *secs* }**

Sets or restores the IP source violation detection defaults, as follows:

- **drop-limit:** Sets or restores the maximum number of IP source violations within the detection period before dropping the call to the default value of 10.
- **period:** Sets or restores the detection period for IP source violations to the default value of 120 seconds.

**no ip source-violation clear-on-valid-packet**

The drop-limit counters are not reset upon receipt of a properly addressed packet.

**Usage Guidelines**

Source validation is useful if packet spoofing is suspected or for verifying packet routing and labeling within the network.

Source validation requires the source address of received packets to match the IP address assigned to the subscriber (either statically or dynamically) during the session.

This function operates in the following manner: When a subscriber packet is received with a source IP address violation, the system increments the IP source violation drop-limit counter and starts the timer for the IP source violation period. Every subsequent packet received with a bad source address during the IP source violation period causes the drop-limit counter to increment. For example, if the drop-limit is set to 10, after 10 source violations, the call is dropped. The detection period timer continues to count throughout this process.

**Example**

The following command sets the drop limit to 15 and leaves the other values at their default values:

```
ip source-violation drop-limit 15
```

## max-tunnels-per-ue

Specifies the maximum number of IKEv2/IPSec tunnels allowed per UE by the PDG/TTG. This maximum number is specified per PDG service.

---

### Product

PDG/TTG

---

### Privilege

Security Administrator, Administrator

---

### Command Modes

Exec > Global Configuration > Context Configuration > PDG Service Configuration

```
configure > context context_name > pdg-service service_name
```

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-pdg-service)#
```

---

### Syntax Description

```
max-tunnels-per-ue integer  
default max-tunnels-per-ue
```

#### *integer*

Specifies the maximum number of IKEv2/IPSec tunnels allowed per UE as an integer from 1 to 11. Default: 11

#### **default max-tunnels-per-ue**

Sets the maximum number of IKEv2/IPSec tunnels allowed per UE to its default value, which is 11.

---

### Usage Guidelines

Use this command to set the maximum number of IKEv2/IPSec tunnels allowed per UE.

#### **Example**

Use the following command to set the maximum number of IKEv2/IPSec tunnels allowed per UE to 2:

```
max-tunnels-per-ue 2
```

## plmn id

Configures location specific mobile network identifiers used to help translate local emergency and service-related numbers. Default is disabled.

---

### Product

PDG/TTG

---

### Privilege

Security Administrator, Administrator

**Command Modes**

Exec > Global Configuration > Context Configuration > PDG Service Configuration

**configure** > **context** *context\_name* > **pdg-service** *service\_name*

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-pdg-service)#
```

**Syntax Description**

**plmn id mcc** *mcc\_number* **mnc** *mnc\_number*  
**no plmn id mcc** *mcc\_number* **mnc** *mnc\_number*

**mcc** *mnc\_number*

Specifies the mobile country code (MCC) portion of the PLMN identifier as an integer from 200 through 999.

**mnc** *mnc\_number*

Specifies the mobile network code (MNC) portion of the PLMN identifier as a 2- or 2-digit integer from 00 through 999.

**no plmn id mcc** *mcc\_number* **mnc** *mnc\_number*

Removes a previously configured PLMN identifier for the PDG service.

**Usage Guidelines**

The PLMN ID is included in the RAI (Routing Area Identity) field of the PDP Create Request messages sent to the GGSN. Multiple PDG services can be configured with the same PLMN identifier. Up to five PLMN IDs can be configured for each PDG service.

**Example**

The following command configures the PLMN identifier with an MCC of 462 and MNC of 2:

```
plmn id mcc 462 mnc 02
```

## setup-timeout

Specifies the maximum time allowed to set up a session.

**Product**

PDG/TTG

**Privilege**

Security Administrator, Administrator

**Command Modes**

Exec > Global Configuration > Context Configuration > PDG Service Configuration

**configure** > **context** *context\_name* > **pdg-service** *service\_name*

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-pdg-service)#
```

**Syntax Description**

**setup-timeout** *integer*  
**default setup-timeout**

**setup-timeout integer**

Sets the session setup timeout value (in seconds) as an integer from 2 through 300. Default: 60

**default setup-timeout**

Sets or restores the default session setup timer value to 60 seconds.

---

**Usage Guidelines**

The PDG/TTG clears both the user session and tunnels if a call does not initiate successfully before the session setup timer expires.

**Example**

The following command sets the session setup timeout value to the default value of 60 seconds:

```
default setup-timeout
```