



## show context all

---

This chapter includes the **show context all** command output tables.

- [show context all, on page 1](#)

## show context all

*Table 1: show context all Command Output Descriptions*

Field	Description
Context Name	The name of a configured context.
Context ID	The system ID of the context.
State	The current state of the context. The possible states are: <b>Active:</b> The VPN Manager task is running and is ready to respond to the requests. <b>Initializing:</b> The Context is configured but not yet started. The VPN Controller knows about it and is in the process of starting the VPN Manager. In other words, the VPN Manager services are not available yet. <b>Inactive:</b> The VPN Manager is configured but either the task is not running yet or the VPN Manager has just crashed and the restart process is going on.

