



# Remote Server List Configuration Mode Commands

---

## Command Modes

The Remote Server List Configuration Mode manages the list of server addresses to which a context has access.

Exec > Global Configuration > Remote Server List Configuration

**configure** > **context** *context\_name* > **remote-server-list name** *list\_name*

[*context\_name*] *host\_name* (config-remote-server-list) #



## Important

Available commands or keywords/variables vary based on platform type, product version, and installed license(s).

- [address](#), on page 2
- [do show](#), on page 3
- [end](#), on page 4
- [exit](#), on page 5

# address

Configures or removes an IP address to a remote server.

---

## Product

All

---

## Privilege

Security Administrator, Administrator

---

## Command Modes

Exec > Global Configuration > Remote Server List Configuration

**configure** > **context** *context\_name* > **remote-server-list name** *list\_name*

[*context\_name*] *host\_name* (config-remote-server-list) #

---

## Syntax Description

**address** *remote-ip-address* **netmask** *ip\_netmask*

**no address** *remote-ip-address* **netmask** *ip\_netmask*

### no

Removes the specified IP address from the Remote Server List.

### **remote-ip-address netmask ip\_netmask**

Specifies the IP address and netmask of the remote server in IPv4 dotted-decimal or IPv6 colon-separated-hexadecimal notation.

---

## Usage Guidelines

Use this command to create and maintain a list of remote servers accessible by this context.

### Example

```
address 193.154.78.9 netmask 255.255.255.0
```

# do show

Executes all **show** commands while in Configuration mode.

---

**Product**

All

---

**Privilege**

Security Administrator, Administrator

---

**Syntax Description**

**do show**

---

**Usage Guidelines**

Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.



---

**Caution**

There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

```
Failure: Cannot execute 'do show support' command from Config mode.
```

---

# end

Exits the current configuration mode and returns to the Exec mode.

---

**Product** All

---

**Privilege** Security Administrator, Administrator

---

**Syntax Description** `end`

---

**Usage Guidelines** Use this command to return to the Exec mode.

# exit

Exits the current mode and returns to the parent configuration mode.

---

**Product**

All

---

**Privilege**

Security Administrator, Administrator

---

**Syntax Description**

**exit**

---

**Usage Guidelines**

Use this command to return to the parent configuration mode.

■ exit