



Co-Located SPGW Selection for Emergency Bearer

This chapter describes the following topics:

- [Feature Summary and Revision History, on page 1](#)
- [Feature Changes, on page 2](#)
- [Command Changes, on page 2](#)
- [Performance Indicator Changes, on page 2](#)

Feature Summary and Revision History

Summary Data

| | |
|--|--|
| Applicable Product(s) or Functional Area | MME |
| Applicable Platform(s) | <ul style="list-style-type: none"> • ASR 5500 • VPC-DI • VPC-SI |
| Default Setting | Disabled - Configuration Required |
| Related Changes in This Release | Not Applicable |
| Related Documentation | <ul style="list-style-type: none"> • <i>Command Line Interface Reference</i> • <i>MME Administration Guide</i> |

Revision History

| Revision Details | Release |
|-------------------|---------|
| First Introduced. | 21.14.8 |

Feature Changes

Previous Behavior: MME selects random P-GW based on LTE Emergency Profile configuration for Emergency Bearer service requested using PDN Connectivity Request.

New Behavior: MME uses the canonical name of the selected S-GW (from DNS response) for the previously established PDNs and compares it with the statically configured P-GW collocation string in the LTE emergency profile to select the P-GW. The static P-GW collocation string must be configured with the canonical node name of the P-GW to ensure to select collocated node for emergency call.



Important

This behavior applies only to the PDN connectivity request for Emergency Bearer Service.

Command Changes

pgw co-location

Use the following configuration to configure P-GW co-location:

```
configure
  lte-policy
    lte-emergency-profile profile_name
      [ no ] pgw co-location
    end
```

NOTES:

- **no** Disables the P-GW co-location configuration.
- **co-location** Configures to select the co-located S-GW/P-GW node based on static P-GW configuration and S-GW selected through DNS.

Performance Indicator Changes

show lte-policy lte-emergency-profile <profile_name>

The output of this command includes the following fields:

- **pgw co-location:** Indicates if the P-GW co-location feature is enabled or disabled.