



IPNE Service Configuration Mode Commands

Command Modes

The IPNE Service Configuration Mode is used to configure and manage the IPNE Service.

Exec > Global Configuration > Context Configuration > IPNE Service Configuration

configure > **context** *context_name* > **ipne-service** *ipne_service_name*

Entering the above command sequence results in the following prompt:

```
[ context_name]host_name (config-ipne-service)#
```



Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- [end, on page 1](#)
- [exit, on page 1](#)
- [ipne-endpoint, on page 2](#)

end

Exits the current configuration mode and returns to the Exec mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

end

Usage Guidelines

Use this command to return to the Exec mode.

exit

Exits the current mode and returns to the parent configuration mode.

Product

All

Privilege	Security Administrator, Administrator
Syntax Description	<code>exit</code>
Usage Guidelines	Use this command to return to the parent configuration mode.

ipne-endpoint

Creates and configures an IPNE endpoint and enters the IPNE endpoint configuration mode. An IPNE endpoint is a combination of a local IPP address, a peer address and, optionally, a port.

Product	MME
Privilege	Security Administrator, Administrator
Command Modes	Exec > Global Configuration > Context Configuration > IPNE Service Configuration configure > context <i>context_name</i> > ipne-service <i>ipne_service_name</i> Entering the above command sequence results in the following prompt: <pre>[context_name]host_name (config-ipne-service)#</pre>

Syntax Description `[no] ipne-endpoint`

no

Causes the system to delete the IPNE endpoint configuration from the IPNE service configuration.

Usage Guidelines Use this command to create an IPNE endpoint and to enter the IPNE endpoint sub-configuration mode.

Example

Use the following command to access commands to configure the IPNE endpoint:

```
ipne-endpoint
```