



ACS Subscriber Base Configuration Mode Commands

The ACS Subscriber Base Configuration Mode is used to configure Active Charging Service subscriber base.

Command Modes

Exec > ACS Configuration > ACS Subscriber Base Configuration

active-charging service *service_name* > **subscriber-base** *subs_base_name*

Entering the above command sequence results in the following prompt:

```
[local] host_name(config-subscriber-base) #
```



Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- [end, on page 1](#)
- [exit, on page 1](#)
- [priority, on page 2](#)

end

Exits the current configuration mode and returns to the Exec mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

end

Usage Guidelines

Use this command to return to the Exec mode.

exit

Exits the current mode and returns to the parent configuration mode.

Product	All
Privilege	Security Administrator, Administrator
Syntax Description	exit
Usage Guidelines	Use this command to return to the parent configuration mode.

priority

This command allows you to assign priority to the service-scheme association within a subscriber base.

Product	ACS
Privilege	Security Administrator, Administrator
Command Modes	Exec > ACS Configuration > ACS Subscriber Base Configuration active-charging service <i>service_name</i> > subscriber-base <i>subs_base_name</i> Entering the above command sequence results in the following prompt: <pre>[local]host_name(config-subscriber-base)#</pre>
Syntax Description	<p>priority <i>priority</i> subs-class <i>subs_class_name</i> bind service-scheme <i>serv_scheme_name</i> no priority <i>priority</i></p> <p>no</p> <p>If previously configured, deletes the specified configuration.</p> <p>priority</p> <p>Specifies the priority to be assigned to service-scheme. <i>priority</i> must be an integer from 1 through 127.</p> <p>subs-class <i>subs_class_name</i></p> <p>Specifies the subscriber class definition to a subscriber base. <i>subs_class_name</i> must be an alphanumeric string of 1 through 63 characters.</p> <p>bind</p> <p>Specifies the association of service-scheme within subscriber class.</p> <p>service-scheme <i>serv_scheme_name</i></p> <p>Specifies the service scheme definition. <i>serv_scheme_name</i> must be an alphanumeric string of 1 through 63 characters.</p>

Usage Guidelines

Use this command to assign priority to the service-scheme association within a subscriber base. This priority has to be unique within a subscriber base.

Example

The following command is configured to set priority as 5 to associate service-scheme named *ss1*:

```
priority 5 subs-class sc1 bind service-scheme ss1
```

■ priority