



# ACS Group-of-Objects Configuration Mode Commands

The ACS Group-of-Objects Configuration Mode is used to configure groups of Active Charging Service (ACS) objects.



## Important

This configuration mode is available only in 10.2 and later releases.

## Command Modes

Exec > ACS Configuration > ACS Group-of-Objects Configuration

**active-charging service** *service\_name* > **group-of-objects** *object\_name* [ **type string** ]

Entering the above command sequence results in the following prompt:

```
[local]host_name(config-acs-group-of-objects)#
```



## Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- [end, on page 1](#)
- [exit, on page 2](#)
- [member-object, on page 2](#)

## end

Exits the current configuration mode and returns to the Exec mode.

## Product

All

## Privilege

Security Administrator, Administrator

## Syntax Description

**end**

## Usage Guidelines

Use this command to return to the Exec mode.

# exit

Exits the current mode and returns to the parent configuration mode.

<b>Product</b>	All
<b>Privilege</b>	Security Administrator, Administrator
<b>Syntax Description</b>	<code>exit</code>
<b>Usage Guidelines</b>	Use this command to return to the parent configuration mode.

# member-object

This command allows you to add or remove objects from the current group-of-objects.



**Important** A maximum of 128 objects can be added to a group-of-objects.

<b>Product</b>	ACS
<b>Privilege</b>	Security Administrator, Administrator
<b>Command Modes</b>	Exec > ACS Configuration > ACS Group-of-Objects Configuration <b>active-charging service</b> <i>service_name</i> > <b>group-of-objects</b> <i>object_name</i> [ <b>type string</b> ] Entering the above command sequence results in the following prompt: <pre>[local]host_name(config-acs-group-of-objects) #</pre>
<b>Syntax Description</b>	[ <b>no</b> ] <b>member-object</b> <i>object</i>  <b>no</b> If previously added, removes the specified member object from the current group-of-objects.  <b>object</b> Specifies the member object to add to or remove from the current group-of-objects. <i>object</i> must be an alpha and/or numeric string of 1 through 63 characters.
<b>Usage Guidelines</b>	Use this command to add or remove member objects from a group-of-objects.

## Example

The following command adds the object *test* to the current group-of-objects:

```
member-object test
```