



# Unnumbered Interface Configuration Mode Commands

---

## Command Modes

The Unnumbered Interface Configuration Mode creates an unnumbered IP interface within a specified context. An unnumbered interface enables IP processing without assigning an explicit IP address to the interface. In StarOS this type of interface supports an untagged BFD port. The only parameter for this type of interface is a text description.

Exec > Global Configuration > Context Configuration > Ethernet Interface Configuration

**configure > context** *context\_name* > **interface** *interface\_name* **unnumbered**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-if-unnumbered)#
```



## Important

Available commands or keywords/variables vary based on platform type, product version, and installed license(s).

- [description, on page 2](#)
- [end, on page 3](#)
- [exit, on page 4](#)

# description

Sets the descriptive text for the current interface.

---

**Product** All

---

**Privilege** Security Administrator, Administrator

---

**Syntax Description** `description text`  
`no description`

**no**

Clears the description for the interface.

**text**

Specifies the descriptive text as an alphanumeric string of 0 through 79 characters.

---

**Usage Guidelines** Set the description to provide useful information on the interface's primary function, services, end users, etc. Any information useful may be provided.

## Example

```
description sampleInterfaceDescriptiveText
```

# end

Exits the current configuration mode and returns to the Exec mode.

---

**Product**

All

---

**Privilege**

Security Administrator, Administrator

---

**Syntax Description**

**end**

---

**Usage Guidelines**

Use this command to return to the Exec mode.

# exit

Exits the current mode and returns to the parent configuration mode.

---

**Product** All

---

**Privilege** Security Administrator, Administrator

---

**Syntax Description** `exit`

---

**Usage Guidelines** Use this command to return to the parent configuration mode.