



show decor

This chapter includes the **show decor** command output tables.

- [show decor-profile full all, on page 1](#)

show decor-profile full all

Table 1: show decor-profile full all Command Output Descriptions

| Field | Description |
|--------------------|---|
| Decor Profile Name | Displays the configured decor-profile name. |
| UE Usage Types | Displays the configured UE usage types. |
| MMEGI | Displays the MMEGI value. |
| DNS | Indicates whether DNS is enabled or disabled. |
| DCN Id | Displays the configured DCN identifier. Displays "Not Defined" if not configured. |
| PLMN ID | Displays the configured PLMN identifier. Displays "Not Defined" if not configured. |
| Serving DCN | Indicates whether MME is serving the DCN. Displays "Not Defined" if not configured. |
| Relative Capacity | Indicates the configured relative capacity. |
| DNS Service Param | Displays the configured DNS service parameter. |

