



Customizing Last User Location Information

- [Feature Summary and Revision History, on page 1](#)
- [Feature Description, on page 2](#)
- [Configuring Customized Last ULI, on page 2](#)
- [Monitoring and Troubleshooting, on page 2](#)

Feature Summary and Revision History

Summary Data

Applicable Product(s) or Functional Area	<ul style="list-style-type: none"> • P-GW • SAEGW
Applicable Platform(s)	All
Feature Default	Disabled - Configuration Required
Related Changes in This Release	Not Applicable
Related Documentation	<ul style="list-style-type: none"> • <i>Command Line Interface Reference</i> • <i>P-GW Administration Guide</i> • <i>SAEGW Administration Guide</i> • <i>Statistics and Counters Reference</i>

Revision History

Revision Details	Release
First introduced.	<ul style="list-style-type: none"> • 21.26 • 21.23

Feature Description



Note This is a customer-specific feature. For details, contact your Cisco Account representative.

P-GW CDR does not contain the **lastUserLocationInformation** tag when a dedicated bearer or default bearer session is cleared during the closing session of P-GW CDR for the **custom24** dictionary.

This feature supports the **lastUserLocationInformation** field in the last P-GW CDR when the call is cleared. The **gtp attribute last-uli** CLI command controls **lastUserLocationInformation** in the P-GW CDR irrespective of whether **gtp attribute uli** is enabled or not.



Note The **lastUserLocationInformation** field is already supported for **custom52** dictionary but it is not configurable.

Configuring Customized Last ULI

Use the following configuration to customize Last ULI:

```
configure
  context context_name
    gtp group gtp_group_name
      [ no | default ] gtp attribute last-uli
    end
```

NOTES:

- **gtp group gtp_group_name**: Configures GTPP related parameters for the system to handle a GTPP attribute that does not indicate direction.
- **no | default**: Disables the "Last ULI" field in the CDR.
- **attribute last-uli**: Specifies the optional field "Last ULI" in the CDR.

Monitoring and Troubleshooting

This section provides information to monitor and troubleshoot this feature.

Show Commands and Output

This section provides information regarding show commands and their outputs in support of this feature.

show gtp group name default

The output of this command displays the following field:

Field	Description
Last User Location Information present	Displays "Yes" or "No" to indicate the last user location information.

