



ACS Service Scheme Trigger Configuration Mode Commands

The ACS Service Scheme Trigger Configuration Mode is used to configure the set of triggers to be handled under the associated service-scheme.

Command Modes

Exec > ACS Configuration > ACS Service Scheme Configuration > ACS Service Scheme Trigger Configuration
active-charging service *service_name* > **service-scheme** *service_scheme_name* > **trigger** { **flow-create** | **loc-update** | **sess-setup** }

Entering the above command sequence results in the following prompt:

```
[local] host_name(config-servscheme-trigger) #
```



Important The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- [end, on page 1](#)
- [exit, on page 2](#)
- [priority, on page 2](#)

end

Exits the current configuration mode and returns to the Exec mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

end

Usage Guidelines

Use this command to return to the Exec mode.

exit

Exits the current mode and returns to the parent configuration mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

exit

Usage Guidelines

Use this command to return to the parent configuration mode.

priority

This command allows you to assign priority to the trigger events in service-scheme.

Product

ACS

Privilege

Security Administrator, Administrator

Command Modes

Exec> ACS Configuration> ACS Service Scheme Configuration> ACS Service Scheme Trigger Configuration

active-charging service *service_name* > **service-scheme** *service_scheme_name* > **trigger** { **flow-create** | **loc-update** | **sess-setup** }

Entering the above command sequence results in the following prompt:

```
[local]host_name(config-servscheme-trigger)#
```

Syntax Description

priority *priority* **trigger-condition** *trigger_condn_name* **trigger-action** *trigger_action_name*
no priority *priority*

no

If previously configured, deletes the specified configuration.

priority

Specifies the priority to be assigned to the trigger events.

priority must be an integer from 1 through 127.

trigger-condition *trigger_condn_name*

Specifies the trigger condition definition.

trigger_condn_name must be an alphanumeric string of 1 through 63 characters.

trigger-action *trigger_action_name*

Specifies the trigger action definition.

trigger_action_name must be an alphanumeric string of 1 through 63 characters.

Usage Guidelines

Use this command to assign priority to the trigger events configured in service-scheme. The priority must be unique within a trigger.

Example

The following command is configured to set priority as *10* with respective trigger condition *tc1* and trigger action *tal*:

```
priority 10 trigger-condition tc1 trigger-action tal
```

■ priority