



## Configuring Fast SSID Changing

---

- [Fast SSID Changing, on page 1](#)
- [Configuring Fast SSID Changing \(GUI\), on page 1](#)
- [Configuring Fast SSID Changing \(CLI\), on page 1](#)

### Fast SSID Changing

By default, when a client roams between SSIDs, the controller enforces a delay of a few seconds before that client is permitted to associate to the new SSID.

When fast SSID changing is enabled, the controller allows clients to move faster between SSIDs. When fast SSID is enabled, the client entry is not cleared and the delay is not enforced.

This section contains the following subsections:

### Configuring Fast SSID Changing (GUI)

---

- Step 1** Choose **Controller** to open the General page.
- Step 2** From the Fast SSID Change drop-down list, choose **Enabled** to enable this feature or **Disabled** to disable it. The default value is disabled.
- Step 3** Click **Apply** to commit your changes.
- Step 4** Click **Save Configuration** to save your changes.
- 

### Configuring Fast SSID Changing (CLI)

---

- Step 1** Enable or disable fast SSID changing by entering this command:

```
config network fast-ssid-change {enable | disable}
```

By default, fast SSID changing is in disabled state.

**Step 2** Save your changes by entering this command:  
**save config**

---