



## Resetting the Controller to Default Settings

---

- [Resetting the Controller to Default Settings, on page 1](#)
- [Resetting the Controller to Default Settings \(GUI\), on page 1](#)
- [Resetting the Controller to Default Settings \(CLI\), on page 1](#)

## Resetting the Controller to Default Settings

You can return the controller to its original configuration by resetting the controller to factory-default settings.

This section contains the following subsections:

## Resetting the Controller to Default Settings (GUI)

---

- Step 1** Start your Internet browser.
- Step 2** Enter the controller IP address in the browser address line and press **Enter**. An Enter Network Password dialog box appears.
- Step 3** Enter your username in the User Name text box. The default username is *admin*.
- Step 4** Enter the wireless device password in the Password text box and press **Enter**. The default password is *admin*.
- Step 5** Choose **Commands > Reset to Factory Default**.
- Step 6** Click **Reset**.
- Step 7** When prompted, confirm the reset.
- Step 8** Reboot the controller without saving the configuration.
- Step 9** Use the configuration wizard to enter configuration settings.
- 

## Resetting the Controller to Default Settings (CLI)

---

- Step 1** Enter the **reset system** command. At the prompt that asks whether you need to save changes to the configuration, enter **N**. The unit reboots.

**Step 2** When you are prompted for a username, enter the **recover-config** command to restore the factory-default configuration. The controller reboots and displays this message:

```
Welcome to the Cisco WLAN Solution Wizard Configuration Tool
```

**Step 3** Use the configuration wizard to enter configuration settings.

---