



CHAPTER 5

Managing Users and Groups

This chapter describes how to configure and manage users, groups, and host access on the mobility services engine.

This chapter contains the following sections:

- [“Managing Groups” section on page 5-2](#)
- [“Managing Users” section on page 5-3](#)

Managing Groups

This section describes how to add, delete, and edit user groups.

User groups allow you to define and different access privileges to users.

**Caution**

Group permissions override individual user permissions. For example, if you give a user full access and add that user to a group with read access permission, that user will not be able to configure mobility services engine settings.

Adding User Groups

To add a user group to a mobility services engine, follow these steps:

-
- Step 1** In Cisco WCS, click **Mobility > Mobility Services**.
 - Step 2** Click the name of the mobility services engine to which you want to add a user group.
 - Step 3** Click **Accounts** (left).
 - Step 4** Click **Groups**.
 - Step 5** Select **Add Group** from the Select a command drop-down menu and click **GO**.
 - Step 6** Enter the name of the group in the Group Name field.
 - Step 7** Select a permission level from the Permission drop-down menu.
There are three permissions levels to select from:
 - Read Access
 - Write Access
 - Full Access (required for Cisco WCS to access mobility services engines)
 - Step 8** Click **Save** to add the new group to the mobility services engine.
-

Deleting User Groups

To delete user groups from a mobility services engine, follow these steps:

-
- Step 1** In Cisco WCS, click **Mobility > Mobility Services**.
 - Step 2** Click the name of the mobility services engine from which you want to delete a user group.
 - Step 3** Click **Accounts** (left).
 - Step 4** Click **Groups**.
 - Step 5** Check the check boxes of the groups that you want to delete.
 - Step 6** Select **Delete Group** from the Select a command drop-down menu and click **GO**.
 - Step 7** Click **OK** to confirm that you want to delete the selected groups.
-

Changing User Group Permissions

To change user group permissions, follow these steps:

-
- Step 1** In Cisco WCS, click **Mobility > Mobility Services**.
 - Step 2** Click the name of the mobility services engine you want to edit.
 - Step 3** Click **Accounts** (left).
 - Step 4** Click **Groups**.
 - Step 5** Click the name of the group you want to edit.
 - Step 6** Select a permission level from the Permission drop-down menu.
 - Step 7** Click **Save** to apply your change.
-

**Caution**

Group permissions override individual user permissions. For example, if you give a user permission for full access and add that user to a group with read access, that user will not be able to configure mobility services engine settings.

Managing Users

This section describes how to add, delete, and edit users to a mobility services engine. It also describes how to view active user sessions.

Adding Users

To add a users to a mobility services engine, follow these steps:

-
- Step 1** In Cisco WCS, click **Mobility > Mobility Services**.
 - Step 2** Click the name of the mobility services engine to which you want to add users.
 - Step 3** Click **Accounts** (left).
 - Step 4** Click **Users**.
 - Step 5** Select **Add User** from the Select a command drop-down menu and click **GO**.
 - Step 6** Enter the username in the Username field.
 - Step 7** Enter a password in the Password field.
 - Step 8** Enter the name of the group to which the user belongs in the Group Name field.

Step 9 Select a permission level from the Permission drop-down menu.

There are three permission levels to select from: Read Access, Write Access, and Full Access (required for Cisco WCS to access a mobility services engine).

**Caution**

Group permissions override individual user permissions. For example, if you give a user full access and add that user to a group with read access, that user will not be able to configure mobility services engine settings.

Step 10 Click **Save** to add the new user to the mobility services engine.

Deleting Users

To delete a user from a mobility services engine, follow these steps:

Step 1 In Cisco WCS, click **Mobility > Mobility Services**.

Step 2 Click the name of the mobility services engine from which you want to delete a user.

Step 3 Click **Accounts** (left).

Step 4 Click **Users**.

Step 5 Check the check boxes of the users that you want to delete.

Step 6 Select **Delete User** from the Select a command drop-down menu and click **GO**.

Step 7 Click **OK** to confirm that you want to delete the selected users.

Changing User Properties

To change user properties, follow these steps:

Step 1 In Cisco WCS, click **Mobility > Mobility Services**.

Step 2 Click the name of the mobility services engine you want to edit.

Step 3 Click **Accounts** (left).

Step 4 Click **Users**.

Step 5 Click the name of the group that you want to edit.

Step 6 Make the required changes to the Password, Group Name, and Permission fields.

Step 7 Click **Save** to apply your change.
