



Symbols

? button, function of [1-6](#)

Numerics

802.1X [5-11, E-3](#)

802.1X backport, installing [3-4](#)

A

About

button [8-7](#)

screen [8-9](#)

access points

associating to in Windows CE .NET [E-10](#)

in wireless infrastructure [1-8](#)

problems associating to [9-3](#)

problems authenticating to [9-4](#)

reporting those that fail LEAP or EAP-FAST authentication [5-14, 5-17](#)

role in wireless network [1-6](#)

security settings [5-16](#)

Active Mode Setup screen [F-7](#)

ActiveSync, using [3-3, 5-22, 5-25, 5-27, 8-4](#)

ACU Options screen [7-2, F-3](#)

ACU Status screen [5-15](#)

ad hoc mode [5-3](#)

ad hoc network

defined [E-5](#)

displayed [1-7](#)

selecting in Windows CE .NET [E-6](#)

Aironet Client Utility (ACU)

buttons [1-6](#)

deleting icon [8-9](#)

described [1-4](#)

exiting [8-8](#)

feature comparison to Windows CE .NET [3-6 to 3-7](#)

finding version [8-7, 8-9](#)

installing [3-2 to 3-5](#)

opening [8-8](#)

overview [1-5 to 1-6](#)

uninstalling [8-8](#)

upgrading [8-6 to 8-7](#)

Aironet Client Utility Open screen [5-23](#)

antenna

described [1-3](#)

gains [D-3 to D-4](#)

options [C-3](#)

placement [F-2](#)

specifications [A-4](#)

type [F-2](#)

audience of document [x](#)

authentication

after LEAP or EAP-FAST times out [9-4](#)

process [5-13, E-3](#)

Authentication Manager, using [5-28 to 5-31](#)

Authentication screen [5-29](#)

Authentication Type parameter [5-5](#)

automatic PAC provisioning [5-10, 5-12, 5-23](#)

B

beacon packets, number received [7-6](#)

broadcast key rotation

described [5-16](#)

setting on client and access point [5-18](#)

broadcast packets

- number received [7-6](#)
- number transmitted [7-8](#)

buttons on client utilities, described [1-6](#)

bytes

- number received [7-6](#)
- number transmitted [7-8](#)

C

CAM [5-4](#)

Canadian compliance statement [C-3](#)

Cancel button, function of [1-6](#)

caution, defined [xi](#)

CCKM

- See fast roaming (CCKM)

Certificate Authority (CA) certificates

- importing [5-26 to 5-27, E-4](#)
- obtaining [5-25, E-4](#)
- removing [8-11](#)
- viewing [8-10](#)

Certificate Enrollment screen [5-28](#)

Certificate Manager

- Open screen [5-27](#)
- screen [5-26, 8-10](#)
- using [5-26 to 5-27](#)

Change Password screen [6-8](#)

Cisco.com

- obtaining documentation [xiii](#)
- obtaining technical assistance [xv](#)

Cisco Centralized Key Management (CCKM), See fast roaming

Cisco PEAP

- See PEAP authentication

Cisco PEAP option [5-30](#)

Client Name parameter [5-3](#)

client utilities

- See Aironet Client Utility (ACU) and Wireless Login Module (WLM)

Configure Network Authentication screen [E-7](#)

Configure Wireless Network screen (General tab) - Windows CE .NET [E-6](#)

Configure Wireless Networks screen (Wireless tab) - Windows CE .NET [E-5](#)

configuring client adapter

- deciding between ACU and Windows CE .NET [3-6 to 3-7](#)
- in ACU [5-2 to 5-31](#)
- through Windows CE .NET [E-5 to E-10](#)

Connect button [5-29, 5-31](#)

Continuous Link Test parameter [F-8](#)

conventions of document [xi to xii](#)

CRC errors [7-6](#)

D

Data Rate parameter [F-8](#)

data rates [A-3, F-2](#)

Data Rates parameter [5-6](#)

Data Retries parameter [F-8](#)

declarations of conformity

- European community, Switzerland, Norway, Iceland, and Liechtenstein [C-4 to C-5](#)
- FCC [C-2 to C-3](#)
- RF exposure [C-5](#)

Delay Between Packets parameter [F-8](#)

Destination Is Another Cisco Aironet Device parameter [F-7](#)

Destination MAC Address parameter [F-7](#)

diagnostic tools

- overview [7-2](#)
- setting parameters [7-2, F-3](#)
- using [7-1 to 7-9](#)

disassociating client adapter from access point [8-11](#)

diversity antenna [1-3](#)

document

- audience [x](#)

- conventions [xi to xii](#)
- organization [x](#)
- purpose [x](#)
- screens used in [1-4](#)
- software versions covered [x](#)

documentation

- CD-ROM [xiii](#)
- feedback [xiv](#)
- obtaining [xiii to xiv, xvi](#)
- ordering [xiv](#)

domain name, entering for LEAP or EAP-FAST [6-3](#)

driver

- current version [7-5](#)
- described [1-4](#)
- finding version [8-7](#)
- installing [3-2 to 3-5](#)
- uninstalling [8-8](#)
- upgrading [8-6 to 8-7](#)
- verifying installation [3-5](#)

dynamic WEP keys, overview [5-11 to 5-14, E-3](#)

Dynamic WEP Keys option [5-8, 5-28](#)

E

EAP authentication

- described [5-11, E-3](#)
- overview [6-2](#)
- using [6-1 to 6-8](#)

EAP-FAST authentication

- authenticating after your credentials expire [6-4](#)
- authenticating with saved username and password [6-4](#)
- authenticating with temporary username and password [6-2 to 6-3](#)
- described [5-12](#)
- disabling [5-31](#)
- enabling [5-21 to 5-24](#)
- error messages [9-10 to 9-14](#)
- RADIUS servers supported [5-12](#)
- requirements [5-21](#)

- setting on client and access point [5-16](#)
- user databases supported [5-12](#)

EAP-FAST option [5-9, 5-22](#)

EAP-TLS authentication

- authenticating after profile selection/card insertion/reset [6-5 to 6-6](#)
- described [5-13, E-3](#)
- enabling
 - in ACU [5-28 to 5-29](#)
 - in Windows CE .NET [E-8](#)
- error messages [9-14 to 9-15](#)
- importing CA certificates [5-26 to 5-27, E-4](#)
- importing user certificates [5-27 to 5-28, E-4](#)
- obtaining CA and user certificates [5-25, E-4](#)
- preparing for configuration in Windows CE .NET [E-4](#)
- RADIUS servers supported [5-13, E-3](#)
- requirements for configuring in Windows CE .NET [E-4](#)
- setting on client and access point [5-17](#)

Edit button [5-31](#)

EIRP, maximum [1-3, D-3 to D-4](#)

Enroll button [5-28](#)

error messages

- EAP-FAST authentication [9-10 to 9-14](#)
- EAP-TLS authentication [9-14 to 9-15](#)
- general [9-5 to 9-7](#)
- installation [9-7 to 9-8](#)
- LEAP authentication [9-8 to 9-9](#)
- PEAP authentication [9-15 to 9-17](#)

External Settings profile option [4-3, E-5](#)

F

Fast PSP [5-4](#)

fast roaming

- described [5-14](#)
- setting on client and access point [5-17](#)

FCC

- declaration of conformity statement [C-2 to C-3](#)
- safety compliance statement [2-2](#)

Firmware

screen [8-3](#)

tab

described [1-5](#)using [8-3, 8-5](#)

firmware

current version [7-5](#)described [1-4](#)finding version [8-3 to 8-4](#)loading [8-4 to 8-6](#)upgrading [8-3 to 8-6](#)version required [3-2](#)frequencies [D-2](#)

Ggeneral error messages [9-5 to 9-7](#)

Hhardware components of client adapter [1-3](#)

help

on HPC devices [9-17](#)on PPC devices [9-17](#)on Windows CE .NET devices [9-17](#)

host-based EAP authentication

described [5-12 to 5-13](#)disabling [5-31](#)enabling [5-25 to 5-31](#)requirements [5-25](#)Host Based EAP option [5-9, 5-28](#)

I

infrastructure devices

defined [1-2](#)site requirements [2-5](#)Infrastructure Mode parameter [5-3](#)inserting PC card into Windows CE device [8-2](#)installation error messages [9-7 to 9-8](#)Install Cisco PEAP Support installation option [3-4](#)interference [2-5](#)

IP address

obtaining or specifying [3-5](#)of client adapter [7-5](#)problems obtaining [9-3](#)

JJapan, guidelines for operating client adapters [C-6](#)

L

LEAP authentication

authenticating with saved username and password [6-4](#)authenticating with temporary username and password [6-2 to 6-3](#)described [5-12](#)disabling [5-31](#)enabling [5-20 to 5-21](#)error messages [9-8 to 9-9](#)RADIUS servers supported [5-12](#)requirements [5-20](#)setting on client and access point [5-16](#)LEAP option [5-9, 5-21](#)

LEDs

described [1-3](#)interpreting [9-2 to 9-3](#)using to verify installation [3-5](#)

link quality

current [7-4](#)in active site survey [F-11](#)in passive site survey [F-6](#)

link speed

in active site survey [F-11](#)in passive site survey [F-6](#)

LM card

antenna [1-3](#)
 described [1-2](#)
 Logout button [6-3, 6-4](#)

M

MAC CRC errors [7-7](#)
 manual PAC provisioning [5-10, 5-12, 5-22, 5-23](#)
 Max PSP [5-4](#)
 message integrity check (MIC)
 current status [7-5](#)
 described [5-15 to 5-16](#)
 setting on client and access point [5-17](#)
 statistics [7-9](#)
 microcellular network [1-8](#)
 MIC Statistics screen [7-8](#)
 Mixed Mode parameter [5-5](#)
 multicast packets
 in active site survey [F-9](#)
 number received [7-6](#)
 number transmitted [7-8](#)

N

network
 configurations [1-6 to 1-8](#)
 problems connecting to [9-4](#)
 Network Security Type parameter [5-9, 5-18, 5-21, 5-22, 5-28, 5-31](#)
 noise level
 current [7-4](#)
 in active site survey [F-11](#)
 in passive site survey [F-5](#)
 None option [5-9, 5-31](#)
 note, defined [xi](#)
 No WEP option [5-8, 5-20](#)
 Number of Packets parameter [F-8](#)

O

Offline Channel Scan parameter [5-7](#)
 OK button, function of [1-6](#)
 open authentication [5-5, E-7](#)
 Open window [8-6](#)
 Options button [7-2, F-3](#)
 organization of document [x](#)

P

PAC Authority parameter [5-10, 5-23](#)
 PAC Import button [5-23](#)
 package contents [2-3](#)
 packets
 discarded due to MIC error [7-9](#)
 lost to source in active site survey [F-12](#)
 lost to target in active site survey [F-12](#)
 max retries [7-8](#)
 percent retried in active site survey [F-12](#)
 received with MIC [7-9](#)
 retry long [7-8](#)
 retry short [7-8](#)
 Packet Size parameter [F-8](#)
 PAC Password screen [5-24](#)
 PAC provisioning [5-10, 5-12, 5-22, 5-23](#)
 PAC Provisioning Mode parameter [5-10, 5-23](#)
 PACs
 described [5-10, 5-12, 5-23](#)
 entering password [5-24](#)
 importing [5-23 to 5-24](#)
 obtaining [5-22](#)
 rules for storage [5-12](#)
 Password Expired screen [6-4](#)
 passwords, creating [9-4](#)
 PC card
 antenna [1-3](#)
 described [1-2](#)
 inserting into Windows CE device [8-2](#)

removing from Windows CE device [8-2](#)

PEAP authentication

- authenticating after profile selection/card insertion/reset [6-6 to 6-7](#)
- authenticating after your password expires (Windows NT or 2000 domain databases) [6-8](#)
- described [5-13, E-3](#)
- enabling
 - in ACU [5-28 to 5-31](#)
 - in Windows CE .NET [E-9 to E-10](#)
- error messages [9-15 to 9-17](#)
- importing CA certificates [5-26 to 5-27, E-4](#)
- obtaining CA certificates [5-25, E-4](#)
- preparing for configuration in Windows CE .NET [E-4](#)
- RADIUS servers supported [5-13, E-3](#)
- requirements for configuring in Windows CE .NET [E-4](#)
- setting on client and access point [5-17](#)

PEAP option [5-30](#)

PEAP Properties screen [5-30](#)

PEAP Properties screen - Windows CE .NET [E-9](#)

peer-to-peer wireless LAN [1-7](#)

Percent Successful histogram [F-8, F-12](#)

Percent Success Threshold parameter [F-8](#)

physical specifications [A-2](#)

PLCP CRC errors [7-6](#)

power level

- maximum [D-3 to D-4](#)
- options [A-3](#)

Power Save Mode parameter [5-4](#)

power specifications [A-4](#)

profile, defined [4-2](#)

profile manager

- creating a new profile [4-3](#)
- deleting a profile [4-5](#)
- editing a profile [4-4](#)
- opening [4-2](#)
- overview [4-2](#)
- renaming a profile [4-4](#)
- selecting the active profile [4-3 to 4-4](#)

Profiles screen

- displayed [1-5, 4-2](#)
- tabs [1-5](#)

Profiles tab

- described [1-5](#)
- using [4-2](#)

Properties screen [5-2](#)

purpose of document [x](#)

R

radio

- described [1-3](#)
- specifications [A-3 to A-4](#)

RADIUS servers [5-11 to 5-14, E-3](#)

range [5-6](#)

reassociating client adapter [F-12 to F-13](#)

receive statistics [7-6](#)

Receive Statistics screen [7-6](#)

regulatory

- domains [D-2](#)
- information [C-2 to C-7](#)
- specifications [A-4](#)

related publications [xiii](#)

removing PC card from Windows CE device [8-2](#)

Renew button [7-5](#)

restarting client adapter [8-11](#)

RF obstructions [2-5, F-3](#)

roaming [1-8](#)

RTS packets, number retransmitted [7-8](#)

S

safety

- information [2-2 to 2-3](#)
- specifications [A-4](#)

screens, used in document [1-4](#)

seamless roaming [1-8](#)

- security features
 - overview [5-11 to 5-18, E-2 to E-3](#)
 - synchronizing [5-16](#)
- sensitivity [A-3](#)
- shared key authentication [5-5, E-7](#)
- signal quality
 - current [7-4](#)
 - in active site survey [F-11](#)
 - in passive site survey [F-5](#)
- signal strength
 - as a percentage [7-2, F-3](#)
 - current [7-4](#)
 - in active site survey [F-10](#)
 - in dBm [7-2, F-3](#)
 - in passive site survey [F-5](#)
- Signal Strength Display Units parameter [7-2, F-3](#)
- signal to noise ratio
 - current [7-5](#)
 - in active site survey [F-11](#)
 - in passive site survey [F-6](#)
- site requirements
 - for client devices [2-5](#)
 - for infrastructure devices [2-5](#)
- site survey
 - active mode [F-2, F-6 to F-12](#)
 - guidelines [F-2](#)
 - overview [F-2 to F-3](#)
 - passive mode [F-2, F-4 to F-6](#)
- Site Survey - Active screen [F-9, F-10](#)
- Site Survey - Passive screen [F-4](#)
- software, upgrading [8-3 to 8-8](#)
- software components of client adapter [1-4 to 1-6](#)
- software versions covered in document [x](#)
- specifications
 - physical [A-2](#)
 - power [A-4](#)
 - radio [A-3 to A-4](#)
 - regulatory compliance [A-4](#)
 - safety [A-4](#)
- spread spectrum [1-3](#)
- SSID parameter [5-3](#)
- Start button, function of [1-6](#)
- Static Password screen [6-7](#)
- static WEP
 - disabling [5-20](#)
 - enabling [5-18 to 5-19](#)
 - with open authentication, setting on client and access point [5-16](#)
 - with shared key authentication, setting on client and access point [5-16](#)
- static WEP keys
 - entering [5-18 to 5-19](#)
 - guidelines for entering
 - in ACU [5-19](#)
 - in Windows CE .NET [E-8](#)
 - overview [5-11, E-2](#)
 - overwriting [5-19 to 5-20](#)
 - selecting transmit key [5-19](#)
 - size of [5-19](#)
- Static WEP Keys option [5-8, 5-18](#)
- statistics of client adapter, viewing [7-5 to 7-9](#)
- Statistics tab
 - described [1-5](#)
 - using [7-6](#)
- Status
 - screen [7-3](#)
 - tab
 - described [1-5](#)
 - using [7-3, 8-7](#)
- status of client adapter
 - in active site survey [F-10](#)
 - in ACU status bar [1-5](#)
 - in passive site survey [F-5](#)
 - in Status screen [7-4](#)
 - viewing [7-3 to 7-5](#)
- Stop button, function of [1-6](#)
- strong passwords, creating [9-4](#)
- Survey tab

described [1-5](#)
 using [F-4](#)
 system requirements [2-4](#)

T

Taiwan, rules for operating client adapters [C-7](#)
 technical assistance, obtaining [xiv to xvi](#)
 Technical Assistance Center, contacting [xv to xvi](#)
 Temporal Key Integrity Protocol (TKIP)
 described [5-16](#)
 setting on client and access point [5-18](#)
 throughput [5-4, 5-6, 8-11](#)
 TLS option [5-29](#)
 Transmit Key button [5-19, 5-20](#)
 Transmit Power parameter [5-7](#)
 transmit statistics [7-8](#)
 Transmit Statistics screen [7-7](#)
 troubleshooting information [9-2 to 9-17](#)
 Tx Type parameter [F-9](#)

U

unicast packets
 in active site survey [F-9](#)
 number received [7-6](#)
 number transmitted [7-8](#)
 unpacking the client adapter [2-3](#)
 up time [7-7, 7-8](#)
 user certificates
 importing [5-27 to 5-28](#)
 obtaining [5-25, E-4](#)
 removing [8-11](#)
 viewing [8-10](#)
 User Domain parameter [5-9](#)
 User Logon screen [6-5](#)
 User Name parameter [5-9](#)
 User Password parameter [5-9](#)

Use Windows to configure my wireless network settings
 option [3-6](#)

W

warning
 defined [xi to xii](#)
 dipole antenna [2-3, B-3](#)
 explosive device proximity [2-3, B-2](#)
 laptop users [2-3, B-4](#)
 WEP
 indication in product model number [1-2](#)
 keys
 additional security features [5-15 to 5-16](#)
 defined [5-11, E-2](#)
 size of [5-11, E-2](#)
 parameter [5-8, 5-18, 5-20, 5-28](#)
 WEP key hashing [5-16](#)
 WEP Keys
 button [5-18, 5-19](#)
 screen [5-18](#)
 Windows CE
 finding version [3-2](#)
 supported devices [2-4](#)
 Windows CE .NET
 associating to access point [E-10](#)
 configuring client adapter through [E-5 to E-10](#)
 enabling EAP-TLS authentication [E-8](#)
 enabling PEAP authentication [E-9 to E-10](#)
 External Settings profile option [4-3](#)
 guidelines for entering static WEP keys [E-7 to E-8](#)
 making a configuration decision [3-6 to 3-7](#)
 preparing to configure client adapter [E-4](#)
 wireless infrastructure [1-8](#)
 Wireless Login Module (WLM)
 buttons [1-6](#)
 deleting icon [8-9](#)
 described [1-4](#)
 exiting [8-8](#)

finding version [8-7, 8-9](#)
installing [3-2 to 3-5](#)
opening [8-8](#)
uninstalling [8-8](#)
upgrading [8-6 to 8-7](#)
Wireless Login Module screen [6-2](#)
workstation
 defined [1-2](#)
 in wireless infrastructure [1-8](#)
World Mode parameter [5-6](#)

X

X button, function of [1-6](#)

