



CHAPTER

8

## Using the Aironet Client Monitor (ACM)

---

This chapter explains how to use the Aironet Client Monitor (ACM) to access status information about your client adapter and perform basic tasks.

The following topics are covered in this chapter:

- [Overview of ACM, page 8-2](#)
- [The ACM Icon, page 8-2](#)
- [Tool Tip Window, page 8-3](#)
- [Pop-Up Menu, page 8-5](#)

# Overview of ACM

ACM is an optional application that provides a small subset of the features available through ACU. Specifically, it enables you to access status information about your client adapter and perform basic tasks. ACM is accessible from an icon in the Windows system tray, making it easily accessible and convenient to use.

The ACM icon appears only if a client adapter is installed in your computer and you did not disable ACM during installation. If more than one client adapter is installed, an ACM icon appears in the system tray for each adapter.

ACM provides information and options in the following ways:

- In the appearance of the icon itself
- Through a tool tip window that appears when you hover the cursor over the icon
- Through a pop-up menu that appears when you right-click the icon

## The ACM Icon

The appearance of the ACM icon indicates the connection status of your client adapter. ACM reads the client adapter status and updates the icon every 2 seconds. [Table 8-1](#) interprets the different appearances of the ACM icon.



**Note**

Windows 2000 and XP may display their own wireless network connection status icon in the system tray. Cisco recommends that you turn off the Windows icon and use the ACM icon to monitor your wireless connection.


**Table 8-1 Interpreting the ACM Icon**

Icon	Description
	The client adapter's radio is turned off.
	The client adapter is not associated to an access point.
	The client adapter is associated to an access point, but the user is not authenticated.
	The client adapter is associated to an access point, and the link quality is excellent or good.
	The client adapter is associated to an access point, and the link quality is fair.
	The client adapter is associated to an access point, and the link quality is poor.

# Tool Tip Window

When you hover the cursor over the ACM icon, the Tool Tip window appears (see [Figure 8-1](#)).

**Figure 8-1 Tool Tip Window**

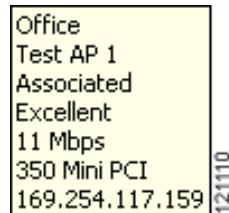

This window provides information on the current status of your client adapter. [Table 8-2](#) lists and describes each element of the Tool Tip window.

**Table 8-2 Tool Tip Window Elements**

Status Element	Description
Active profile	<p>The network configuration (or profile) that your client adapter is currently using.</p> <p><b>Note</b> If auto profile selection is enabled, the profile name is preceded by the word <i>Auto</i>.</p> <p><b>Note</b> If an application other than ACU was used to configure the client adapter, <i>Other Configuration Application</i> appears.</p>
SSID	<p>The name of the network to which your client adapter is currently associated.</p> <p><b>Note</b> Refer to the SSID1 parameter in <a href="#">Table 5-2</a> for information on setting the client adapter's SSID.</p>

**Table 8-2 Tool Tip Window Elements (continued)**

Status Element	Description																
Connection status	The operational mode of your client adapter.																
	<b>Value:</b> Radio Off, Not Associated, Associated, Authenticating, Authenticated, or Authentication Failed																
	<table border="1"> <thead> <tr> <th data-bbox="693 454 1013 487">Connection Status</th> <th data-bbox="1013 454 1496 487">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="693 487 1013 530">Radio Off</td> <td data-bbox="1013 487 1496 530">The client adapter's radio is turned off.</td></tr> <tr> <td data-bbox="693 530 1013 604">Not Associated</td> <td data-bbox="1013 530 1496 604">The client adapter has not established a connection to an access point.</td></tr> <tr> <td data-bbox="693 604 1013 677">Associated</td> <td data-bbox="1013 604 1496 677">The client adapter has established a connection to an access point.</td></tr> <tr> <td data-bbox="693 677 1013 794">Authenticating</td> <td data-bbox="1013 677 1496 794">The client adapter is associated to an access point, and the authentication process has begun but not yet succeeded.</td></tr> <tr> <td data-bbox="693 794 1013 868">Authenticated</td> <td data-bbox="1013 794 1496 868">The client adapter is associated to an access point, and the user is authenticated.</td></tr> <tr> <td data-bbox="693 868 1013 941">Authentication Failed</td> <td data-bbox="1013 868 1496 941">The client adapter is associated to an access point, but the attempt to authenticate the user has failed.</td></tr> <tr> <td data-bbox="693 941 1013 1184"></td> <td data-bbox="1013 941 1496 1184"> <b>Note</b> This status may appear very briefly or not at all as the authentication failure may result in the client adapter becoming disassociated, in which case the status reads "Not Associated."       </td></tr> </tbody> </table>	Connection Status	Description	Radio Off	The client adapter's radio is turned off.	Not Associated	The client adapter has not established a connection to an access point.	Associated	The client adapter has established a connection to an access point.	Authenticating	The client adapter is associated to an access point, and the authentication process has begun but not yet succeeded.	Authenticated	The client adapter is associated to an access point, and the user is authenticated.	Authentication Failed	The client adapter is associated to an access point, but the attempt to authenticate the user has failed.		<b>Note</b> This status may appear very briefly or not at all as the authentication failure may result in the client adapter becoming disassociated, in which case the status reads "Not Associated."
Connection Status	Description																
Radio Off	The client adapter's radio is turned off.																
Not Associated	The client adapter has not established a connection to an access point.																
Associated	The client adapter has established a connection to an access point.																
Authenticating	The client adapter is associated to an access point, and the authentication process has begun but not yet succeeded.																
Authenticated	The client adapter is associated to an access point, and the user is authenticated.																
Authentication Failed	The client adapter is associated to an access point, but the attempt to authenticate the user has failed.																
	<b>Note</b> This status may appear very briefly or not at all as the authentication failure may result in the client adapter becoming disassociated, in which case the status reads "Not Associated."																
Link quality	The client adapter's ability to communicate with the access point, which is determined by the combined result of the adapter's signal strength and signal quality.																
	<b>Value:</b> Excellent, Good, Fair, or Poor																
Link speed	The rate at which your client adapter is currently transmitting data packets.																
	<b>Value:</b> 1, 2, 5.5, or 11 Mbps (2.4-GHz client adapters); 6, 9, 12, 18, 24, 36, 48, or 54 Mbps (5-GHz client adapters)																
Client adapter type	A description of your client adapter.																
Client adapter IP address	The IP address of your client adapter.																

# Pop-Up Menu

When you right-click the ACM icon, the ACM pop-up menu appears (see [Figure 8-2](#)).

**Figure 8-2 ACM Pop-Up Menu**



The following sections describe each ACM pop-up menu option.




**Note** If you used the Aironet Client Monitor Preferences screen or your system administrator used an administrative tool to deactivate certain ACM menu options, these options do not appear in the menu and therefore cannot be selected.

## About

When you choose this option, the About screen appears (see [Figure 8-3](#)).

**Figure 8-3 ACM About Screen**

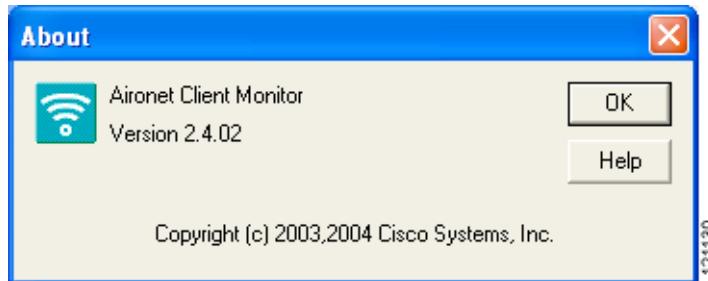

The About screen displays the version number of ACM that your computer is running and enables you to access the online help. To access the online help, click the **Help** button. An overview of ACM appears.

**■ Pop-Up Menu****Exit**

This option closes ACM for all client adapters.



- Note** To reactivate ACM, use Windows Explorer to find the path where the ACM software is installed. (The default location is C:\Program Files\Cisco Systems\Aironet Client Monitor.) Then double-click **ACUMon.exe**.

**Launch Aironet Client Utility**

This option activates ACU. It is available only if ACU is installed. If more than one ACM icon appears in the Windows system tray, ACU initializes itself to use the client adapter associated with the icon that initiated the launch.


**Troubleshooting**

This option activates the Cisco Wireless LAN Adapter Troubleshooting Utility, which enables you to identify and resolve configuration and association problems with your client adapter. Refer to the “[Using the Troubleshooting Utility](#)” section on page 10-4 for detailed instructions on using this utility.

**Preferences**

When you choose this option, the Aironet Client Monitor Preferences screen appears (see Figure 8-4).

**Figure 8-4 Aironet Client Monitor Preferences Screen**

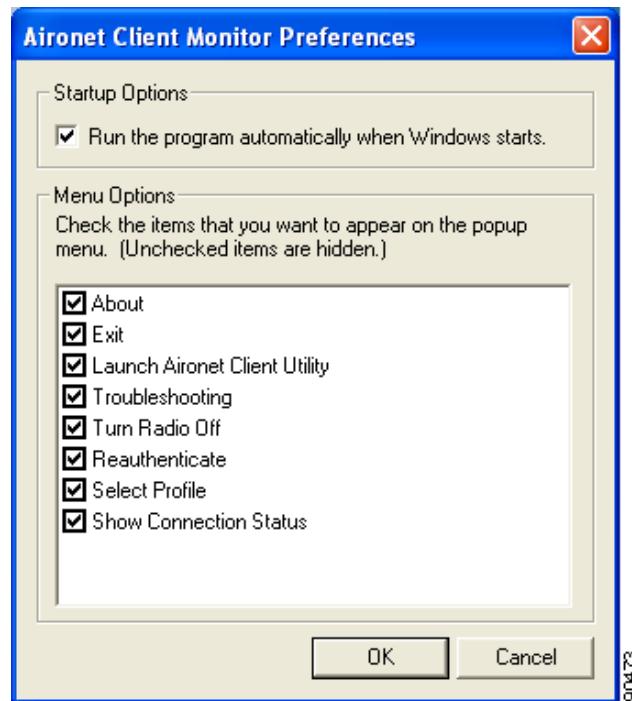

This screen enables you to determine when ACM runs and to choose the options that appear on the ACM pop-up menu. The selections you make apply to every instance of ACM. For example, if you deselect the Troubleshooting option, it will not appear in the pop-up menu for any ACM icon.

Follow these steps to make your selections.

---

**Step 1**

If you want ACM to run automatically when Windows starts, make sure the **Run the program automatically when Windows starts** check box is checked. Otherwise, uncheck this check box.



**Note** If you do not choose this option and later want to run ACM, you must use Windows Explorer to find the path where the ACM software is installed. (The default location is C:\Program Files\Cisco Systems\Aironet Client Monitor.) Then double-click **ACUMon.exe**.

---

**Step 2**

In the Menu Options portion of the screen, make sure the check boxes of all the options that you want to appear in the ACM pop-up menu are checked. Any options that are not checked will not be included in the menu.



**Note** The Preferences option cannot be deselected. It always appears in the ACM pop-up menu.

---

**Step 3**

Click **OK** to save your changes.

---

## Turn Radio On/Off

This option enables you to turn the client adapter's radio on or off. Turning the radio off prevents the adapter from transmitting RF energy. You might want to turn off the client adapter's radio in the following situations:

- You are not transmitting data and want to conserve battery power.
- You have EAP-SIM authentication set up to occur transparently (the SIM card is left in the reader and the PIN is stored in the computer), and you do not want to be billed for air time upon entering an area that enables the client to authenticate.
- You are using a laptop on an airplane and want to prevent the adapter's transmissions from potentially interfering with the operation of certain devices.

When the radio is on, it periodically sends out probes even if it is not associated to an access point, as required by the 802.11 specification. Therefore, it is important to turn it off around devices that are susceptible to RF interference.



**Note** Your client adapter is not associated while the radio is off.

---



**Note** If your client adapter's radio is turned off before your computer enters standby or hibernate mode or before you reboot the computer, the radio remains off when the computer resumes. You must turn the radio back on to resume operation.

---

**■ Pop-Up Menu**

If the radio is on, choose **Turn Radio Off** to turn off the radio.

If the radio is off, choose **Turn Radio On** to turn on the radio.

## Reauthenticate

This option enables you to force your client adapter to try to reauthenticate using the username and password of the current profile.

If your client adapter was unable to authenticate using the specified username and password and you have exhausted the retry limit (for example, LEAP and EAP-FAST try only once to prevent you from being locked out of the system), the current profile is disabled until you change the username or password, reboot your computer, eject and reinsert the client adapter, or choose the Reauthenticate option.

## Select Profile


This option enables you to select the active profile for your client adapter.



**Note** Because EAP-TLS, PEAP, and EAP-SIM authentication are enabled in the operating system, you cannot switch between these authentication types simply by switching profiles in ACM. You can select a profile in ACM that uses host-based EAP, but you must enable the specific authentication type in Windows (provided Windows is using the Microsoft 802.1X supplicant). In addition, Windows can be set for only one authentication type at a time; therefore, if more than one profile in ACM uses host-based EAP and you want to use another authentication type, you must change authentication types in Windows after switching profiles in ACM.

When you choose Select Profile from the ACM pop-up menu, a profiles submenu appears (see [Figure 8-5](#)).

**Figure 8-5 Profiles Submenu**

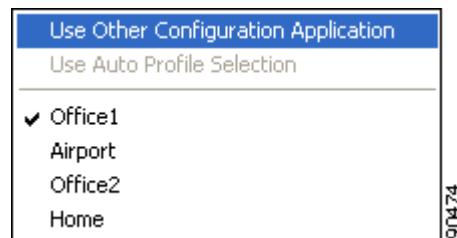

From this menu, you can choose among the following options:

- **Use Other Configuration Application**—Enables an application other than ACU to configure the client adapter. Examples of such applications include Windows XP and Boingo.
- **Use Auto Profile Selection**—Causes the client adapter's driver to automatically select a profile from the list of profiles that were set up in ACU to be included in auto profile selection.

If the client adapter loses association for more than 10 seconds (or for more than the time specified by the authentication timeout value on the LEAP Settings screen if LEAP is enabled or the EAP-FAST Settings screen if EAP-FAST is enabled), the driver switches automatically to another

profile that is included in auto profile selection. The adapter will not switch profiles as long as it remains associated or reassociates within 10 seconds (or within the time specified by the authentication timeout value). To force the client adapter to associate to a different access point, you must select a new profile.



**Note** This option is available only if two or more profiles are included in auto profile selection.



Login scripts are not reliable if you use auto profile selection with LEAP or EAP-FAST. If you authenticate and achieve full network connectivity before or at the same time as you log into the computer, the login scripts will run. However, if you authenticate and achieve full network connectivity after you log into the computer, the login scripts will not run.

- **A specific profile**—When you select a profile from the list of available profiles, the client adapter attempts to establish a connection to an access point using the parameters that were configured for that profile.


If the client adapter cannot associate to the access point or loses association while using the selected profile, the adapter does not attempt to associate using another profile. To associate, you must select a different profile or choose Use Auto Profile Selection.

Simply click the desired profile to select it. A check mark appears beside the profile, and the client adapter attempts to establish a connection using the selected profile.

## Show Connection Status

When you choose this option, the Connection Status screen appears (see [Figure 8-6](#)).

**Figure 8-6 Connection Status Screen**

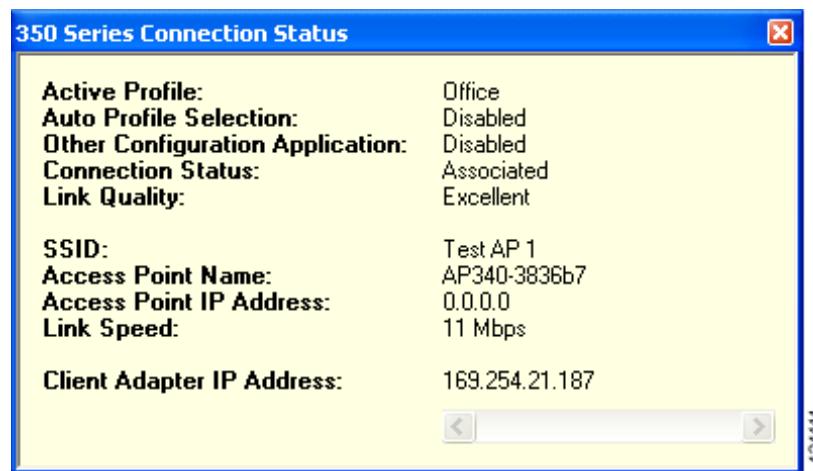

**■ Pop-Up Menu**

This screen provides information on the current status of your client adapter. [Table 8-3](#) interprets each element of the Connection Status screen.

**Note**

You can also access the Connection Status screen by double-clicking the ACM icon.

**Table 8-3 Connection Status Screen Elements**

Status Element	Description														
Active Profile	The network configuration (or profile) that your client adapter is currently using.														
Auto Profile Selection	Indicates whether your client adapter is using auto profile selection. <b>Value:</b> Enabled or Disabled														
Other Configuration Application	Indicates whether an application other than ACU is being used to configure your client adapter. <b>Value:</b> Enabled or Disabled														
Connection Status	The operational mode of your client adapter. <b>Value:</b> Radio Off, Not Associated, Associated, Authenticating, Authenticated, or Authentication Failed														
<table border="1" data-bbox="687 952 1496 1670"> <thead> <tr> <th data-bbox="687 952 1013 986">Connection Status</th><th data-bbox="1013 952 1496 986">Description</th></tr> </thead> <tbody> <tr> <td data-bbox="687 986 1013 1020">Radio Off</td><td data-bbox="1013 986 1496 1020">The client adapter's radio is turned off.</td></tr> <tr> <td data-bbox="687 1020 1013 1104">Not Associated</td><td data-bbox="1013 1020 1496 1104">The client adapter has not established a connection to an access point.</td></tr> <tr> <td data-bbox="687 1104 1013 1189">Associated</td><td data-bbox="1013 1104 1496 1189">The client adapter has established a connection to an access point.</td></tr> <tr> <td data-bbox="687 1189 1013 1315">Authenticating</td><td data-bbox="1013 1189 1496 1315">The client adapter is associated to an access point, and the authentication process has begun but not yet succeeded.</td></tr> <tr> <td data-bbox="687 1315 1013 1400">Authenticated</td><td data-bbox="1013 1315 1496 1400">The client adapter is associated to an access point, and the user is authenticated.</td></tr> <tr> <td data-bbox="687 1400 1013 1670" style="text-align: center;">Authentication Failed</td><td data-bbox="1013 1400 1496 1670" style="text-align: center;"><b>Note</b> This status may appear very briefly or not at all as the authentication failure may result in the client adapter becoming disassociated, in which case the status reads "Not Associated."</td></tr> </tbody> </table>	Connection Status	Description	Radio Off	The client adapter's radio is turned off.	Not Associated	The client adapter has not established a connection to an access point.	Associated	The client adapter has established a connection to an access point.	Authenticating	The client adapter is associated to an access point, and the authentication process has begun but not yet succeeded.	Authenticated	The client adapter is associated to an access point, and the user is authenticated.	Authentication Failed	<b>Note</b> This status may appear very briefly or not at all as the authentication failure may result in the client adapter becoming disassociated, in which case the status reads "Not Associated."	<p>The client adapter's ability to communicate with the access point, which is determined by the combined result of the adapter's signal strength and signal quality.</p> <p><b>Value:</b> Excellent, Good, Fair, or Poor</p>
Connection Status	Description														
Radio Off	The client adapter's radio is turned off.														
Not Associated	The client adapter has not established a connection to an access point.														
Associated	The client adapter has established a connection to an access point.														
Authenticating	The client adapter is associated to an access point, and the authentication process has begun but not yet succeeded.														
Authenticated	The client adapter is associated to an access point, and the user is authenticated.														
Authentication Failed	<b>Note</b> This status may appear very briefly or not at all as the authentication failure may result in the client adapter becoming disassociated, in which case the status reads "Not Associated."														

**Table 8-3 Connection Status Screen Elements (continued)**

Status Element	Description
SSID	<p>The name of the network to which your client adapter is currently associated.</p> <p><b>Note</b> Refer to the SSID1 parameter in <a href="#">Table 5-2</a> for information on setting the client adapter's SSID.</p>
Access Point Name	<p>The name of the access point to which your client adapter is associated. It is shown only if the client adapter is in infrastructure mode, the access point was configured with a name, and Aironet Extensions are enabled (on access points running Cisco IOS Release 12.2(4)JA or later).</p> <p><b>Note</b> This field shows up to 15 characters although the name of the access point may be longer.</p>
Access Point IP Address	<p>The IP address of the access point to which your client adapter is associated. It is shown only if the client adapter is in infrastructure mode, the access point was configured with an IP address, and Aironet Extensions are enabled (on access points running Cisco IOS Release 12.2(4)JA or later).</p> <p><b>Note</b> If Aironet Extensions are disabled, the IP address of the associated access point is shown as 0.0.0.0.</p>
Link Speed	<p>The rate at which your client adapter is currently transmitting data packets.</p> <p><b>Value:</b> 1, 2, 5.5, or 11 Mbps (2.4-GHz client adapters); 6, 9, 12, 18, 24, 36, 48, or 54 Mbps (5-GHz client adapters)</p>
Client Adapter IP Address	The IP address of your client adapter.

■ Pop-Up Menu