



Numerics

- 802.11 Authentication Mode parameter [5-12](#)
- 802.11b preamble, status of [7-12](#)
- 802.11b Preamble parameter [5-9](#)
- 802.11 mode, in ASTU [8-5](#)
- 802.1X
 - authentication types
 - in ADU [5-15 to 5-19](#)
 - in Windows XP [E-3](#)
 - defined [5-15, E-3](#)
- 802.1x EAP Type parameter [5-29, 5-34, 5-45, 5-48, 5-52, 5-56](#)
- 802.1x option [5-29, 5-34, 5-45, 5-48, 5-52, 5-56](#)

A

- About Aironet Desktop Utility, ADU menu option [9-9](#)
- About window
 - in ADU [9-9](#)
 - in site survey utility [F-33](#)
- access point
 - CCX version supported [F-11, F-15](#)
 - channel, in site survey utility [F-6, F-11, F-14](#)
 - currently associated to [7-10, 8-11](#)
 - data rates, in site survey utility [F-14](#)
 - frequency, in site survey utility [F-6, F-11, F-14](#)
 - in wireless infrastructure [1-6](#)
 - IP address
 - in ADU [7-10](#)
 - in ASTU [8-11](#)
 - in site survey utility [F-6](#)
 - load, in site survey utility [F-11, F-15](#)
 - MAC address

- in ADU [7-10](#)
- in site survey utility [F-6, F-10, F-14](#)
- maximum transmit data rate, in site survey utility [F-11](#)
- mismatches [7-15](#)
- model number [F-15](#)
- name
 - in ADU [7-10](#)
 - in ASTU [8-11](#)
 - in site survey utility [F-6, F-11, F-15](#)
- number of associations [F-15](#)
- problems associating to [10-10](#)
- radio [F-15](#)
- radio band, in site survey utility [F-11, F-14](#)
- role in wireless network [1-5](#)
- security settings [5-22 to 5-25](#)
- Access Point 1 through 4 parameters [5-13](#)
- access points
 - associating to in Windows XP [E-18](#)
 - number displayed in site survey utility [F-10](#)
 - preferred, setting [5-13](#)
 - reporting those that fail LEAP authentication [5-20 to 5-21, 5-25](#)
 - viewing an accumulation of [F-18](#)
 - viewing details in site survey utility [F-13 to F-16](#)
 - viewing status in site survey utility [F-5 to F-8](#)
- Accumulate button, in site survey utility [F-17, F-18](#)
- ACK frames [7-15](#)
- Action drop-down menu
 - in ADU [6-10, 9-8](#)
 - in site survey utility [F-3, F-20, F-34](#)
- Activate button [4-6, 4-10](#)
- Adapter Information
 - button [9-10](#)

- window [9-10](#)
- Add Comments to Log File window (site survey utility) [F-24](#)
- Add User Comment, site survey utility menu option [F-24](#)
- ad hoc mode, in site survey utility [F-12](#)
- ad hoc network
 - defined [E-6](#)
 - selecting in ADU [5-9](#)
 - selecting in Windows XP [E-7](#)
 - setting wireless mode [5-10](#)
 - wireless LAN configuration [1-5](#)
- ADU
 - See Aironet Desktop Utility (ADU)
- Advanced button [7-8](#)
- advanced parameters
 - described [5-2](#)
 - setting [5-6 to 5-13](#)
- Advanced Statistics
 - button [7-14](#)
 - window [7-14](#)
- Advanced Status window [7-8](#)
- AES, status of [7-7, 7-8](#)
- AES-CCMP, with WPA2 [5-19](#)
- AES option, in Windows XP [E-8](#)
- Aironet Desktop Utility (ADU)
 - accessing help [9-10](#)
 - described [1-4](#)
 - exiting [9-8](#)
 - feature comparison to Windows XP [3-17 to 3-18](#)
 - finding version [9-9](#)
 - icon [9-8](#)
 - opening [9-8](#)
 - Profile Management windows, overview [5-2](#)
 - selecting software to manage wireless device [7-4](#)
 - status and statistics tools
 - overview [7-2](#)
 - setting parameters [7-2 to 7-3](#)
 - using [7-5 to 7-16](#)
- Aironet Desktop Utility Help, ADU menu option [9-10](#)
- Aironet System Tray Utility (ASTU)
 - accessing help [8-5](#)
 - described [1-4](#)
 - exiting [8-6](#)
 - icon [8-2 to 8-3, 9-8](#)
 - opening [8-6](#)
 - overview [8-2](#)
 - pop-up menu [8-5 to 8-11](#)
 - selecting the active profile [8-8 to 8-9](#)
 - setting preferences [8-6 to 8-7](#)
 - specifying pop-up menu options [8-7](#)
 - Tool Tip window [8-3 to 8-5](#)
 - using [8-1 to 8-11](#)
 - using to open ADU [8-6](#)
 - using to open troubleshooting utility [8-6](#)
- Aironet System Tray Utility Preferences window [8-6](#)
- Allow Association to Mixed Cells parameter
 - setting with EAP-FAST [5-42 to 5-43](#)
 - setting with EAP-TLS [5-47](#)
 - setting with LEAP [5-32](#)
 - setting with PEAP (EAP-GTC) [5-51](#)
 - setting with PEAP (EAP-MSCHAP V2) [5-55](#)
 - setting with static WEP [5-27](#)
- Allow Automatic PAC Provisioning for this Profile parameter [5-42](#)
- AllowReRun, profile migration tool command line option [G-5](#)
- ALR, in site survey utility [F-33](#)
- Always Resume the Secure Session parameter
 - for LEAP [5-31](#)
 - for PEAP (EAP-GTC) [5-50](#)
- antenna
 - assembling [3-5 to 3-6](#)
 - described [1-3](#)
 - gains
 - IEEE 802.11a [D-4](#)
 - IEEE 802.11b [D-4](#)
 - IEEE 802.11g [D-5](#)
 - mounting [3-6 to 3-8](#)

- placement [F-2](#)
 - rotating [3-8](#)
 - specifications [A-5](#)
 - antenna base, mounting [3-6 to 3-8](#)
 - AP detailed information parameters (site survey utility) [F-14 to F-16](#)
 - AP Detailed Information window (site survey utility) [F-13](#)
 - APS, in site survey utility [F-33](#)
 - AP scan list, in site survey utility
 - displayed [F-9](#)
 - opening [F-31](#)
 - parameters [F-10 to F-12](#)
 - pausing [F-13](#)
 - saving [F-30 to F-31](#)
 - viewing [F-9 to F-12](#)
 - AP Scan List Logging Configuration window (site survey utility) [F-26](#)
 - AP Scan List tab (site survey utility), using [F-8 to F-18](#)
 - AP scan log, in site survey utility
 - deleting [F-30](#)
 - viewing [F-28 to F-29](#)
 - AP scan log file, in site survey utility
 - displayed [F-17, F-29](#)
 - generating [F-16 to F-17](#)
 - name and location [F-27](#)
 - AP scan logging, in site survey utility
 - configuring [F-26 to F-27](#)
 - disabling [F-28](#)
 - enabling [F-28](#)
 - AP scanning, using in site survey utility [F-26 to F-31](#)
 - associated AP status parameters (site survey utility) [F-6 to F-8](#)
 - Associated AP Status tab (site survey utility)
 - units as a percentage [F-5](#)
 - units in dBm [F-5](#)
 - using [F-4 to F-8](#)
 - association
 - rejections [7-16](#)
 - time-outs [7-16](#)
 - associations, in site survey utility [F-15](#)
 - ASTU
 - See Aironet System Tray Utility (ASTU)
 - ATIM Window, in site survey utility [F-14](#)
 - audience of document [xii](#)
 - authentication
 - process [5-17, E-4](#)
 - rejections [7-16](#)
 - time-outs [7-16](#)
 - type
 - setting [5-12](#)
 - status of [7-9](#)
 - Authentication Timeout Value parameter
 - for LEAP [5-32](#)
 - Automatically Prompt for User Name and Password option
 - for EAP-FAST [5-38](#)
 - for LEAP [5-31](#)
 - auto profile selection
 - enabling [4-10](#)
 - including a profile in [4-8 to 4-9](#)
 - prioritizing profiles [4-9](#)
 - removing a profile from [4-9](#)
 - restrictions [4-9](#)
 - status of [8-10](#)
 - using [8-8](#)
 - Auto Profile Selection Management window [4-8](#)
 - Auto Select Profiles parameter [4-10](#)
 - Available Infrastructure and Ad Hoc Networks window [4-4](#)
-
- ## B
- beacon period, in site survey utility [F-14](#)
 - beacons received
 - in ADU [7-15](#)
 - in site survey utility [F-7](#)
 - broadcast key rotation
 - described [5-21](#)
 - setting on client and access point [5-25](#)

- broadcast packets
 - number received [7-14](#)
 - number transmitted [7-14](#)
 - broadcast SSIDs [5-4, E-6](#)
 - BSS Aging Interval parameter (Windows Control Panel) [5-64](#)
 - bytes
 - number received [7-14](#)
 - number transmitted [7-14](#)
-
- C**
- call admission control (CAC), in site survey utility [F-12](#)
 - CAM
 - See Constantly Awake Mode (CAM)
 - Canadian compliance statement [C-3](#)
 - card name [9-10](#)
 - CardOrder, profile migration tool command line option [G-5](#)
 - caution, defined [xiii](#)
 - CB20A, profile migration tool command line option [G-5](#)
 - CCKM fast secure roaming
 - described [5-20](#)
 - enabling with EAP-FAST [5-34](#)
 - enabling with EAP-TLS [5-45](#)
 - enabling with LEAP [5-29](#)
 - enabling with PEAP (EAP-GTC) [5-48](#)
 - enabling with PEAP (EAP-MSCHAP V2) [5-52](#)
 - setting on client and access point [5-25](#)
 - CCX, version supported by access point [F-11, F-15](#)
 - certificates, required for EAP-TLS and PEAP authentication [5-44](#)
 - channel of access point
 - in ADU [4-6](#)
 - in site survey utility [F-6, F-11, F-14](#)
 - channel of client adapter [7-7, 7-12](#)
 - Channel parameter [5-11](#)
 - channels, supported by regulatory domains
 - IEEE 802.11a [D-2](#)
 - IEEE 802.11b/g [D-3](#)
 - channel set, for which client adapter is configured [7-12](#)
 - Choose Destination Location window (Install Wizard) [3-14](#)
 - Cisco Aironet 802.11a/b/g Wireless Adapter Properties window [5-63](#)
 - Cisco Aironet Desktop Utility (Diagnostics) window [7-13](#)
 - Cisco Aironet Desktop Utility (Profile Management) window [4-2](#)
 - Cisco Aironet Installation Program window (Install Wizard) [3-11](#)
 - Cisco Centralized Key Management (CCKM)
 - See CCKM fast secure roaming
 - Cisco extended capabilities (CEC), in site survey utility [F-12](#)
 - Cisco Key Integrity Protocol (CKIP)
 - statistics [7-16](#)
 - status of [7-7](#)
 - with LEAP [5-15](#)
 - client adapter
 - association status in site survey utility [F-4](#)
 - selecting in site survey utility [F-3 to F-4](#)
 - client name [9-10](#)
 - Client Name parameter [5-4](#)
 - client utilities
 - See Aironet Desktop Utility (ADU) and Aironet System Tray Utility (ASTU)
 - command line options, for profile migration tool [G-5 to G-6](#)
 - ConfigFile, profile migration tool command line option [G-5](#)
 - Configuration Settings window
 - for PEAP (EAP-MSCHAP V2) [5-54](#)
 - Configure AP Scan Logging, site survey utility menu option [F-26](#)
 - Configure Scan List Columns window [4-5](#)
 - Configure Thresholds, site survey utility menu option [F-20](#)
 - configuring AP scan logging in site survey utility [F-26 to F-27](#)
 - configuring client adapter

- deciding between ADU and Windows XP [3-17 to 3-18](#)
 - in ADU [5-1 to 5-58](#)
 - in Windows XP [E-5 to E-10](#)
 - configuring scan list columns [4-5](#)
 - configuring threshold values in site survey utility [F-20 to F-23](#)
 - connection status [8-4, 8-10](#)
 - Connection Status window (ASTU) [8-9](#)
 - Constantly Awake Mode (CAM) [5-8](#)
 - Contents, site survey utility menu option [F-33](#)
 - conventions of document [xiii to xiv](#)
 - CRC errors [7-15](#)
 - CTS frames [7-15](#)
 - Current Status window [7-5](#)
 - CWmax, in site survey utility [F-15](#)
 - CWmin, in site survey utility [F-15](#)
-
- D**
- Data Display parameter [7-3, 7-13](#)
 - data encryption
 - in ADU [7-8](#)
 - in site survey utility [F-11, F-14](#)
 - data frames [7-15](#)
 - data rate
 - in ADU [7-6](#)
 - mismatches [7-15](#)
 - of access point, in site survey utility [F-14](#)
 - setting [5-10](#)
 - specifications [A-3](#)
 - when performing a site survey [F-2](#)
 - debugging information, in site survey utility [F-14](#)
 - declarations of conformity
 - European community, Switzerland, Norway, Iceland, and Liechtenstein [C-3 to C-7](#)
 - FCC [C-2](#)
 - RF exposure [C-7](#)
 - default values, using [5-2](#)
 - Define Certificate window [5-46](#)
 - Define PEAP (EAP-GTC) Configuration window [5-49](#)
 - Define PEAP (EAP-MSCHAP V2) Configuration window [5-53](#)
 - Define Pre-Shared Keys window [5-26](#)
 - Define WPA/WPA2 Pre-Shared Key window [5-28](#)
 - Delete AP Scan Log, site survey utility menu option [F-30](#)
 - Delete Threshold Log, site survey utility menu option [F-25](#)
 - diagnosing client adapter operation [10-4 to 10-6](#)
 - Diagnostics window [7-13](#)
 - Disable Radio
 - ADU menu option [9-11](#)
 - ASTU menu option [8-7](#)
 - Display in Percent parameter (site survey utility) [F-4](#)
 - Display Settings
 - ADU menu option [7-2](#)
 - window [7-2](#)
 - display units, specifying in site survey utility [F-4](#)
 - diversity antenna [1-3](#)
 - document
 - audience [xii](#)
 - conventions [xiii to xiv](#)
 - organization [xii to xiii](#)
 - purpose [xii](#)
 - domain name
 - including in Windows login
 - for EAP-FAST [5-38](#)
 - for LEAP [5-32](#)
 - specifying for saved user name and password
 - for EAP-FAST [5-38](#)
 - for LEAP [5-31](#)
 - driver
 - current version [9-9, 9-10](#)
 - date [9-10](#)
 - described [1-4](#)
 - manually installing or upgrading [9-6](#)
 - name [9-10](#)
 - DSConfig, in site survey utility [F-15](#)
 - duplicate frames, number received [7-15](#)

dynamic WEP keys, overview [5-15 to 5-19, E-3 to E-4](#)

E

EAP authentication

described [E-4](#)

overview [5-15 to 5-19, 6-2, E-3 to E-4](#)

restarting [6-16](#)

using [6-1 to 6-16](#)

EAP-Cisco Wireless

See LEAP authentication

EAP-FAST authentication

authenticating after a reboot/logon

with automatically prompted login [6-7](#)

with saved username and password [6-13](#)

with Windows username and password [6-4](#)

authenticating after a reboot/logon/card insertion, with manually prompted login [6-10 to 6-12](#)

authenticating after EAP-FAST password expires

with automatically prompted login [6-8](#)

with manually prompted login [6-12](#)

with saved username and password [6-14](#)

with Windows username and password [6-5](#)

authenticating after profile activation, with manually prompted login [6-9 to 6-10](#)

authenticating after profile activation/card insertion

with automatically prompted login [6-6](#)

with saved username and password [6-13](#)

with Windows username and password [6-4](#)

described [5-16 to 5-19](#)

disabling [5-58](#)

enabling [5-34](#)

overview [6-2 to 6-3](#)

RADIUS servers supported [5-16](#)

requirements [5-34](#)

setting on client and access point [5-23](#)

stages of [6-3](#)

user databases supported [5-17](#)

EAP-FAST Authentication Status window

displayed [6-2](#)

minimizing [6-3](#)

EAP-FAST option [5-34](#)

EAP-FAST Settings window [5-35, 5-36](#)

EAP MSCHAPv2 Properties window - Windows XP [E-15](#)

EAP-TLS authentication

authenticating after profile activation/card insertion/reboot/logon [6-14](#)

described [5-17 to 5-19, E-3, E-4](#)

disabling [5-58](#)

enabling

in ADU [5-44 to 5-47](#)

in Windows XP [E-10 to E-12](#)

RADIUS servers supported [5-17, E-3](#)

requirements [5-44](#)

setting on client and access point [5-23](#)

EAP-TLS machine authentication with machine credentials

requirements [5-44](#)

setting [5-42, 5-46](#)

EAP-TLS option [5-45](#)

EIRP, maximum supported by regulatory domains

IEEE 802.11a [D-4](#)

IEEE 802.11b [D-4](#)

IEEE 802.11g [D-5](#)

Enable AP Scan Logging, site survey utility menu option [F-28](#)

Enable Expert Mode for AP Detailed Information parameter (site survey utility) [F-14](#)

Enable Radio

ADU menu option [9-11](#)

ASTU menu option [8-7](#)

Enable Threshold Alerts, site survey utility menu option [F-23](#)

Enable Threshold Logging, site survey utility menu option [F-23](#)

Enable Tray Icon, ADU menu option [8-6](#)

encryption errors [7-15](#)

Enter Password window [5-41](#)

Enter Wireless Network Password window [6-6, 6-7, 6-9, 6-11](#)

error messages [10-13 to 10-25](#)

errors

CRC [7-15](#)

encryption [7-15](#)

MIC [7-16](#)

Exit menu option

in ADU [9-8](#)

in ASTU [8-6, 9-8](#)

in site survey utility [F-34](#)

Export button [4-13](#)

Export Profile window [4-13](#)

F

Fast PSP [5-8](#)

FCC

declaration of conformity statement [C-2](#)

safety compliance statement [2-2](#)

finding domain controller timeout value

for EAP-FAST [5-43](#)

for LEAP [5-32](#)

Fit Columns parameter (site survey utility) [F-9](#)

frames

ACK [7-15](#)

CTS [7-15](#)

duplicate [7-15](#)

number dropped [7-15](#)

number received successfully [7-15](#)

number received with errors [7-15](#)

number retried [7-15](#)

number transmitted successfully [7-15](#)

RTS [7-15](#)

frequencies, supported by regulatory domains

IEEE 802.11a [D-2](#)

IEEE 802.11b/g [D-3](#)

frequency

in ADU [7-6, 7-12](#)

of access point, in site survey utility [F-11, F-14](#)

setting [5-10](#)

G

general parameters

described [5-2](#)

setting [5-3 to 5-5](#)

Generic Token Card Properties window - Windows XP [E-17](#)

global PACs [5-16, 5-41](#)

Group Policy, described [3-21](#)

Group Policy Delay parameter

installing hot fix for [3-21 to 3-22](#)

setting with EAP-FAST [5-44](#)

setting with EAP-TLS [5-47](#)

setting with LEAP [5-33](#)

setting with PEAP (EAP-GTC) [5-51](#)

setting with PEAP (EAP-MSCHAP V2) [5-55](#)

setting with PEAP (EAP-MSCHAP V2) machine authentication with machine credentials [5-56](#)

setting with WPA/WPA2 passphrase [5-28](#)

H

hardware components of client adapter [1-3](#)

help

in ADU [9-10](#)

in ASTU [8-5](#)

in site survey utility [F-33](#)

hops, in site survey utility [F-15](#)

Host Based EAP option [5-56](#)

host devices [2-4](#)

Hysteresis parameter (site survey utility) [F-23](#)

I

I/O range [10-9](#)

Import button [4-12](#)

Import EAP-FAST PAC File window [5-40](#)

Import Profile window [4-12](#)

Include Windows Logon Domain with User Name parameter

- for EAP-FAST [5-38](#)
- for LEAP [5-32](#)

indicators, in site survey utility [F-33](#)

information about client adapter [9-10](#)

infrastructure device, defined [1-2](#)

infrastructure mode, in site survey utility [F-14](#)

infrastructure network

- selecting in ADU [5-9](#)
- wireless LAN configuration [1-6](#)

inserting client adapter [3-2 to 3-8](#)

Install Cisco Aironet Site Survey Utility window (Install Wizard) [3-13](#)

installing

- client adapter software [3-9 to 3-20](#)
- profile migration tool [G-3](#)

Install Wizard file

- described [1-4](#)
- installing [3-9 to 3-20](#)
- name [3-9](#)
- removing [9-7](#)

interference [2-5, 3-6](#)

interrupt request (IRQ) [10-9](#)

introduction to client adapters [1-2](#)

IP address

- of access point
 - in ADU [7-10](#)
 - in ASTU [8-11](#)
 - in site survey utility [F-6](#)
- of client adapter [7-7, 8-5, 8-11](#)

J

Japan, guidelines for operating client adapters [C-7](#)

K

key icon [4-6](#)

L

LEAP authentication

authenticating after a reboot/logon

- with automatically prompted login [6-7](#)
- with saved username and password [6-13](#)
- with Windows username and password [6-4](#)

authenticating after a reboot/logon/card insertion, with manually prompted login [6-10 to 6-12](#)

authenticating after profile activation, with manually prompted login [6-9 to 6-10](#)

authenticating after profile activation/card insertion

- with automatically prompted login [6-6](#)
- with saved username and password [6-13](#)
- with Windows username and password [6-4](#)

described [5-15 to 5-19](#)

disabling [5-58](#)

enabling [5-29 to 5-33](#)

overview [6-2 to 6-3](#)

RADIUS servers supported [5-15](#)

requirements [5-29](#)

setting on client and access point [5-22](#)

stages of [6-3](#)

timeout value [4-10, 8-8](#)

using with login scripts [4-10](#)

LEAP Authentication Status window

displayed [6-2](#)

minimizing [6-3](#)

LEAP option [5-29](#)

LEAP Settings window [5-30](#)

LEDs

described [1-3](#)

interpreting [10-2](#)

link quality

- in ASTU [8-5, 8-11](#)
- in site survey utility [F-8](#)

link speed

- in ASTU [8-5](#)
- in site survey utility [F-8](#)

List Installed Devices Even If Not Present in System
parameter (site survey utility) [F-4](#)

load, in site survey utility [F-11, F-15](#)

Locked Profile parameter [5-14](#)

locked profiles [5-14](#)

LOG, in site survey utility [F-33](#)

log file, generating in site survey utility [F-17](#)

-logfile, profile migration tool command line option [G-6](#)

login scripts, using with LEAP [4-10, 8-9](#)

Log Snapshot button, in site survey utility [F-16](#)

long radio headers

status of [7-12](#)

using [5-9](#)

M

MAC address

of access point

in site survey utility [F-6, F-10, F-14](#)

specifying [5-13](#)

viewing [7-10](#)

of client adapter [9-10](#)

machine authentication with machine credentials

using EAP-TLS [5-42, 5-46](#)

using PEAP (EAP-MSCHAP V2) [5-55 to 5-57](#)

machine authentication with user credentials

using PEAP (EAP-GTC) [5-49](#)

using PEAP (EAP-MSCHAP V2) [5-53](#)

Manual Login

ADU menu option [5-31, 6-10](#)

ASTU menu option [8-8](#)

Manually Prompt for User Name and Password option

for EAP-FAST [5-38](#)

for LEAP [5-31](#)

Max PSP [5-8](#)

message integrity check (MIC)

described [5-21, 7-9](#)

errors [7-16](#)

setting on client and access point [5-25](#)

statistics [7-16](#)

status of [7-9](#)

types of [7-9](#)

with WPA [5-19](#)

Michael MIC, status of [7-9](#)

microcellular network [1-6](#)

Microsoft 802.1X supplicant, disabling [10-8](#)

Microsoft hot fix

installing [3-21 to 3-22](#)

required for Group Policy Delay parameter [3-21](#)

Microsoft Wireless Configuration Manager

disabling [10-8](#)

enabling in Install Wizard [3-17](#)

role in switching between host-based EAP and
non-host-based EAP profiles [5-56, 5-57](#)

-miniPCI, profile migration tool command line
option [G-6](#)

MMH MIC

status of [7-9](#)

with LEAP [5-15](#)

Modify button [4-11, 5-3](#)

multicast packets

number received [7-14](#)

number transmitted [7-14](#)

N

network

configurations [1-5 to 1-6](#)

prioritizing connections [10-11](#)

problems connecting to [10-11](#)

type, current [4-3, 7-6](#)

network name

in ADU [5-4, 7-8](#)

in ASTU [8-3](#)

in site survey utility [F-10, F-14](#)

Network Type parameter [5-9](#)

New button [4-4, 5-3](#)

noise level

in ADU [7-11](#)
 in site survey utility [F-7](#)
 No Network Connection Unless User Is Logged In
 parameter
 for EAP-FAST [5-42, 6-13](#)
 for LEAP [5-32, 6-13](#)
 note, defined [xiii](#)

O

online help
 for ADU [9-10](#)
 for ASTU [8-5](#)
 for site survey utility [F-33](#)
 Open Aironet Desktop Utility, ASTU menu option [8-6, 9-8](#)
 Open AP Scan List, site survey utility menu option [F-31](#)
 open authentication
 setting [5-12, E-8](#)
 status of [7-9](#)
 Open window (site survey utility) [F-31](#)
 operating systems supported [xii, 2-4, 3-9](#)
 Options, site survey utility menu option [F-14, F-18](#)
 Options window (site survey utility) [F-19](#)
 Order Profiles button [4-8](#)
 organization of document [xii to xiii](#)

P

PAC authority, selecting [5-39, 5-41](#)
 package contents [2-3](#)
 packets
 broadcast [7-14](#)
 multicast [7-14](#)
 unicast [7-14](#)
 PAC provisioning
 automatic [5-42](#)
 manual [5-42](#)
 PACs
 copying from private store to global store [5-42](#)
 described [5-16, 5-42](#)
 entering password for [5-41](#)
 importing [5-40 to 5-41](#)
 rules for storage [5-16](#)
 types of [5-16](#)
 PAC stores
 selecting [5-41](#)
 types of [5-41](#)
 Pause List Update button, in site survey utility [F-13](#)
 PC-Cardbus card
 antenna [1-3](#)
 described [1-2](#)
 inserting [3-2](#)
 profiles tied to slot [4-7](#)
 removing [9-2](#)
 -pci350, profile migration tool command line option [G-6](#)
 PCI card
 antenna
 assembling [3-5 to 3-6](#)
 described [1-3](#)
 mounting [3-6 to 3-8](#)
 rotating [3-8](#)
 changing bracket [3-3](#)
 described [1-2](#)
 inserting [3-3 to 3-8](#)
 removing [9-2](#)
 -pcmcia350, profile migration tool command line
 option [G-6](#)
 PEAP (EAP-GTC) authentication
 authenticating after profile activation/card
 insertion/reboot/logon [6-15](#)
 described [5-17, E-3, E-4](#)
 disabling [5-58](#)
 enabling
 in ADU [5-48 to 5-51](#)
 in Windows XP [E-13 to E-14, E-16 to E-18](#)
 RADIUS servers supported [5-17, E-3](#)
 requirements [5-44](#)
 setting on client and access point [5-24](#)

- user databases supported [5-17](#)
- PEAP (EAP-GTC) machine authentication with user credentials, setting [5-49](#)
- PEAP (EAP-GTC) option [5-48](#)
- PEAP (EAP-MSCHAP V2) authentication
 - authenticating after profile activation/card insertion/reboot/logon [6-16](#)
 - Certificate option [5-53](#)
 - described [5-17 to 5-19](#), [E-3](#), [E-4](#)
 - disabling [5-58](#)
 - enabling
 - in ADU [5-52 to 5-55](#)
 - in Windows XP [E-13 to E-15](#)
 - RADIUS servers supported [5-17](#), [E-3](#)
 - requirements [5-44](#)
 - setting on client and access point [5-24](#)
 - User Name and Password option [5-53](#)
- PEAP (EAP-MSCHAP V2) machine authentication with machine credentials, setting [5-55 to 5-57](#)
- PEAP (EAP-MSCHAP V2) machine authentication with user credentials, setting [5-53](#)
- PEAP (EAP-MSCHAP V2) option [5-52](#)
- PEAP Properties window - Windows XP [E-16](#)
- peer-to-peer network [1-5](#), [5-9](#)
- physical specifications [A-2](#)
- Please Change Password window [6-5](#), [6-8](#), [6-12](#), [6-14](#)
- power level, current [7-11](#)
- power levels, available [7-11](#)
- power save mode, currently being used [7-11](#)
- Power Save Mode parameter [5-8](#)
- power specifications [A-6](#)
- Preferences, ASTU menu option [8-6](#)
- Preferred Access Points window [5-13](#)
- Preparing Setup window (Install Wizard) [3-10](#), [9-3](#)
- Pre-Shared Key (Static WEP) option [5-26](#)
- Previous Installation Detected window (Install Wizard) [9-4](#)
- private PACs [5-16](#), [5-41](#)
- product model numbers [1-2](#)
- profile
 - active [4-10](#), [8-3](#), [8-10](#)
 - default [4-2](#)
 - described [4-2](#)
 - locked [5-14](#)
- Profile Management (Advanced) window [5-6](#)
- Profile Management (General) window [4-7](#)
- Profile Management (Security) window [5-14](#)
- Profile Management window [4-2](#)
- Profile Management windows, parameters missing [10-11](#)
- profile manager
 - auto profile selection feature [4-8 to 4-9](#)
 - creating a new profile [4-4 to 4-7](#)
 - deleting a profile [4-11](#)
 - editing a profile [4-11](#)
 - exporting a profile [4-12 to 4-13](#)
 - importing a profile [4-12](#)
 - opening [4-2 to 4-3](#)
 - parameters missing [4-3](#), [10-11](#)
 - selecting the active profile [4-10](#)
- profile migration tool
 - command line options [G-5 to G-6](#)
 - compatibility with Install Wizard [G-2](#)
 - entering multiple commands [G-5](#)
 - finding version number [G-2](#)
 - installing [G-3](#)
 - name and location of generated log file [G-4](#), [G-6](#)
 - name mangling [G-2](#)
 - overview [G-2](#)
 - rules governing profile migration [G-2 to G-3](#)
 - running [G-4](#)
 - running multiple times [G-5](#)
 - uninstalling [G-7](#)
 - using [G-1 to G-7](#)
 - viewing generated log file [G-4](#)
- Profile Name parameter [5-4](#)
- profiles, losing [9-6](#)
- profiles submenu (ASTU) [8-8](#)
- Protected EAP

- See PEAP (EAP-GTC) authentication and PEAP (EAP-MSCHAP V2) authentication
- Protected EAP Properties window - Windows XP [E-14](#)
- protocol driver, finding version [9-9](#)
- proximity beeper
- configuring [F-18 to F-19](#)
 - disabling [F-20](#)
 - enabling [F-20](#)
 - inverting the tone of [F-19](#)
 - using [F-18 to F-20](#)
- PRX, in site survey utility [F-33](#)
- purpose of document [xii](#)
-
- ## Q
- QoS
- See quality of service
- QoS Packet Scheduler
- enabling on Windows 2000 [5-59 to 5-61](#)
 - enabling on Windows XP [5-62](#)
- quality of service (QoS)
- described [5-59](#)
 - in site survey utility [F-12](#)
 - status of [7-10](#)
-
- ## R
- radio
- described [1-3](#)
 - enabling or disabling [8-7, 9-11](#)
 - specifications [A-3 to A-5](#)
- radio band of access point, in site survey utility [F-11, F-14](#)
- RADIUS servers
- additional information [5-19, E-4](#)
 - defined [5-15, E-3](#)
 - supported [5-15 to 5-19, E-3](#)
- range [5-7](#)
- Reauthenticate menu option
- in ADU [6-16](#)
 - in ASTU [6-16, 8-8](#)
- receive rate [7-12, 8-11](#)
- receive statistics [7-14, 7-15 to 7-16](#)
- Refresh button [4-4](#)
- Refresh Interval parameter [7-3, 7-13](#)
- regulatory
- domains
 - IEEE 802.11a [D-2](#)
 - IEEE 802.11b/g [D-3](#)
 - information [C-2 to C-9](#)
 - specifications [A-6](#)
- related publications [xv](#)
- Remove button [4-11](#)
- removing client adapter [9-2](#)
- replace, profile migration tool command line option [G-6](#)
- resize tab, on site survey utility [F-33](#)
- resource conflicts, resolving
- in Windows 2000 [10-9](#)
 - in Windows XP [10-10](#)
- Restrict Time Finding Domain Controller parameter
- setting with EAP-FAST [5-43](#)
 - setting with LEAP [5-32 to 5-33](#)
- RF obstructions [2-5, 3-6, F-2](#)
- RM-APScan, in site survey utility [F-12, F-16](#)
- RM-CliWlk, in site survey utility [F-12, F-16](#)
- RM-Normal, in site survey utility [F-12, F-16](#)
- roaming
- described [1-6](#)
 - parameters, setting in the Windows Control Panel [5-63 to 5-64](#)
 - threshold [5-64](#)
- RSSI, in site survey utility [F-10, F-14](#)
- RTS frames [7-15](#)
- Run Test button, in troubleshooting utility [10-5](#)
-
- ## S
- safety
- information [2-2 to 2-3](#)

- specifications [A-6](#)
- Save AP Scan List, site survey utility menu option [F-30](#)
- Save As window (site survey utility) [F-30](#)
- saved username and password
 - described
 - for LEAP [5-30](#)
 - entering
 - for EAP-FAST [5-38](#)
 - for LEAP [5-31](#)
- Save Report, in troubleshooting utility
 - button [10-7](#)
 - window [10-7](#)
- Scan button [4-4](#)
- scan list columns, configuring [4-5](#)
- Scan List Settings, ADU menu option [4-4](#)
- Scan Valid Interval parameter (Windows Control Panel) [5-64](#)
- seamless roaming [1-6](#)
- security features
 - overview [5-14 to 5-21](#)
 - synchronizing [5-22 to 5-25](#)
- security mode [4-3](#)
- security parameters
 - described [5-2](#)
 - setting [5-14 to 5-57](#)
- Select Adapter
 - site survey utility menu option [F-3](#)
 - window (site survey utility) [F-3](#)
- Select Client Software
 - ADU menu option [7-4](#)
 - window [7-4](#)
- Select Network Component Type window [5-61](#)
- Select Network Service window [5-61](#)
- Select Profile, ASTU menu option [8-8 to 8-9](#)
- sensitivity [A-4](#)
- serial number of client adapter [9-10](#)
- server-based authentication, currently being used [7-8](#)
- Setup Status window (Install Wizard) [9-5](#)
- Setup Type window (Install Wizard) [3-12](#)
- shared authentication
 - setting [5-12, E-8](#)
 - status of [7-9](#)
- short radio headers
 - status of [7-12](#)
 - using [5-9](#)
- Show Connection Status, ASTU menu option [8-9](#)
- signal quality
 - in ADU [7-11](#)
 - in site survey utility [F-7](#)
- signal strength
 - as a percentage [7-3](#)
 - in ADU [7-7, 7-11](#)
 - in ASTU [8-5](#)
 - in dBm [7-3](#)
- Signal Strength Display Units parameter [7-3](#)
- signal-to-noise ratio (SNR)
 - as a percentage [7-3](#)
 - in ADU [4-6](#)
 - in dB [7-3](#)
 - in site survey utility [F-8](#)
- site requirements
 - for client devices [2-5](#)
 - for infrastructure devices [2-5](#)
- site survey
 - environmental considerations [F-2](#)
 - guidelines [F-2](#)
 - performing [F-1 to F-34](#)
- site survey utility
 - About window [F-33](#)
 - accessing help [F-33](#)
 - Accumulate button [F-17, F-18](#)
 - AP detailed information parameters [F-14 to F-16](#)
 - AP Detailed Information window [F-13](#)
 - AP scan list
 - parameters [F-10 to F-12](#)
 - pausing [F-13](#)
 - viewing [F-9 to F-12](#)
 - associated AP status parameters [F-6 to F-8](#)

- client adapter association status [F-4](#)
- configuring
 - AP scan logging [F-26 to F-27](#)
 - proximity beeper [F-18 to F-19](#)
 - threshold values [F-20 to F-23](#)
- debugging information [F-14](#)
- deleting
 - AP scan log [F-30](#)
 - threshold log file [F-25](#)
- disabling
 - AP scan logging [F-28](#)
 - proximity beeper [F-20](#)
 - threshold triggers [F-23](#)
- enabling
 - AP scan logging [F-28](#)
 - proximity beeper [F-20](#)
 - threshold triggers [F-23](#)
- exiting [F-34](#)
- finding version of [F-33](#)
- Fit Columns parameter [F-9](#)
- generating AP scan log file [F-16 to F-17](#)
- indicators [F-33](#)
- inverting tone of proximity beeper [F-19](#)
- log file [F-17](#)
- Log Snapshot button [F-16](#)
- opening [F-3](#)
- opening AP scan list [F-31](#)
- overview [F-2](#)
- Pause List Update button [F-13](#)
- resize tab [F-33](#)
- resizing columns [F-9](#)
- saving AP scan list [F-30 to F-31](#)
- selecting client adapter [F-3 to F-4](#)
- specifying
 - directory [3-13](#)
 - display units [F-4](#)
- status bar [F-32 to F-33](#)
- status messages [F-32](#)
- top of main window [F-4](#)
- trend graph, explained [F-6](#)
- uninstalling [F-34](#)
- using
 - AP Scan List tab [F-8 to F-18](#)
 - AP scanning [F-26 to F-31](#)
 - thresholds [F-20 to F-25](#)
- View AP Details button [F-13](#)
- viewing
 - access point details [F-13 to F-16](#)
 - an accumulation of access points [F-18](#)
 - AP scan log [F-28 to F-29](#)
 - status of access point [F-5 to F-8](#)
 - threshold log file [F-24 to F-25](#)
- Smart Card or other Certificate Properties window -
Windows XP [E-11](#)
- software
 - compatibility with Cisco Aironet client adapters [3-9](#)
 - installing [3-9 to 3-20](#)
 - procedures [9-3 to 9-11](#)
 - uninstalling [9-6 to 9-7](#)
 - upgrading [9-3 to 9-5](#)
- software components
 - described [1-4](#)
 - finding versions [9-9](#)
- specifications
 - physical [A-2](#)
 - power [A-6](#)
 - radio [A-3 to A-5](#)
 - regulatory compliance [A-6](#)
 - safety [A-6](#)
- spread spectrum [1-3](#)
- SSID
 - setting [5-4](#)
 - viewing
 - in ADU [4-3, 4-5, 7-8](#)
 - in ASTU [8-3, 8-11](#)
 - in site survey utility [F-10, F-14, F-19](#)
- SSID1 parameter [5-4](#)
- SSID2 parameter [5-5](#)

- SSID3 parameter [5-5](#)
 - Ssidl, in site survey utility [F-12](#)
 - Start Test button, in troubleshooting utility [10-5](#)
 - static WEP
 - disabling [5-58](#)
 - enabling [5-26 to 5-27](#)
 - with open authentication, setting on client and access point [5-22](#)
 - with shared key authentication, setting on client and access point [5-22](#)
 - static WEP keys
 - guidelines for entering
 - in ADU [5-27](#)
 - in Windows XP [E-9](#)
 - overview [5-15, E-2](#)
 - selecting transmit key [5-27](#)
 - size of [5-26](#)
 - statistics
 - method of calculation [7-13](#)
 - receive [7-14, 7-15 to 7-16](#)
 - transmit [7-14, 7-15](#)
 - viewing [7-13 to 7-16](#)
 - status bar, in site survey utility [F-32 to F-33](#)
 - status messages, in site survey utility [F-32](#)
 - status of client adapter
 - in ADU Advanced Status window [7-8 to 7-12](#)
 - in ADU Current Status window [7-5 to 7-7](#)
 - in ASTU Connection Status window [8-9 to 8-11](#)
 - in ASTU Tool Tip window [8-4](#)
 - in Windows XP [E-18](#)
 - Stop Test button, in troubleshooting utility [10-5](#)
 - supplicant, finding version [9-9](#)
 - system requirements [2-4](#)
-
- T**
- Taiwan, administrative rules for client adapters [C-8 to C-9](#)
 - Temporal Key Integrity Protocol (TKIP)
 - described [5-21](#)
 - setting on client and access point [5-25](#)
 - with WPA [5-19](#)
 - temporary username and password
 - automatically prompt for
 - for EAP-FAST [5-38](#)
 - for LEAP [5-31](#)
 - described
 - for EAP-FAST [5-37, 5-38](#)
 - for LEAP [5-30](#)
 - manually prompt for
 - for EAP-FAST [5-38](#)
 - for LEAP [5-31](#)
 - selecting options
 - for EAP-FAST [5-38](#)
 - for LEAP [5-31](#)
 - using Windows credentials
 - for LEAP [5-31](#)
 - third-party tool, enabling in Install Wizard [3-17](#)
 - threshold log file
 - adding a comment to [F-24](#)
 - deleting in site survey utility [F-25](#)
 - name and location [F-23](#)
 - viewing in site survey utility [F-24 to F-25](#)
 - Threshold Log File window (site survey utility) [F-25](#)
 - Threshold Logging Configuration window (site survey utility) [F-21](#)
 - thresholds, using in site survey utility [F-20 to F-25](#)
 - threshold triggers
 - disabling in site survey utility [F-23](#)
 - enabling in site survey utility [F-23](#)
 - throughput [5-8, 5-9](#)
 - time of day, in site survey utility [F-10, F-17, F-18](#)
 - TKIP
 - option in Windows XP [E-8](#)
 - status of [7-7](#)
 - Token Configuration window [6-15](#)
 - translated safety warnings [B-1 to B-6](#)
 - transmit key [5-27](#)
 - transmit power, in site survey utility [F-12, F-16](#)

Transmit Power Level parameter [5-7](#)

transmit rate [7-12, 8-11](#)

transmit statistics [7-14, 7-15](#)

Troubleshooting

ADU menu option [10-4](#)

ASTU menu option [8-6, 10-4](#)

button [10-4](#)

troubleshooting information, accessing [10-2](#)

troubleshooting utility

saving detailed report to text file [10-7](#)

using [10-3 to 10-7](#)

Troubleshooting Utility window

detailed report [10-6](#)

initial window [10-4](#)

with test results [10-5](#)

U

unicast packets

number received [7-14](#)

number transmitted [7-14](#)

uninstalling

client adapter software [9-6 to 9-7](#)

profile migration tool [6-7](#)

unpacking the client adapter [2-3](#)

upgrading client adapter software [9-3 to 9-5](#)

up time, status of [7-11](#)

Use Auto Profile Selection, ASTU menu option [8-8](#)

Use Machine Information For Domain Logon parameter

for EAP-TLS [5-42, 5-46](#)

for PEAP (EAP-GTC) [5-49](#)

for PEAP (EAP-MSCHAP V2) [5-53](#)

Use Saved User Name and Password option

for EAP-FAST [5-38](#)

for LEAP [5-30](#)

Use Temporary User Name and Password option

for EAP-FAST [5-37, 5-38](#)

for LEAP [5-30](#)

Use Windows to Configure My Wireless Network Settings parameter - Windows XP [E-6](#)

Use Windows User Name and Password option

for EAP-FAST [5-38](#)

for LEAP [5-30, 5-31, 5-38](#)

V

View AP Details button, in site survey utility [F-13](#)

View AP Scan Log, site survey utility menu option [F-16, F-28](#)

viewer, name and location [F-23, F-27](#)

View Report button, in troubleshooting utility [10-6](#)

View Threshold Log, site survey utility menu option [F-24](#)

W

warning

antenna [2-2, B-3](#)

defined [xiii to xiv](#)

explosive device proximity [2-2, B-2](#)

laptop users [2-3, B-4 to B-6](#)

WEP

keys

additional security features [5-21](#)

defined [5-14, E-2](#)

entry method [5-26](#)

size of [5-15, E-2](#)

types of [5-15, E-2](#)

status of [7-7](#)

WEP key hashing, described [5-21](#)

WEP option, in Windows XP [E-8](#)

Wi-Fi Multimedia (WMM)

enabling [5-59 to 5-62](#)

in site survey utility [F-12](#)

status of [7-10](#)

Wi-Fi Protected Access (WPA)

described [5-19, E-4](#)

enabling in Windows XP [E-8](#)

- enabling with EAP-FAST [5-34](#)
- enabling with EAP-TLS [5-45](#)
- enabling with LEAP [5-29](#)
- enabling with PEAP (EAP-GTC) [5-48](#)
- enabling with PEAP (EAP-MSCHAP V2) [5-52](#)
- in site survey utility [F-12](#)
- software required [E-4](#)
- Wi-Fi Protected Access 2 (WPA2)
 - described [5-19](#)
 - enabling with EAP-FAST [5-34](#)
 - enabling with EAP-TLS [5-45](#)
 - enabling with LEAP [5-29](#)
 - enabling with PEAP (EAP-GTC) [5-48](#)
 - enabling with PEAP (EAP-MSCHAP V2) [5-52](#)
 - in site survey utility [F-12](#)
- Windows 2000
 - disabling Microsoft 802.1X supplicant [10-8](#)
 - resolving resource conflicts [10-9](#)
- Windows Wireless Network Connection icon, shows unavailable connection [10-12](#)
- Windows XP
 - associating to an access point [E-18](#)
 - configuring client adapter through [E-5 to E-10](#)
 - disabling Microsoft Wireless Configuration Manager [10-8](#)
 - enabling EAP-TLS authentication [E-10 to E-12](#)
 - enabling PEAP authentication [E-13 to E-18](#)
 - feature comparison to ADU [3-17 to 3-18](#)
 - making a configuration decision [3-17 to 3-18](#)
 - resolving resource conflicts [10-10](#)
 - security features [E-2 to E-4](#)
 - viewing status of client adapter [E-18](#)
- Wireless Cisco Connection Properties window - Windows 2000 [5-60](#)
- wireless infrastructure [1-6](#)
- wireless mode, current [4-6, 7-6](#)
- Wireless Mode parameter [5-10](#)
- Wireless Mode When Starting Ad Hoc Network parameter [5-10](#)
- Wireless Network Connection Properties window (Wireless Networks Tab) - Windows XP [E-6](#)
- Wireless Network Connection Properties window - Windows XP [5-62](#)
- Wireless Network Connection Status window - Windows XP [E-18](#)
- Wireless Network Properties window (Association Tab) - Windows XP [E-7](#)
- Wireless Network Properties window (Authentication Tab) - Windows XP [E-10, E-13](#)
- WMM
 - See Wi-Fi Multimedia (WMM)
- workstation
 - defined [1-2](#)
 - in wireless infrastructure [1-6](#)
- WPA
 - See Wi-Fi Protected Access (WPA)
- WPA/WPA2/CCKM EAP Type parameter
 - with EAP-FAST [5-34](#)
 - with EAP-TLS [5-45](#)
 - with LEAP [5-29](#)
 - with PEAP (EAP-GTC) [5-48](#)
 - with PEAP (EAP-MSCHAP V2) [5-52](#)
- WPA/WPA2/CCKM option
 - used to enable CCKM fast secure roaming [5-20](#)
 - with EAP-FAST [5-34](#)
 - with EAP-TLS [5-45](#)
 - with LEAP [5-29](#)
 - with PEAP (EAP-GTC) [5-48](#)
 - with PEAP (EAP-MSCHAP V2) [5-52](#)
- WPA/WPA2 Passphrase option [5-28](#)
- WPA2
 - See Wi-Fi Protected Access 2 (WPA2)
- WPA2 passphrase
 - described [5-19](#)
 - disabling [5-58](#)
 - enabling [5-28](#)
 - setting on client and access point [5-22](#)
- WPA option, in Windows XP [E-8](#)
- WPA passphrase

described [5-19, E-4](#)

disabling [5-58](#)

enabling [5-28](#)

setting on client and access point [5-22](#)

WPA Pre-Shared Key

See WPA passphrase or WPA2 passphrase

WPA-PSK

described [5-19, E-4](#)

option in Windows XP [E-8](#)