



# Configuring Storage Profiles

---

This part contains the following chapters:

- [Storage Profiles, 1 ページ](#)
- [Disk Groups and Disk Group Configuration Policies, 2 ページ](#)
- [RAID Levels, 3 ページ](#)
- [Automatic Disk Selection, 4 ページ](#)
- [Supported LUN Modifications, 5 ページ](#)
- [Unsupported LUN Modifications, 5 ページ](#)
- [Disk Insertion Handling, 6 ページ](#)
- [Virtual Drive Naming, 7 ページ](#)
- [LUN Dereferencing, 8 ページ](#)
- [Guidelines and Limitations, 8 ページ](#)
- [Configuring Storage Profiles, 9 ページ](#)

## Storage Profiles

Unlike Cisco UCS B-Series and C-Series servers, the Cisco UCS M-Series modular servers do not have local storage. Instead, storage is centralized per chassis, and this centralized storage is shared by all servers in the chassis. To allow flexibility in defining the number of storage disks, roles and usage of these disks, and other storage parameters, you can create and use storage profiles. A storage profile encapsulates the storage requirements for one or more service profiles. LUNs configured in a storage profile can be used as boot LUNs or data LUNs, and can be dedicated to a specific server. You can also specify a local LUN as a boot device. However, LUN resizing is not supported. The introduction of storage profiles allows you to do the following:

- Configure multiple virtual drives and select the physical drives that are used by a virtual drive. You can also configure the storage capacity of a virtual drive.
- Configure the number, type and role of disks in a disk group.
- Associate a storage profile with a service profile.

You can create a storage profile both at an org level and at a service-profile level. A service profile can have a dedicated storage profile as well as a storage profile at an org level.

## Disk Groups and Disk Group Configuration Policies

In UCS M-Series Modular Servers, servers in a chassis can use storage that is centralized in that chassis. You can select and configure the disks to be used for storage. A logical collection of these physical disks is called a disk group. Disk groups allow you to organize local disks. The storage controller controls the creation and configuration of disk groups.

A disk group configuration policy defines how a disk group is created and configured. The policy specifies the RAID level to be used for the disk group. It also specifies either a manual or an automatic selection of disks for the disk group, and roles for disks. You can use a disk group policy to manage multiple disk groups. However, a single disk group can be managed only by one disk group policy.

A hot spare is an unused extra disk that can be used by a disk group in the case of failure of a disk in the disk group. Hot spares can be used only in disk groups that support a fault-tolerant RAID level.

## Virtual Drives

A disk group can be partitioned into virtual drives. Each virtual drive appears as an individual physical device to the Operating System.

All virtual drives in a disk group must be managed by using a single disk group policy.

### Configuration States

Indicates the configuration states of a virtual drive. Virtual drives can have the following configuration states:

- Applying—Creation of the virtual drive is in progress.
- Applied—Creation of the virtual drive is complete, or virtual disk policy changes are configured and applied successfully.
- Failed to apply—Creation, deletion, or renaming of a virtual drive has failed due to errors in the underlying storage subsystem.
- Orphaned—The service profile that contained this virtual drive is deleted.
- Not in use—The service profile that contained this virtual drive is in the disassociated state.

### Deployment States

Indicates the actions that you are performing on virtual drives. Virtual drives can have the following deployment states:

- No action—No pending work items for the virtual drive.
- Creating—Creation of the virtual drive is in progress.
- Deleting—Deletion of the virtual drive is in progress.
- Modifying—Modification of the virtual drive is in progress.
- Apply-Failed—Creation or modification of the virtual drive has failed.

### Operability States

Indicates the operating condition of a virtual drive. Virtual drives can have the following operability states:

- Optimal—The virtual drive operating condition is good. All configured drives are online.
- Degraded—The virtual drive operating condition is not optimal. One of the configured drives has failed or is offline.
- Cache-degraded—The virtual drive has been created with a write policy of **write back** mode, but the BBU has failed, or there is no BBU.




---

(注) This state does not occur if you select the **always write back** mode.

---

- Partially degraded—The operating condition in a RAID 6 virtual drive is not optimal. One of the configured drives has failed or is offline. RAID 6 can tolerate up to two drive failures.
- Offline—The virtual drive is not available to the RAID controller. This is essentially a failed state.
- Unknown—The state of the virtual drive is not known.

### Presence States

Indicates the presence of virtual drive components. Virtual drives have the following presence states:

- Equipped—The virtual drive is available.
- Mismatched—A virtual drive deployed state is different from its configured state.
- Missing—Virtual drive is missing.

## RAID Levels

The RAID level of a disk group describes how the data is organized on the disk group for the purpose of ensuring availability, redundancy of data, and I/O performance.

The following are features provided by RAID:

- Striping—Segmenting data across multiple physical devices. This improves performance by increasing throughput due to simultaneous device access.
- Mirroring—Writing the same data to multiple devices to accomplish data redundancy.
- Parity—Storing of redundant data on an additional device for the purpose of error correction in the event of device failure. Parity does not provide full redundancy, but it allows for error recovery in some scenarios.
- Spanning—Allows multiple drives to function like a larger one. For example, four 20 GB drives can be combined to appear as a single 80 GB drive.

The supported RAID levels include the following:

- RAID 0 Striped—Data is striped across all disks in the array, providing fast throughput. There is no data redundancy, and all data is lost if any disk fails.

- RAID 1 Mirrored—Data is written to two disks, providing complete data redundancy if one disk fails. The maximum array size is equal to the available space on the smaller of the two drives.
- RAID 5 Striped Parity—Data is striped across all disks in the array. Part of the capacity of each disk stores parity information that can be used to reconstruct data if a disk fails. RAID 5 provides good data throughput for applications with high read request rates.  
RAID 5 distributes parity data blocks among the disks that are part of a RAID-5 group and requires a minimum of three disks.
- RAID 6 Striped Dual Parity—Data is striped across all disks in the array and two sets of parity data are used to provide protection against failure of up to two physical disks. In each row of data blocks, two sets of parity data are stored.  
Other than addition of a second parity block, RAID 6 is identical to RAID 5. A minimum of four disks are required for RAID 6.
- RAID 10 Mirrored and Striped—RAID 10 uses mirrored pairs of disks to provide complete data redundancy and high throughput rates through block-level striping. RAID 10 is mirroring without parity and block-level striping. A minimum of four disks are required for RAID 10.

## Automatic Disk Selection

When you specify a disk group configuration, and do not specify the local disks in it, Cisco UCS Manager determines the disks to be used based on the criteria specified in the disk group configuration policy. Cisco UCS Manager can make this selection of disks in multiple ways.

When all qualifiers match for a set of disks, then disks are selected sequentially according to their slot number. Regular disks and dedicated hot spares are selected by using the lowest numbered slot.

The following is the disk selection process:

- 1 Iterate over all local LUNs that require the creation of a new virtual drive. Iteration is based on the following criteria, in order:
  - a Disk type
  - b Minimum disk size from highest to lowest
  - c Space required from highest to lowest
  - d Disk group qualifier name, in alphabetical order
  - e Local LUN name, in alphabetical order
- 2 Select regular disks depending on the minimum number of disks and minimum disk size. Disks are selected sequentially starting from the lowest numbered disk slot that satisfies the search criteria.



(注)

If you specify **Any** as the type of drive, the first available drive is selected. After this drive is selected, subsequent drives will be of a compatible type. For example, if the first drive was SATA, all subsequent drives would be SATA. Cisco UCS Manager Release 2.5 supports only SATA and SAS.

Cisco UCS Manager Release 2.5 does not support RAID migration.

- 3 Select dedicated hot spares by using the same method as normal disks. Disks are only selected if they are in an **Unconfigured Good** state.
- 4 If a provisioned LUN has the same disk group policy as a deployed virtual drive, then try to deploy the new virtual drive in the same disk group. Otherwise, try to find new disks for deployment.

## Supported LUN Modifications

Some modifications that are made to the LUN configuration when LUNs are already deployed on an associated server are supported.

The following are the types of modifications that can be performed:

- Creation of a new virtual drive.
- Deletion of an existing virtual drive, which is in the orphaned state.
- Non-disruptive changes to an existing virtual drive. These changes can be made on an existing virtual drive without loss of data, and without performance degradation:
  - Policy changes. For example, changing the write cache policy.
  - Modification of boot parameters

The removal of a LUN will cause a warning to be displayed. Ensure that you take action to avoid loss of data.

## Unsupported LUN Modifications

Some modifications to existing LUNs are not possible without destroying the original virtual drive and creating a new one. All data is lost in these types of modification, and these modifications are not supported.

Disruptive modifications to an existing virtual drive are not supported. The following are unsupported disruptive changes:

- Any supported RAID level change that can be handled through reconstruction. For example, RAID0 to RAID1.
- Increasing the size of a virtual drive through reconstruction.
- Addition and removal of disks through reconstruction.

Destructive modifications are also not supported. The following are unsupported destructive modifications:

- RAID-level changes that do not support reconstruction. For example, RAID5 to RAID1.
- Shrinking the size of a virtual drive.
- RAID-level changes that support reconstruction, but where there are other virtual drives present on the same drive group.
- Disk removal when there is not enough space left on the disk group to accommodate the virtual drive.
- Explicit change in the set of disks used by the virtual drive.

# Disk Insertion Handling

When the following sequence of events takes place:

- 1 The LUN is created in one of the following ways:
  - 1 You specify the slot specifically by using a local disk reference
  - 2 The system selects the slot based on criteria specified by you
- 2 The LUN is successfully deployed, which means that a virtual drive is created, which uses the slot.
- 3 You remove a disk from the slot, possibly because the disk failed.
- 4 You insert a new working disk into the same slot.

The following scenarios are possible:

- [Non-Redundant Virtual Drives](#), (6 ページ)
- [Redundant Virtual Drives with No Hot Spare Drives](#), (6 ページ)
- [Redundant Virtual Drives with Hot Spare Drives](#), (6 ページ)
- [Replacing Hot Spare Drives](#), (7 ページ)
- [Inserting Physical Drives into Unused Slots](#), (7 ページ)

## Non-Redundant Virtual Drives

For non-redundant virtual drives (RAID 0), when a physical drive is removed, the state of the virtual drive is **Inoperable**. When a new working drive is inserted, the new physical drive goes to an **Unconfigured Good** state.

For non-redundant virtual drives, there is no way to recover the virtual drive. You must delete the virtual drive and re-create it.

## Redundant Virtual Drives with No Hot Spare Drives

For redundant virtual drives (RAID 1, RAID 5, RAID 6, RAID 10) with no hot spare drives assigned, virtual drive mismatch, virtual drive member missing, and local disk missing faults appear until you insert a working physical drive into the same slot from which the old physical drive was removed.

If the physical drive size is greater than or equal to that of the old drive, the storage controller automatically uses the new drive for the virtual drive. The new drive goes into the **Rebuilding** state. After rebuild is complete, the virtual drive goes back into the **Online** state.

## Redundant Virtual Drives with Hot Spare Drives

For redundant virtual drives (RAID 1, RAID 5, RAID 6, RAID 10) with hot spare drives assigned, when a drive fails, or when you remove a drive, the dedicated hot spare drive, if available, goes into the **Rebuilding**

state with the virtual drive in the **Degraded** state. After rebuilding is complete, that drive goes to the **Online** state.

Cisco UCSM raises a disk missing and virtual drive mismatch fault because although the virtual drive is operational, it does not match the physical configuration that Cisco UCSM expects.

if you insert a new disk in the slot with the disk missing, automatic copy back starts from the earlier hot spare disk to the newly inserted disk. After copy back, the hot spare disk is restored. In this state all faults are cleared.

If automatic copy back does not start, and the newly inserted disk remains in the **Unconfigured Good**, **JBOD**, or **Foreign Configuration** state, remove the new disk from the slot, reinsert the earlier hot spare disk into the slot, and import foreign configuration. This initiates the rebuilding process and the drive state becomes **Online**. Now, insert the new disk in the hot spare slot and mark it as hot spare to match it exactly with the information available in Cisco UCSM.

## Replacing Hot Spare Drives

If a hot spare drive is replaced, the new hot spare drive will go to the **Unconfigured Good**, **Unconfigured Bad**, **JBOD**, or **Foreign Configuration** state.

Cisco UCSM will raise a virtual drive mismatch or virtual drive member mismatch fault because the hot spare drive is in a state different from the state configured in Cisco UCSM.

You must manually clear the fault. To do this, you must perform the following actions:

- 1 Clear the state on the newly inserted drive to **Unconfigured Good**.
- 2 Configure the newly inserted drive as a hot spare drive to match what is expected by Cisco UCSM.

## Inserting Physical Drives into Unused Slots

If you insert new physical drives into unused slots, neither the storage controller nor Cisco UCSM will make use of the new drive even if the drive is in the **Unconfigured Good** state and there are virtual drives that are missing good physical drives.

The drive will simply go into the **Unconfigured Good** state. To make use of the new drive, you will need to modify or create LUNs to reference the newly inserted drive.

## Virtual Drive Naming

When you use UCSM to create a virtual drive, UCSM assigns a unique ID that can be used to reliably identify the virtual drive for further operations. UCSM also provides the flexibility to provide a name to the virtual drive at the time of service profile association. Any virtual drive without a service profile or a server reference is marked as an orphan virtual drive.

In addition to a unique ID, a name is assigned to the drive. Names can be assigned in two ways:

- When configuring a virtual drive, you can explicitly assign a name that can be referenced in storage profiles.
- If you have not preprovisioned a name for the virtual drive, UCSM generates a unique name for the virtual drive.

You can rename virtual drives that are not referenced by any service profile or server.

## LUN Dereferencing

A LUN is dereferenced when it is no longer used by any service profile. This can occur as part of the following scenarios:

- The LUN is no longer referenced from the storage profile
- The storage profile is no longer referenced from the service profile
- The server is disassociated from the service profile
- The server is decommissioned

When the LUN is no longer referenced, but the server is still associated, re-association occurs.

When the service profile that contained the LUN is disassociated, the LUN state is changed to **Not in use**.

When the service profile that contained the LUN is deleted, the LUN state is changed to **Orphaned**.

## Guidelines and Limitations

- Cisco UCS Manager does not support initiating the following storage profile functions. However, you can monitor them through Cisco UCS Manager after they are performed:
  - Virtual Drive Rebuild
  - Virtual Drive Consistency Check
  - Virtual Drive Initialization
  - Patrol Read
  - BBU Relearning
  - Locator LED
  - BBU Configuration
  - Destructive LUN modifications
  - Automatic LUN creation
  - Disk replacement with hot spares
  - JBOD mode
  - Additional disk selection qualifiers
- Cisco UCS Manager does not support a combination of SAS and SATA drives in storage configurations.
- Cisco UCS Manager Release 2.5 only supports a stripe size of 64k and more. Having a stripe size of less than 64k will result in failure when a service profile is associated.

## Controller Constraints and Limitations

In Cisco UCS Manager Release 2.5, the storage controller allows 64 virtual drives per controller, and up to 4 virtual drives per server, of which up to 2 virtual drives are bootable.



(注)

Only the modular servers in Cisco UCSME-2814 compute cartridges include support for up to 4 virtual drives per server.

## Configuring Storage Profiles

### Configuring a Disk Group Policy

You can choose to configure a disk group policy through automatic or manual disk selection. Configuring a disk group involves the following:

- 1 [Setting the RAID Level](#), (9 ページ)
- 2 [Automatically Configuring Disks in a Disk Group](#), (10 ページ) or [Manually Configuring Disks in a Disk Group](#), (12 ページ)
- 3 [Configuring Virtual Drive Properties](#), (13 ページ)

### Setting the RAID Level

#### 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org# **create disk-group-config-policy** *disk-group-name*
3. UCS-A /org/disk-group-config-policy\* # **set raid-level** *raid-level*
4. UCS-A /org/disk-group-config-policy\* # **commit-buffer**

#### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org# <b>create disk-group-config-policy</b> <i>disk-group-name</i>	Creates a disk group configuration policy with the specified name and enters disk group configuration policy mode.

	コマンドまたはアクション	目的
ステップ 3	UCS-A /org/disk-group-config-policy* # <b>set raid-level</b> <i>raid-level</i>	Specifies the RAID level for the disk group configuration policy. The RAID levels that you can specify are: <ul style="list-style-type: none"> <li>• raid-0-striped</li> <li>• raid-1-mirrored</li> <li>• raid-10-mirrored-and-striped</li> <li>• raid-5-striped-parity</li> <li>• raid-6-striped-dual-parity</li> </ul>
ステップ 4	UCS-A /org/disk-group-config-policy* # <b>commit-buffer</b>	Commits the transaction to the system configuration.

This example shows how to set the RAID level for a disk group configuration policy.

```
UCS-A# scope org
UCS-A /org # create disk-group-config-policy raid5policy
UCS-A /org/disk-group-config-policy* # set raid-level raid-5-striped-parity
UCS-A /org/disk-group-config-policy* # commit-buffer
```

#### 次の作業

Automatically or manually configure disks as part of the disk group configuration policy.

## Automatically Configuring Disks in a Disk Group

You can allow UCSM to automatically select and configure disks in a disk group.

When you create a disk group with RAID 1 policy and configure four disks for it, a RAID1E configuration is created internally by the storage controller.

#### 手順の概要

1. UCS-A# **scope** *org org-name*
2. UCS-A /org# **enter** *disk-group-config-policy disk-group-name*
3. UCS-A /org/disk-group-config-policy\* # **enter** *disk-group-qual*
4. UCS-A /org/disk-group-config-policy/disk-group-qual\* # **set** *drive-type drive-type*
5. UCS-A /org/disk-group-config-policy/disk-group-qual\* # **set** *min-drive-size drive-size*
6. UCS-A /org/disk-group-config-policy/disk-group-qual\* # **set** *num-ded-hot-spares hot-spare-num*
7. UCS-A /org/disk-group-config-policy/disk-group-qual\* # **set** *num-drives drive-num*
8. UCS-A /org/disk-group-config-policy/disk-group-qual\* # **commit-buffer**

## 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org# <b>enter disk-group-config-policy</b> <i>disk-group-name</i>	Enters disk group configuration policy mode for the specified disk group name.
ステップ 3	UCS-A /org/disk-group-config-policy* # <b>enter disk-group-qual</b>	Enters disk group qualification mode. In this mode, UCSM automatically configures disks as part of the specified disk group.
ステップ 4	UCS-A /org/disk-group-config-policy/disk-group-qual* # <b>set drive-type</b> <i>drive-type</i>	Specifies the drive type for the disk group. You can select: <ul style="list-style-type: none"> <li>• SSD</li> <li>• Unspecified</li> </ul> (注) If you specify <b>Unspecified</b> as the type of drive, the first available drive is selected. After this drive is selected, subsequent drives will be of a compatible type. For example, if the first was SSD, all subsequent drives would be SSD.
ステップ 5	UCS-A /org/disk-group-config-policy/disk-group-qual* # <b>set min-drive-size</b> <i>drive-size</i>	Specifies the minimum drive size for the disk group. Only disks that match this criteria will be available for selection. The range for minimum drive size is from 0 to 10240 GB. You can also set the minimum drive size as <b>Unspecified</b> . If you set the minimum drive size as <b>Unspecified</b> , drives of all sizes will be available for selection.
ステップ 6	UCS-A /org/disk-group-config-policy/disk-group-qual* # <b>set num-ded-hot-spares</b> <i>hot-spare-num</i>	Specifies the number of dedicated hot spares for the disk group. The range for dedicated hot spares is from 0 to 24 hot spares. You can also set the number of dedicated hot spares as <b>Unspecified</b> . If you set the number of dedicated hot spares as <b>Unspecified</b> , the hot spares will be selected according to the disk selection process.
ステップ 7	UCS-A /org/disk-group-config-policy/disk-group-qual* # <b>set num-drives</b> <i>drive-num</i>	Specifies the number of drives for the disk group. The range for drives is from 0 to 24 drives. You can also set the number of drives as <b>Unspecified</b> . If you set the number of drives as <b>Unspecified</b> , the number of drives will be selected according to the disk selection process.
ステップ 8	UCS-A /org/disk-group-config-policy/disk-group-qual* # <b>commit-buffer</b>	Commits the transaction to the system configuration.

This example shows how to automatically configure disks for a disk group configuration policy.

```
UCS-A# scope org
UCS-A /org # enter disk-group-config-policy raid5policy
UCS-A /org/disk-group-config-policy* # enter disk-group-qual
UCS-A /org/disk-group-config-policy/disk-group-qual* # set drive-type ssd
UCS-A /org/disk-group-config-policy/disk-group-qual* # set min-drive-size 1000
UCS-A /org/disk-group-config-policy/disk-group-qual* # set num-ded-hot-spares 2
UCS-A /org/disk-group-config-policy/disk-group-qual* # set num-drives 7
UCS-A /org/disk-group-config-policy/disk-group-qual* # commit-buffer
```

### 次の作業

Configure Virtual Drives.

## Manually Configuring Disks in a Disk Group

You can manually configure disks for a disk group.

When you create a disk group with RAID 1 policy and configure four disks for it, a RAID 1E configuration is created internally by the storage controller.

### 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org# **enter disk-group-config-policy** *disk-group-name*
3. UCS-A /org/disk-group-config-policy\* # **create local-disk-config-ref** *slot-num*
4. UCS-A /org/disk-group-config-policy/local-disk-config-ref \*# **set role** *role*
5. UCS-A /org/disk-group-config-policy/local-disk-config-ref \*# **set span-id** *span-id*
6. UCS-A /org/disk-group-config-policy/local-disk-config-ref \*# **commit-buffer**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org# <b>enter disk-group-config-policy</b> <i>disk-group-name</i>	Enters disk group configuration policy mode for the specified disk group name.
ステップ 3	UCS-A /org/disk-group-config-policy* # <b>create local-disk-config-ref</b> <i>slot-num</i>	Creates a local disk configuration reference for the specified slot and enters local disk configuration reference mode.
ステップ 4	UCS-A /org/disk-group-config-policy/local-disk-config-ref *# <b>set role</b> <i>role</i>	Specifies the role of the local disk in the disk group. You can select: <ul style="list-style-type: none"> <li>• ded-hot-spare: Dedicated hot spare</li> <li>• normal</li> </ul>

	コマンドまたはアクション	目的
ステップ 5	UCS-A /org/disk-group-config-policy/local-disk-config-ref *# <b>set span-id span-id</b>	Specifies the ID of the span group to which the disk belongs. Disks belonging to a single span group can be treated as a single disk with a larger size. The values range from 0 to 8. You can also set the Span ID as <b>Unspecified</b> when spanning information is not required.  (注) In Cisco UCS Release 2.5, you can have a maximum of 4 span groups.
ステップ 6	UCS-A /org/disk-group-config-policy/local-disk-config-ref *# <b>commit-buffer</b>	Commits the transaction to the system configuration.

This example shows how to manually configure disks for a disk group configuration policy.

```
UCS-A# scope org
UCS-A /org # enter disk-group-config-policy raid5policy
UCS-A /org/disk-group-config-policy* # create local-disk-config-ref 1
UCS-A /org/disk-group-config-policy/local-disk-config-ref* # set role ded-hot-spare
UCS-A /org/disk-group-config-policy/local-disk-config-ref* # set span-id 1
UCS-A /org/disk-group-config-policy/local-disk-config-ref* # commit-buffer
```

### 次の作業

Configure Virtual Drive Properties.

## Configuring Virtual Drive Properties

All virtual drives in a disk group must be managed by using a single disk group policy.

### 手順の概要

1. UCS-A# **scope org org-name**
2. UCS-A /org# **scope disk-group-config-policy disk-group-name**
3. UCS-A /org/disk-group-config-policy\* # **create virtual-drive-def**
4. UCS-A /org/disk-group-config-policy/virtual-drive-def\* # **set access-policy policy-type**
5. UCS-A /org/disk-group-config-policy/virtual-drive-def\* # **set drive-cache state**
6. UCS-A /org/disk-group-config-policy/virtual-drive-def\* # **set io-policy policy-type**
7. UCS-A /org/disk-group-config-policy/virtual-drive-def\* # **set read-policy policy-type**
8. UCS-A /org/disk-group-config-policy/virtual-drive-def\* # **set strip-size strip-size**
9. UCS-A /org/disk-group-config-policy/virtual-drive-def\* # **set write-cache-policy policy-type**
10. UCS-A /org/disk-group-config-policy/virtual-drive-def\* # **commit-buffer**
11. UCS-A /org/disk-group-config-policy/virtual-drive-def\* # **show**

## 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org# <b>scope disk-group-config-policy</b> <i>disk-group-name</i>	Enters disk group configuration policy mode for the specified disk group name.
ステップ 3	UCS-A /org/disk-group-config-policy* # <b>create virtual-drive-def</b>	Creates a virtual drive definition and enters the virtual drive definition mode.
ステップ 4	UCS-A /org/disk-group-config-policy/virtual-drive-def* # <b>set access-policy</b> <i>policy-type</i>	Specifies the access policy. This can be one of the following: <ul style="list-style-type: none"> <li>• blocked</li> <li>• platform-default</li> <li>• read-only:</li> <li>• read-write</li> </ul>
ステップ 5	UCS-A /org/disk-group-config-policy/virtual-drive-def* # <b>set drive-cache</b> <i>state</i>	Specifies the state of the drive cache. This can be one of the following: <ul style="list-style-type: none"> <li>• enable</li> <li>• disable</li> <li>• no-change</li> <li>• platform-default</li> </ul> <p><b>重要</b> In Cisco UCS Release 2.5, the drive cache state cannot be changed. It will remain as <b>platform-default</b>, irrespective of the drive cache state that you select.</p>
ステップ 6	UCS-A /org/disk-group-config-policy/virtual-drive-def* # <b>set io-policy</b> <i>policy-type</i>	Specifies the I/O policy. This can be one of the following: <ul style="list-style-type: none"> <li>• cached</li> <li>• direct</li> <li>• platform-default</li> </ul>
ステップ 7	UCS-A /org/disk-group-config-policy/virtual-drive-def* # <b>set read-policy</b> <i>policy-type</i>	Specifies the read policy. This can be one of the following: <ul style="list-style-type: none"> <li>• normal</li> <li>• platform-default</li> <li>• read-ahead</li> </ul>

	コマンドまたはアクション	目的
ステップ 8	UCS-A /org/disk-group-config-policy/virtual-drive-def* # <b>set strip-size</b> <i>strip-size</i>	Specifies the strip size. This can be one of the following: <ul style="list-style-type: none"> <li>• 64 KB</li> <li>• 128 KB</li> <li>• 256 KB</li> <li>• 512 KB</li> <li>• 1024 KB</li> <li>• platform-default</li> </ul>
ステップ 9	UCS-A /org/disk-group-config-policy/virtual-drive-def* # <b>set write-cache-policy</b> <i>policy-type</i>	Specifies the write-cache-policy. This can be one of the following: <ul style="list-style-type: none"> <li>• always-write-back</li> <li>• platform-default</li> <li>• write-back-good-bbu</li> <li>• write-through</li> </ul>
ステップ 10	UCS-A /org/disk-group-config-policy/virtual-drive-def* # <b>commit-buffer</b>	Commits the transaction to the system configuration.
ステップ 11	UCS-A /org/disk-group-config-policy/virtual-drive-def* # <b>show</b>	Displays the configured virtual drive properties.

This example shows how to configure virtual disk properties:

```
UCS-A# scope org
UCS-A /org # scope disk-group-config-policy raid0policy
UCS-A /org/disk-group-config-policy # create virtual-drive-def
UCS-A /org/disk-group-config-policy/virtual-drive-def* # set access-policy read-write
UCS-A /org/disk-group-config-policy/virtual-drive-def* # set drive-cache enable
UCS-A /org/disk-group-config-policy/virtual-drive-def* # set io-policy cached
UCS-A /org/disk-group-config-policy/virtual-drive-def* # set read-policy normal
UCS-A /org/disk-group-config-policy/virtual-drive-def* # set strip-size 1024
UCS-A /org/disk-group-config-policy/virtual-drive-def* # set write-cache-policy write-through
UCS-A /org/disk-group-config-policy/virtual-drive-def* # commit-buffer
UCS-A /org/disk-group-config-policy/virtual-drive-def # show

Virtual Drive Def:
  Strip Size (KB): 1024KB
  Access Policy: Read Write
  Read Policy: Normal
  Configured Write Cache Policy: Write Through
  IO Policy: Cached
  Drive Cache: Enable
UCS-A /org/disk-group-config-policy/virtual-drive-def #
```

## 次の作業

Create a Storage Profile

## Creating a Storage Profile

You can create a storage profile at the org level and at the service-profile level.

## 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org # **create storage-profile** *storage-profile-name*
3. UCS-A /org/storage-profile\* # **commit-buffer**
4. (任意) UCS-A /org\* # **enter service-profile** *service-profile-name*
5. (任意) UCS-A /org/service-profile\* # **create storage-profile-def**
6. UCS-A /org/service-profile/storage-profile-def\* # **commit-buffer**

## 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org # <b>create storage-profile</b> <i>storage-profile-name</i>	Creates a storage profile with the specified name at the org level and enters storage-profile configuration mode.
ステップ 3	UCS-A /org/storage-profile* # <b>commit-buffer</b>	Commits the transaction to the system configuration.
ステップ 4	UCS-A /org* # <b>enter service-profile</b> <i>service-profile-name</i>	(任意) Enters the specified service profile.
ステップ 5	UCS-A /org/service-profile* # <b>create storage-profile-def</b>	(任意) Creates a storage profile at the service-profile level.
ステップ 6	UCS-A /org/service-profile/storage-profile-def* # <b>commit-buffer</b>	Commits the transaction to the system configuration.

This example shows how to create a storage profile at the org level.

```
UCS-A# scope org
UCS-A /org # create storage-profile stp2
UCS-A /org/storage-profile* # commit-buffer
```

This example shows how to create a storage profile at the service-profile level.

```
UCS-A# scope org
UCS-A /org* # enter service-profile sp1
```

```
UCS-A /org/service-profile* # create storage-profile-def
UCS-A /org/service-profile/storage-profile-def* # commit-buffer
```

### 次の作業

Create Local LUNs

## Deleting a Storage Profile

You can delete a storage profile that was created at the org level or at the service-profile level.

### 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org # **delete storage-profile** *storage-profile-name*
3. (任意) UCS-A /org # **scope service-profile** *service-profile-name*
4. (任意) UCS-A /org/service-profile # **delete storage-profile-def**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org # <b>delete storage-profile</b> <i>storage-profile-name</i>	Deletes the storage profile with the specified name at the org level.
ステップ 3	UCS-A /org # <b>scope service-profile</b> <i>service-profile-name</i>	(任意) Enters the specified service profile.
ステップ 4	UCS-A /org/service-profile # <b>delete storage-profile-def</b>	(任意) Deletes the dedicated storage profile at the service-profile level.

This example shows how to delete a storage profile at the org level.

```
UCS-A # scope org
UCS-A /org # delete storage-profile stor1
```

This example shows how to delete a storage profile at the service-profile level.

```
UCS-A # scope org
UCS-A /org # scope service-profile spl
UCS-A /org/service-profile # delete storage-profile-def
```

## Creating Local LUNs

You can create local LUNs within a storage profile at the org level and within a dedicated storage profile at the service-profile level.

### 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org # **enter storage-profile** *storage-profile-name*
3. UCS-A /org/storage-profile\* # **create local-lun** *lun-name*
4. UCS-A /org/storage-profile/local-lun\* # **set auto-deploy** {**auto-deploy** | **no-auto-deploy**}
5. UCS-A /org/storage-profile/local-lun\* # **set disk-policy-name** *disk-policy-name*
6. UCS-A /org/storage-profile/local-lun\* # **set order** *order-num*
7. UCS-A /org/storage-profile/local-lun\* # **set size** *size*
8. UCS-A /org/storage-profile/local-lun\* # **commit-buffer**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org # <b>enter storage-profile</b> <i>storage-profile-name</i>	Enters storage-profile mode for the specified storage profile.
ステップ 3	UCS-A /org/storage-profile* # <b>create local-lun</b> <i>lun-name</i>	Creates a local LUN with the specified name.
ステップ 4	UCS-A /org/storage-profile/local-lun* # <b>set auto-deploy</b> { <b>auto-deploy</b>   <b>no-auto-deploy</b> }	Specifies whether the LUN should be auto-deployed or not.
ステップ 5	UCS-A /org/storage-profile/local-lun* # <b>set disk-policy-name</b> <i>disk-policy-name</i>	Specifies the name of the disk policy name for this LUN.
ステップ 6	UCS-A /org/storage-profile/local-lun* # <b>set order</b> <i>order-num</i>	Specifies the order of this LUN. The order can range from 1 to 64. You can also specify that the order should be <b>lowest-available</b> for the system to automatically assign the lowest available order to the LUN.  Multiple LUNs referenced by a storage profile must have unique names and unique orders.
ステップ 7	UCS-A /org/storage-profile/local-lun* # <b>set size</b> <i>size</i>	Specifies the size of this LUN in GB. The size can range from 1 GB to 10240 GB.  (注) You do not need to specify a LUN size while claiming an orphaned LUN.
ステップ 8	UCS-A /org/storage-profile/local-lun* # <b>commit-buffer</b>	Commits the transaction to the system configuration.

This example shows how to configure a local LUN within a storage profile at the org level.

```
UCS-A# scope org
UCS-A /org # enter storage-profile stp2
UCS-A /org/storage-profile* # create local-lun lun2
UCS-A /org/storage-profile/local-lun* # set disk-policy-name dpn2
UCS-A /org/storage-profile/local-lun* # set order 2
UCS-A /org/storage-profile/local-lun* # set size 1000
UCS-A /org/storage-profile/local-lun* # commit-buffer
```

This example shows how to configure a local LUN within a dedicated storage profile at the service-profile level.

```
UCS-A# scope org
UCS-A /org* # enter service-profile stp1
UCS-A /org/service-profile* # enter storage-profile-def
UCS-A /org/service-profile/storage-profile-def # create local-lun lun1
UCS-A /org/service-profile/storage-profile-def/local-lun* # set disk-policy-name dpn1
UCS-A /org/service-profile/storage-profile-def/local-lun* # set order 1
UCS-A /org/service-profile/storage-profile-def/local-lun* # set size 1000
UCS-A /org/service-profile/storage-profile-def/local-lun* # commit-buffer
```

### 次の作業

Associate a Storage Profile with a Service Profile

## Reordering Local LUNs In a Storage Profile

You can use the **set order** command to change the local LUN visibility order to the server. This operation will reboot the server.

### 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org # **enter storage-profile** *storage-profile-name*
3. UCS-A /org/storage-profile # **enter local-lun** *lun-name*
4. UCS-A /org/storage-profile/local-lun\* # **set disk-policy-name** *disk-policy-name*
5. UCS-A /org/storage-profile/local-lun # **set order** *order-num*
6. UCS-A /org/storage-profile/local-lun\* # **set size** *size*
7. UCS-A /org/storage-profile/local-lun # **commit-buffer**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org # <b>enter storage-profile</b> <i>storage-profile-name</i>	Enters storage-profile mode for the specified storage profile.

	コマンドまたはアクション	目的
ステップ 3	UCS-A /org/storage-profile # <b>enter local-lun</b> <i>lun-name</i>	Enters local-lun mode for the specified local LUN.
ステップ 4	UCS-A /org/storage-profile/local-lun* # <b>set disk-policy-name</b> <i>disk-policy-name</i>	Specifies the name of the disk policy name for this LUN.
ステップ 5	UCS-A /org/storage-profile/local-lun # <b>set order</b> <i>order-num</i>	Specifies the order of this LUN. The order can range from 1 to 64. You can also specify that the order should be <b>lowest-available</b> for the system to automatically assign the lowest available order to the LUN.
ステップ 6	UCS-A /org/storage-profile/local-lun* # <b>set size</b> <i>size</i>	Specifies the size of this LUN in GB. The size can range from 1 GB to 10240 GB.
ステップ 7	UCS-A /org/storage-profile/local-lun # <b>commit-buffer</b>	Commits the transaction to the system configuration.

This example shows how to reorder a local LUN within a storage profile at the org level.

```
UCS-A# scope org
UCS-A /org # enter storage-profile stp1
UCS-A /org/storage-profile* # enter local-lun lun1
UCS-A /org/storage-profile/local-lun* # set disk-policy-name dpn1
UCS-A /org/storage-profile/local-lun* # set order 1
UCS-A /org/storage-profile/local-lun* # set size 10
UCS-A /org/storage-profile/local-lun* # exit
UCS-A /org/storage-profile* # enter local-lun lun2
UCS-A /org/storage-profile/local-lun* # set disk-policy-name dpn2
UCS-A /org/storage-profile/local-lun* # set order 2
UCS-A /org/storage-profile/local-lun* # set size 10
UCS-A /org/storage-profile/local-lun* # exit
UCS-A /org/storage-profile* # commit-buffer

UCS-A /org/storage-profile # show configuration

enter storage-profile stp1
  enter local-lun lun1
    set auto-deploy auto-deploy
    set disk-policy-name dpn1
    set order 1
    set size 10
  exit
  enter local-lun lun2
    set auto-deploy auto-deploy
    set disk-policy-name dpn2
    set order 2
    set size 10
  exit
set descr ""
exit

UCS-A /org/storage-profile # enter local-lun lun1
UCS-A /org/storage-profile/local-lun # set order 2
UCS-A /org/storage-profile/local-lun* # exit
UCS-A /org/storage-profile* # enter local-lun lun2
UCS-A /org/storage-profile/local-lun* # set order 1
UCS-A /org/storage-profile/local-lun* # exit
UCS-A /org/storage-profile* # commit-buffer
UCS-A /org/storage-profile # show configuration
```

```

enter storage-profile stp1
  enter local-lun lun1
    set auto-deploy auto-deploy
    set disk-policy-name dpn1
    set order 2
    set size 10
  exit
  enter local-lun lun2
    set auto-deploy auto-deploy
    set disk-policy-name dpn2
    set order 1
    set size 10
  exit
  set descr ""
exit

```

## Deleting Local LUNs In a Storage Profile

When a LUN is deleted, the corresponding virtual drive is marked as orphan after the virtual drive reference is removed from the server.

### 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org # **enter storage-profile** *storage-profile-name*
3. (任意) UCS-A /org/storage-profile\* # **show local-lun**
4. UCS-A /org/storage-profile\* # **delete local-lun** *lun-name*
5. UCS-A /org/storage-profile\* # **commit-buffer**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org # <b>enter storage-profile</b> <i>storage-profile-name</i>	Enters storage-profile mode for the specified storage profile.
ステップ 3	UCS-A /org/storage-profile* # <b>show local-lun</b>	(任意) Displays the local LUNs in the specified storage profile.
ステップ 4	UCS-A /org/storage-profile* # <b>delete local-lun</b> <i>lun-name</i>	Deletes the specified LUN.
ステップ 5	UCS-A /org/storage-profile* # <b>commit-buffer</b>	Commits the transaction to the system configuration.

This example shows how to delete a LUN in a storage profile.

```

UCS-A # scope org
UCS-A /org # enter storage-profile stp2

```

```
UCS-A /org/storage-profile # show local-lun
```

```
Local SCSI LUN:
```

LUN Name	Size (GB)	Order	Disk Policy Name	Auto Deploy
luna	1	2	raid0	Auto Deploy
lunb	1	1	raid0	Auto Deploy

```
UCS-A /org/storage-profile # delete local-lun luna
```

```
UCS-A /org/storage-profile* # commit-buffer
```

```
UCS-A /org/storage-profile* # show local-lun
```

```
Local SCSI LUN:
```

LUN Name	Size (GB)	Order	Disk Policy Name	Auto Deploy
lunb	1	1	raid0	Auto Deploy

## Associating a Storage Profile with a Service Profile

A storage profile created under org can be referred by multiple service profiles, and a name reference in service profile is needed to associate the storage profile with a service profile.



### 重要

Storage profiles can be defined under org and under service profile (dedicated). Hence, a service profile inherits local LUNs from both possible storage profiles. A service profile can have a maximum of two such local LUNs.

### 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org # **scope service-profile** *service-profile-name*
3. UCS-A /org/service-profile # **set storage-profile-name** *storage-profile-name*
4. UCS-A /org/service-profile\* # **commit-buffer**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org # <b>scope service-profile</b> <i>service-profile-name</i>	Enters the specified service profile mode.

	コマンドまたはアクション	目的
ステップ 3	UCS-A /org/service-profile # <b>set storage-profile-name</b> <i>storage-profile-name</i>	Associates the specified storage profile with the service profile.  (注) To dissociate the service profile from a storage profile, use the <b>set storage-profile-name</b> command and specify "" as the storage profile name.
ステップ 4	UCS-A /org/service-profile* # <b>commit-buffer</b>	Commits the transaction to the system configuration.

This example shows how to associate a storage profile with a service profile.

```
UCS-A# scope org
UCS-A /org # scope service-profile spl
UCS-A /org/service-profile # set storage-profile-name stp2
```

This example shows how to dissociate a service profile from a storage profile.

```
UCS-A# scope org
UCS-A /org # scope service-profile spl
UCS-A /org/service-profile # set storage-profile-name ""
```

## Displaying Details of All Local LUNs Inherited By a Service Profile

Storage profiles can be defined under org and as a dedicated storage profile under service profile. Thus, a service profile inherits local LUNs from both possible storage profiles. It can have a maximum of 2 such local LUNs. You can display the details of all local LUNs inherited by a service profile by using the following command:

### 手順の概要

1. UCS-A /org/service-profile # **show local-lun-ref**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A /org/service-profile # <b>show local-lun-ref</b>	Displays the following detailed information about all the local LUNs inherited by the specified service profile: <ul style="list-style-type: none"> <li>• <b>Name</b>—LUN name in the storage profile.</li> <li>• <b>Admin State</b>—Specifies whether a local LUN should be deployed or not. Admin state can be <b>Online</b> or <b>Undeployed</b>.</li> </ul> <p>When the local LUN is being referenced by a service profile, if the auto-deploy status is <b>no-auto-deploy</b> then the admin state will be <b>Undeployed</b>, else it will be <b>Online</b>. After the local LUN is referenced by a service profile, any change made to this local LUN's auto-deploy status is not reflected in the admin state of the LUN inherited by the service profile.</p>

	コマンドまたはアクション	目的
		<ul style="list-style-type: none"> <li>• <b>RAID Level</b>—Summary of the RAID level of the disk group used.</li> <li>• <b>Provisioned Size (GB)</b>—Size, in GB, of the LUN specified in the storage profile.</li> <li>• <b>Assigned Size (MB)</b>—Size, in MB, assigned by UCSM.</li> <li>• <b>Config State</b>—State of LUN configuration. The states can be one of the following: <ul style="list-style-type: none"> <li>• <b>Applying</b>—Admin state is online, the LUN is associated with a server, and the virtual drive is being created.</li> <li>• <b>Applied</b>—Admin state is online, the LUN is associated with a server, and the virtual drive is created.</li> <li>• <b>Apply Failed</b>—Admin stage is online, the LUN is associated with a server, but the virtual drive creation failed.</li> <li>• <b>Not Applied</b>—The LUN is not associated with a server, or the LUN is associated with a service profile, but admin state is undeployed.</li> <li>• <b>Not In Use</b>—Service profile is using the virtual drive, but the virtual drive is not associated with a server.</li> </ul> </li> <li>• <b>Reference LUN</b>—The preprovisioned virtual drive name, or UCSM-generated virtual drive name.</li> <li>• <b>Deploy Name</b>—The virtual drive name after deployment.</li> <li>• <b>ID</b>—Virtual drive ID.</li> <li>• <b>Drive State</b>—State of the virtual drive. The states are: <ul style="list-style-type: none"> <li>• <b>Unknown</b></li> <li>• <b>Optimal</b></li> <li>• <b>Degraded</b></li> <li>• <b>Inoperable</b></li> <li>• <b>Partially Degraded</b></li> </ul> </li> </ul>

```
UCS-A /org/service-profile # show local-lun-ref
```

```
Local LUN Ref:
```

Profile Size (MB)	LUN Name	Admin State	RAID Level	State Referenced Lun	Deploy Name	ID	Provisioned Size (GB)	Assigned Drive State
1024	luna	Applied	RAID 0 Striped	luna-1	luna-1	1003	1	Optimal

```

lunb
1024 Applied Online lunb-1 RAID 0 Striped 1
lunb-1 lunb-1 1004 Optimal
UCS-A /org/service-profile #
    
```

```

Local LUN Ref:
Name Admin State RAID Level Provisioned Size (GB) Assigned
Size (MB) Config State Referenced Lun Deploy Name ID Drive State
-----
lun111 Online RAID 0 Striped 30 30720
Applied lun111-1 lun111-1 1001 Optimal
lun201 Online Unspecified 1 0
Not Applied
    
```

## Displaying Detailed Information About LUNs Used By a Modular Server

### 手順の概要

1. UCS-A# **scope server chassis-num / cartridge-id / server-num**
2. UCS-A /chassis/cartridge/server # **scope adapter adapter-id**
3. UCS-A /chassis/cartridge/server/adapter # **scope host-scsi host-scsi-id**
4. UCS-A /chassis/cartridge/server/adapter/host-scsi # **show detail expand**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope server chassis-num / cartridge-id / server-num</b>	Enters cartridge server mode for the specified modular server in the specified chassis and cartridge.
ステップ 2	UCS-A /chassis/cartridge/server # <b>scope adapter adapter-id</b>	Enters adapter mode for the specified adapter.
ステップ 3	UCS-A /chassis/cartridge/server/adapter # <b>scope host-scsi host-scsi-id</b>	Enters host-scsi mode for the specified host-scsi.
ステップ 4	UCS-A /chassis/cartridge/server/adapter/host-scsi # <b>show detail expand</b>	Displays detailed information about the LUNs that are being used by the specified modular server.

This example shows how to display detailed information about the LUNs that are being used by modular server 1/1/1.

```

UCS-A # scope server 1/1/1
UCS-A /chassis/cartridge/server # scope adapter 1
UCS-A /chassis/cartridge/server/adapter # scope host-scsi 1
UCS-A /chassis/cartridge/server/adapter/host-scsi # show detail expand

Host Scsi Interface:
    
```

```

ID: 1

Local Lun Interface:
  Lun Name: lun-uefi
  Lun Id: 1008
  Lun Order: 1
  Oper Lun Id: 7
  Boot Dev: Disabled
  Lun Dn: sys/chassis-1/storage-SAS-1/vd-1008

```

## Importing Foreign Configurations for a RAID Controller

### 手順の概要

1. UCS-A# **scope chassis** *chassis-num*
2. UCS-A /chassis # **scope raid-controller** *raid-contr-id* {sas | sata}
3. UCS-A /chassis/raid-controller # **set admin-state import-foreign-configuration**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope chassis</b> <i>chassis-num</i>	Enters chassis mode for the specified chassis.
ステップ 2	UCS-A /chassis # <b>scope raid-controller</b> <i>raid-contr-id</i> {sas   sata}	Enters RAID controller chassis mode.
ステップ 3	UCS-A /chassis/raid-controller # <b>set admin-state import-foreign-configuration</b>	Allows import of configurations from local disks that are in the <b>Foreign Configuration</b> state.

This example shows how to import foreign configurations from local disks that are in the **Foreign Configuration** state:

```

UCS-A# scope chassis 1
UCS-A /chassis # scope raid-controller 1 sas
UCS-A /chassis/raid-controller # set admin-state import-foreign-configuration
UCS-A /chassis/raid-controller* #

```

## Configuring Local Disk Operations

### 手順の概要

1. UCS-A# **scope chassis** *chassis-num*
2. UCS-A /chassis # **scope raid-controller** *raid-contr-id* {**sas** | **sata**}
3. UCS-A /chassis/raid-controller # **scope local-disk** *local-disk-id*
4. UCS-A /chassis/raid-controller/local-disk # **set admin-state** {**clear-foreign-configuration** | **dedicated-hot-spare** [*admin-vd-id*] | **prepare-for-removal** | **remove-hot-spare** | **unconfigured-good** | **undo-prepare-for-removal**}

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope chassis</b> <i>chassis-num</i>	Enters chassis mode for the specified chassis.
ステップ 2	UCS-A /chassis # <b>scope raid-controller</b> <i>raid-contr-id</i> { <b>sas</b>   <b>sata</b> }	Enters RAID controller chassis mode.
ステップ 3	UCS-A /chassis/raid-controller # <b>scope local-disk</b> <i>local-disk-id</i>	Enters local disk configuration mode.
ステップ 4	UCS-A /chassis/raid-controller/local-disk # <b>set admin-state</b> { <b>clear-foreign-configuration</b>   <b>dedicated-hot-spare</b> [ <i>admin-vd-id</i> ]   <b>prepare-for-removal</b>   <b>remove-hot-spare</b>   <b>unconfigured-good</b>   <b>undo-prepare-for-removal</b> }	<p>Configures the local disk to one of the following states:</p> <ul style="list-style-type: none"> <li>• <b>clear-foreign-configuration</b>—Clears any foreign configuration that exists in a local disk when it is introduced into a new configuration.</li> <li>• <b>dedicated-hot-spare</b>—Specifies the local disk as a dedicated hot spare. The admin virtual drive ID that you can assign ranges from 0 to 4294967295.</li> <li>• <b>prepare-for-removal</b>—Specifies that the local disk is marked for removal from the chassis.</li> <li>• <b>remove-hot-spare</b>—Specifies that the local disk is no longer a hot spare. Use this only to clear any mismatch faults.</li> <li>• <b>unconfigured-good</b>—Specifies that the local disk can be configured.</li> <li>• <b>undo-prepare-for-removal</b>—Specifies that the local disk is no longer marked for removal from the chassis.</li> </ul>

This example shows how to clear any foreign configuration from a local disk:

```
UCS-A /chassis/raid-controller/local-disk # set admin-state clear-foreign-configuration
```

This example shows how to specify a local disk as a dedicated hot spare:

```
UCS-A /chassis/raid-controller/local-disk* # set admin-state dedicated-hot-spare 1001
```

This example shows how to specify that a local disk is marked for removal from the chassis:

```
UCS-A /chassis/raid-controller/local-disk* # set admin-state prepare-for-removal
```

This example shows how to specify that a local disk is marked for removal as a hot spare:

```
UCS-A /chassis/raid-controller/local-disk* # set admin-state remove-hot-spare
```

This example shows how to specify that a local disk is working, but is unconfigured for use:

```
UCS-A /chassis/raid-controller/local-disk* # set admin-state unconfigured-good
```

This example shows how to specify that a local disk is no longer marked for removal from the chassis:

```
UCS-A /chassis/raid-controller/local-disk* # set admin-state undo-prepare-for-removal
```

## Configuring Virtual Drive Operations

The following operations can be performed only on orphaned virtual drives:

- Delete an orphaned virtual drive
- Rename an orphaned virtual drive

### Deleting an Orphaned Virtual Drive

#### 手順の概要

1. UCS-A# **scope chassis** *chassis-num*
2. UCS-A /chassis # **scope raid-controller** *raid-contr-id* {**sas** | **sata**}
3. (任意) UCS-A /chassis/raid-controller # **delete virtual-drive id** *virtual-drive-id*
4. (任意) UCS-A /chassis/raid-controller # **delete virtual-drive name** *virtual-drive-name*
5. (任意) UCS-A /chassis/raid-controller # **scope virtual-drive** *virtual-drive-id*
6. UCS-A /chassis/raid-controller/virtual-drive # **set admin-state delete**
7. UCS-A /chassis/raid-controller/virtual-drive # **commit-buffer**

#### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope chassis</b> <i>chassis-num</i>	Enters chassis mode for the specified chassis.
ステップ 2	UCS-A /chassis # <b>scope raid-controller</b> <i>raid-contr-id</i> { <b>sas</b>   <b>sata</b> }	Enters RAID controller chassis mode.

	コマンドまたはアクション	目的
ステップ 3	UCS-A /chassis/raid-controller # <b>delete virtual-drive id</b> <i>virtual-drive-id</i>	(任意) Deletes the orphaned virtual drive with the specified virtual drive ID.
ステップ 4	UCS-A /chassis/raid-controller # <b>delete virtual-drive name</b> <i>virtual-drive-name</i>	(任意) Deletes the orphaned virtual drive with the specified virtual drive name.
ステップ 5	UCS-A /chassis/raid-controller # <b>scope virtual-drive</b> <i>virtual-drive-id</i>	(任意) Enters virtual drive mode for the specified orphaned virtual drive.
ステップ 6	UCS-A /chassis/raid-controller/virtual-drive # <b>set admin-state delete</b>	Deletes the orphaned virtual drive.
ステップ 7	UCS-A /chassis/raid-controller/virtual-drive # <b>commit-buffer</b>	Commits the transaction to the system configuration.

This example shows how to delete an orphan virtual drive by specifying the virtual drive ID.

```
UCS-A# scope chassis 1
UCS-A /chassis # scope raid-controller 1 sas
UCS-A /chassis/raid-controller # show virtual-drive
```

```
Virtual Drive:
  ID: 1001
  Name: lun111-1
  Block Size: 512
  Blocks: 62914560
  Size (MB): 30720
  Operability: Operable
  Presence: Equipped
  Oper Device ID: 0
  Change Qualifier: No Change
  Config State: Applied
  Deploy Action: No Action

  ID: 1002
  Name: luna-1
  Block Size: 512
  Blocks: 2097152
  Size (MB): 1024
  Operability: Operable
  Presence: Equipped
  Oper Device ID: 1
  Change Qualifier: No Change
  Config State: Orphaned
  Deploy Action: No Action

  ID: 1003
  Name: lunb-1
  Block Size: 512
  Blocks: 2097152
  Size (MB): 1024
  Operability: Operable
  Presence: Equipped
  Oper Device ID: 2
  Change Qualifier: No Change
  Config State: Orphaned
  Deploy Action: No Action
```

```

ID: 1004
Name: lunb-2
Block Size: 512
Blocks: 2097152
Size (MB): 1024
Operability: Operable
Presence: Equipped
Oper Device ID: 3
Change Qualifier: No Change
Config State: Orphaned
Deploy Action: No Action

```

```

ID: 1005
Name: luna-2
Block Size: 512
Blocks: 2097152
Size (MB): 1024
Operability: Operable
Presence: Equipped
Oper Device ID: 4
Change Qualifier: No Change
Config State: Orphaned
Deploy Action: No Action

```

...

```

UCS-A /chassis/raid-controller # delete virtual-drive id 1002
Warning: When committed, the virtual drive will be deleted, which may result in data loss.

```

```

UCS-A /chassis/raid-controller # commit-buffer

```

This example shows how to delete an orphan virtual drive by specifying the virtual drive name.

```

UCS-A# scope chassis 1

```

```

UCS-A /chassis # scope raid-controller 1 sas

```

```

UCS-A /chassis/raid-controller # show virtual-drive

```

Virtual Drive:

```

ID: 1001
Name: lun111-1
Block Size: 512
Blocks: 62914560
Size (MB): 30720
Operability: Operable
Presence: Equipped
Oper Device ID: 0
Change Qualifier: No Change
Config State: Applied
Deploy Action: No Action

```

```

ID: 1003
Name: lunb-1
Block Size: 512
Blocks: 2097152
Size (MB): 1024
Operability: Operable
Presence: Equipped
Oper Device ID: 2
Change Qualifier: No Change
Config State: Orphaned
Deploy Action: No Action

```

```

ID: 1004
Name: lunb-2
Block Size: 512
Blocks: 2097152
Size (MB): 1024
Operability: Operable
Presence: Equipped
Oper Device ID: 3
Change Qualifier: No Change
Config State: Orphaned
Deploy Action: No Action

```

```
ID: 1005
Name: luna-2
Block Size: 512
Blocks: 2097152
Size (MB): 1024
Operability: Operable
Presence: Equipped
Oper Device ID: 4
Change Qualifier: No Change
Config State: Orphaned
Deploy Action: No Action
```

...

```
UCS-A /chassis/raid-controller # delete virtual-drive name lunb-1
Warning: When committed, the virtual drive will be deleted, which may result in data loss.
```

```
UCS-A /chassis/raid-controller # commit-buffer
This example shows how to delete an orphan virtual drive by setting the admin-state.
```

```
UCS-A# scope chassis 1
UCS-A /chassis # scope raid-controller 1 sas
UCS-A /chassis/raid-controller # scope virtual-drive 1004
UCS-A /chassis/raid-controller/virtual-drive # set admin-state delete
```

```
Warning: When committed, the virtual drive will be deleted, which may result in data loss.
```

```
UCS-A /chassis/raid-controller/virtual-drive # commit-buffer
```

## Renaming an Orphaned Virtual Drive

### 手順の概要

1. UCS-A# **scope chassis** *chassis-num*
2. UCS-A /chassis # **scope raid-controller** *raid-contr-id* {sas | sata}
3. UCS-A /chassis/raid-controller # **scope virtual-drive** *virtual-drive-id*
4. UCS-A /chassis/raid-controller/virtual-drive # **set name** *virtual-drive-name*
5. UCS-A /chassis/raid-controller/virtual-drive # **commit-buffer**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope chassis</b> <i>chassis-num</i>	Enters chassis mode for the specified chassis.
ステップ 2	UCS-A /chassis # <b>scope raid-controller</b> <i>raid-contr-id</i> {sas   sata}	Enters RAID controller chassis mode.
ステップ 3	UCS-A /chassis/raid-controller # <b>scope virtual-drive</b> <i>virtual-drive-id</i>	Enters virtual drive mode for the specified virtual drive.
ステップ 4	UCS-A /chassis/raid-controller/virtual-drive # <b>set name</b> <i>virtual-drive-name</i>	Specifies a name for the orphan virtual drive.
ステップ 5	UCS-A /chassis/raid-controller/virtual-drive # <b>commit-buffer</b>	Commits the transaction to the system configuration.

This example shows how to specify a name for an orphan virtual drive.

```
UCS-A /chassis # scope raid-controller 1 sas
UCS-A /chassis/raid-controller # scope virtual-drive 1060
UCS-A /chassis/raid-controller/virtual-drive* # set name vd1
UCS-A /chassis/raid-controller/virtual-drive* # commit-buffer
```

## Configuring the Boot Policy for a Local LUN



(注) In Cisco UCS Manager Release 2.5, you cannot configure JBOD as a boot device.

### 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org # **scope boot-policy** *policy-name*
3. UCS-A /org/boot-policy # **create storage**
4. UCS-A /org/boot-policy/storage # **create local**
5. UCS-A /org/boot-policy/storage/local/ # **create local-lun**
6. UCS-A /org/boot-policy/storage/local/local-lun # **create local-lun-image-path** {**primary** | **secondary**}
7. UCS-A /org/boot-policy/storage/local/local-lun/local-lun-image-path # **set lunname** *lun\_name*
8. UCS-A /org/boot-policy/storage/local/*local-storage-device* # **commit-buffer**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters organization mode for the specified organization. To enter the root organization mode, type <i>/</i> as the <i>org-name</i> .
ステップ 2	UCS-A /org # <b>scope boot-policy</b> <i>policy-name</i>	Enters organization boot policy mode for the specified boot policy.
ステップ 3	UCS-A /org/boot-policy # <b>create storage</b>	Creates a storage boot for the boot policy and enters organization boot policy storage mode.
ステップ 4	UCS-A /org/boot-policy/storage # <b>create local</b>	Creates a local storage location and enters the boot policy local storage mode.
ステップ 5	UCS-A /org/boot-policy/storage/local/ # <b>create local-lun</b>	Specifies a local hard disk drive as the local storage.

	コマンドまたはアクション	目的
ステップ 6	UCS-A /org/boot-policy/storage/local/local-lun # <b>create local-lun-image-path</b> {primary   secondary}	Specifies the boot order for the LUN that you specify.
ステップ 7	UCS-A /org/boot-policy/storage/local/local-lun/local-lun-image-path # <b>set lunname</b> lun_name	Specifies the name of the LUN that you want to boot from.
ステップ 8	UCS-A /org/boot-policy/storage/local/local-storage-device # <b>commit-buffer</b>	Commits the transaction to the system configuration.

The following example shows how to create a boot policy named lab1-boot-policy, create a local hard disk drive boot for the policy, specify a boot order and a LUN to boot from, and commit the transaction:

```
UCS-A# scope org /
UCS-A /org* # scope boot-policy lab1-boot-policy
UCS-A /org/boot-policy* # create storage
UCS-A /org/boot-policy/storage* # create local
UCS-A /org/boot-policy/storage/local* # create local-lun
UCS-A /org/boot-policy/storage/local/local-lun # create local-lun-image-path primary
UCS-A /org/boot-policy/storage/local/local-lun/local-lun-image-path # set lunname luna
UCS-A /org/boot-policy/storage/local/local-lun/local-lun-image-path # commit-buffer
UCS-A /org/boot-policy/storage/local/local-lun/local-lun-image-path #
```

### 次の作業

ブートポリシーをサービスプロファイルとテンプレートのうち一方、または両方に含めます。

## Local LUN Operations in a Service Profile

Although a service profile is derived from a service profile template, the following operations can be performed for each local LUN at the individual service profile level:

- [Preprovisioning a LUN Name or Claiming an Orphan LUN](#), (33 ページ)
- [Deploying and Undeploying a LUN](#), (34 ページ)
- [Renaming a Service Profile Referenced LUN](#), (36 ページ)



(注) Preprovisioning a LUN name, claiming an orphan LUN, and deploying or undeploying a LUN result in server reboot.

### Preprovisioning a LUN Name or Claiming an Orphan LUN

You can preprovision a LUN name or claim an orphan LUN by using the **set ref-name** command. Preprovisioning a LUN name or claiming an orphan LUN can be done only when the admin state of the LUN is **Undeployed**.

**重要**

This operation will reboot the server.

### 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org# **scope service-profile** *service-profile-name*
3. UCS-A /org/service-profile# **enter local-lun-ref** *lun-name*
4. UCS-A /org/service-profile/local-lun-ref# **set ref-name** *ref-lun-name*

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org# <b>scope service-profile</b> <i>service-profile-name</i>	Enters the specified service profile mode.
ステップ 3	UCS-A /org/service-profile# <b>enter local-lun-ref</b> <i>lun-name</i>	Enters the specified LUN.
ステップ 4	UCS-A /org/service-profile/local-lun-ref# <b>set ref-name</b> <i>ref-lun-name</i>	Sets the referenced LUN name.  If this LUN name exists and the LUN is orphaned, its is claimed by the service profile. If this LUN does not exist, a new LUN is created with the specified name.

- If the LUN exists and is not orphaned, a configuration failure occurs.
- If a LUN is already referred to and the ref-name is changed, it will release the old LUN and will claim or create a LUN with the ref-name. The old LUN is marked as an orphan after the LUN reference is removed from the server.

This examples shows how to preprovision a LUN name.

```
UCS-A# scope org
UCS-A /org # scope service-profile sp1
UCS-A /org/service-profile* # enter local-lun-ref lun1
UCS-A /org/service-profile/local-lun-ref* # set ref-name lun2
```

## Deploying and Undeploying a LUN

You can deploy or undeploy a LUN by using the **admin-state** command. If the admin state of a local LUN is **Undeployed**, the reference of that LUN is removed and the LUN is not deployed.

**重要**

This operation will reboot the server.

### 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org# **scope service-profile** *service-profile-name*
3. UCS-A /org/service-profile# **enter local-lun-ref** *lun-name*
4. UCS-A /org/service-profile/local-lun-ref# **set admin-state** {**online** | **undeployed**}

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org# <b>scope service-profile</b> <i>service-profile-name</i>	Enters the specified service profile mode.
ステップ 3	UCS-A /org/service-profile# <b>enter local-lun-ref</b> <i>lun-name</i>	Enters the specified LUN.
ステップ 4	UCS-A /org/service-profile/local-lun-ref# <b>set admin-state</b> { <b>online</b>   <b>undeployed</b> }	Sets the admin state of the specified LUN to <b>online</b> or <b>undeployed</b> .  If a LUN is already referred to and the admin state is set to <b>undeployed</b> , it will release the old LUN. The old LUN is marked as orphan after the LUN reference is removed from the server.

This examples shows how to deploy a LUN.

```
UCS-A# scope org
UCS-A /org # scope service-profile sp1
UCS-A /org/service-profile* # enter local-lun-ref lun1
UCS-A /org/service-profile/local-lun-ref* # set admin-state online
```

This examples shows how to undeploy a LUN.

```
UCS-A# scope org
UCS-A /org # scope service-profile sp1
UCS-A /org/service-profile* # enter local-lun-ref lun1
UCS-A /org/service-profile/local-lun-ref* # set admin-state undeployed
```

## Renaming a Service Profile Referenced LUN

### 手順の概要

1. UCS-A# **scope org** *org-name*
2. UCS-A /org# **scope service-profile** *service-profile-name*
3. UCS-A /org/service-profile# **enter local-lun-ref** *lun-name*
4. UCS-A /org/service-profile/local-lun-ref# **set name**

### 手順の詳細

	コマンドまたはアクション	目的
ステップ 1	UCS-A# <b>scope org</b> <i>org-name</i>	Enters the organization mode for the specified organization. To enter the root organization mode, enter / as the <i>org-name</i> .
ステップ 2	UCS-A /org# <b>scope service-profile</b> <i>service-profile-name</i>	Enters the specified service profile mode.
ステップ 3	UCS-A /org/service-profile# <b>enter local-lun-ref</b> <i>lun-name</i>	Enters the specified LUN.
ステップ 4	UCS-A /org/service-profile/local-lun-ref# <b>set name</b>	Renames the referenced LUN.

This examples shows how to rename a LUN referenced by a service profile.

```
UCS-A# scope org
UCS-A /org # scope service-profile sp1
UCS-A /org/service-profile* # enter local-lun-ref lun1
UCS-A /org/service-profile/local-lun-ref* # set name lun11
```